ORDER NO.MAD0503001CE

Service Manual

DVD Player / Video Cassette Recorder

Panasonic VHS PAL Hi-Fi

NV-VP23EG / NV-VP23EC / NV-VP23EP / NV-VP28EG / NV-VP28EC / NV-VP33EG / NV-VP33EC / NV-VP33EB / NV-VP33EBL / NV-VP33EP /

R4-MECHANISM

Colour

(K)......................Black Type

(S)......................Silver Type

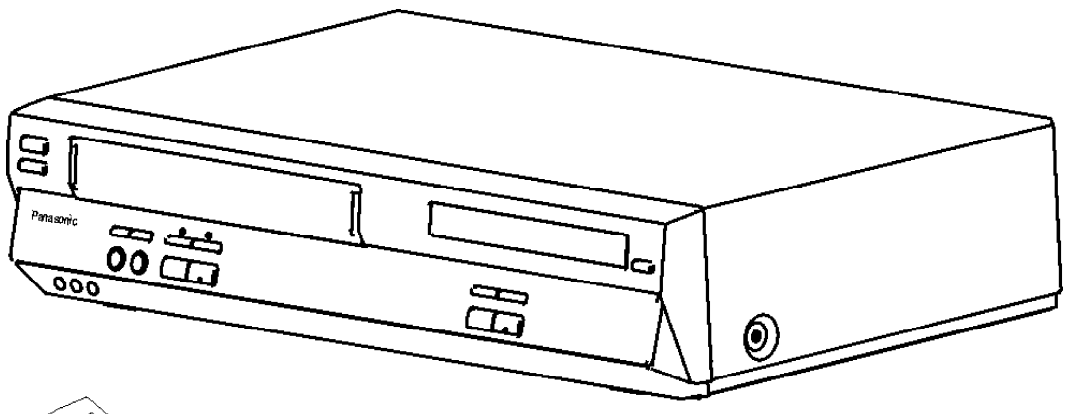

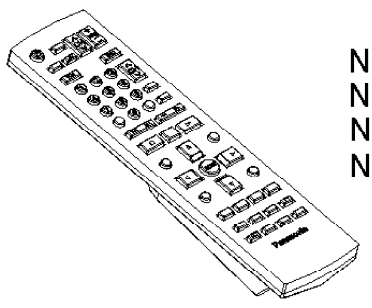

NV-VP23EG/EC/EP	EUR7720X70
NV-VP28EG/EC	EUR7720X50
NV-VP33EG/EC/EP	EUR7720X50
NV-VP33EB/EBL	EUR7720X60

Note:
Due to components availability for this product two different Main PCB and Serial No. suffixes are used.

REP00**10** A,B,C,D,E,H	Serial No. Sample: VA5J**A**000123 ↑ Suffix
REP00**24** A,B,C,D,E,H	VA5J**B**000123 ↑ Suffix

SPECIFICATIONS

© 2005 Matsushita Electric Industrial CO., Ltd. All rights reserved.
Unauthorized copying and distribution is a violation of law.

⚠ WARNING
This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic

1. INTRODUCTION

This service manual contains technical information which will allow service personnel to understand and service this model.
If the circuit is changed or modified, this information will be followed by supplementary service manual to be filed with original service manual.

Note:
Adjustment procedures, Disassembly Procedures and Assembly Procedures for VCR Mechanism Chassis are separate volume from this service manual. Please refer to the service manual for R4 Mechanism Chassis for EURO model (MAD0403002C2).

Model No.	Indication Mark
NV-VP23EG	23EG
NV-VP23EC	23EC
NV-VP23EP	23EP
NV-VP28EG	28EG
NV-VP28EC	28EC
NV-VP33EG	33EG
NV-VP33EC	33EC
NV-VP33EB	33EB
NV-VP33EBL	33EBL
NV-VP33EP	33EP

2. SAFETY PRECAUTIONS

2.1. GENERAL GUIDELINES

1. **Be careful during removing metal parts, sharp edges.**
2. **When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.**
3. **After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.**
4. **After servicing, make the following leakage current checks to**

prevent the customer from being exposed to shock hazards.

2.1.1. LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between 1M Ω and 5.2M Ω .
   When the exposed metal does not have a return path to the chassis, the reading must be infinity.

Figure 1

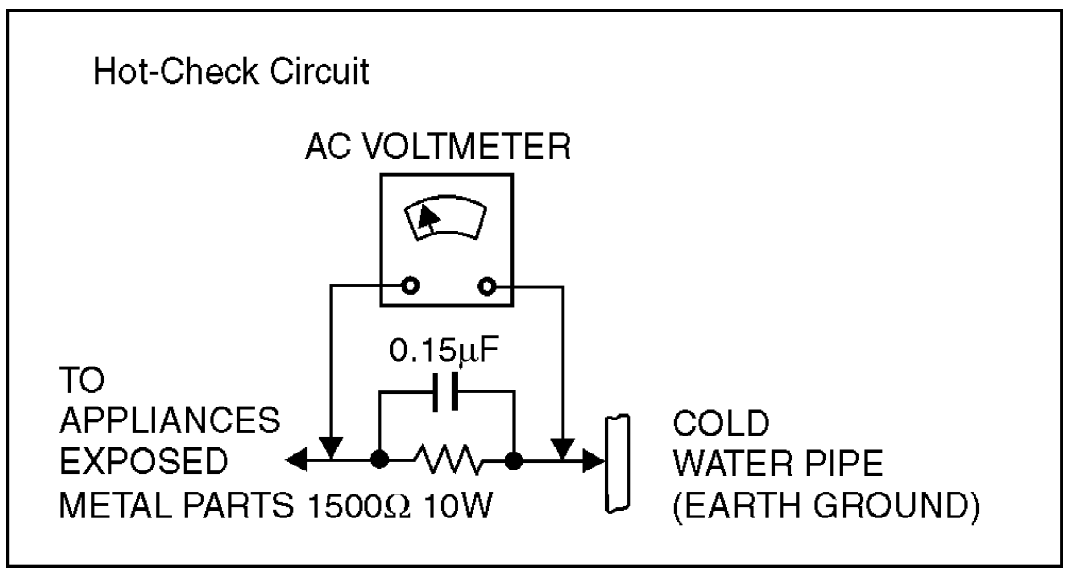

2.1.2. LEAKAGE CURRENT HOT CHECK (See Figure 1)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 1.5k Ω , 10 watts resistor, in parallel with a 0.15 µ F capacitor, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified,

there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

3. PREVENTION OF ELECTRO STATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electro static discharge (ESD).

1. **Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.**
2. **After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as alminum foil, to prevent electrostatic charge buildup or exposure of the assembly.**
3. **Use only a grounded-tip soldering iron to solder or unsolder ES devices.**
4. **Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charge sufficient to damage ES devices.**
5. **Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.**
6. **Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminium foil or comparable conductive material).**
7. **Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be**

installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. **Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).**

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety.
These parts are marked by ⚠ in the schematic diagrams, Exploded Views and replacement parts list.
It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

4. PRECAUTION OF LASER DIODE

CAUTION:

This product utilizes a laser diode with the unit turned "on",
invisible laser radiation is emitted from the pickup lens.
Wave length: 662 nm/785 nm
Maximum output radiation power from pickup: 100 µ W/VDE.
Laser radiation from the pickup lens is on a safety level, if following precautions are followed:

1. **Do not disassemble the optical pickup unit, since radiation from exposed laser diode is dangerous.**
2. **Do not adjust the variable resistor on the pickup unit. It was already adjusted.**
3. **Recommend not to look at pickup lens.**
4. **Do not look at the focus lens using optical instruments.**

ACHTUNG:

Dieses Produkt enthält eine Laserdiode.
Im eingeschalteten Zustand wird unsichtbare Laserstrahlung von der Lasereinheit ausgestrahlt.
Wellenlänge: 662 nm/785 nm
Maximale Strahlungsleistung der Lasereinhei
/VDE.
Die Strahlung der eingeschalteten Lasereinhe
ungefährlich, wenn folgende Punkte beachtet werden:

1. **Die Lasereinheit nicht zerlegen, da die Stra**
   der freigelegten Laserdiode gefährlich ist.
2. **Den werksseitig justierten Einstellregler de**
   Lasereinheit nicht verstellen.
3. **Nicht in die Fokussierlinse blicken.**
4. **Auch nicht mit optischen Instrumenten in**
   Fokussierlinse blicken.

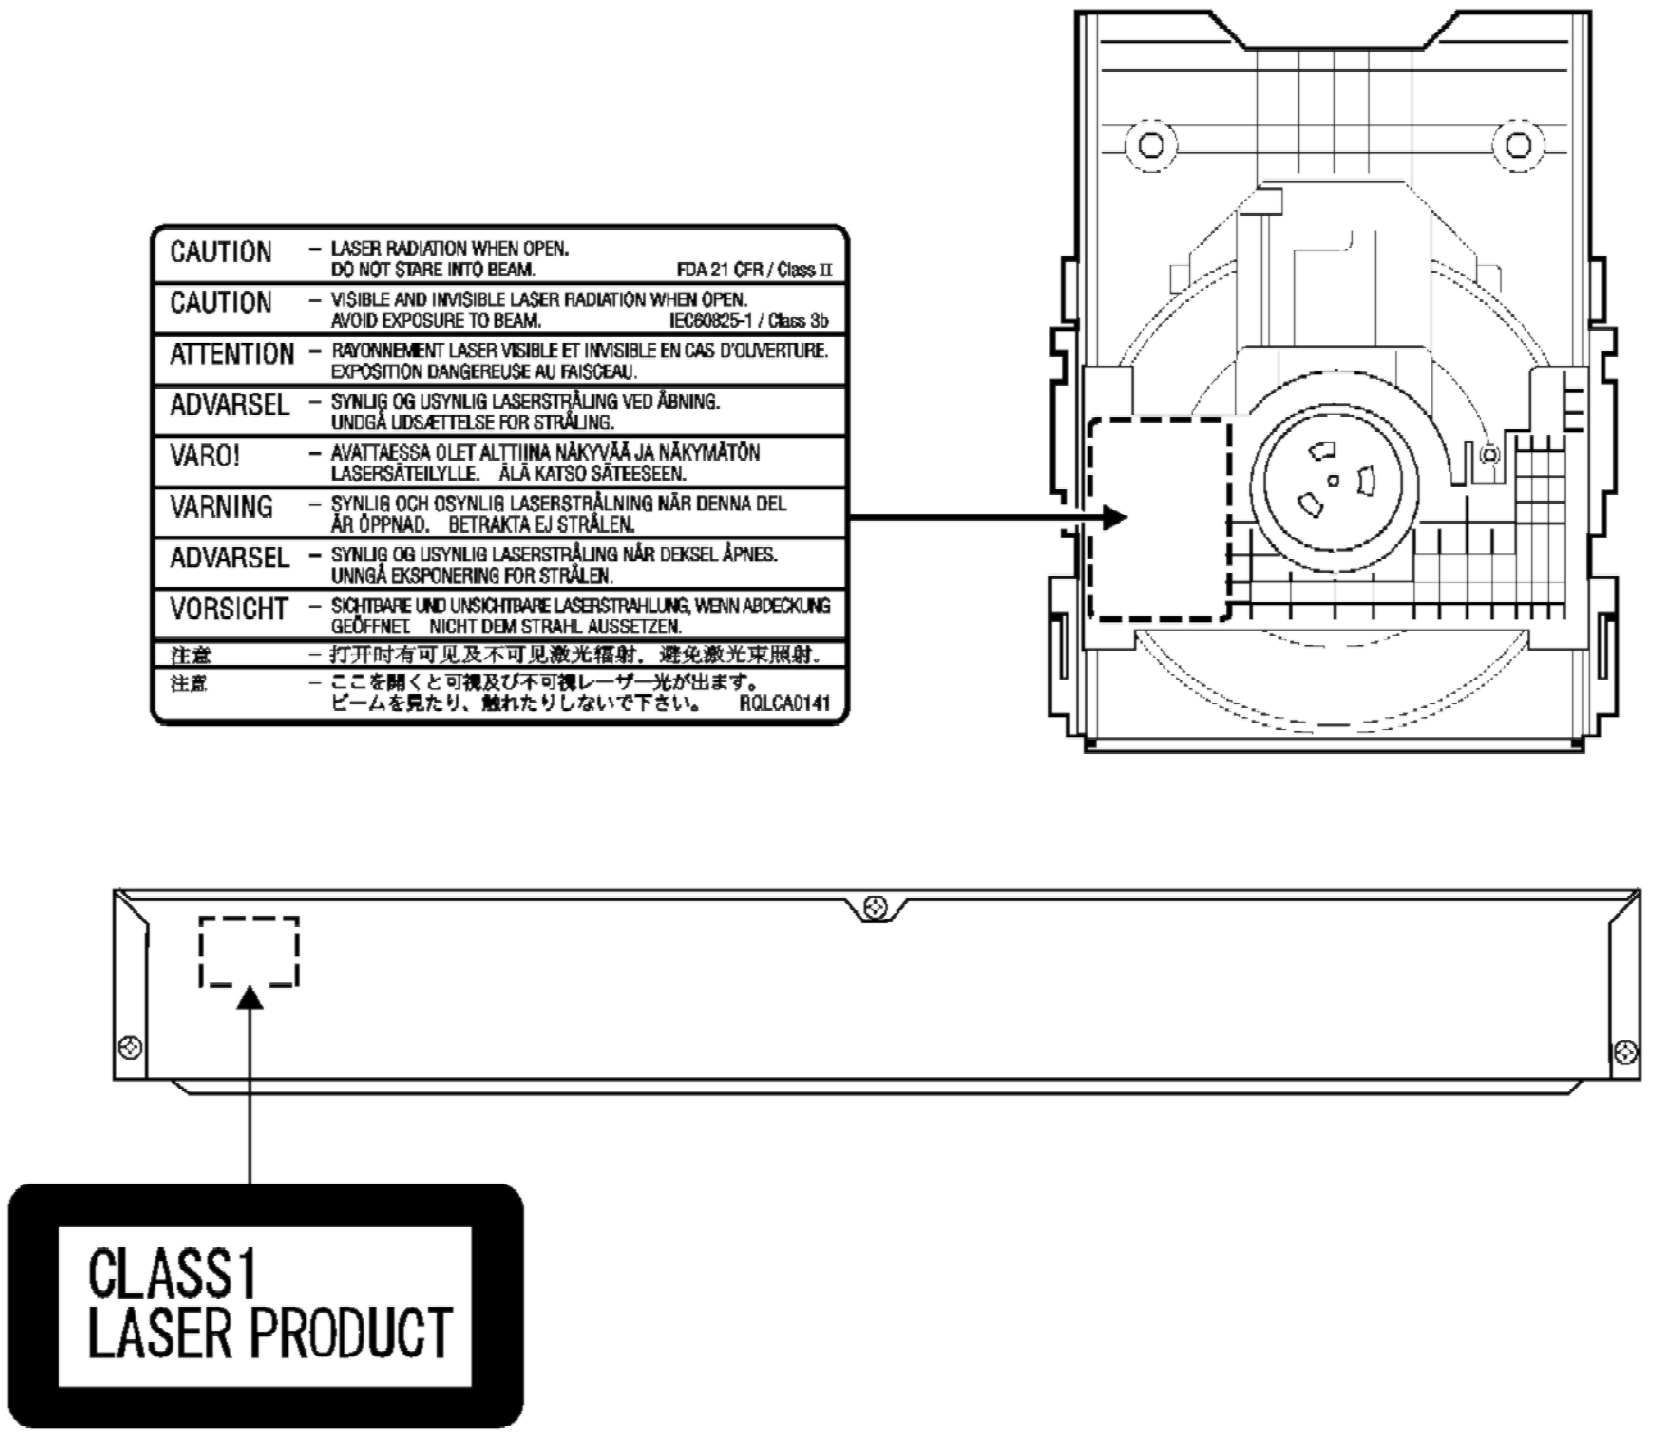
CAUTION – LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR / Class II
CAUTION – VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. IEC60825-1 / Class 3b
ATTENTION – RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.
ADVARSEL – SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VARO! – AVATTAESSA OLET ALTTIINA NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VARNING – SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRAKTA EJ STRÅLEN.
ADVARSEL – SYNLIG OG USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN.
VORSICHT – SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.
注意 – 打开时有可见及不可见激光辐射。避免激光束照射。
注意 – ここを開くと可視及び不可視レーザー光が出ます。ビームを見たり、触れたりしないで下さい。 RQLCA0141
CLASS1
LASER PRODUCT

CAUTION!
THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

4.1. ABOUT LEAD FREE SOLDER (PbF)

This model uses lead free solder (PbF). For repair use only lead free handsolder.

Caution:

Pb free solder has a higher melting point than standard solder; Typically the melting point is 50 - 70~F (30 - 40~C) higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 700 +/-20~F (370 +/-10~C). Pb free solder will tend to splash when heated too high (about 1100~F/ 600~C). When soldering or unsoldering, please completely remove all of the solder on the pins or solder area and be sure to heat the soldering points with the Pb free solder until it melts enough.

5. PREVENTION OF STATIC ELECTRICITY DISCHARGE

The laser diode in the traverse unit (optical pickup) may brake down due to static electricity of clothes or human body. Use due caution to electrostatic breakdown when servicing and handling the laser diode.

5.1. GROUNDING FOR ELECTROSTATIC BREAKDOWN PREVENTION

Some devices such as the DVD player use the optical pickup (laser diode) and the optical

pickup will be damaged by static electricity in the working environment. Proceed servicing works under the working environment where grounding works is completed.

5.1.1. WORKTABLE GROUNDING

1. **Put a conductive material (sheet) or iron sheet on the area where the optical pickup is placed, and ground the sheet.**

5.1.2. HUMAN BODY GROUNDING

1. **Use the anti-static wrist strap to discharge the static electricity form your body.**

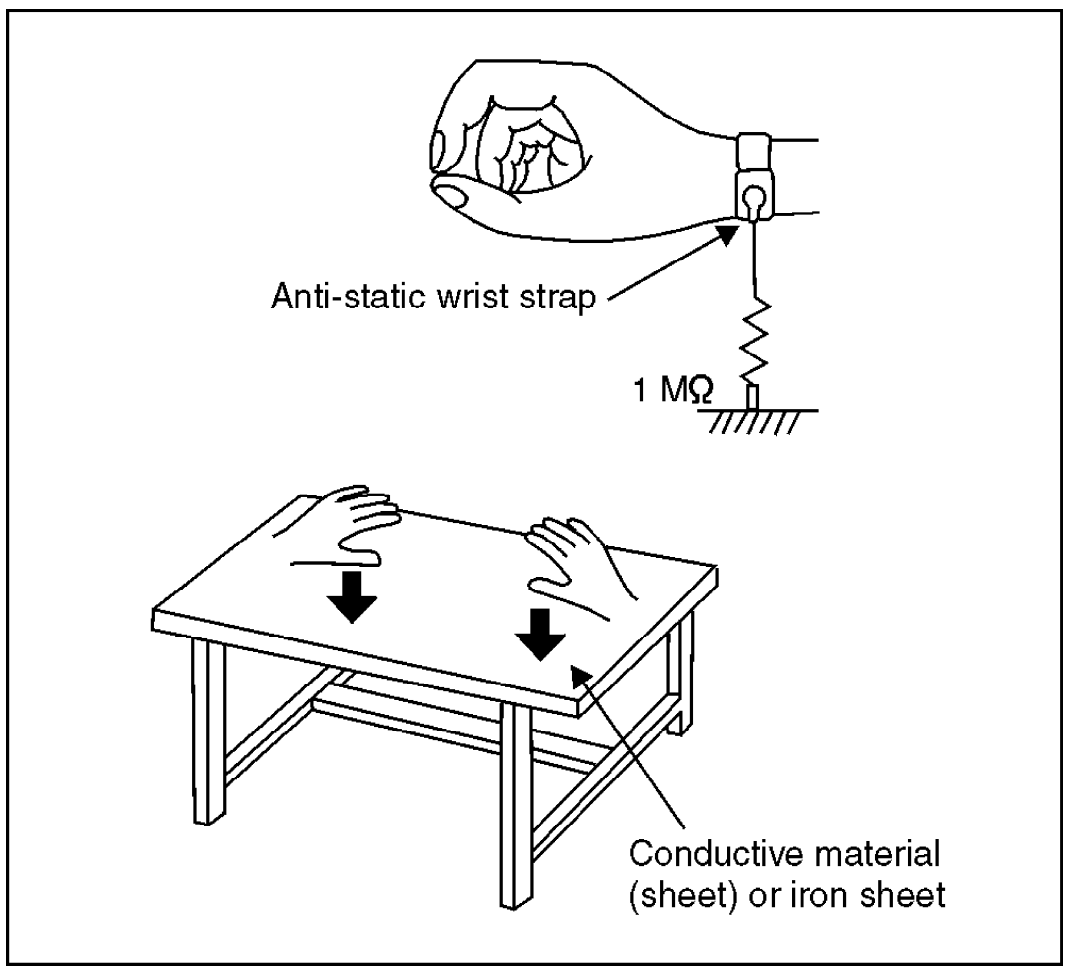

5.1.3. HANDLING OF OPTICAL PICKUP

1. **To keep the good quality of the optical pickup maintenance parts during transportation and before installation, the both ends of the laser diode are short-circuited. After replacing the parts with new ones, remove the short circuit according to the correct procedure. (See this Technical Guide.)**
2. **Do not use a tester to check the laser diode for the optical pickup. Failure to do so will damage the laser diode due to the power supply in the tester.**

6. GENERAL DESCRIPTION

6.1. OPERATING INSTRUCTIONS

6.2. SERVICE CAUTION

6.2.1. REPLACING IC6002/EEPROM

When the EEPROM: IC6002 is replaced, applicable model code, option code and electrical adjustment data will not be available.

Therefore, enter and/or adjust the necessary data after replacing IC6002 by referring following

procedure.

STEP1.REPLACE THE IC6002

1. **Remove the PCB with Mechanism unit by referring the Disassembly procedure.**
2. **Disconnect the AC plug and replace the IC6002.**

STEP2.INPUT THE MODEL & OPTION CODE

1. **Set up the applicable model code and option code by ordering the following table.**

PROCEDURE	F.I.P. DISPLAY
Turn on the Service Mode **1.Press the FF key and the EJECT key simultaneously for more than 3 seconds.**	
Activate the Service Mode 2 **2.While keep placing FF key, press the EJECT key in twice.**	
Activate the Entering Mode. **3.Press the EJECT key for more than 3 seconds.**	
Set the Mode 2. **4.Press the CH UP key in twice.**	
Display the Setting Code. **5.Press the POWER Button to turn the power on.**	 **(Colon starts flashing)**
Enter the Model and Option Code. **6.Service Screen is displayed on the monitor.** **7.Set the applicable Model and Option code by using REW, PLAY, STOP and FF keys on the Remote Controller. (See Fig.S1 & S2)**	
Exit from Service Mode. **8.Press the POWER Button to turn the power off.** **9. Press FF and EJECT keys simultaneously in 6 times.**	 **(Normal Indication)**

Fig. S1 Service Screen Sample for NV-VP23EP

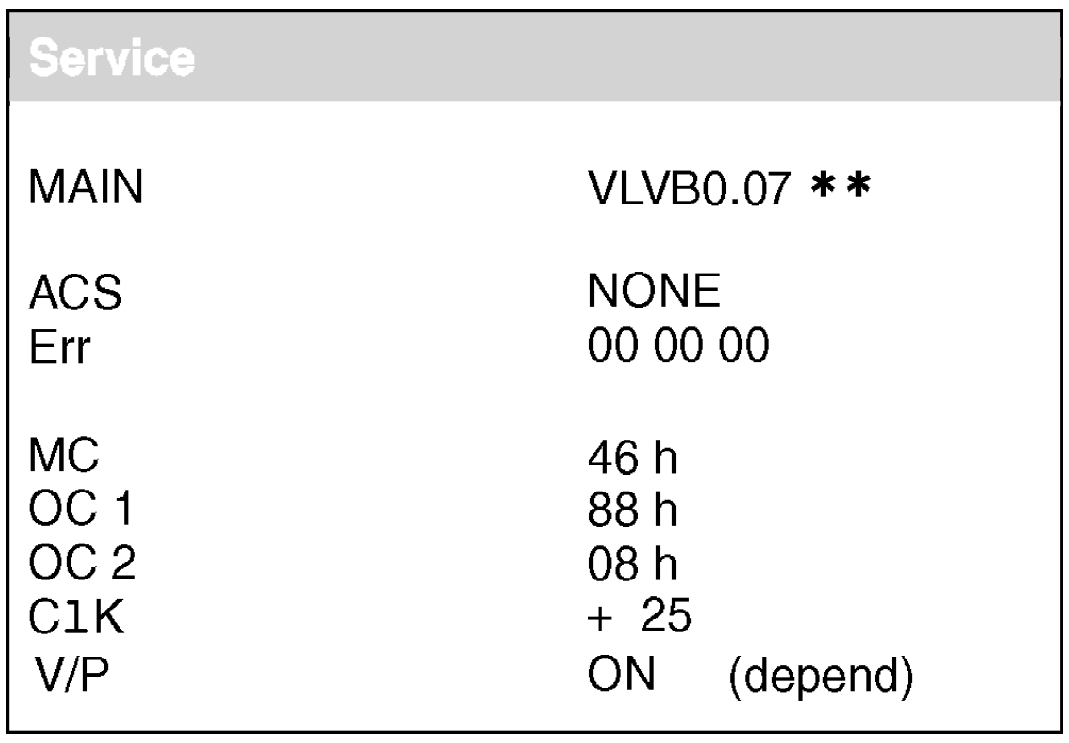

```
Service

MAIN          VLVB0.07 **

ACS           NONE
Err           00 00 00

MC            46 h
OC 1          88 h
OC 2          08 h
C1K           +  25
 V/P          ON     (depend)
```

Fig. S2 Model Code & Option Code

Model No.	Model Code	Option Code 1	Option Code 2
NV-VP23EG	41h	88h	08h
NV-VP23EC	42h	88h	08h
NV-VP23EP	46h	88h	08h
NV-VP28EG	41h	F8h	18h
NV-VP28EC	42h	F8h	18h
NV-VP33EG	41h	FCh	18h
NV-VP33EC	42h	FCh	18h
NV-VP33EB	43h	DCh	18h
NV-VP33EBL	44h	DCh	18h
NV-VP33EP	46h	FCh	18h

NOTE:
Since all electrical adjustments data is still not available, perform the Electrical Adjustment continuously.

6.2.2. CYLINDER UNIT REPLACEMENT

NOTE:

Replacing only Upper Cylinder unit of R4 Mechanism can not be performed, as securing of RT gap is impossible out of factory, please replace the cylinder by whole Cylinder Unit. The Compatibility Adjustment should be performed after replacement of the DD Cylinder Unit.

1. **Remove the Mechanism Unit from Main PCB / Chassis referring to "Disassembly Procedure".**
2. **Unlock 2 locking tabs on a side to release the Cylinder Flat Cable as shown.**
   CAUTION:
   Handle the Cylinder Flat Cable with care. When it damaged, you should replace whole Cylinder unit.
3. **Remove the RED screw and GOLD screw to disassemble the Cylinder Unit.**

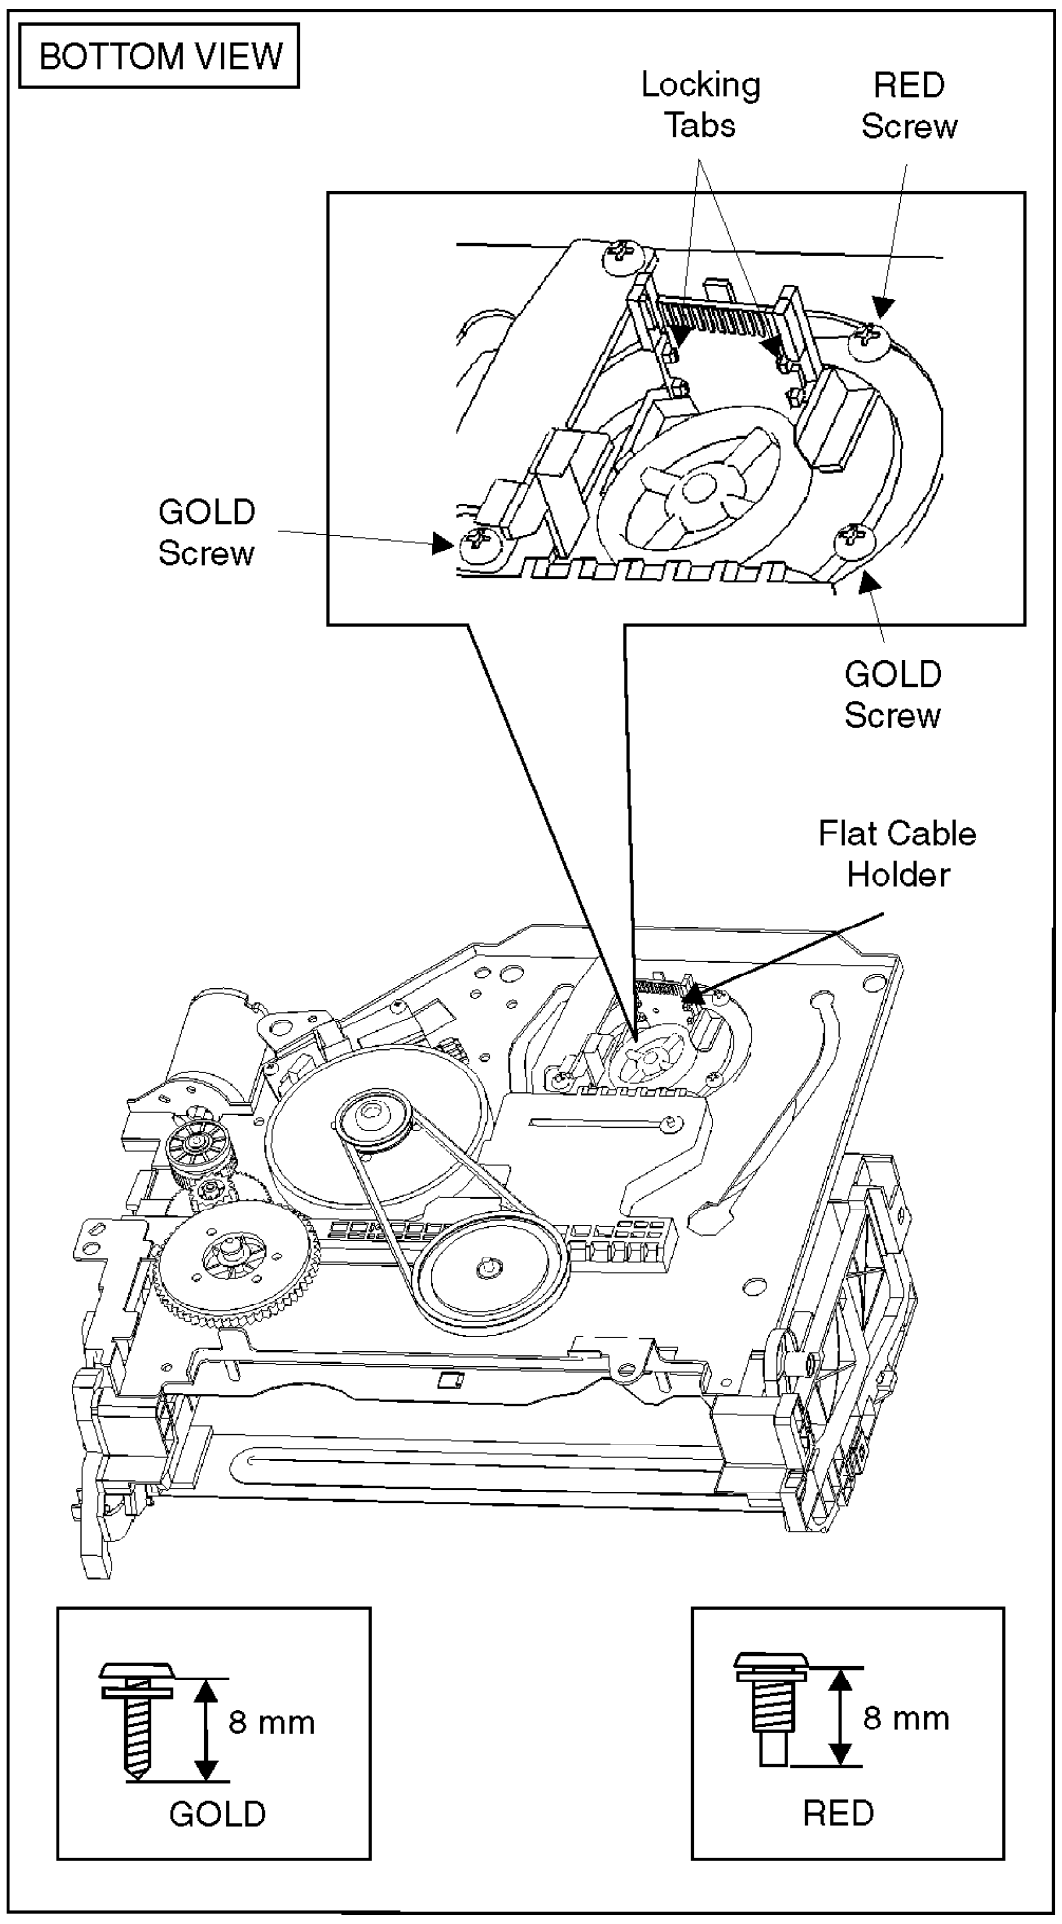
BOTTOM VIEW
Locking Tabs
RED Screw
GOLD Screw
GOLD Screw
Flat Cable Holder
8 mm
GOLD
8 mm
RED

NOTE:

When reassembling, perform the steps in the reverse order, and perform the COMPATIBILITY ADJUSTMENT certainly after CYLINDER UNIT REPLACEMENT.

6.2.3. ATTENTION FOR REPLAYING THE DD CYLINDER

1. Put the gloves on your hands.

2. Turn the DD Cylinder Unit over.

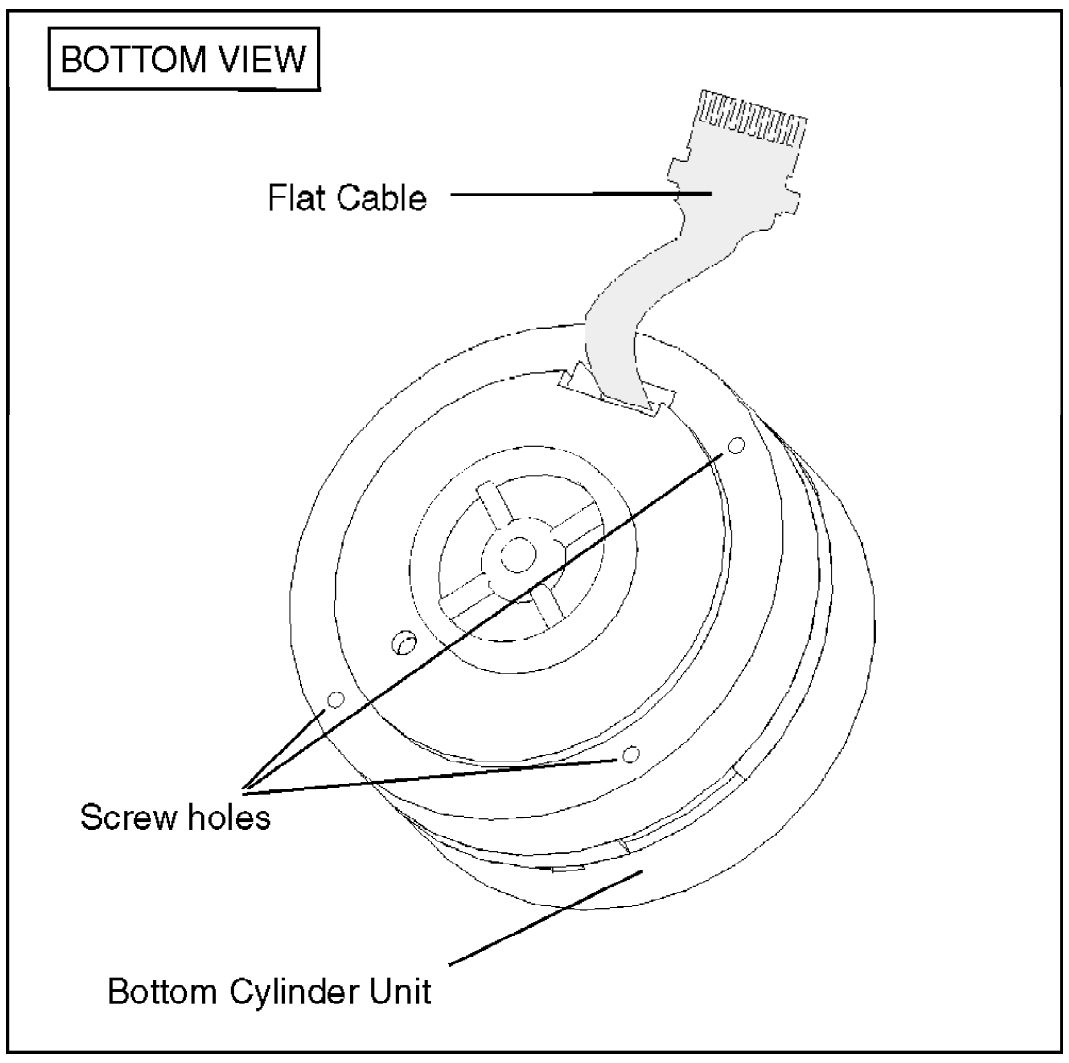
BOTTOM VIEW
Flat Cable
Screw holes
Bottom Cylinder Unit

3. Insert the Flat Cable into the Flat Cable Holder

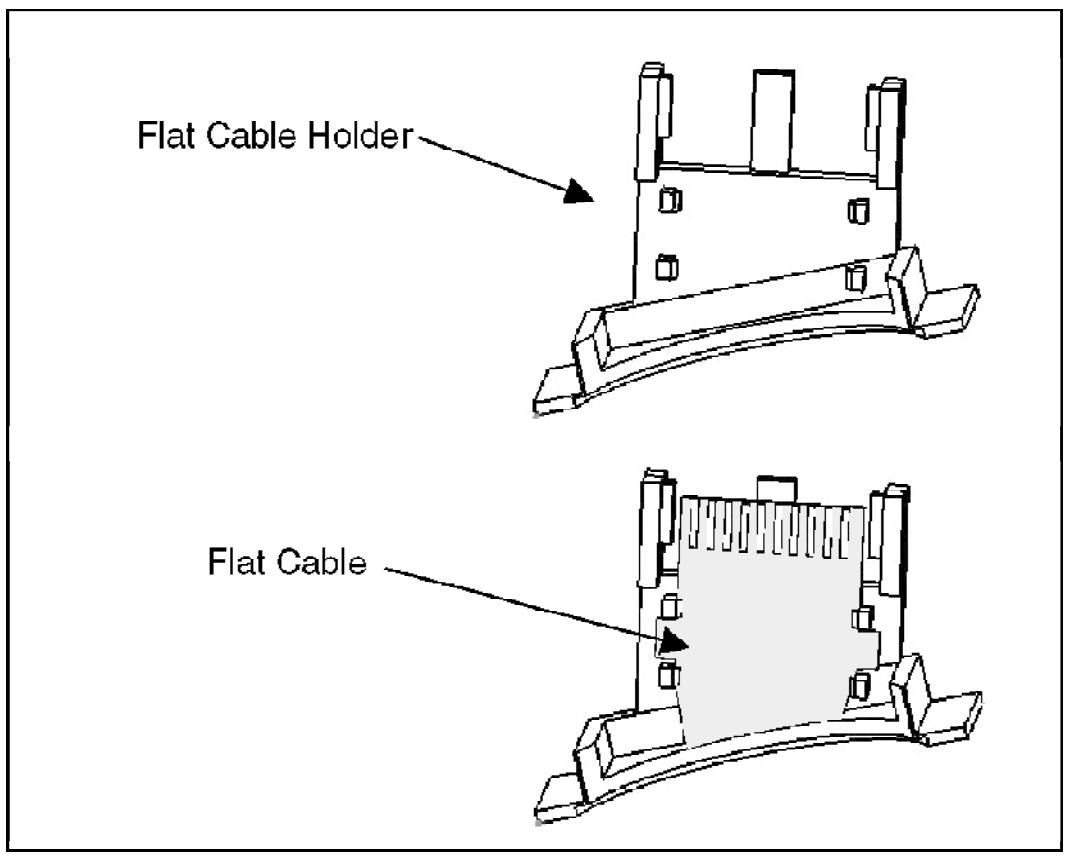
Flat Cable Holder
Flat Cable

4. Insert the Flat Cable Holder to the DD Cylinder Unit.

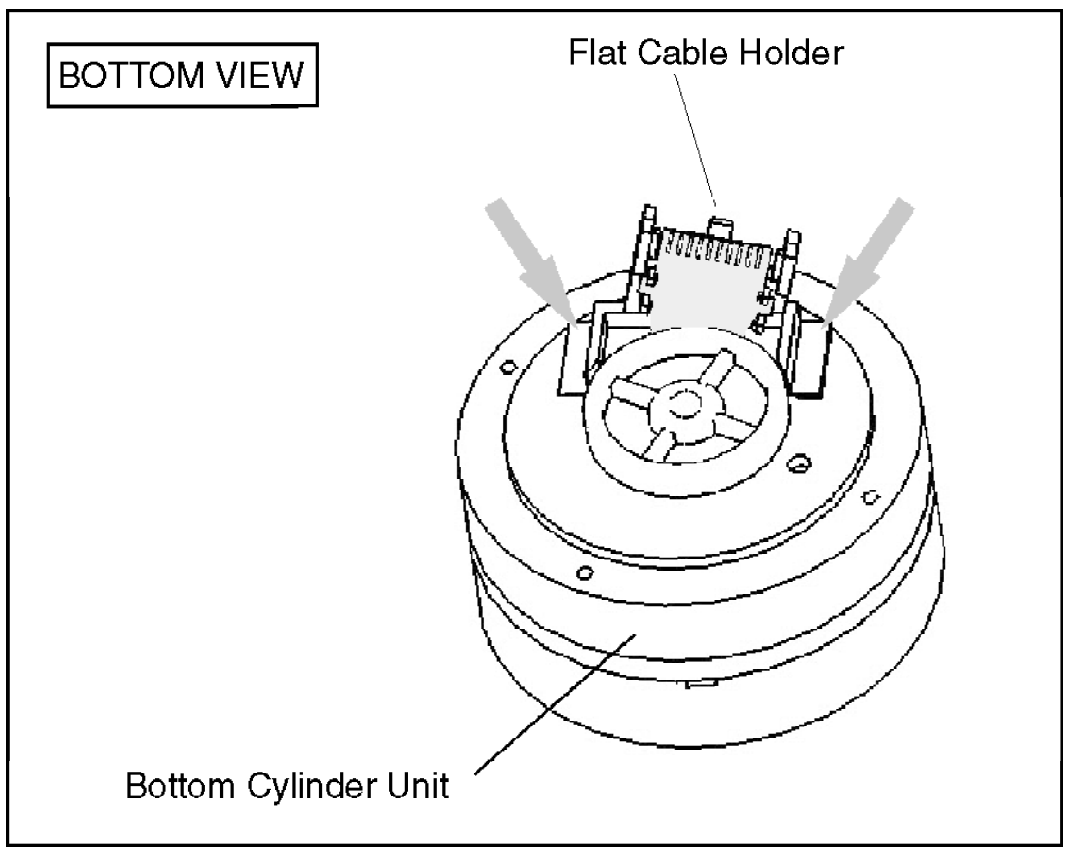
BOTTOM VIEW
Flat Cable Holder
Bottom Cylinder Unit

5. The "COMPATIBILITY ADJUSTMENT" should be performed after the replacement of the DD Cylinder Unit.

NOTE:

In case that you have inserted the Flat Cable Holder

(FPC Holder) to the DD Cylinder Unit before inserting the Flat Cable (Flexible card) into the Flat Cable Holder. Pushing stopper portion of the Flat Cable Holder with a small minus screw driver, remove the Flat Cable Holder while paying attention for not to scratch the DD Cylinder and not to break the Head Chip as shown below.

6.2.4. FLAT CARD CABLE INSTALLATION

When installing the Flat Card Cable on the connector, install the Flat Card Cable with the cable contacts facing the connector contacts.

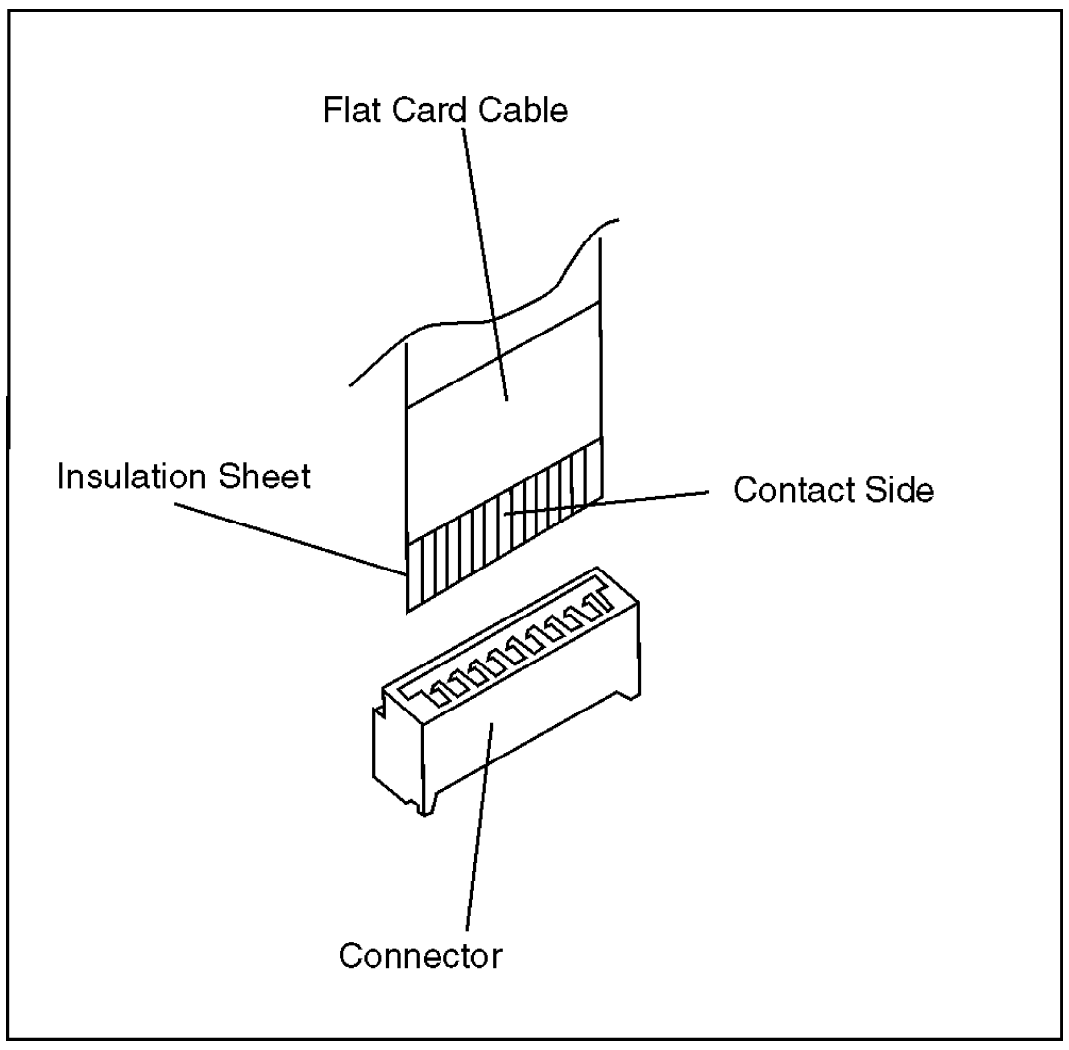

6.3. REMOVAL OF CASSETTE TAPE

When the cassette tape could not be uninstalled from an electrical malfunction, there are two ways to remove a cassette tape.

1. **Removal by compulsory unloading.**
    - **A. Press FF and EJECT button simultaneously for more than 3 seconds and set the Service Mode to 7.**
    - **B. Press STOP button in order to unload the mechanism.**
      (Pay attention to tape slack)
      Service Mode Indication:
      7 0L 00 (STOP) 7 0L A2 (EJECT)
2. **Removal by manual operation by rotating the Loading Motor with the batteries.**
    - **A. Disconnect the AC plug, and remove the Top Panel and the Front Panel by referring to the Disassembly Procedures.**
    - **B. Connect one batterie (9V spec.) to the Loading Motor in series for supplying 9V to rotate the Loading Motor.**

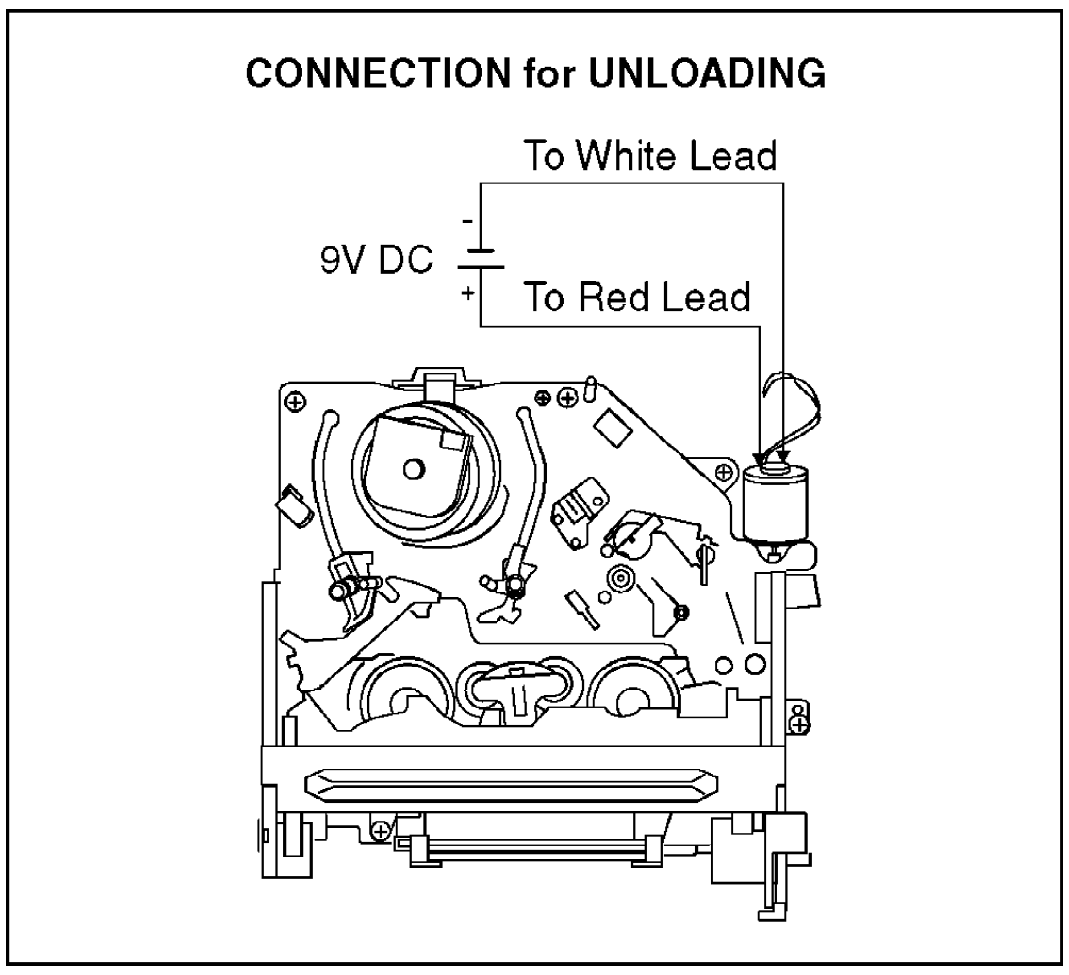
CONNECTION for UNLOADING
To White Lead
9V DC
-
+
To Red Lead

C. Stop unloading just before unloading would be completed.

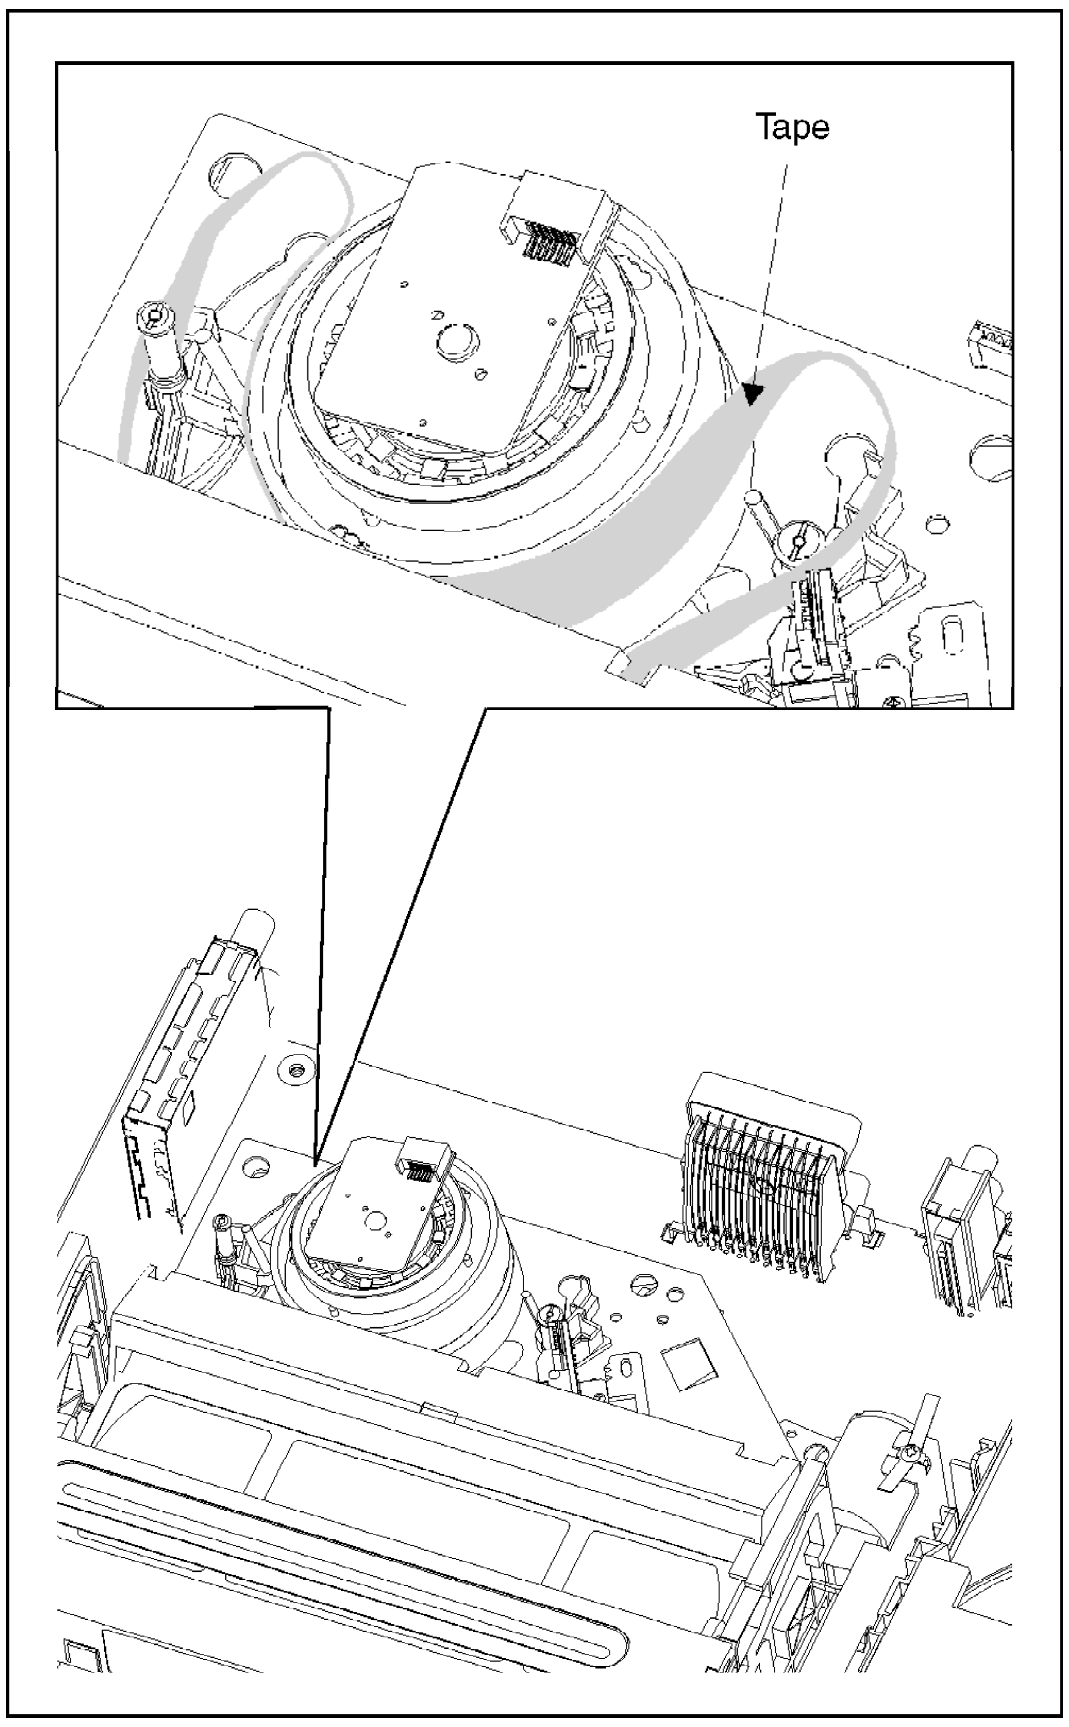

D. Then the tape becomes slack.

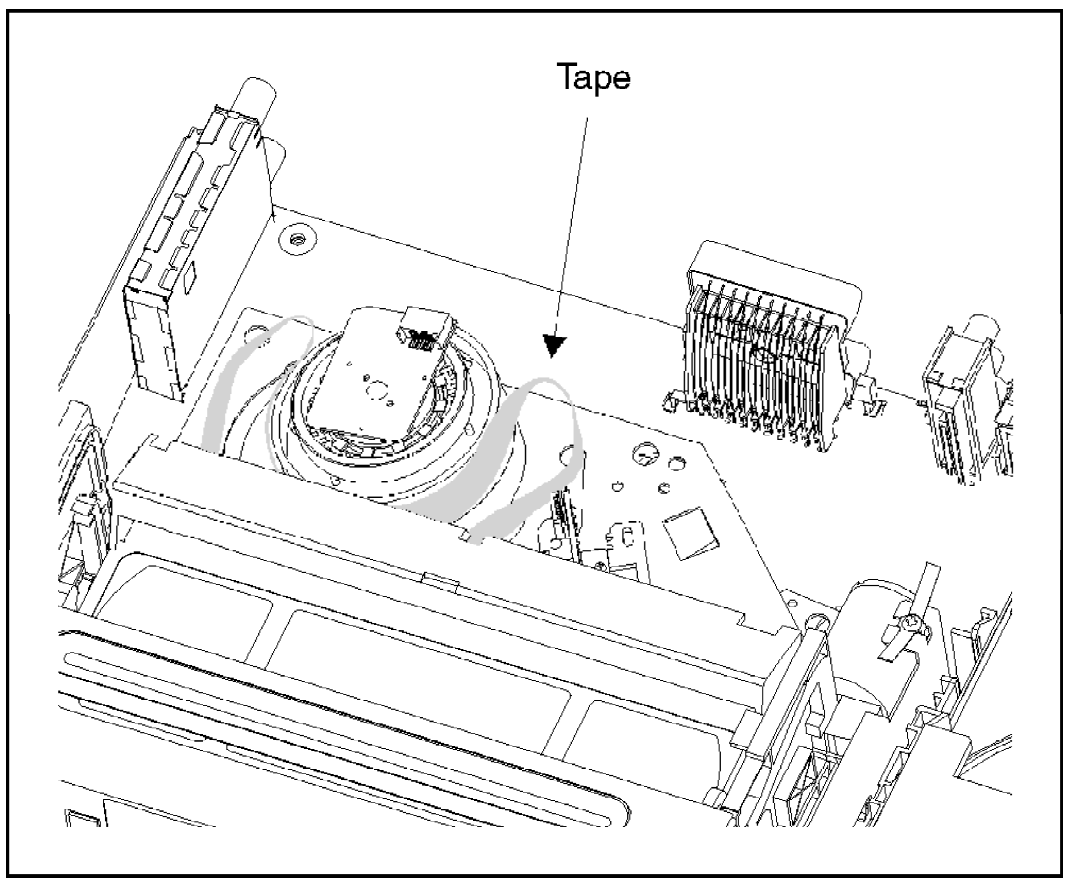

E. Rotate the S-Reel by a small minus screwdriver to remove the slack tape.

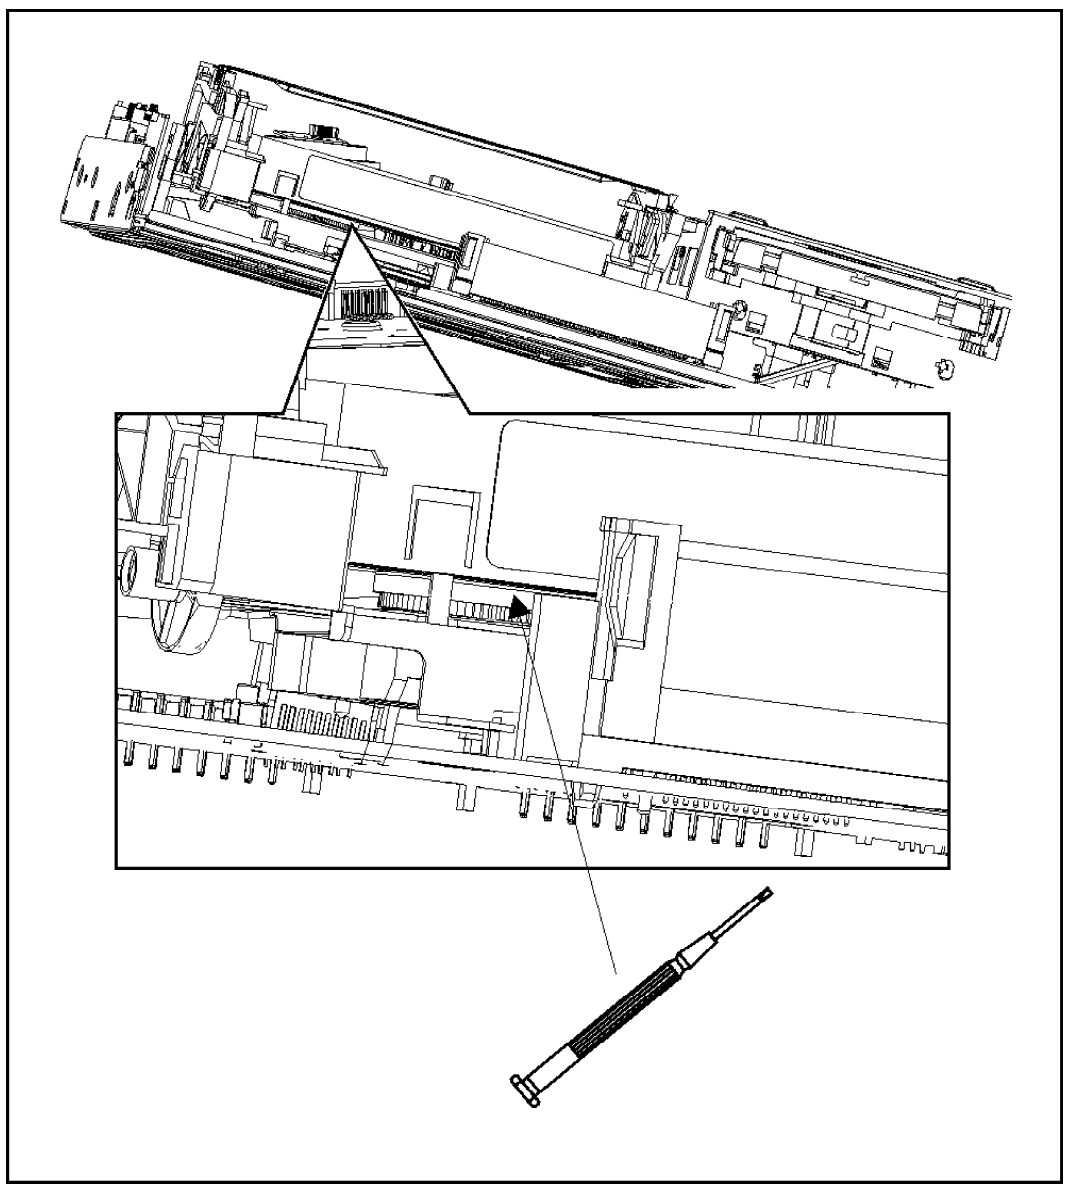

F. Then unload again to remove the cassette tape.

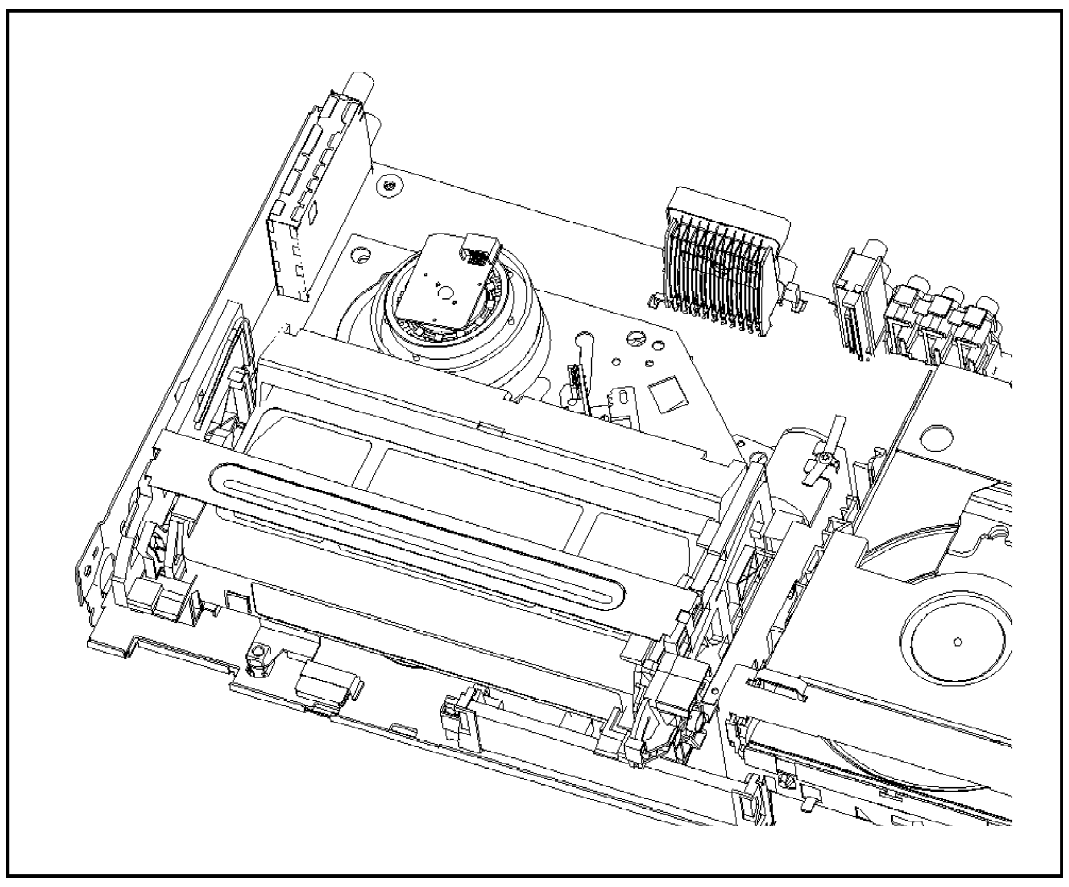

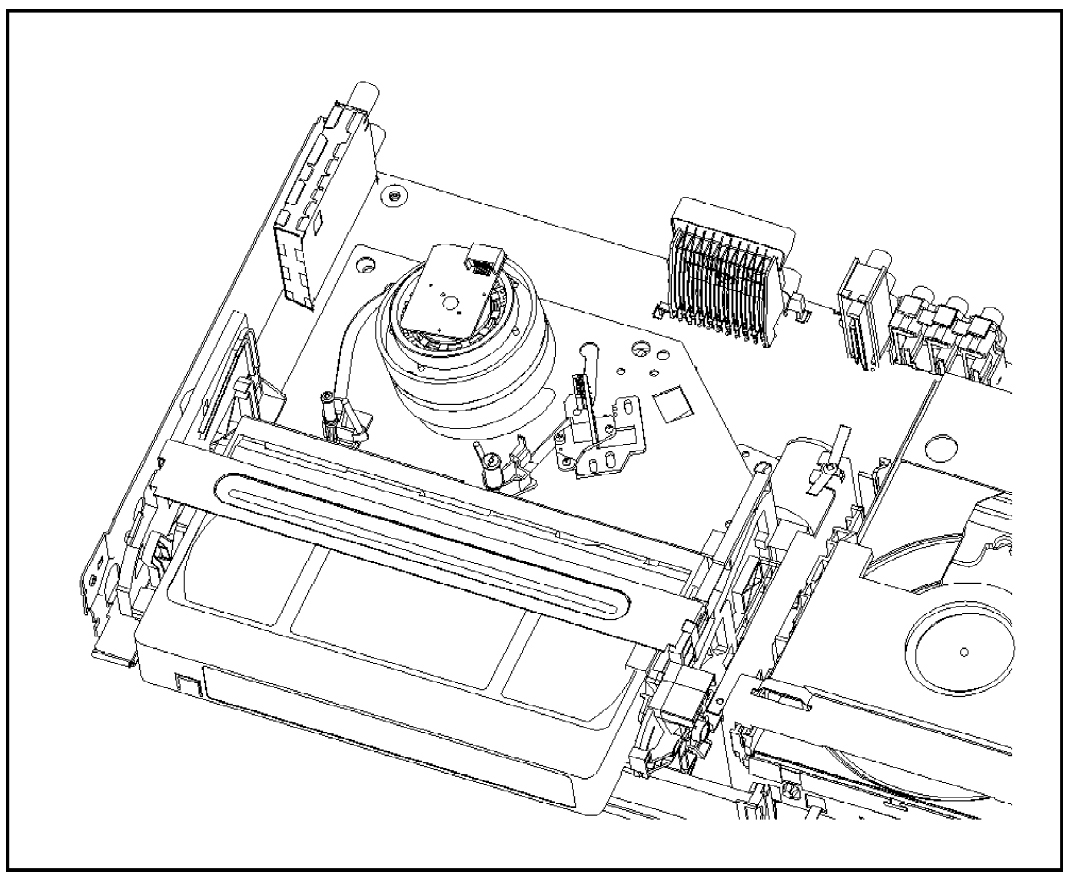

3. **Removal by manual operations after uninstalling the mechanism.**
   - **A. Disconnect the AC plug remove the Top Panel, Front Panel and the Mechanism by referring to the Disassembly Procedures.**
   - **B. Remove the Screw (S1) and remove the Loading Motor both.**

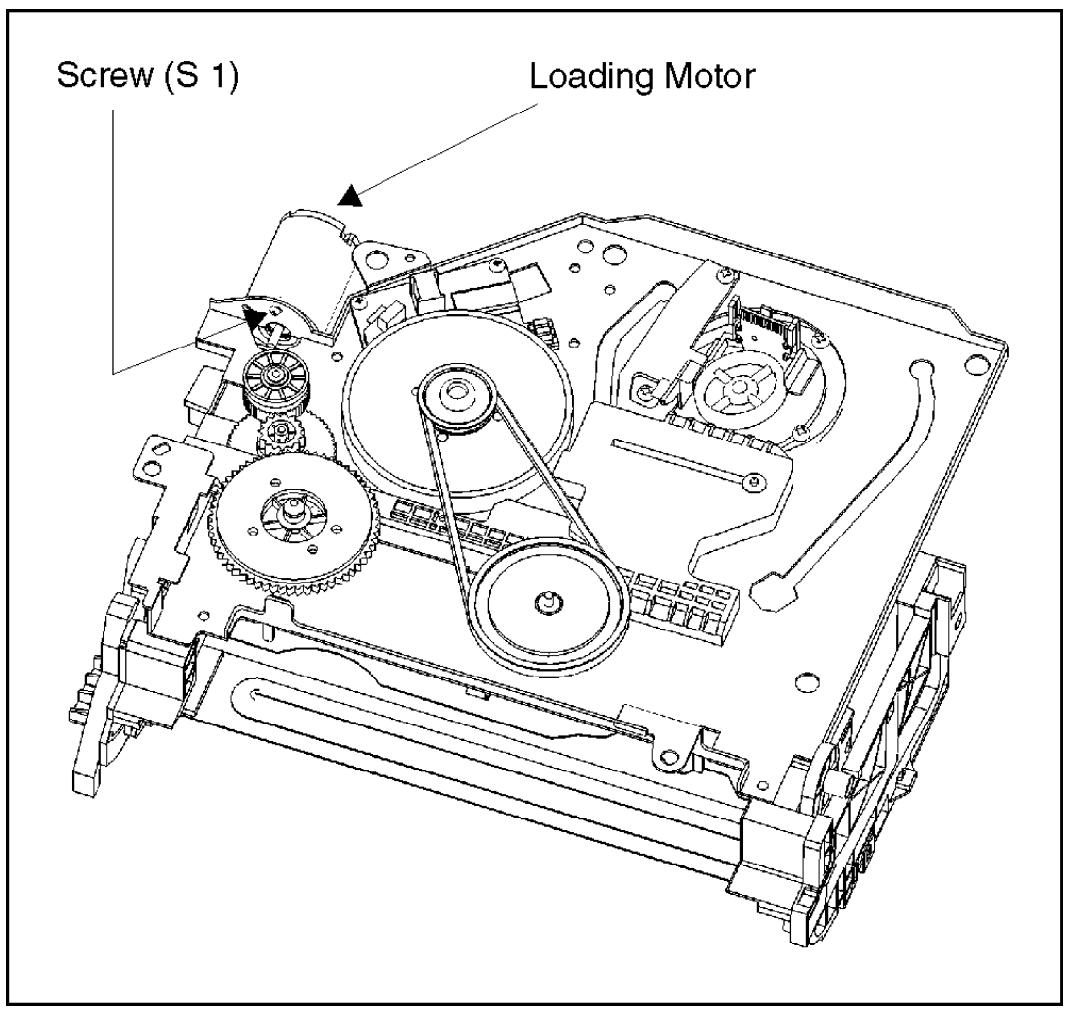

   - **C. Rotate the Main Cam Gear counter-clockwise until just before the unloading would be completed.**
   - **D. Rotate the Capstan Motor clockwise to remove the slack tape.**

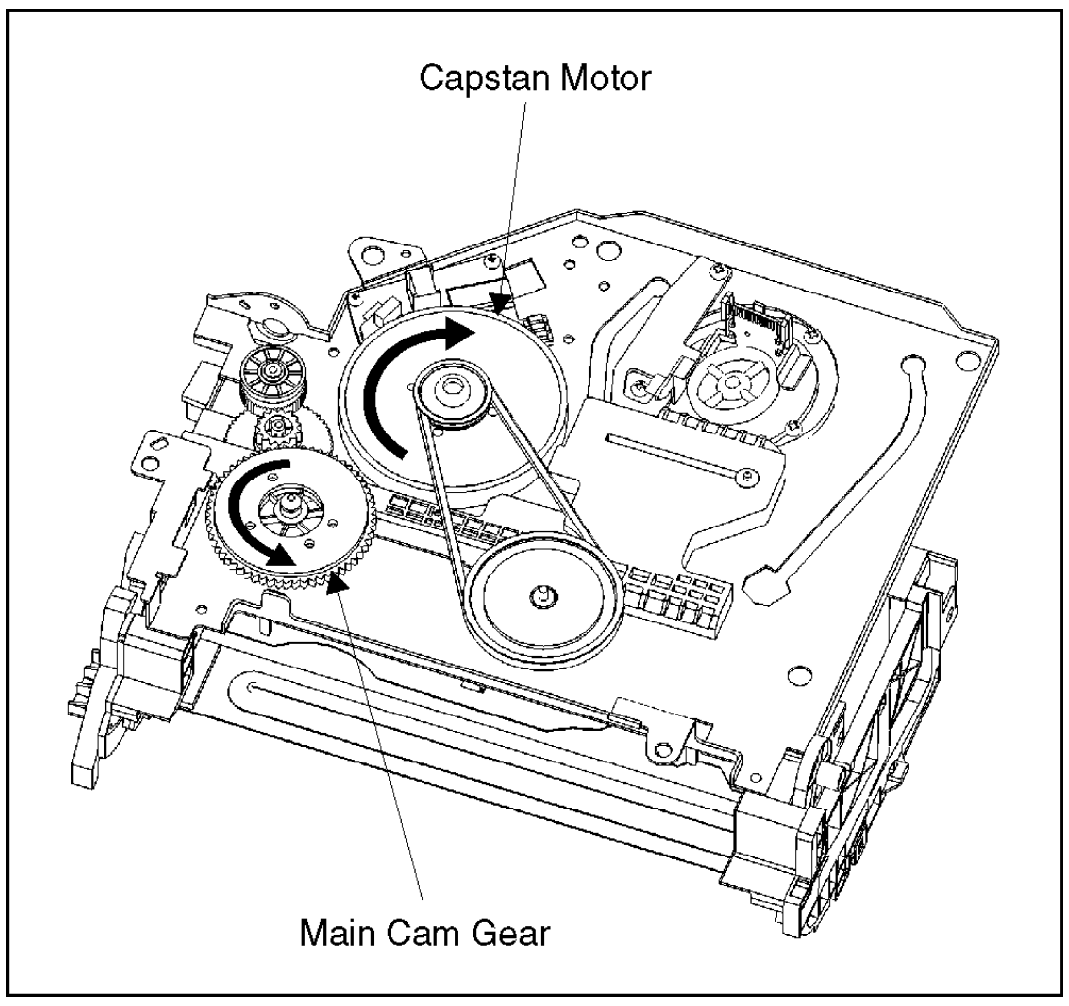

E. Rotate the Main Cam Gear counter-clockwise again to remove the cassette-tape.

F. Set the Position Switch to EJECT POSITION certainly.

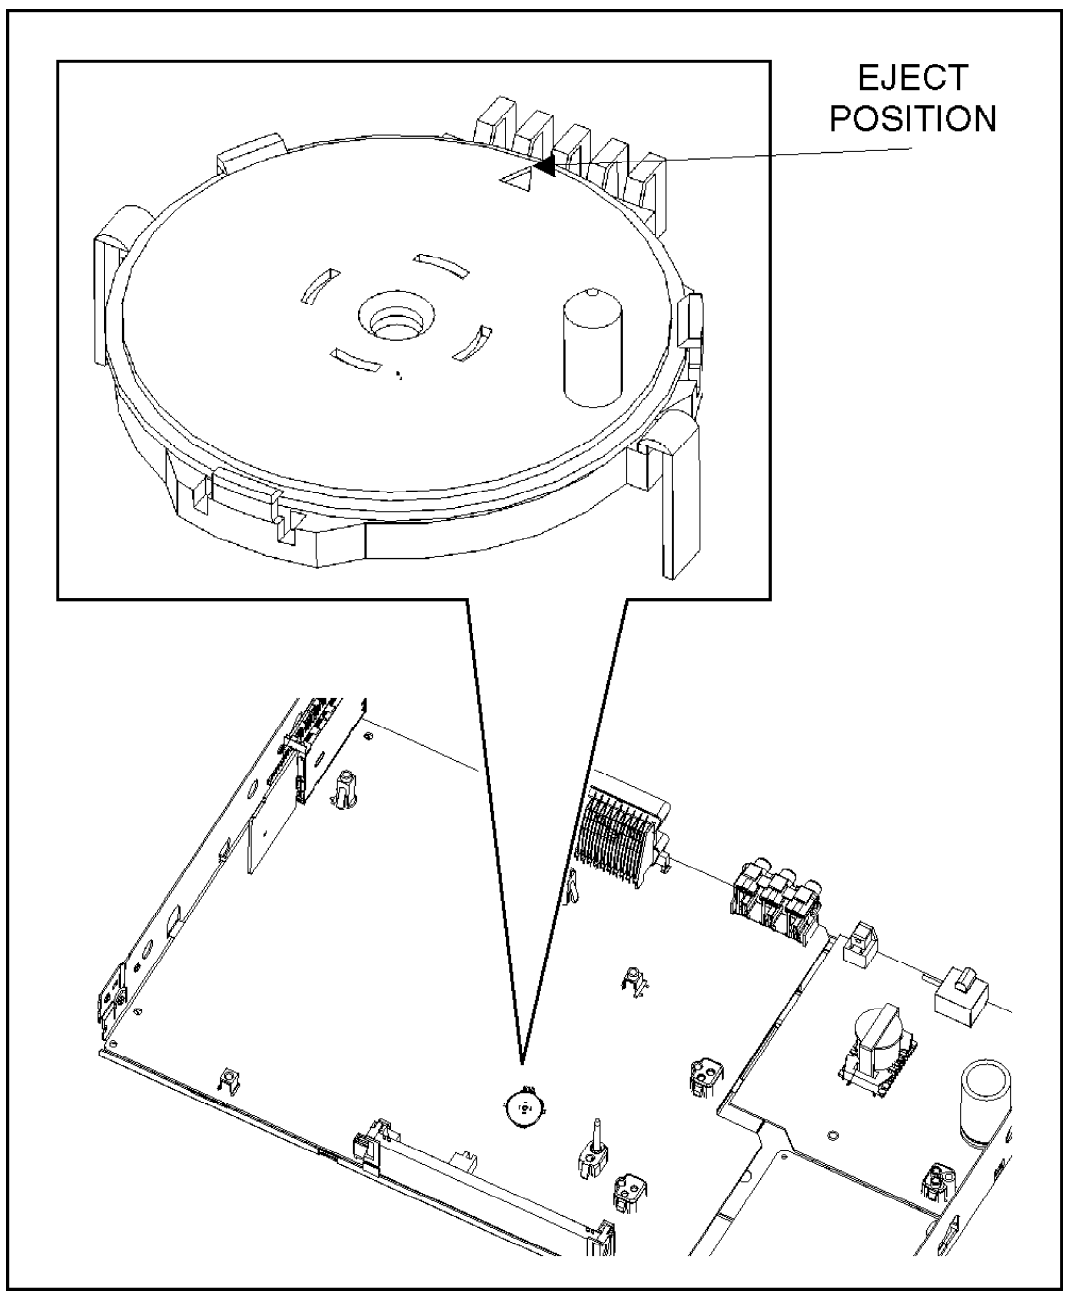

G. Install the Loading Motor and tighten screw (S1).

6.4. SELF-DIAGNOSIS & SERVICE INFORMATION DISPLAY

Refer to the Service Manual for R4 Mechanism Chassis for EURO model (MAD0403002C2).

6.5. INTRODUCTION OF VIDEO / HEAD CLEANING CASSETTE / (POLISHING TYPE)

1. We are pleased to introduce Panasonic Video Head Cleaning Cassette, VFK0923FT [for service purposes] and VFK0923FSE [for end users] for all VHS/SVHS VCP and VCR.

2. **These cleaning cassettes are exclusive removing the hard and sticky clogging on video heads.**
3. **These improve the efficiency of video head cleaning service and shortening cleaning time for end users.**

VFK0923FT (For Service usage)	
Type of Cassette	Full VHS Cassette
Cleaning Time	10 Seconds/Time
Tape Length	20 m
Usability in a Path	180 Times

VFK0823FSE (For end users)	
Type of Cassette	Full VHS Cassette
Cleaning Time	10 Seconds/Time
Tape Length	3.34 m
Usability in a Path	30 Times

Note:

The tape material itself is the same in both types.

7. DISASSEMBLING THE CASING AND CHECKING PCBs

7.1. DISASSEMBLY PROCEDURE

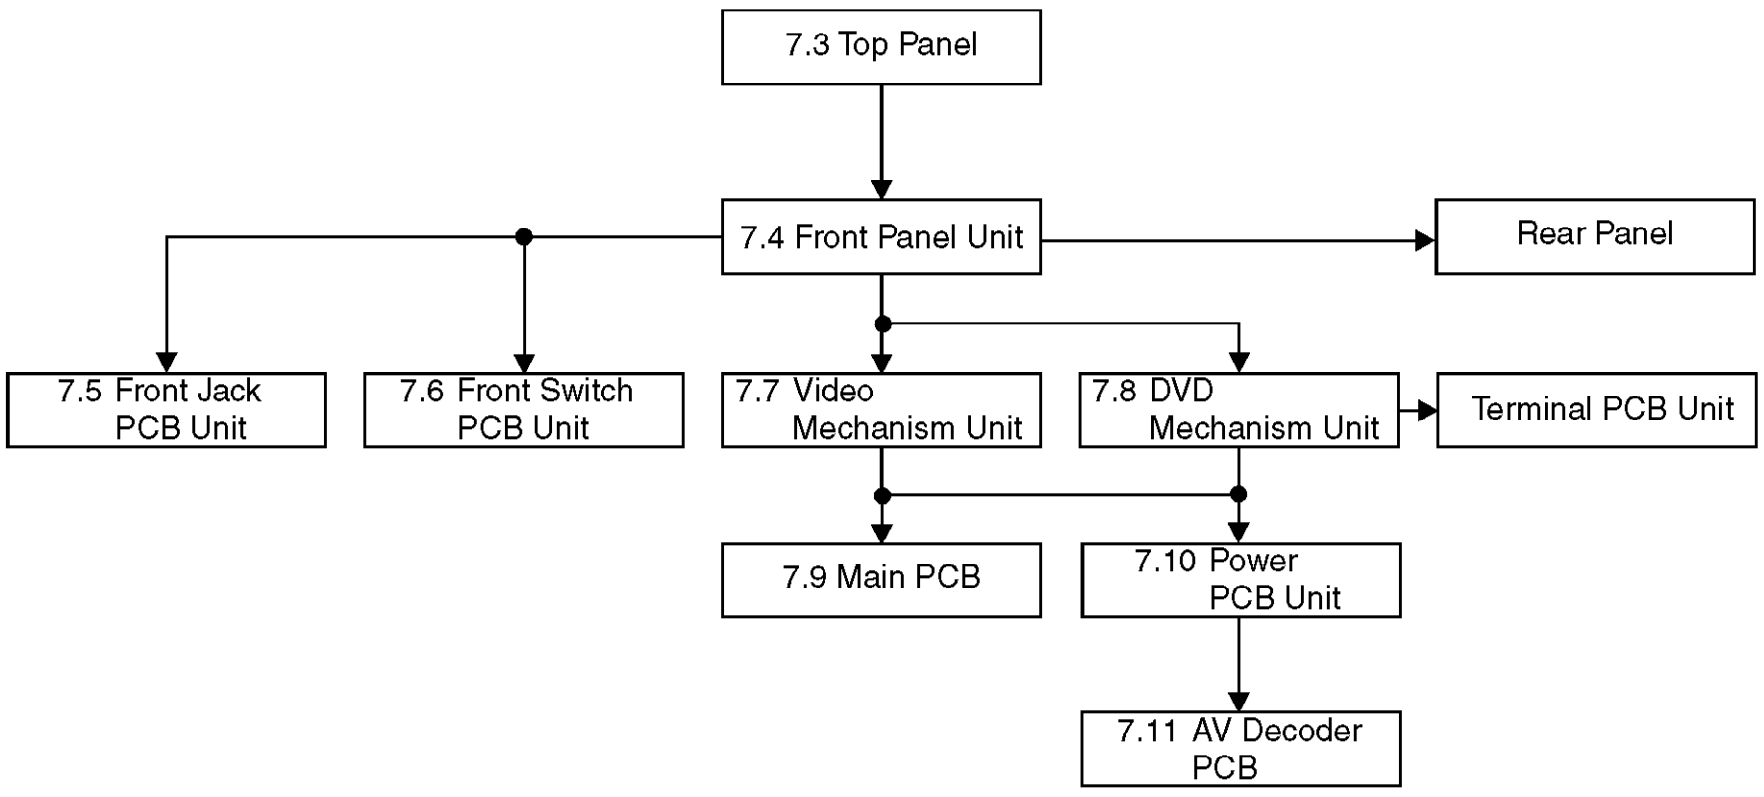
7.3 Top Panel
7.4 Front Panel Unit
Rear Panel
7.5 Front Jack PCB Unit
7.6 Front Switch PCB Unit
7.7 Video Mechanism Unit
7.8 DVD Mechanism Unit
Terminal PCB Unit
7.9 Main PCB
7.10 Power PCB Unit
7.11 AV Decoder PCB

7.2. CASING PARTS AND PCB POSITIONS

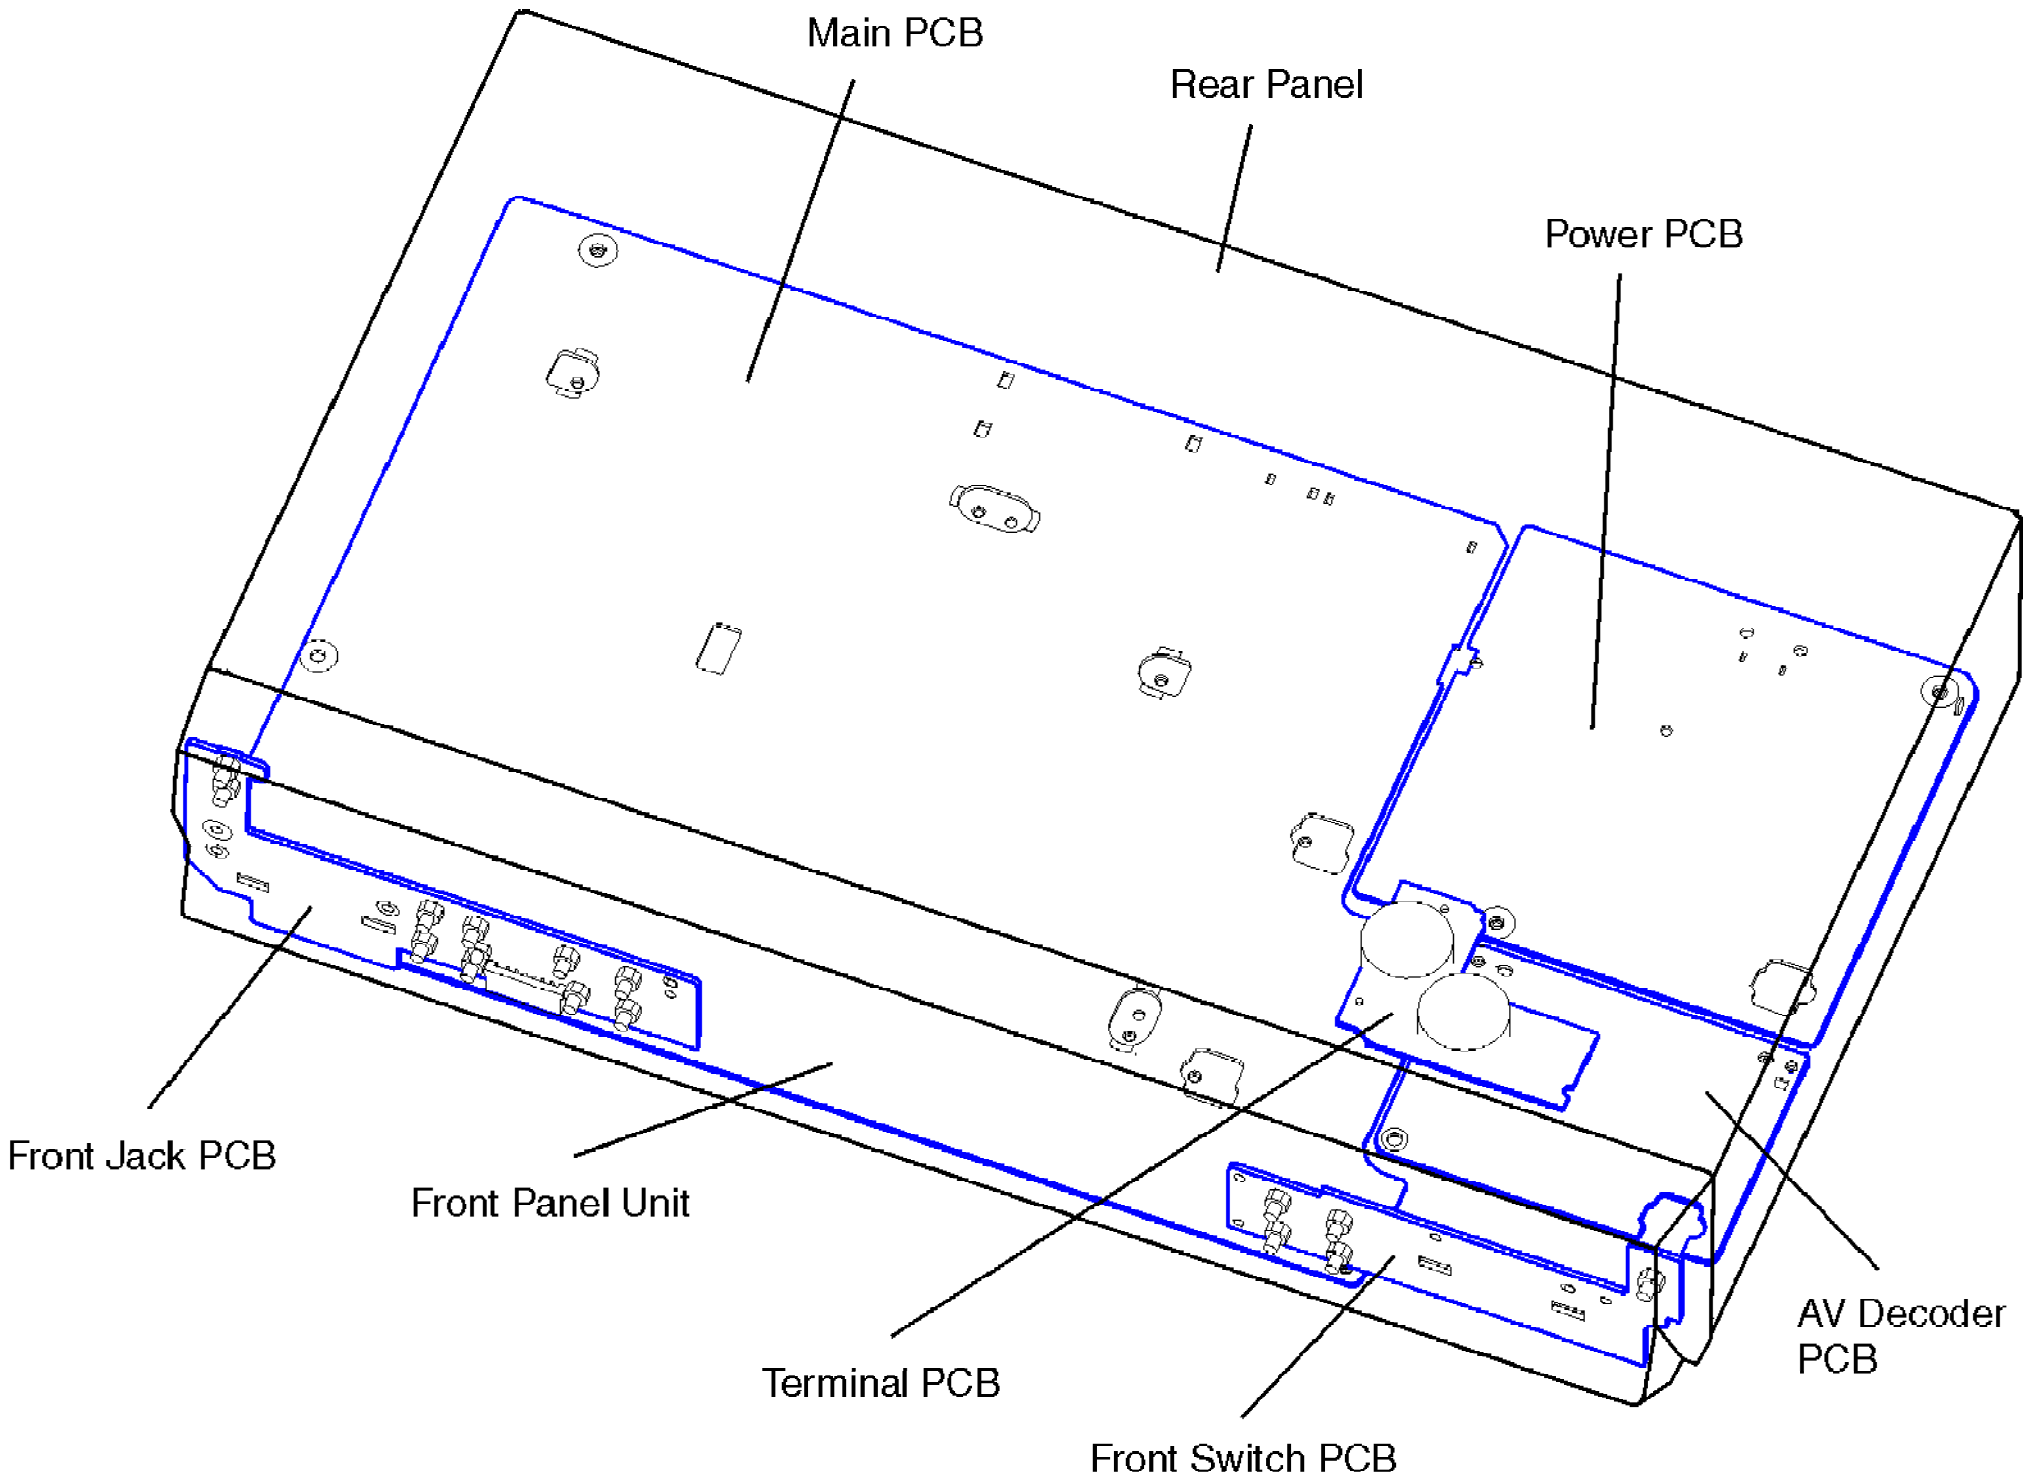
Main PCB
Rear Panel
Power PCB
Front Jack PCB
Front Panel Unit
Terminal PCB
AV Decoder PCB
Front Switch PCB

7.3. TOP PANEL

1. Unscrew the Screws.

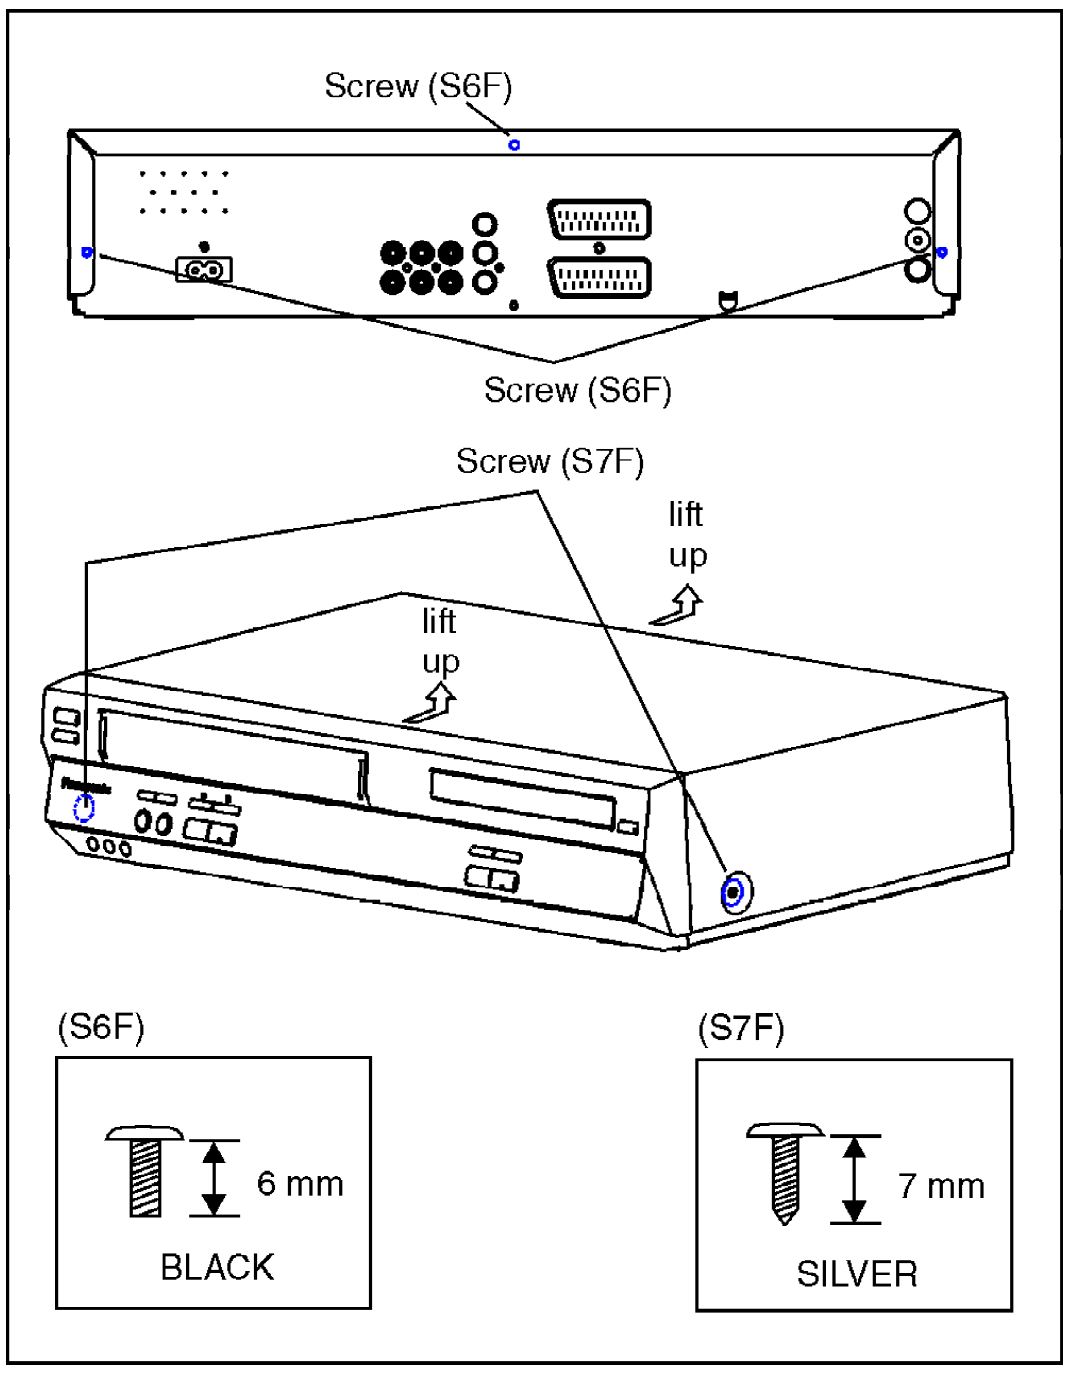
Screw (S6F)
Screw (S6F)
Screw (S7F)
lift up
lift up
(S6F)
6 mm
BLACK
(S7F)
7 mm
SILVER

7.4. FRONT PANEL UNIT

1. Unscrew the Screw.

2. Remove the Tabs.

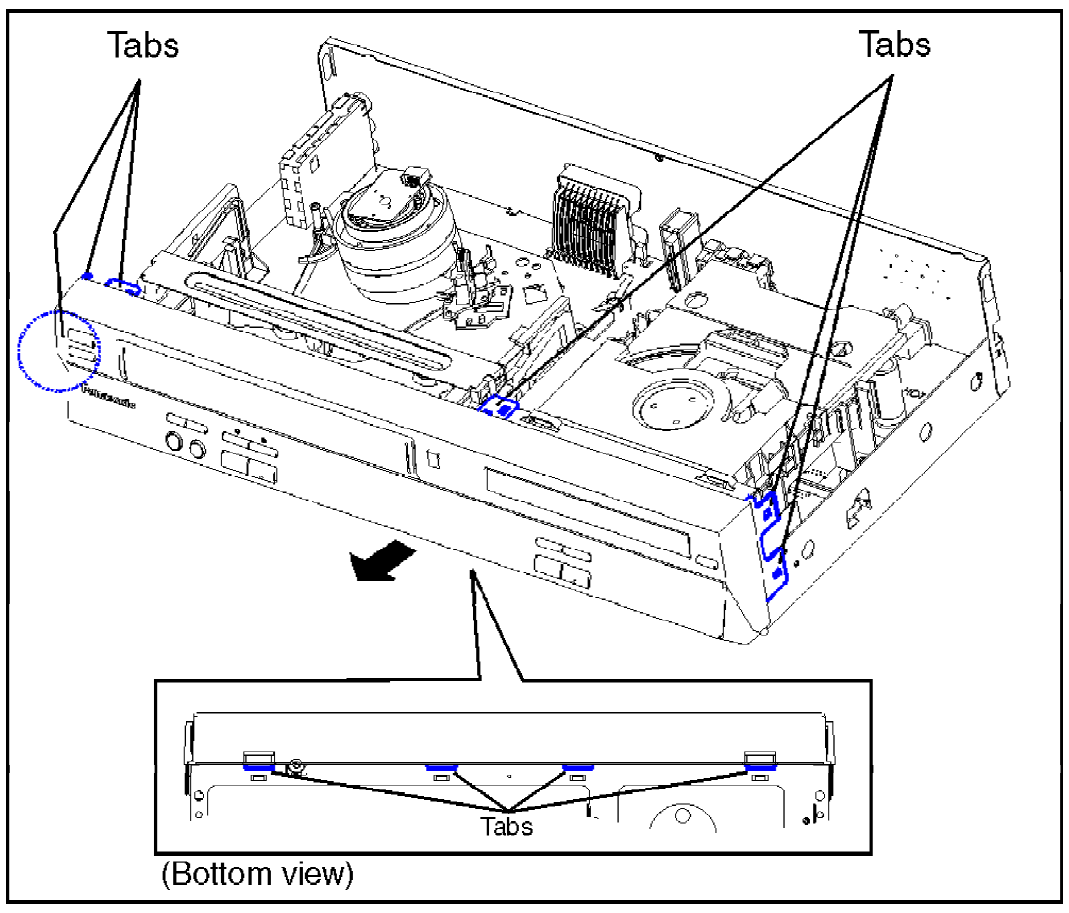
Tabs
Tabs
Tabs
(Bottom view)

Note:

When attaching Front Panel, in order to hook Cassette Door Opener Lever to Cassette Door, push up cassette door in the direction of arrow and insert a front panel.

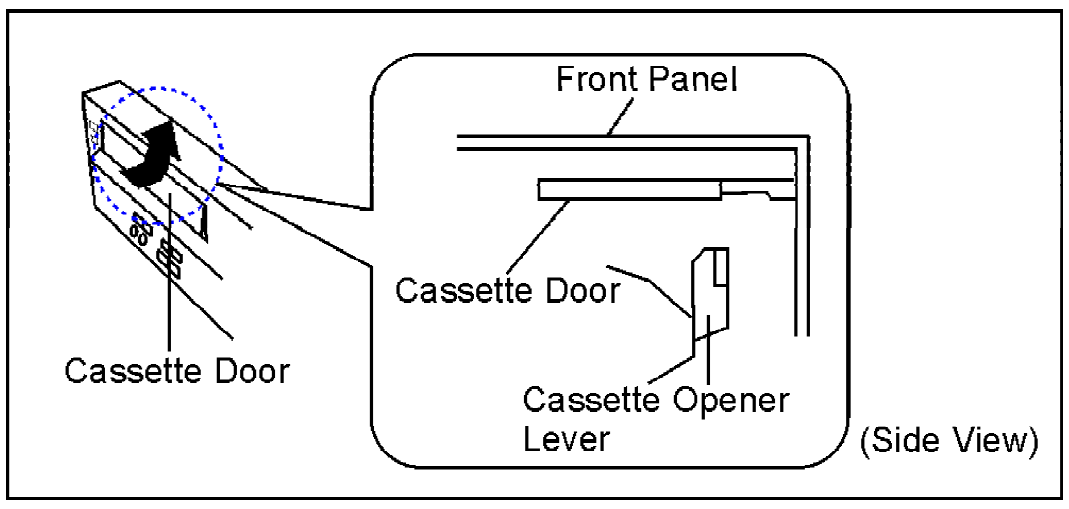
Front Panel
Cassette Door
Cassette Door
Cassette Opener Lever
(Side View)

7.5. FRONT JACK PCB UNIT

1. Unscrew the Screws.
2. Remove the Tabs.

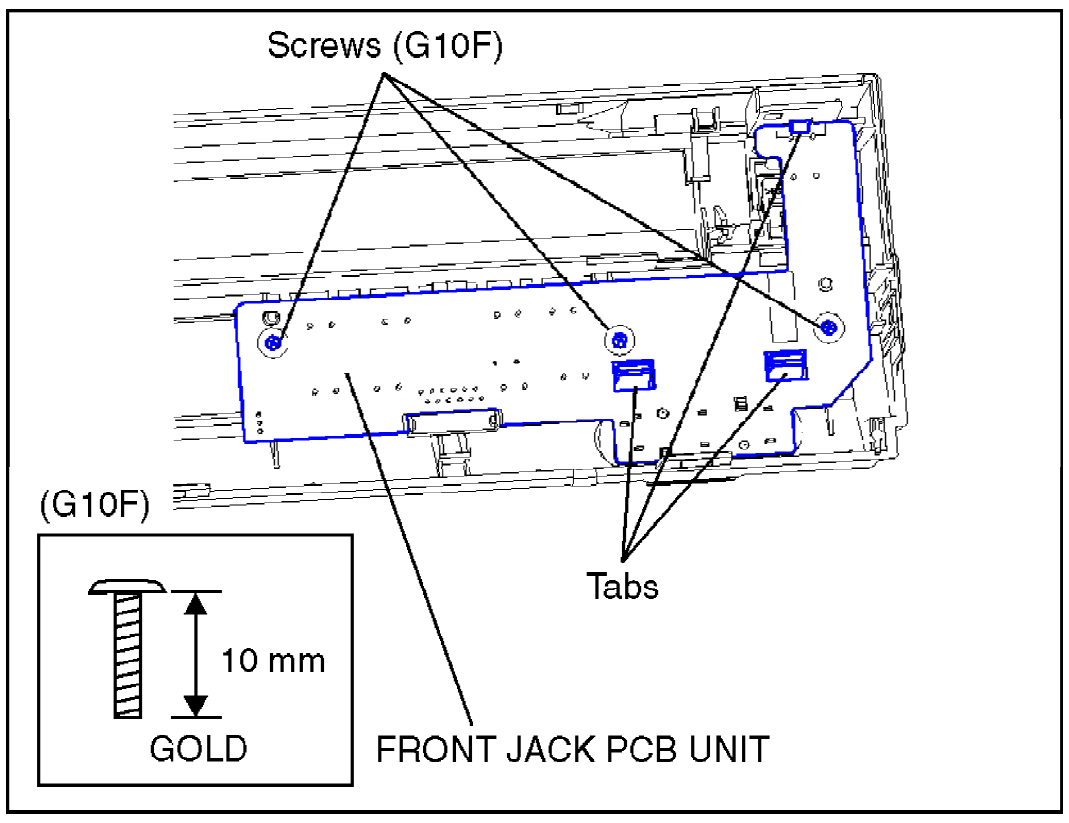
Screws (G10F)
(G10F)
10 mm
GOLD
Tabs
FRONT JACK PCB UNIT

7.6. FRONT SWITCH PCB UNIT

1. Release the Screws.
2. Remove the Tabs.

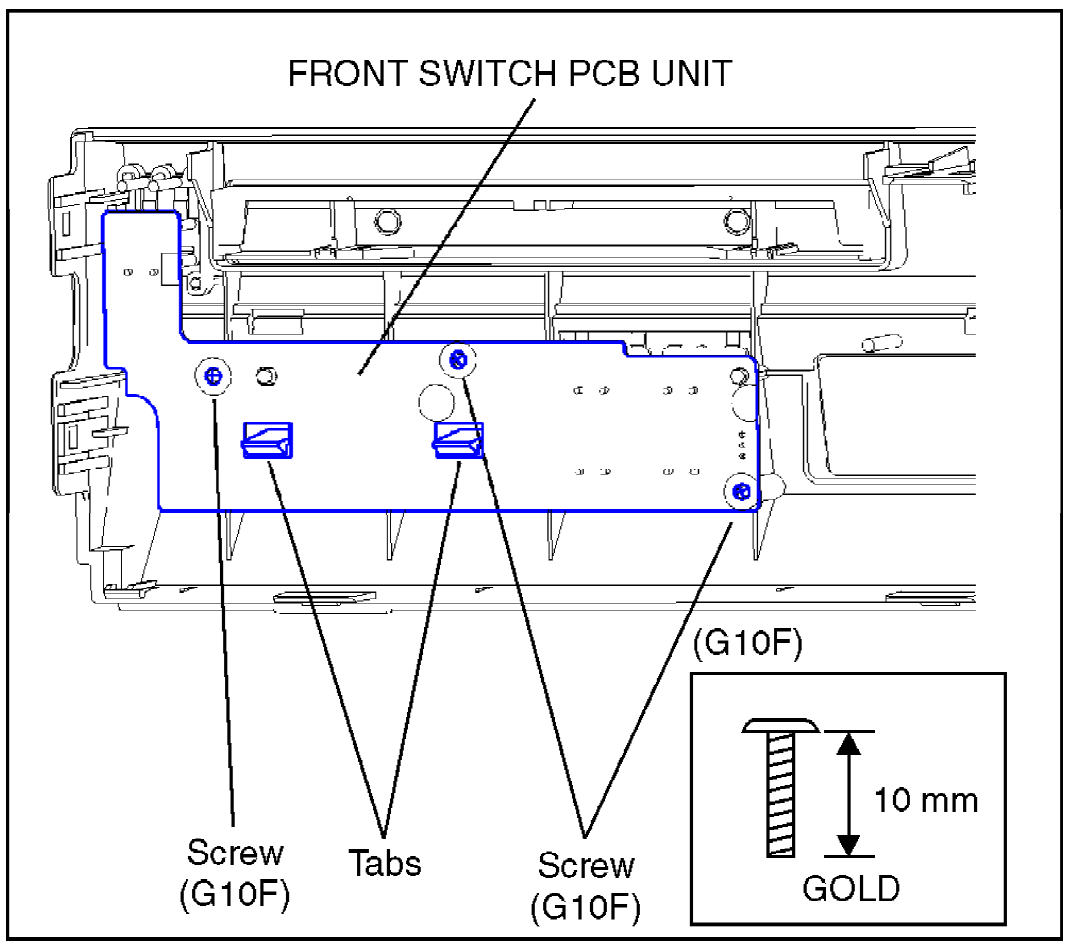
FRONT SWITCH PCB UNIT
Screw
(G10F)
Tabs
Screw
(G10F)
(G10F)
10 mm
GOLD

7.7. VIDEO MECHANISM UNIT

1. Unscrew the Screws.

2. Disconnect the Cylinder Connector (A).

3. Disconnect the A/C Head Connector (B).

4. Disconnect the Connector (C).

5. Disconnect the Loading Motor Connector (D).

6. Remove the VHS Mechansim Unit.

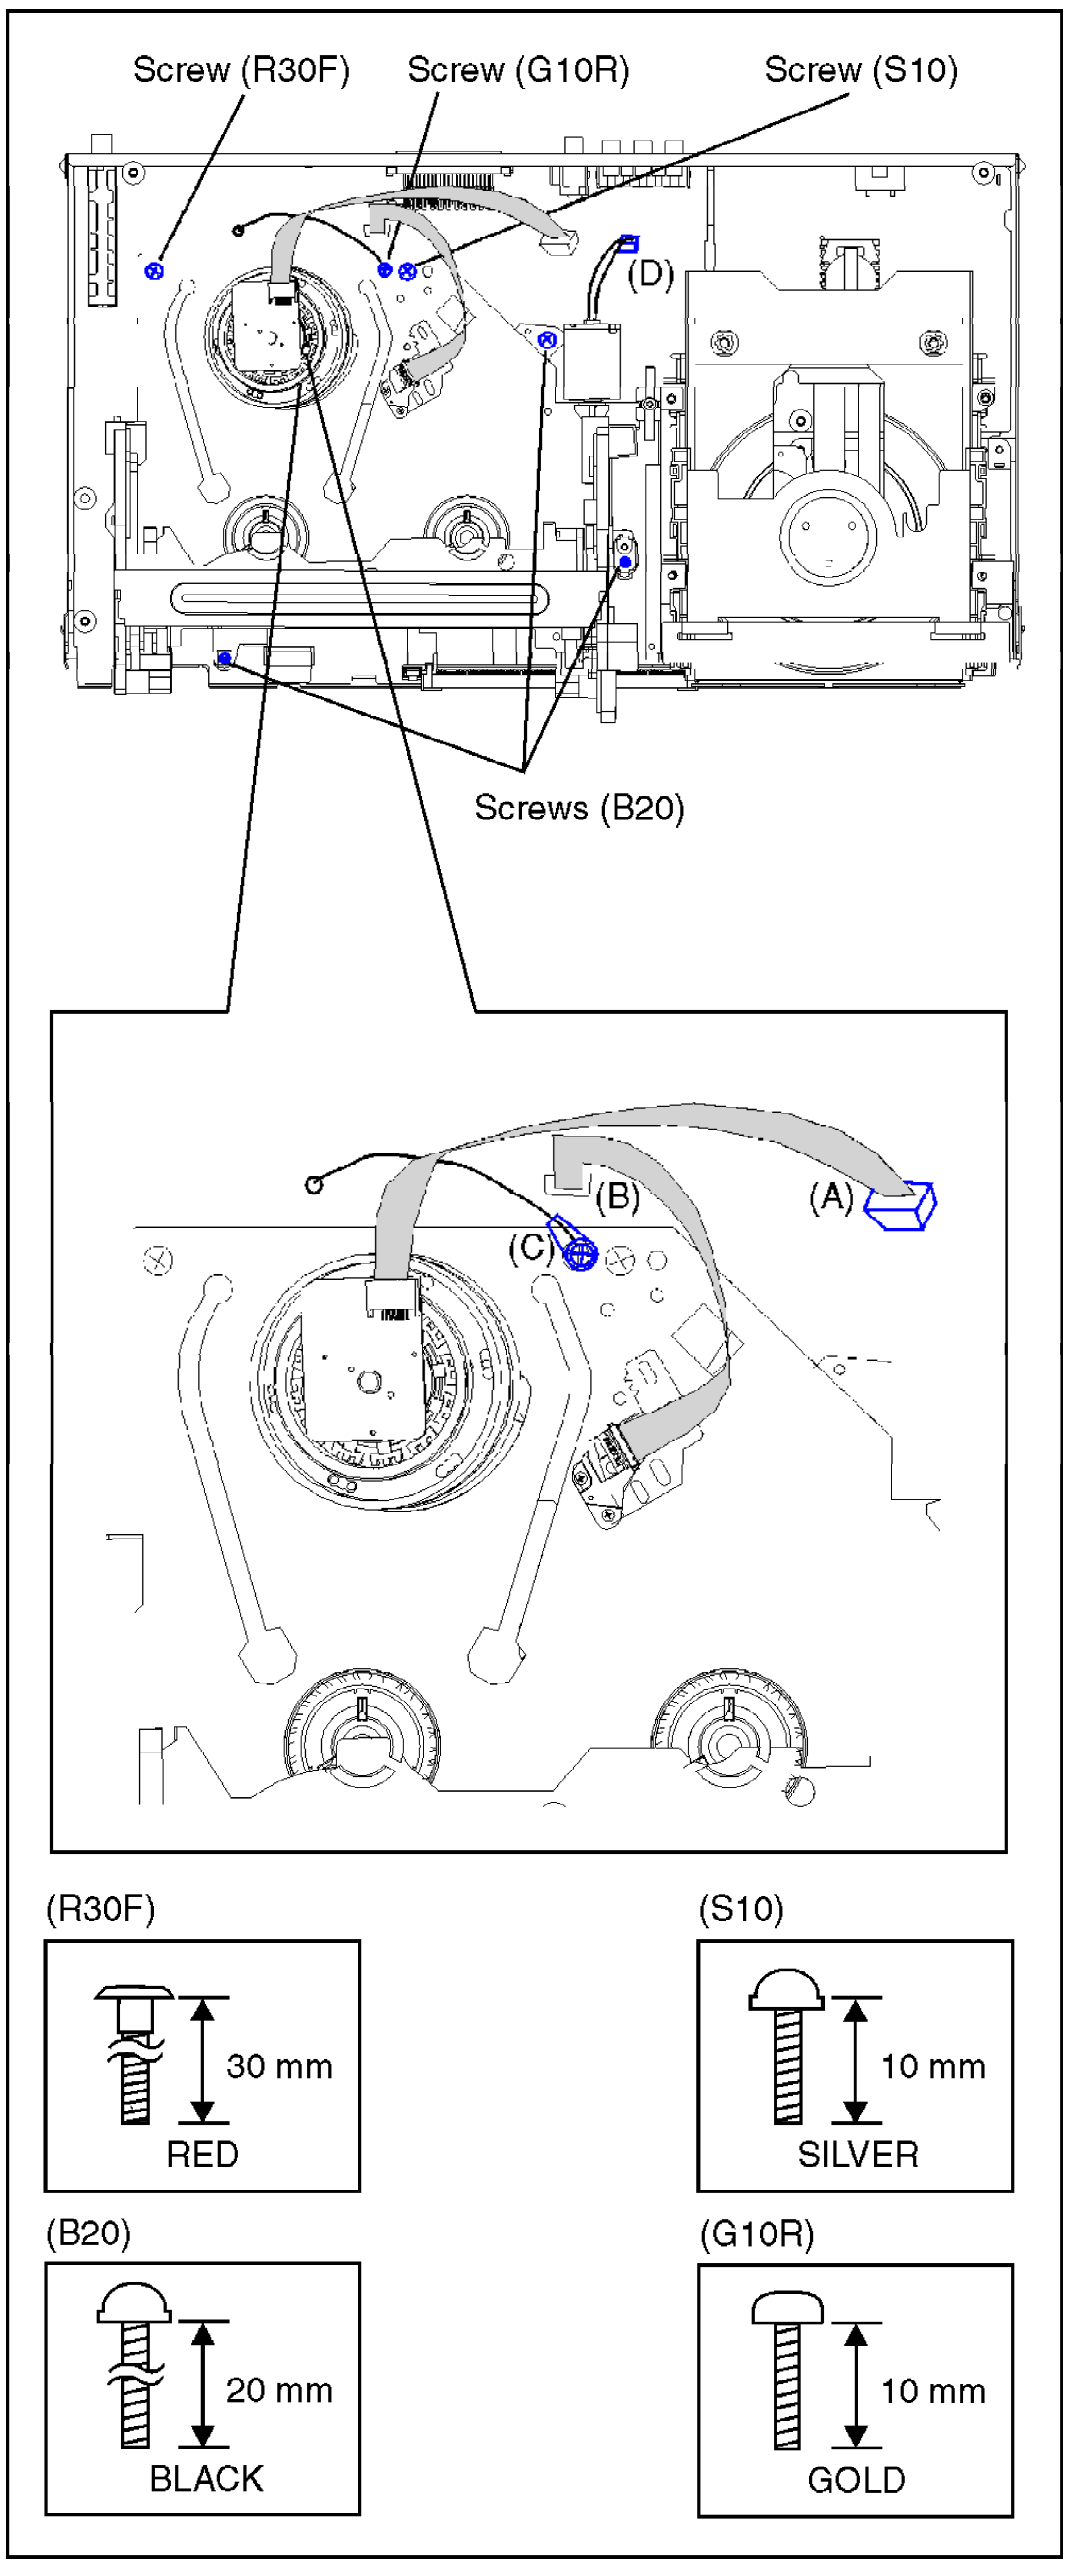
Screw (R30F)
Screw (G10R)
Screw (S10)
(D)
Screws (B20)
(B)
(A)
(C)
(R30F)
30 mm
RED
(S10)
10 mm
SILVER
(B20)
20 mm
BLACK
(G10R)
10 mm
GOLD

7.8. DVD MECHANISM UNIT

1. **Unscrew the Screws.**
2. **Lift up the DVD Mechanism Unit.**
3. **Remove the Cables.**
4. **Remove the DVD Mechanism Unit.**
5. **Remove the Protection Foil.**

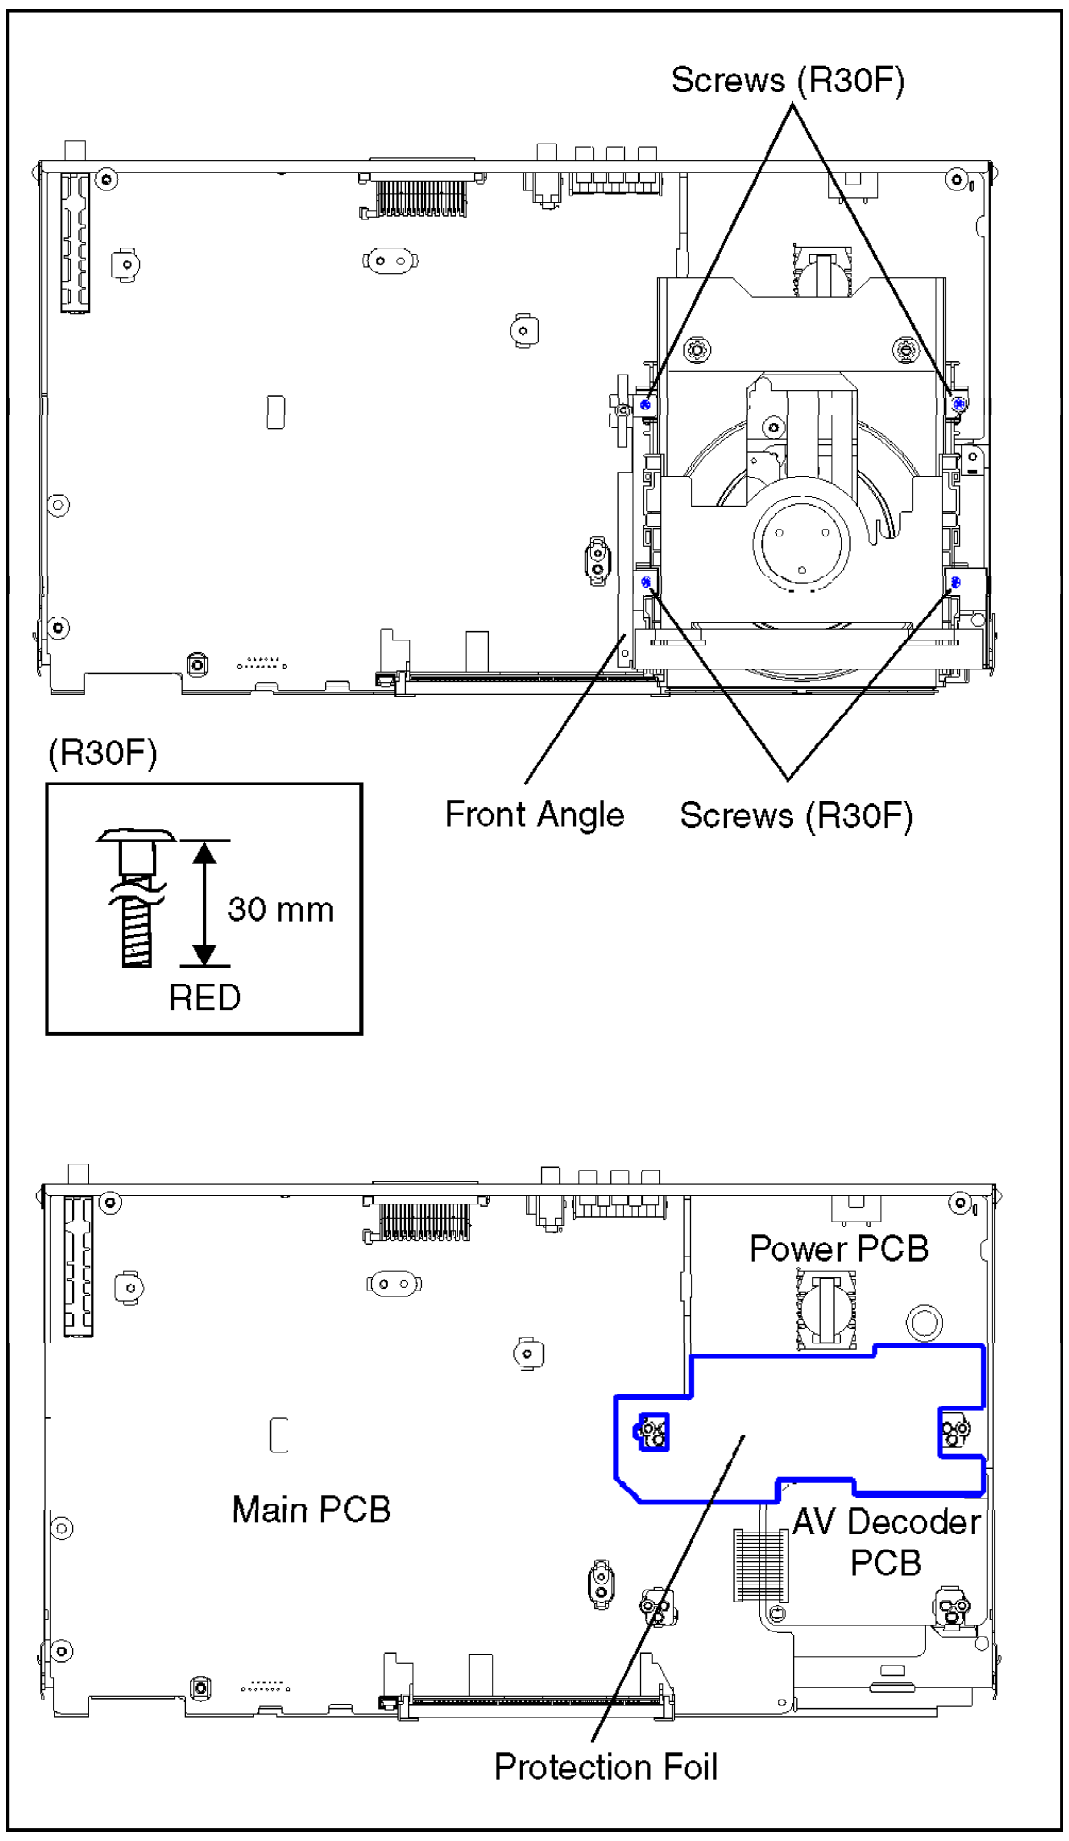
Screws (R30F)
(R30F)
Front Angle
Screws (R30F)
30 mm
RED
Power PCB
Main PCB
AV Decoder PCB
Protection Foil

7.9. MAIN PCB UNIT

1. Unscrew the Screws.

2. Release the Connectors.

3. Remove the Main PCB Unit.

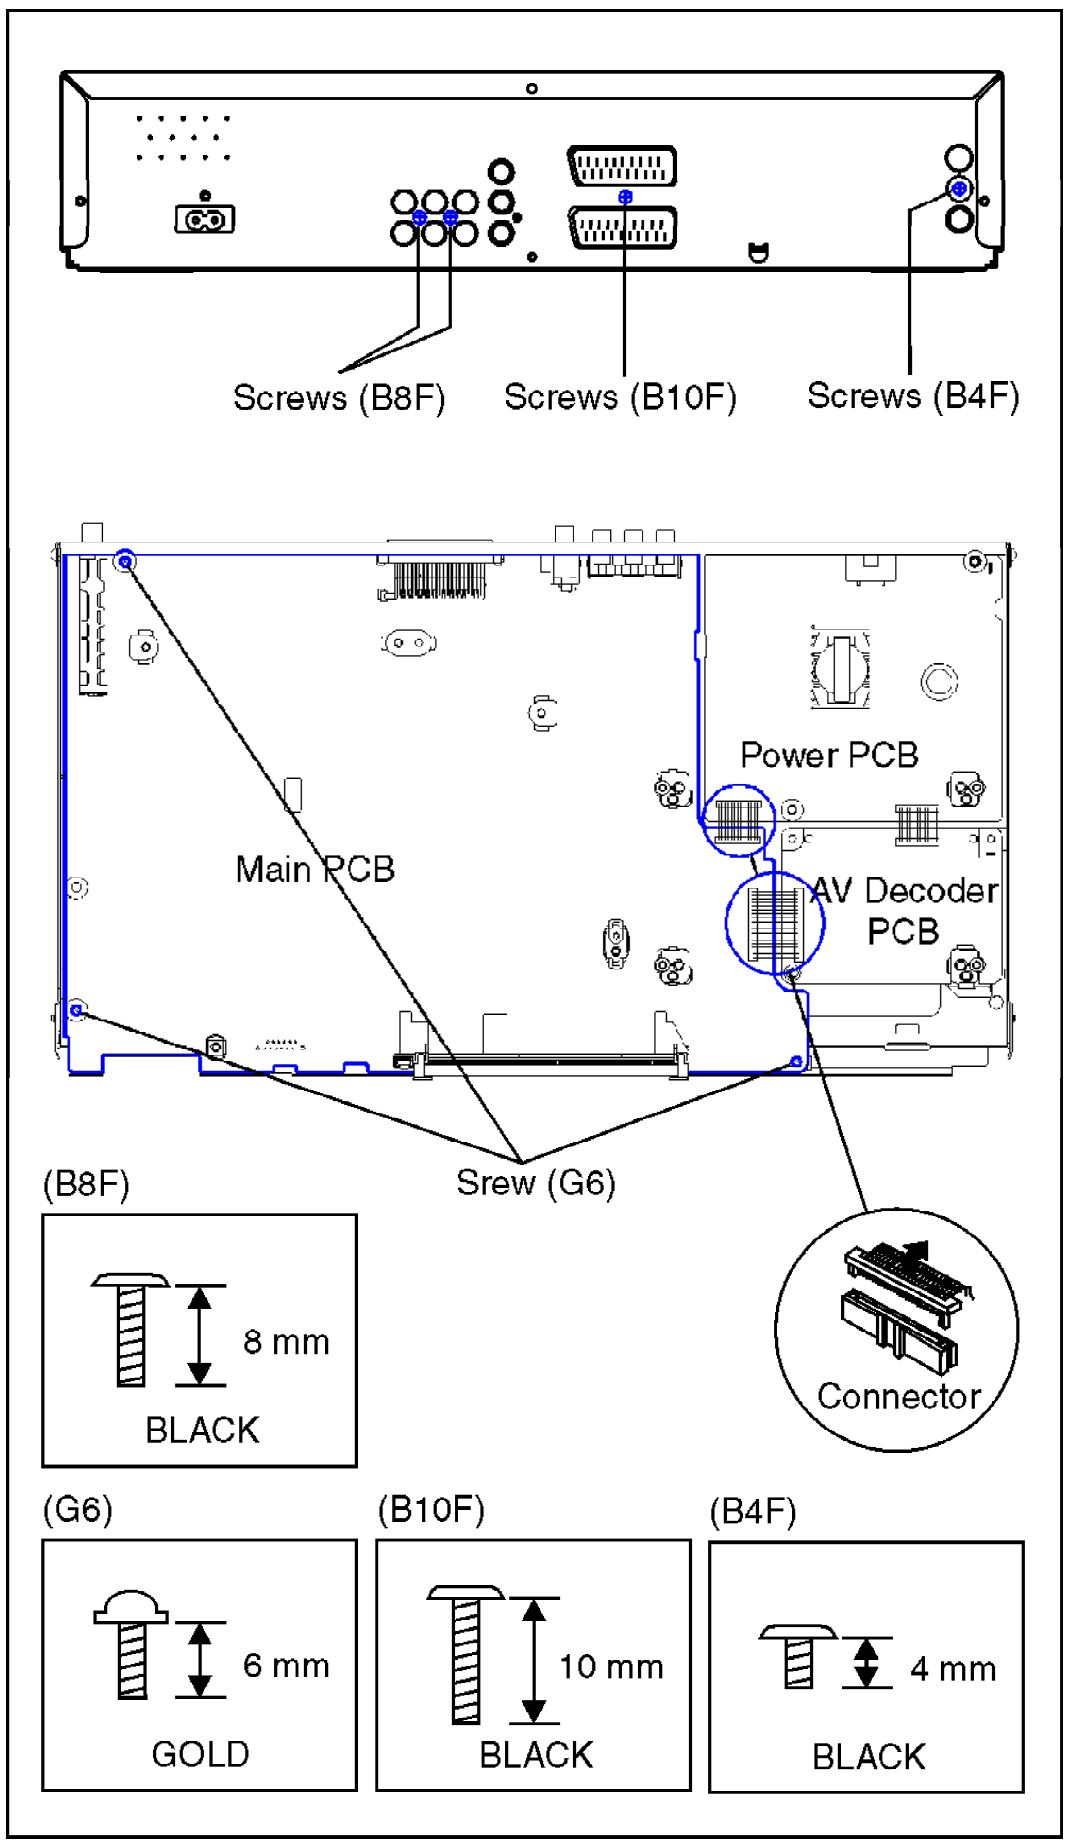
Screws (B8F)
Screws (B10F)
Screws (B4F)
Power PCB
Main PCB
AV Decoder PCB
(B8F)
Srew (G6)
8 mm
BLACK
Connector
(G6)
6 mm
GOLD
(B10F)
10 mm
BLACK
(B4F)
4 mm
BLACK

7.10. POWER PCB UNIT

1. Unscrew the Screws.

2. Release the Connectors.

3. Remove the Power PCB Unit.

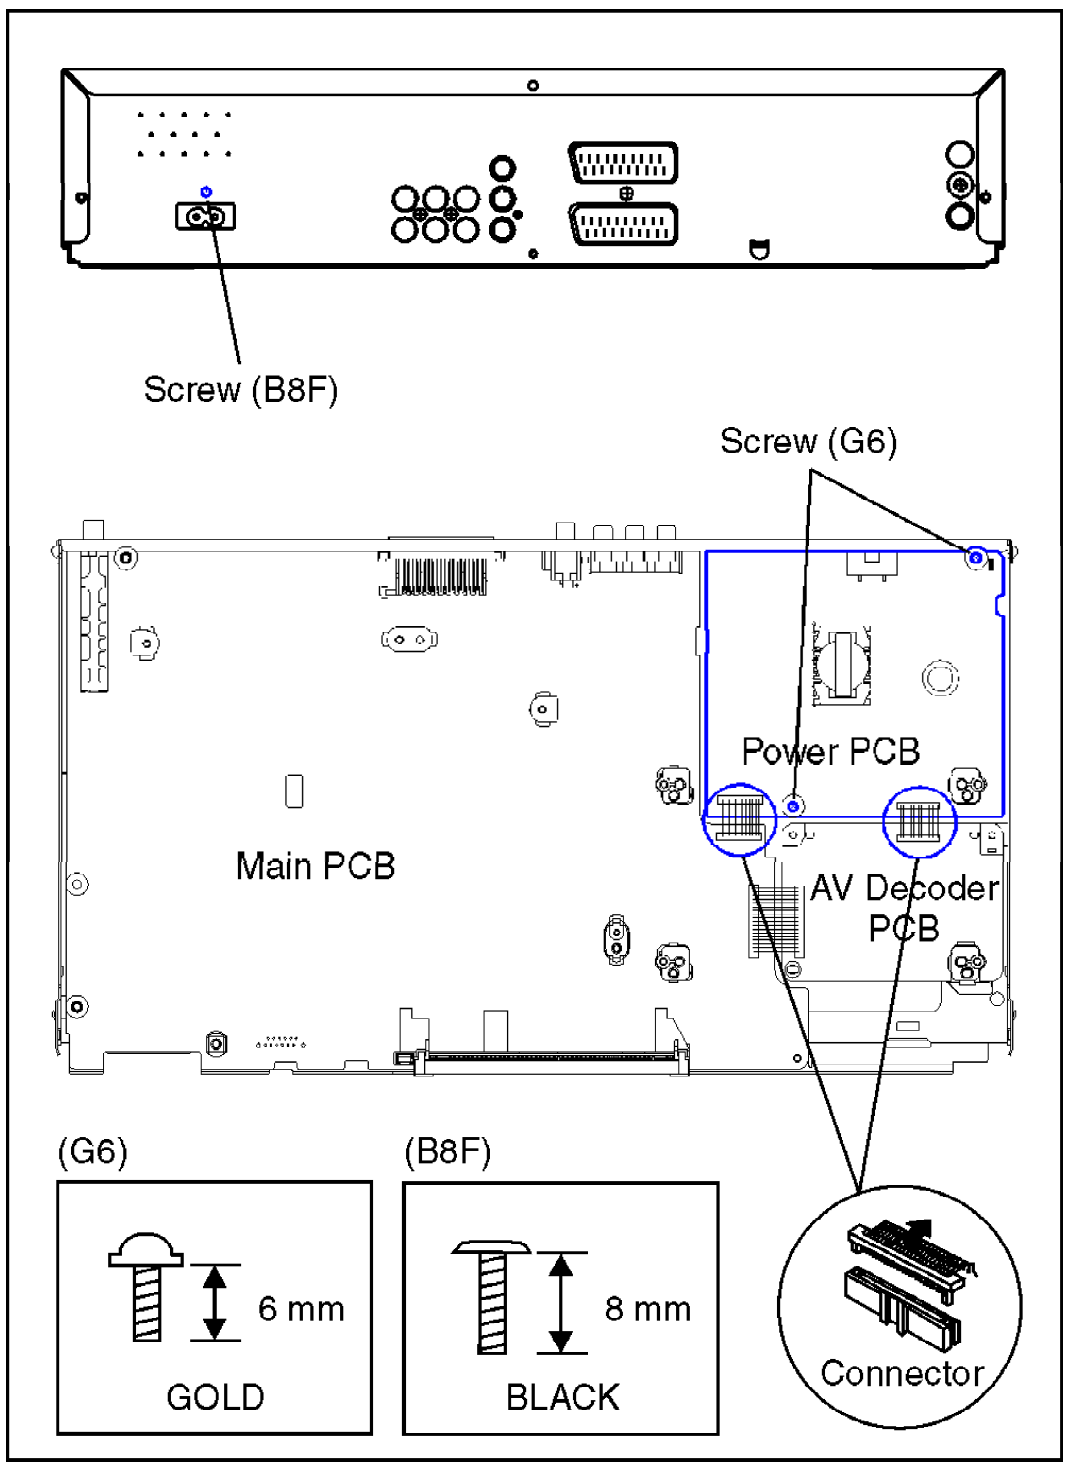
Screw (B8F)
Screw (G6)
Power PCB
Main PCB
AV Decoder PCB
(G6)
6 mm
GOLD
(B8F)
8 mm
BLACK
Connector

7.11. AV DECODER PCB UNIT

1. Unscrew the Screws.

2. Release the Connectors.

3. Remove the AV Decoder PCB Unit.

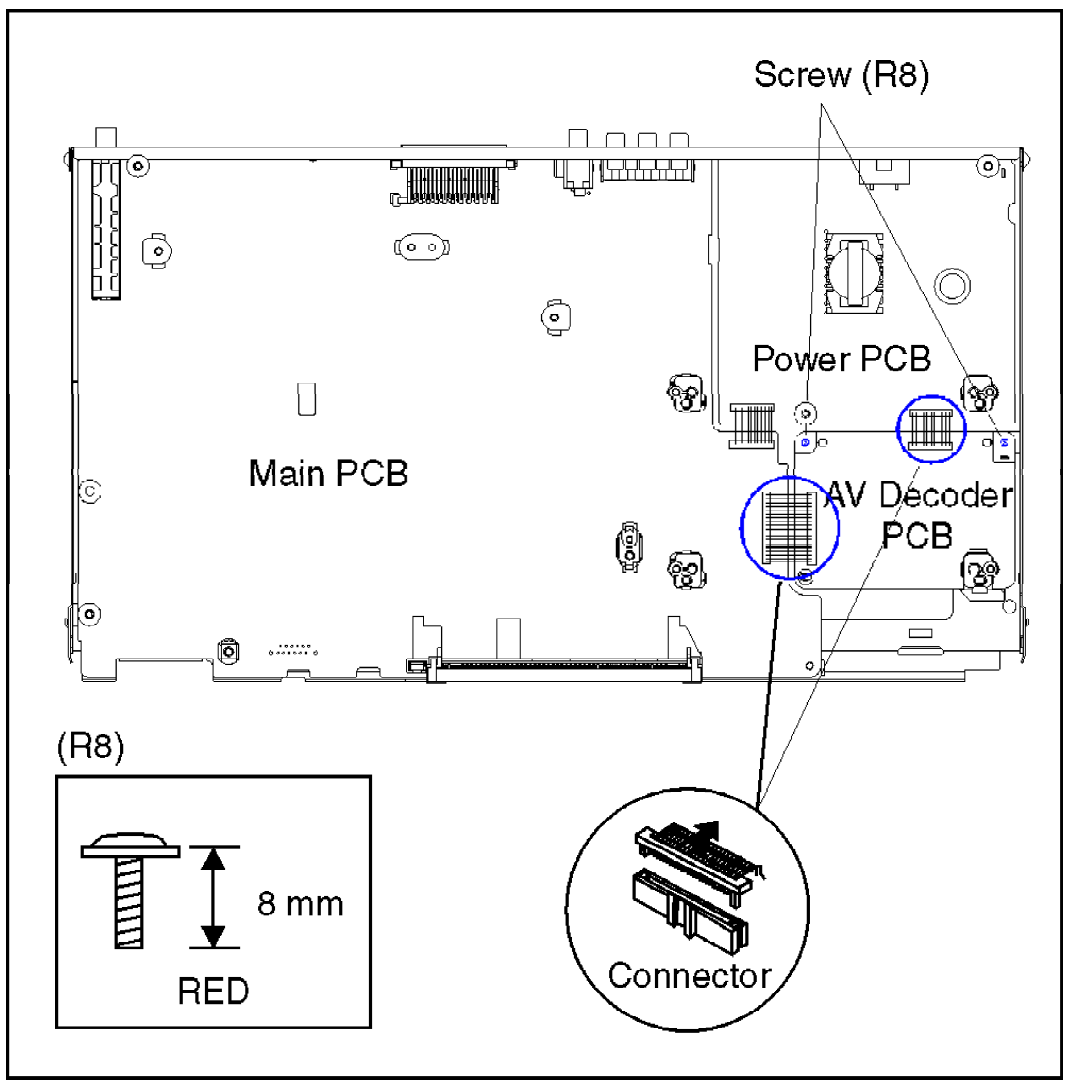
Screw (R8)
Power PCB
Main PCB
AV Decoder PCB
(R8)
8 mm
RED
Connector

7.12. SERVICE POSITION

7.12.1. SERVICE POSITION OF THE AV MAIN PCB

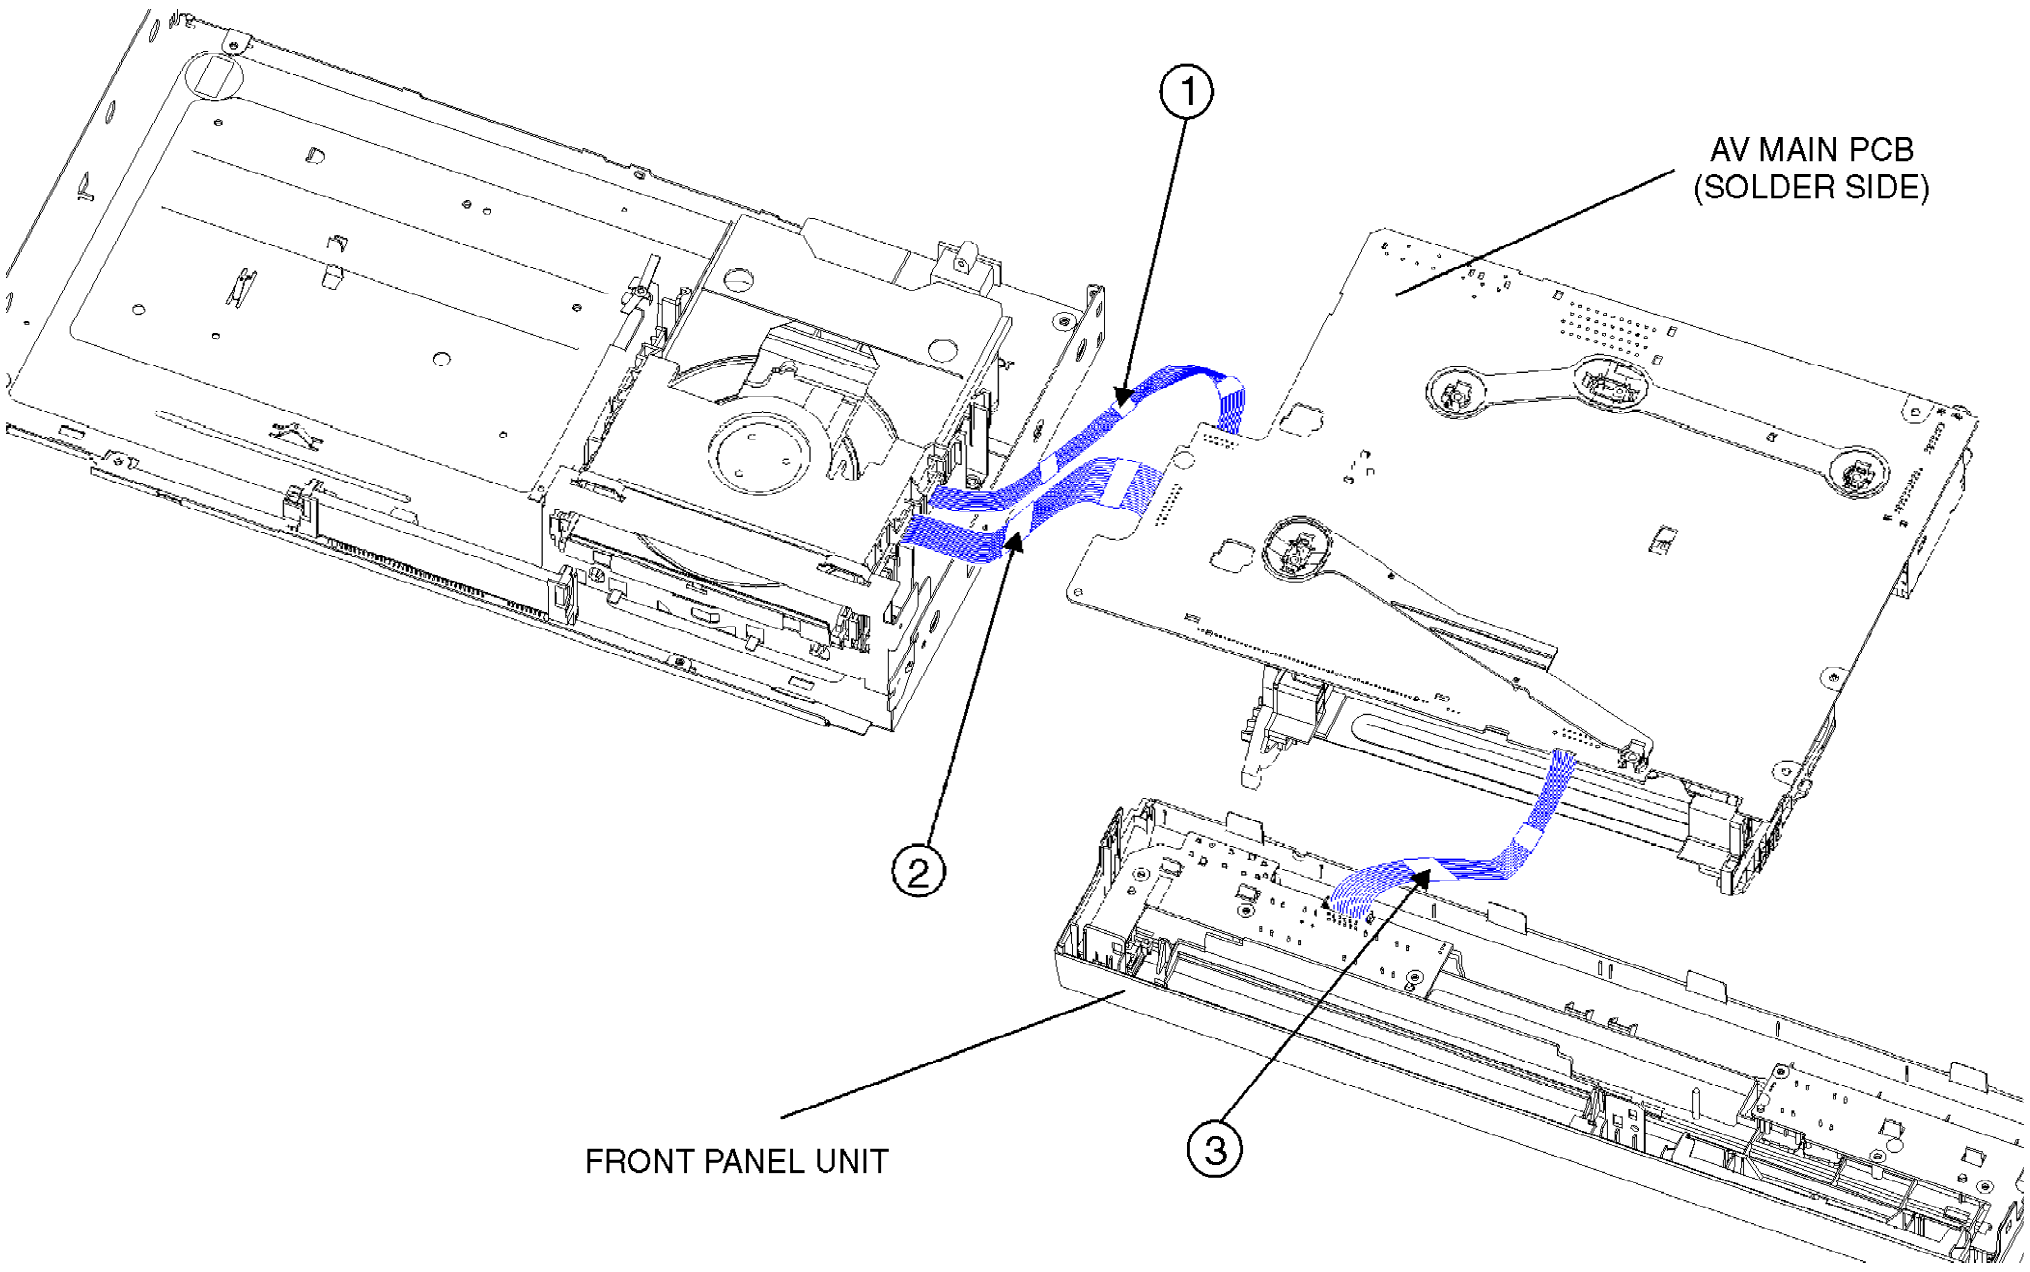
①
AV MAIN PCB
(SOLDER SIDE)
②
FRONT PANEL UNIT
③

7.12.2. SERVICE POSITION OF THE POWER SUPPLY PCB

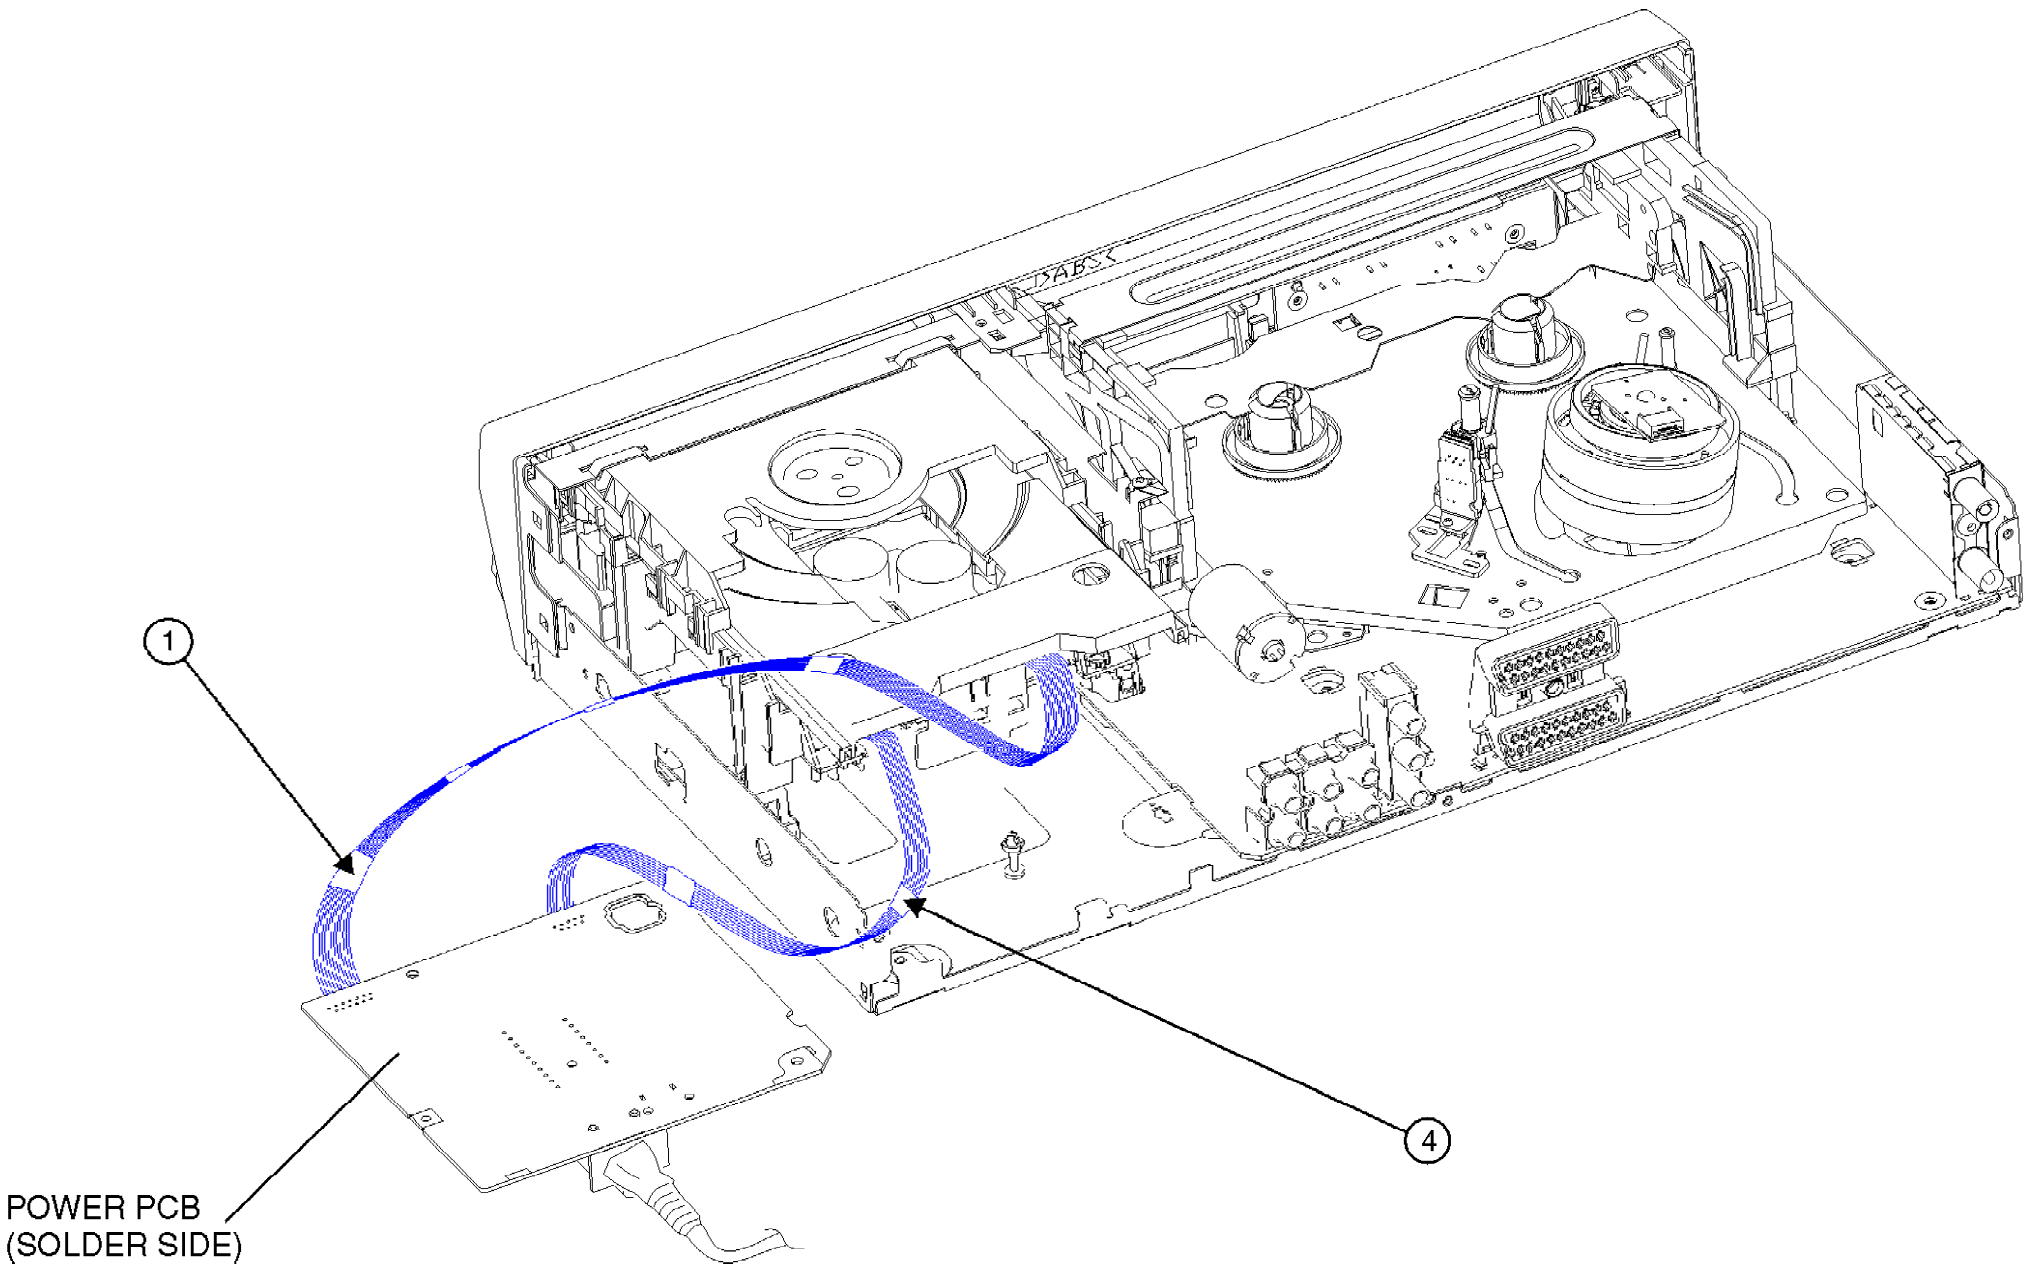
①
④
POWER PCB
(SOLDER SIDE)

7.12.3. SERVICE POSITION OF THE DECODER PCB AND TERMINAL PCB

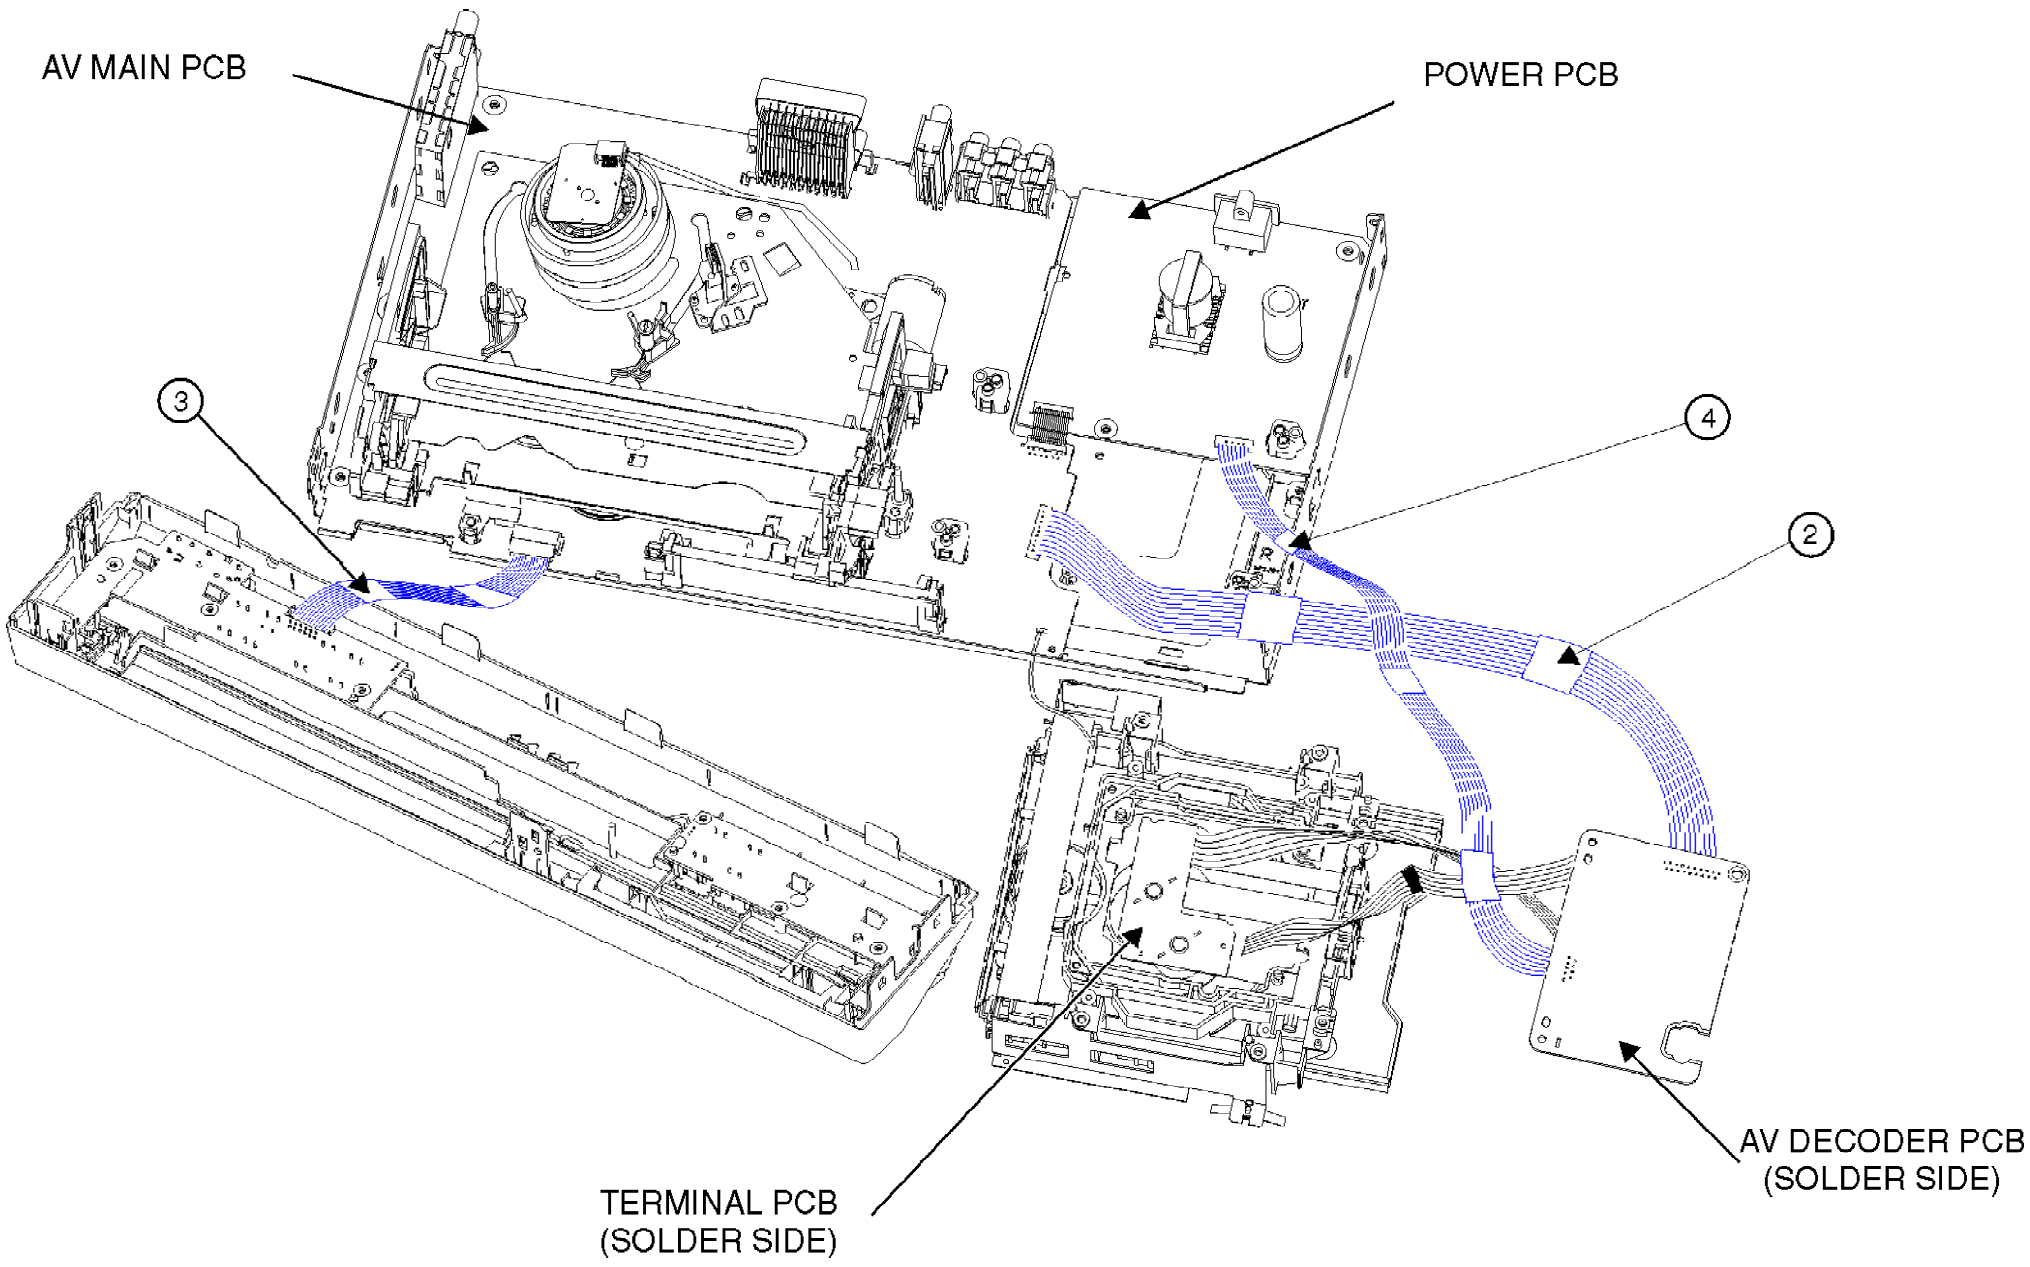

7.12.4. SERVICE TOOLS AND EQUIPMENT

Application	Name		Number
Tilt adjustment	**DVD test disc**		**DVDT-S15 or DVDT-S01**
	Hex wrench		**Available on sales route.**
Inspection	**1**	**Extension cable (13pins)** **PS1301 (Power PCB) - P1001 (AV Main PCB)**	**VFK1876**
	2	**Extension cable (19pins)** **P8003 (AV Decoder PCB) - PS4301 (AV Main PCB)**	**RFKZ0170**
	3	**Extension cable (12pins)** **PP4801 (Front Jack PCB) - PS7501 (AV Main PCB)**	**RFKZ0215**
	4	**Extension cable (9pins)** **P8002 (AV Decoder PCB) - PS1302 (Power PCB)**	**RFKZ0288**
	DVD unit adjustment stand 1		**VFK1727**
Others	**Screw lock**		**RZZ0L01**
	Grease 1		**RFKXGAK152**
	Grease 2		**RFKXPG641**
	Oil (1)		**RFKXGA1280**
Confirmation	**CD test disc**		**PVCD-K06 or any other commerci available disc**
	VCD test disc		**PVCD-K06 or any other commerci available disc**

8. OPTICAL PICKUP SELF-DIAGNOSIS AND /

REPLACEMENT PROCEDURE

8.1. SELF-DIAGNOSIS

The optical pickup self-diagnosis function and tilt adjustment check function have been included in this unit. When repairing, use the following procedure for effective Self-diagnosis and tilt adjustment. Be sure to use the self-diagnosis function before replacing the optical pickup when "NO DISC" is displayed. As a guideline, you should replace the optical pickup when the value of the laser drive current is more than 55.

Note:

Press the power button to turn on the power, and check the value within three minutes before the unit warms up. (Otherwise, the result will be incorrect.)

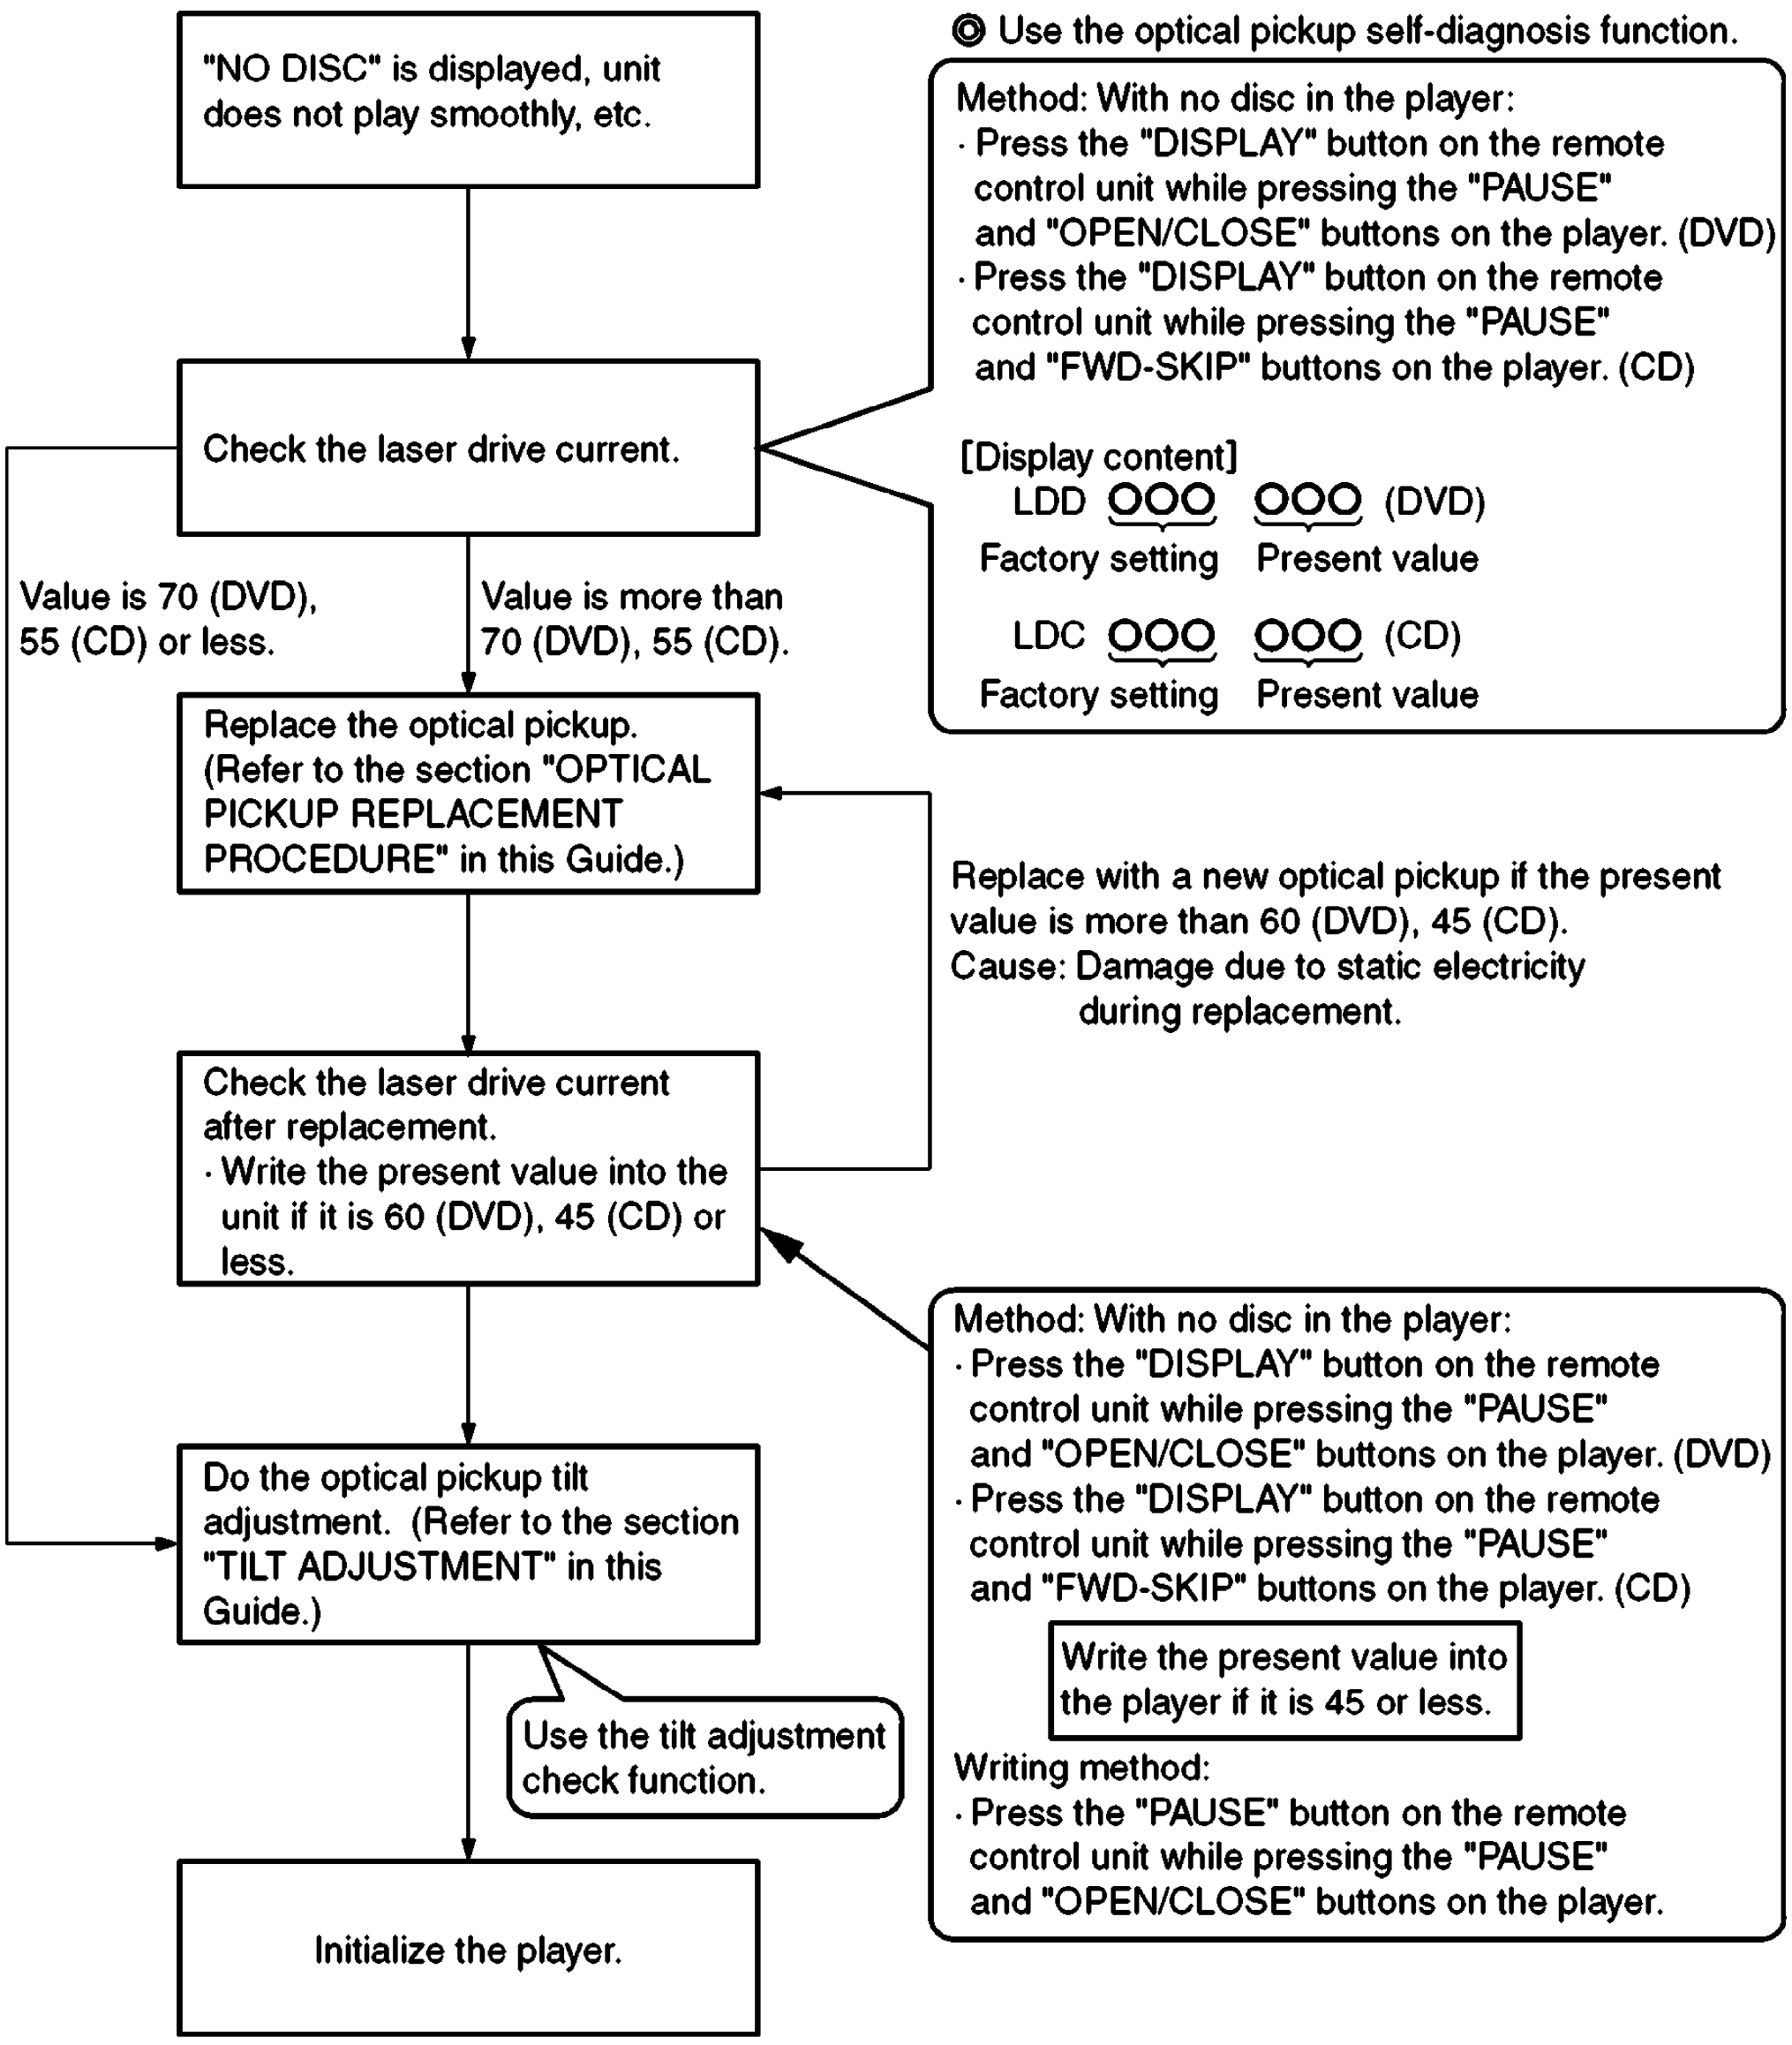

"NO DISC" is displayed, unit does not play smoothly, etc.

Check the laser drive current.

Value is 70 (DVD), 55 (CD) or less.

Value is more than 70 (DVD), 55 (CD).

Replace the optical pickup. (Refer to the section "OPTICAL PICKUP REPLACEMENT PROCEDURE" in this Guide.)

Check the laser drive current after replacement.
· Write the present value into the unit if it is 60 (DVD), 45 (CD) or less.

Do the optical pickup tilt adjustment. (Refer to the section "TILT ADJUSTMENT" in this Guide.)

Use the tilt adjustment check function.

Initialize the player.

◎ Use the optical pickup self-diagnosis function.

Method: With no disc in the player:
· Press the "DISPLAY" button on the remote control unit while pressing the "PAUSE" and "OPEN/CLOSE" buttons on the player. (DVD)
· Press the "DISPLAY" button on the remote control unit while pressing the "PAUSE" and "FWD-SKIP" buttons on the player. (CD)

[Display content]
LDD OOO OOO (DVD)
Factory setting Present value
LDC OOO OOO (CD)
Factory setting Present value

Replace with a new optical pickup if the present value is more than 60 (DVD), 45 (CD).
Cause: Damage due to static electricity during replacement.

Method: With no disc in the player:
· Press the "DISPLAY" button on the remote control unit while pressing the "PAUSE" and "OPEN/CLOSE" buttons on the player. (DVD)
· Press the "DISPLAY" button on the remote control unit while pressing the "PAUSE" and "FWD-SKIP" buttons on the player. (CD)

Write the present value into the player if it is 45 or less.

Writing method:
· Press the "PAUSE" button on the remote control unit while pressing the "PAUSE" and "OPEN/CLOSE" buttons on the player.

8.2. CAUTIONS TO BE USED BEFORE REPLACING THE OPTICAL PICKUP UNIT AND SPINDLE MOTOR ASSEMBLY

Before replacing the optical pickup unit and spindle motor assembly, check the total using hours for each of them. The checking method is as follows:

	Operating state & Key operation	Displ
Using hours of CD laser	**Press “PAUSE”, “FWD-SKIP” and “5” on the remote control in this order while the unit is stopped**	**T1_xxxx_yyyy yyyy: total hou displayed by 4 figures (unit: 1**
Using hours of DVD laser	**Press “PAUSE”, “FWD-SKIP” and “5” on the remote control in this order while the unit is stopped**	**T1_xxxx_yyyy xxxx: total hou displayed by 4 figures (unit: 1**
Using hours of SP motor	**Press “PAUSE”, “FWD-SKIP and “6” on the remote control in this order while the unit is stopped**	**T2_xxxx xxxx: total hou displayed by 4 figures (unit: 1**
Resetting using hours of CD and DVD lasers (Simultaneous resetting)	**Press “STOP”, “FWD-SKIP” and “5” on the remote control in this order while displaying Timer 1 data**	**T1_0000_0000**
Resetting using hours of the motor	**Press “STOP”, “FWD-SKIP” and “6” on the remote control in this order while displaying Timer 2 data**	**T2_0000**

Cautions to be taken when replacing the optical pickup
The optical pickup may break down due to the static electricity of human body. Take proper protection measures against static electricity before repairing the parts around the optical pickup. (See the page describing the PREVENTION OF STATIC ELECTRICITYDISCHARGE.)

1. **Do not touch the areas around the laser diode and actuator.**
2. **Do not judge the laser diode with a tester. (The tester will be damaged easily.)**

9. SELF-DIAGNOSIS FUNCTION AND SERVICE MODES

9.1. SERVICE MODE TABLE 1

The service modes can be activated by pressing various button combination on the player and remote control unit.

Player buttons	Remote control unit buttons	Application	N
PLAY (DVD) + OPEN/CLOSE	0	Displaying the UHF display 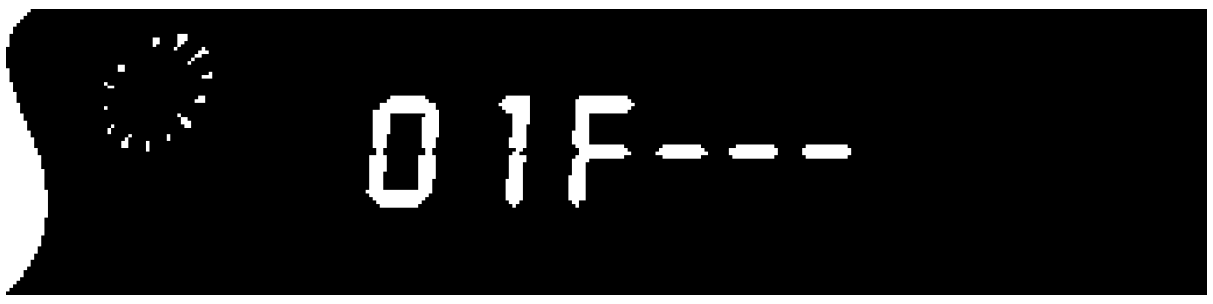 	Refer to 9.1. Self Diagnos Functio Display)
	5	Jitter check, tilt adjustment *Display shows J_xxx_yyy_zz "yyy" and "zz" shown to the right have nothing to do with the jitter value. "yyy" is the error counter, while "zz" is the focusdrive value. Refer to section 11.3. for Optical Pickup Tilt Adjustment Procedure.	Refer to 11.3. Op Pickup Adjustm
	6	Checking the region numbers and broadcast system	
	7	Checking the program version	Check t FLASH progra
	9	Lighting Confirmation Function of Display Tube	
	FUNCTIONS	Checking the laser drive current	Refer to 10.8. Op Pickup Replace Procedu
	PAUSE	Writing the laser drive current value after replacing the optical pickup (do not use for anything other than optical pickup replacement)	
PAUSE SKIP/ SEARCH<< OPEN/CLOSE		Initializing the DVD player (restoring factory preset settings)	Refer to 9.5. Initi DVD pla

9.2. DVD SELF DIAGNOSTIC FUNCTION-ERROR CODE

Error Code	Error Content	Additional error explanation
U11	**Focus error**	
H01	**Tray loading error**	
H02	**Spindle servo error**	**(Spindle servo, DSC SP motor, CLV servo e**
H03	**Traverse servo error**	
H04	**Tracking servo error**	
H05	**Seek error**	
H06	**Power error**	**Cannot switch off the power because of the and system computer communication error**
H07	**Spindle motor drive error**	
F103	**Illegal highlight Position**	**Big possibility of disc specification violatio highlight display**
F498	**No communication between Front Micro Computer and Main Micro Computer after power on**	
F499	**No response from Main Micro Computer when key code is sent from Front Micro Computer to Main Micro Computer**	**Main Micro Computer hangs up**
F4FF	**Force initialize failure (time out)**	
F500	**DSC error**	**DSC stops in the occurence of servo error focus error, etc)**
F501	**DSC not Ready**	**DSC-system computer communication erro (Communication failure caused by idling of**
F502	**DSC Time out error**	**Similar disposal as F500**
F503	**DSC communication Failure**	**Communication error (result error occured communication command was sent)**
F505	**DSC Attention error**	**Similar disposal as F500**
F506	**Invalid media**	**Disc is flipped over, TOC unreadable, incor disc**
F600	**Access failure to management information caused by demodulation error**	**Operation stopped because navigation dat accessible caused by the demodulation de**
F601	**Indeterminate sector ID requested**	**Operation stopped caused by the request t abnormal ID data**
F602	**Access failure to LEAD-IN caused by demodulation error**	**LEAD IN data unreadable**
F603	**Access failure to KEYDET caused by demodulation error**	**Access failure to CSS data of disc**
F610	**ODC abnormality**	**No permission for command execution**
F611	**6626 QCODE don’t read Error**	**Access failure to seek address in CD series**
F612	**No CRC OK for a specific time**	**Access failure to ID data in DVD series**
F630	**No reply to KEY DET enquiry**	**(for internal use only)**
F631	**CPPM KEY DET is not available till the FILE terminal**	**(CPPM file system is unreadable caused by scratches)**

Error Code	Error Content	Additional error explanation
F632	CPPM KEY DET is not available	Been revoked or falsified
F103	Illegal highlight Position	Big possibility of disc specification violatio highlight display
F700	MBX overflow	When replying message to disc manager
F701	Message command does not end	Next message is sent before replying to dis manager
F702	Message command changes	Message is changed before it is sent as a r disc manager
F880	Task number is not appropriate	Message coming from a non-existing task
F890	Sending message when message is being sent to AV task	Sending message to AV task
F891	Message couldn’t be sent to AV task	Begin sending message to AV task
F893	FROM falsification	
F894	EEPROM abnormality	
F895	Language area abnormality	Firm version agreement check for factory p setting failure prevention
F896	No existence model	Firm version agreement check for factory p setting failure prevention
F897	Initialize is not completed	Initialize completion check for factory pres failure prevention
F8A0	Message command is not appropriate	Begin sending message to AV task

Note:

An error code will be canceled if a power supply is turned OFF.

***1: CPPM is the copy guard function beforehand written in the disk for protection of copyrights.**

9.3. LAST ERROR CODE SAVED DURING NO PLAY

Error code	Error Content	System computer	Setting task	System computer error cod
F0BF	6) Cannot playback because physical layer is not recoginizable	PCND_NOPLAY PHYSICAL 0x50	DiscManager	0xDOBF
F0C0	8) DVD: Cannot playback because it is not DVD Video /Audio/VR	PCND_NOPLAY VIDEO 0x70	DiscManager	0xDOC0
F0C1	9) DVD: Prohibited by the restricted region code	PCND_NOPLAY RCD 0x80	DiscManager	0xDOC1
F0C2	A) DVD: PAL restricted playback	PCND_NOPLAY PAL 0x90	DiscManager	0xDOC2
F0C3	B) DVD: Parental lock setting prohibits the playback of the entire title	PCND_NOPLAY PTL 0xA0	DiscManager	0xDOC3
F0C4	C) VCD: Prohibited because it is in PHOTO CD format	PCND_NOPLAY PHOTO CD 0xB0	DiscManager	0xDOC4
F0C5	VCD/CD: Prohibited because it is CDROM without CD-DA	PCND_NOPLAY CDROM 0xC0	DiscManager	0xDOC5

9.4. SERVICE MODE TABLE 2

Pressing various button combinations on the player and remote control unit can activate the service modes.

9.5. SERVO PROCESS FLOW

Specification of the servo process display in the starting flow

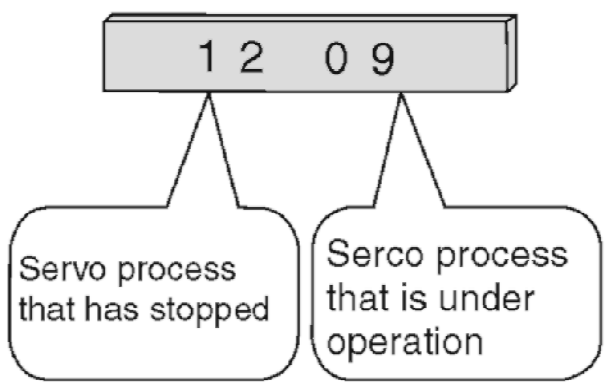
1 2 0 9
Servo process that has stopped
Serco process that is under operation

(Restrictions)
All processes that are under operation cannot be displayed due to the limit of the processing time.

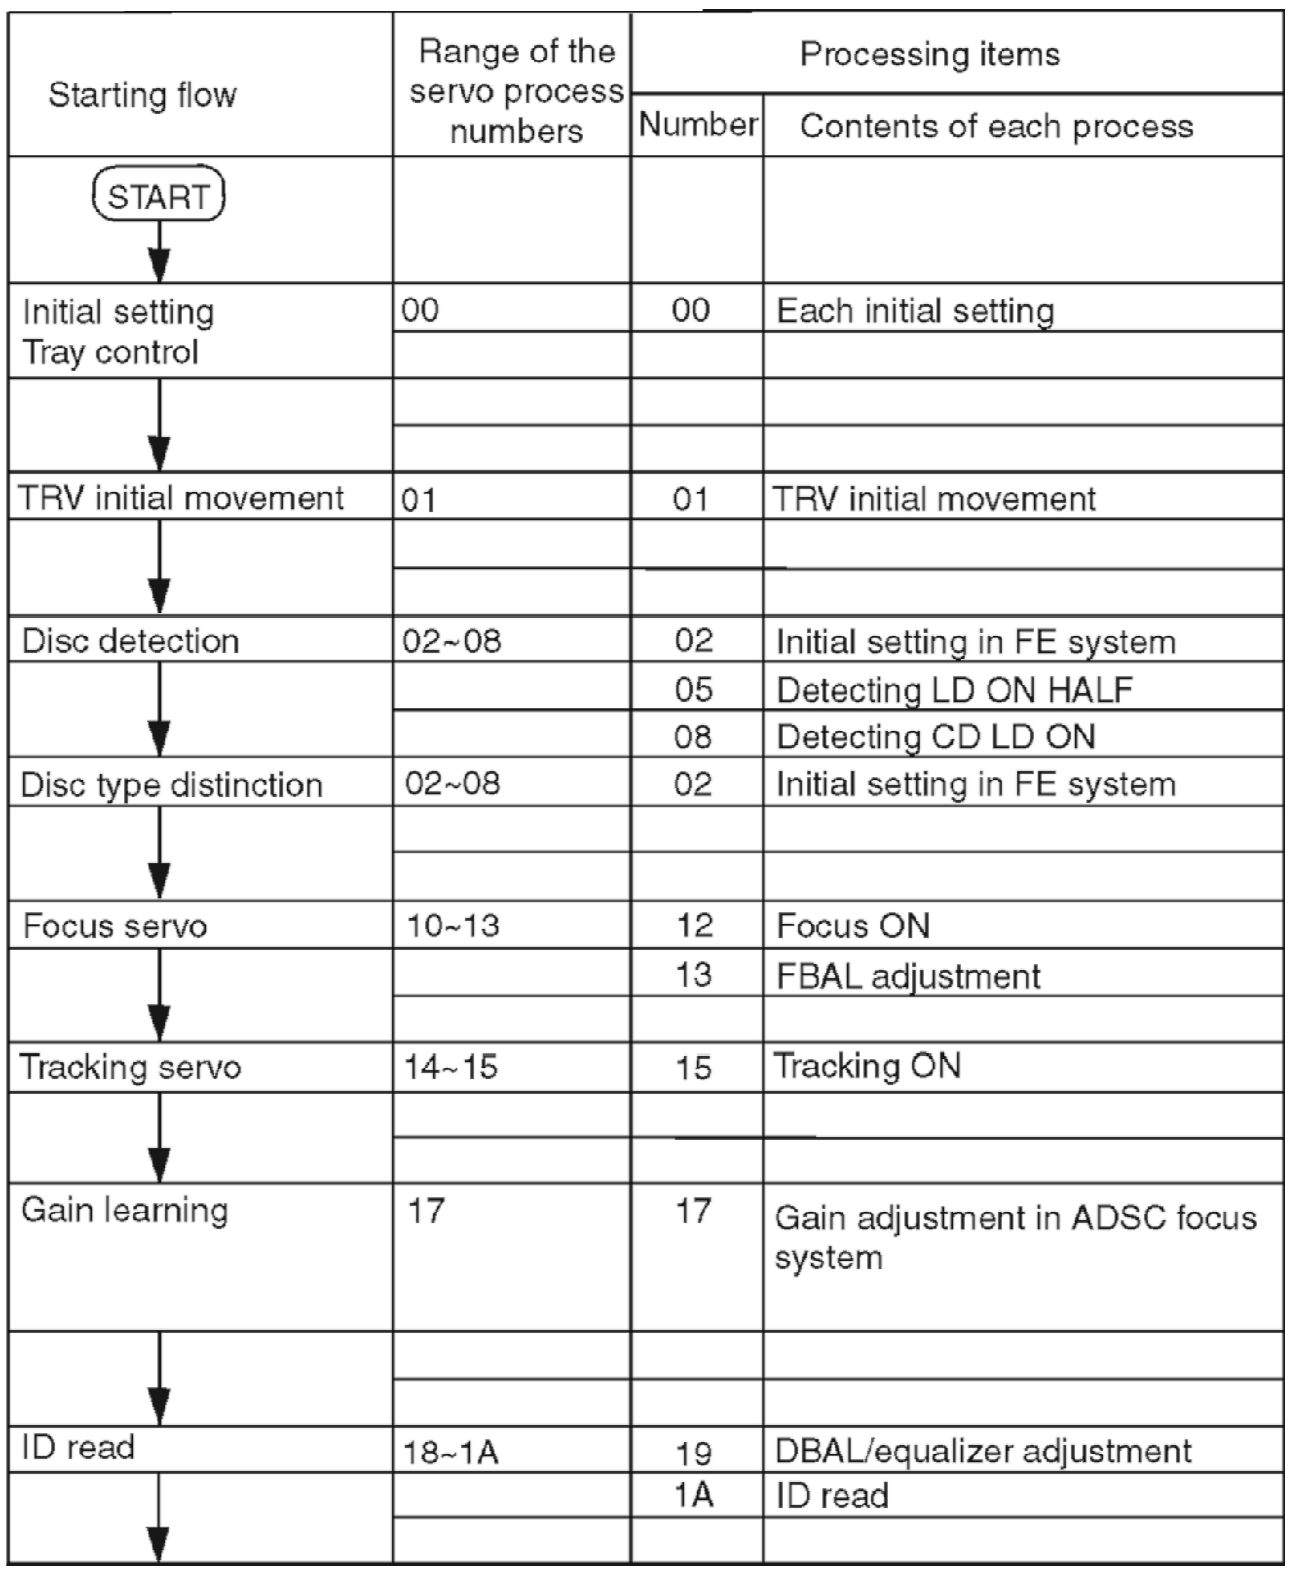

Starting flow	Range of the servo process numbers	Processing items	
		Number	Contents of each process
START			
Initial setting Tray control	00	00	Each initial setting
TRV initial movement	01	01	TRV initial movement
Disc detection	02~08	02	Initial setting in FE system
		05	Detecting LD ON HALF
		08	Detecting CD LD ON
Disc type distinction	02~08	02	Initial setting in FE system
Focus servo	10~13	12	Focus ON
		13	FBAL adjustment
Tracking servo	14~15	15	Tracking ON
Gain learning	17	17	Gain adjustment in ADSC focus system
ID read	18~1A	19	DBAL/equalizer adjustment
		1A	ID read

9.6. DVD SERVO PROCESS DISPLAY MODE

In starting operation of the player, a number is allotted to each servo process so that the operation of each step can be seen. The relation between the process and the displayed number are as follows:

Number allotment to the servo process.

Process classification	Each processing item	Description	Proce
Initial start process	Initial start	The process starts after the tray is loaded. (The state is changed to “READY” or “PREPARE”.)	0~40
	Secondary learning	Servos for the DVD-DL 1st layer and the CD-DA double speed are learned in this step.	50~7F
Restart process	Restart	When a user operates in the “READY” state, each servo is turned on.	80~9F
Seek process	Seek	The optical pickup is moved to the disc destination in this process.	A0~BI

Process classification	Each processing item	Description	Proce
Repair process	Recover		
	(Error check)	An error is searched in the PLAY/SEEK state.	C1~C
	(Attention)	An error is recovered following the attention error interrupt from the S-ODC.	C4~C
	(Q code read)	If any Q code is improperly read, reset and retry.	C7~C
Stop process	Stop	A servo is controlled in response to the user~s operation to stop the disc completely.	F0~FF

9.7. OVERVIEW OF EACH FUNCTION

9.7.1. CUMULATIVE OPERATION TIME DISPLAY

1. Operation/display



DVD/CD laser operation time
Unit: 120 hours in decimal notation



Spindle motor operation time
Unit: 1230 hours in decimal notation

Key operations are as follows.
Laser operation time .... In STOP mode,
main unit PAUSE+FWD-SKIP+ remote controller [5]
Spindle motor operation time ..... In STOP mode,
main unit PAUSE+FWD-SKIP+ remote controller [6]
To reset the timer, perform the following while displaying the time with above key operation.
Laser operation time .... In STOP mode,
main unit STOP+FWD-SKIP+ remote controller [5]
Spindle motor operation time ..... In STOP mode,
main unit STOP+FWD-SKIP+ remote controller [6]

2. How to utilize

Reference information in fault diagnosis of laser or spindle motor system.
Review of faulty point in repeated repair

9.7.2. SERVO PROCESS DISPLAY

1. Operation/display

   While the player is in STOP mode, perform the specified key operation to display the servo process number on FL. When the display does not change from the error indication, press Open/Close key to show the servo process number.

   Key operation: In STOP mode,
   main unit PAUSE+FWD- SKIP+ remote controller [7]



Number to the left ...
... Process number when halted

Number to the right ...
... Process number in progress

9.8. SALES DEMONSTRATION LOCK FUNCTION

This function prevents discs from being lost when the unit is used for sales demonstrations by disabling the disc eject function. "LOCK" is displayed on the unit and ordinary operation is disabled.

9.8.1. SETTING

The sales demonstration lock is set by simultaneously pressing STOP button on the player and POWER button on the remote control unit.

9.8.2. CANCELLATION

The lock can be cancelled by the same procedure as used in setting. ("UNLOCK" is displayed on cancellation. Disconnecting the power cable from power outlet does not cancel the lock.)

9.9. HANDLING AFTER COMPLETING REPAIRS

Use the following procedure after completing repairs.

9.9.1. PRECAUTIONS

Do not disconnect the power plug from the outlet with the tray still open, then close the tray manually.

9.9.2. METHOD

Confirm that the power is turned on:

1. Press the "OPEN/CLOSE" button to close the tray.
2. Press the "POWER" button to turn off the power.

3. Disconnect the power plug from the outlet.

9.10. SERVICE PRECAUTIONS

9.10.1. RECOVERY AFTER THE DVD PLAYER IS REPAIRED

When an FROM or an EEPROM on the decoder PCB has replaced, carry out the recovery disc processing to optimize the drive. Playback the disk to process the recovery automatically.

Note:
This unit requires no initialization process carried out after the traditional DVD players were repaired.
When the recovery measures are taken, the customer setting will return to the factory setting as same as the procedure described in item of "Initialization". Write down the contents of the setting before recovery processing and reset the player.

9.10.2. FIRMWARE VERSION-UP OF THE DVD PLAYER

The firmware of the DVD player may be renewed to improve the quality including operationability and playability to the substandard discs processing to optimize the drive.

Note:
If the AC power supply is shut down during version-up due to a power failure, the version-up is improperly carried out. In such a case, replace the FROM and carry out the version-up again.
The product number of the version-up disc will be noticed when it is supplied.

9.10.3. FIRMWARE VERSION-UP AND RECOVERY WITH DISC

- **Recovery**
- **Firmware updating**

Simply run the recovery disc. Then both of the above operations are automatically performed.
Commercially available CD-R can now perform updating and recovery process, making it easier to update the version.
Recovery process: Optimization of player after replacement of FROM and Decoder PCB.
Version updating: Firmware updating for improved operability and performance.

9.10.4. HOW TO USE RECOVERY DISC

9.10.4.1. PERFORMIG RECOVERY

1. Load the recovery disc RFKZD03R005 on to the player and run it.

2. Recovery is performed automatically. When it is finished, a message appears on the screen.

3. Remove the recovery disc.

4. Turn off the power.

9.10.4.2. UPDATING FIRMWARE

1. Load the recovery disc RFKZD03R005
   on to the player and run it.
2. Firmware version of the player is automatically checked.
   Appropriate message appears whenever necessary.
3. Using remote controllers cursor key,
   select whether version updating is to be done or not
   (Selection of Yes/No).
4. a. If Yes is selected, version updating is performed.
   b. If No is selected, only recovery is performed.
5. a. When updating is finished, remove the disc
   according to the message appearing on the screen.
   b. Remove the disc according to the message
   appearing on the screen.
6. Turn off the power.

9.11. VCR SELF-DIAGNOSIS RESULT DISPLAY

The "SELF-DIAGNOSIS RESULT DISPLAY & MEMORY
function is built in this VTR.
It means that when the VCR detects undesirable condition,
it can be displayed a “Error code (Two numbers from the right)” with Service Mode 2.
Since the "Error code" is stored in the EEPROM,
it can be displayed although after disconnected the AC leads.
It can be displayed with Service Mode 2.
(If a second error had been detected,
only the most recent error is displayed.)
For more details, refer to the Service Manual
for R4 Mechanism Chassis for EURO model
(MAD0403002C2).

9.12. CAUTION FOR AC MAINS LEAD (NV-VP33EB/EBL)

10. ASSEMBLING AND / DISASSEMBLING / THE MECHANISM UNIT

10.1. DISASSEMBLY PROCEDURE

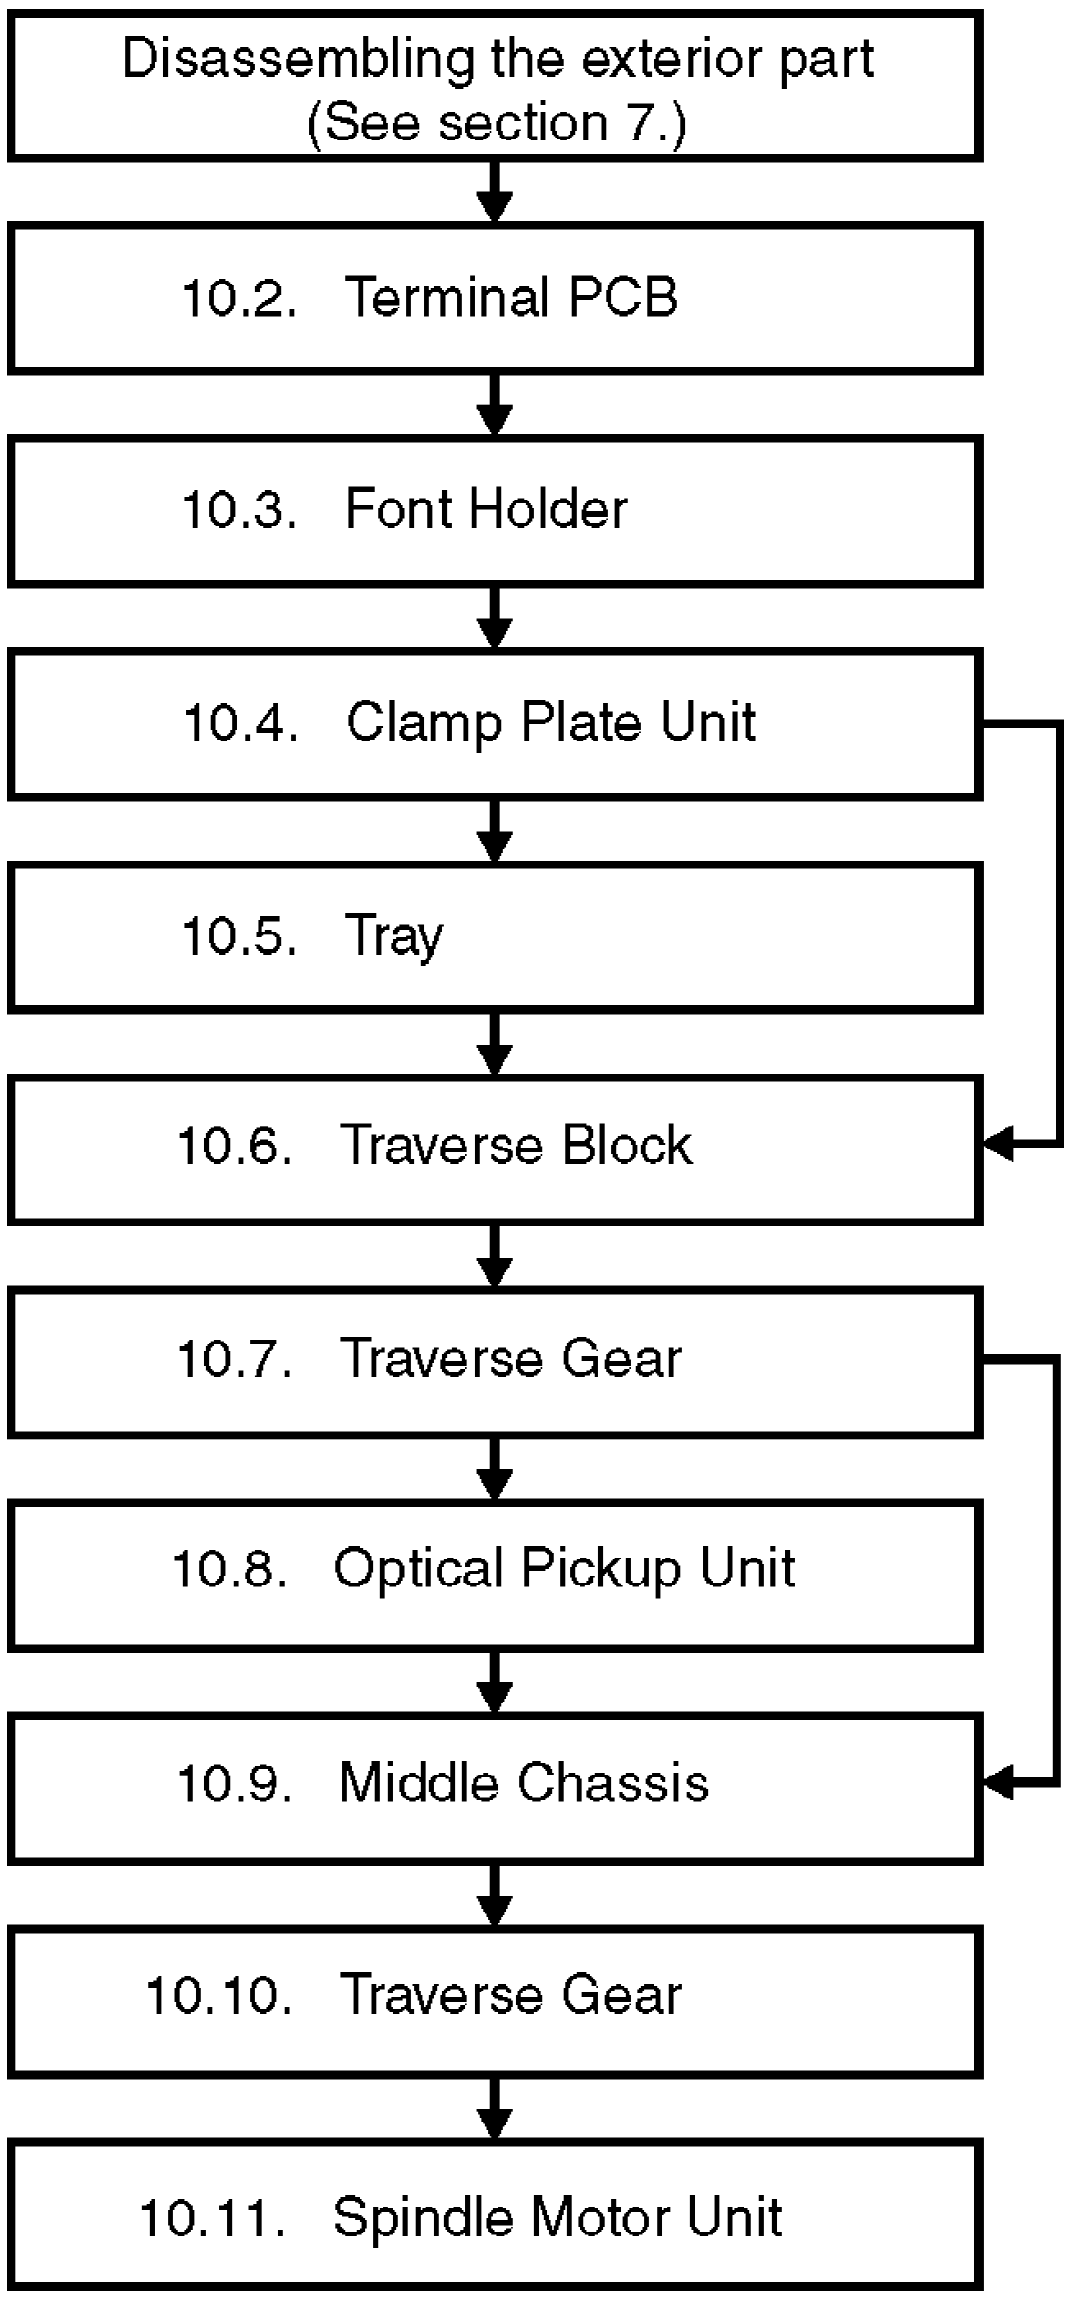
Disassembling the exterior part
(See section 7.)
10.2. Terminal PCB
10.3. Font Holder
10.4. Clamp Plate Unit
10.5. Tray
10.6. Traverse Block
10.7. Traverse Gear
10.8. Optical Pickup Unit
10.9. Middle Chassis
10.10. Traverse Gear
10.11. Spindle Motor Unit

10.2. TERMINAL PCB UNIT

1. Unscrew the Screw.

2. Remove the Solder.

3. Remove the Cable.

4. Remove the Terminal PCB Unit.

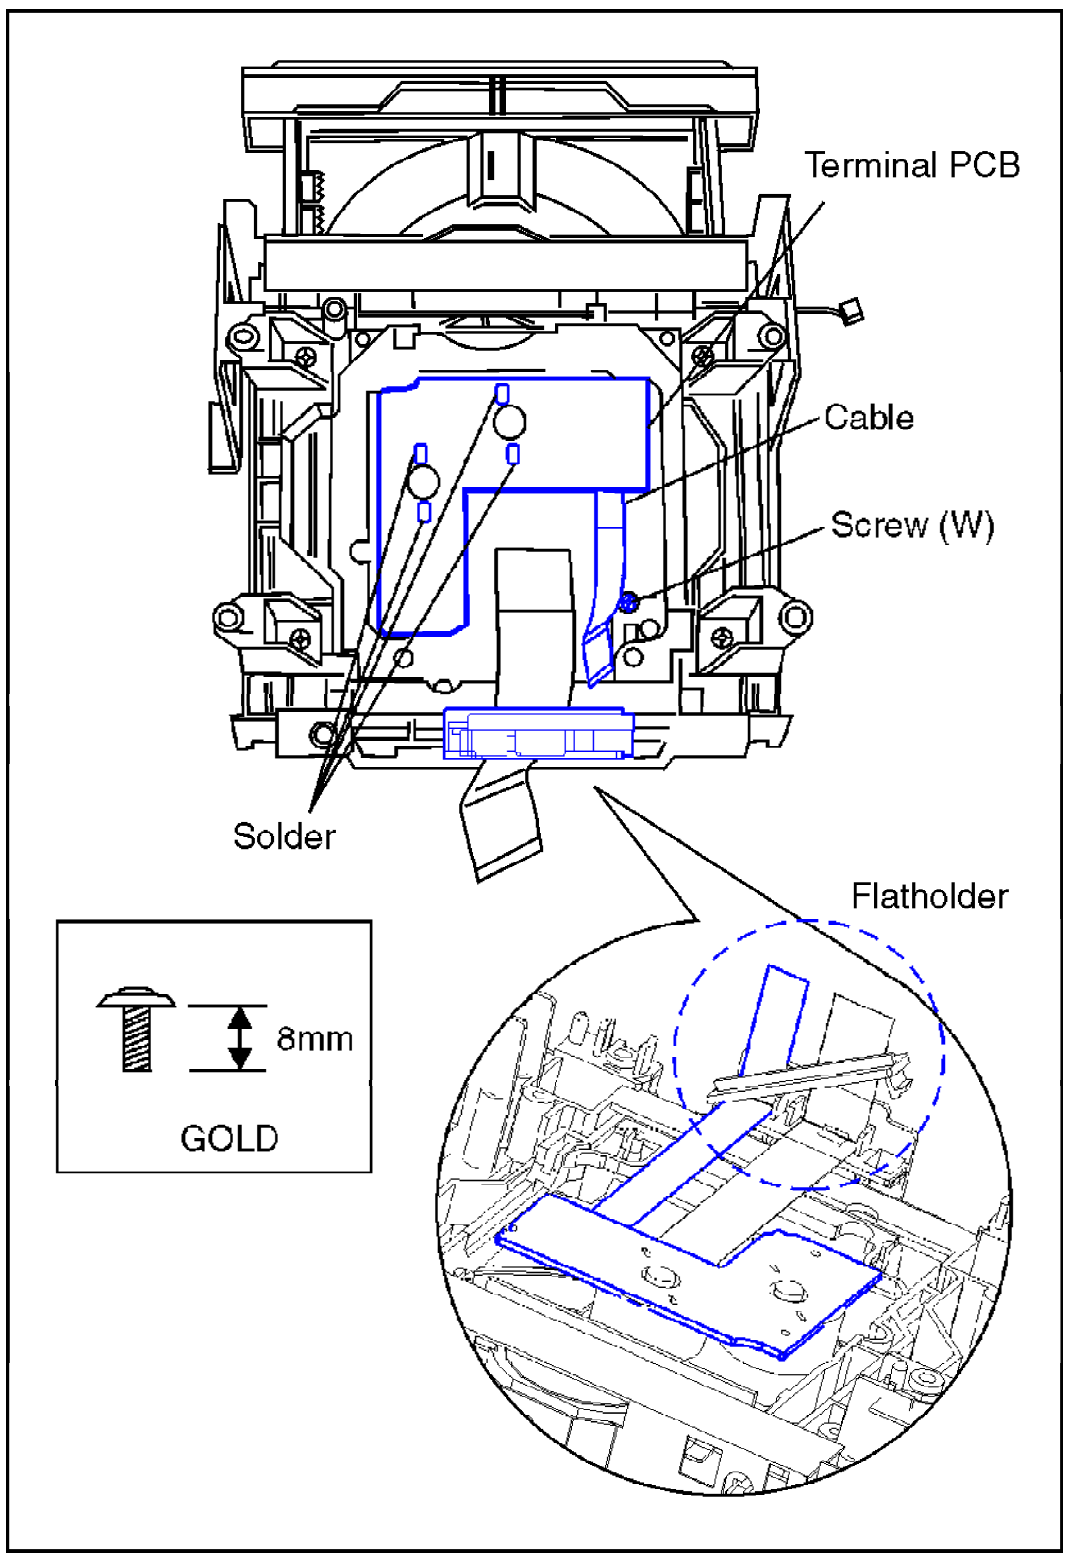
Terminal PCB
Cable
Screw (W)
Solder
Flatholder
8mm
GOLD

10.3. FRONT HOLDER

1. Remove the Front Holder

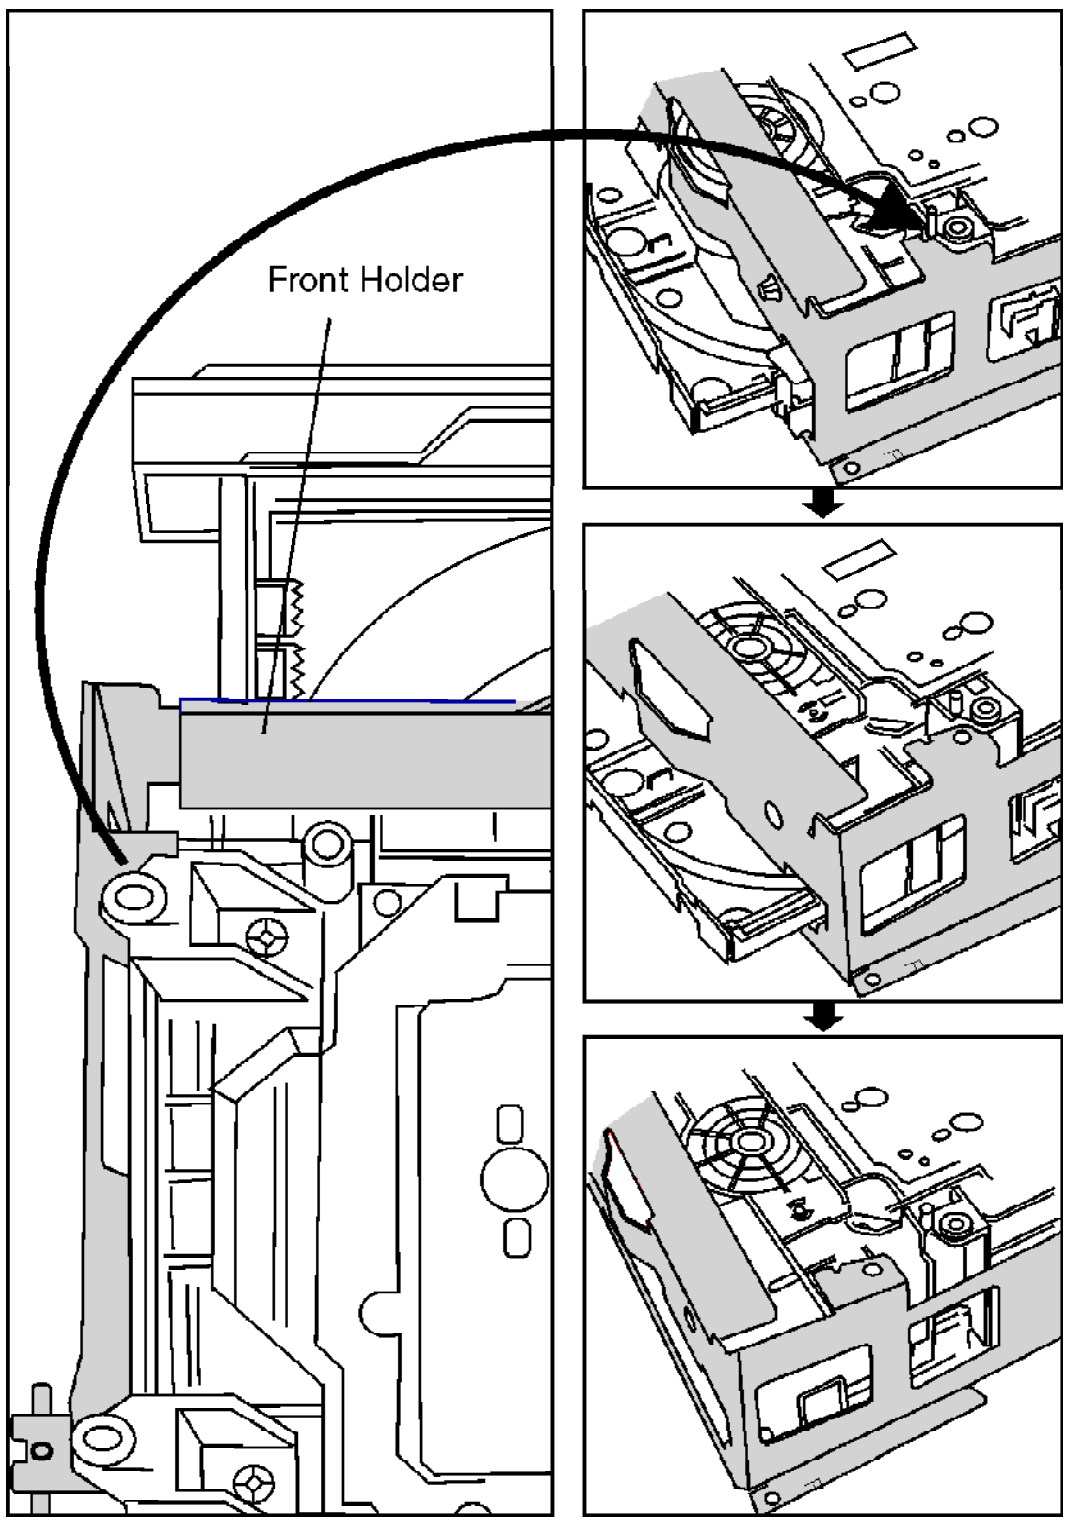
Front Holder

10.4. CLAMP PLATE UNIT

1. **Push the stopper with hand to slide the tabs and remove the clamp plate unit.**

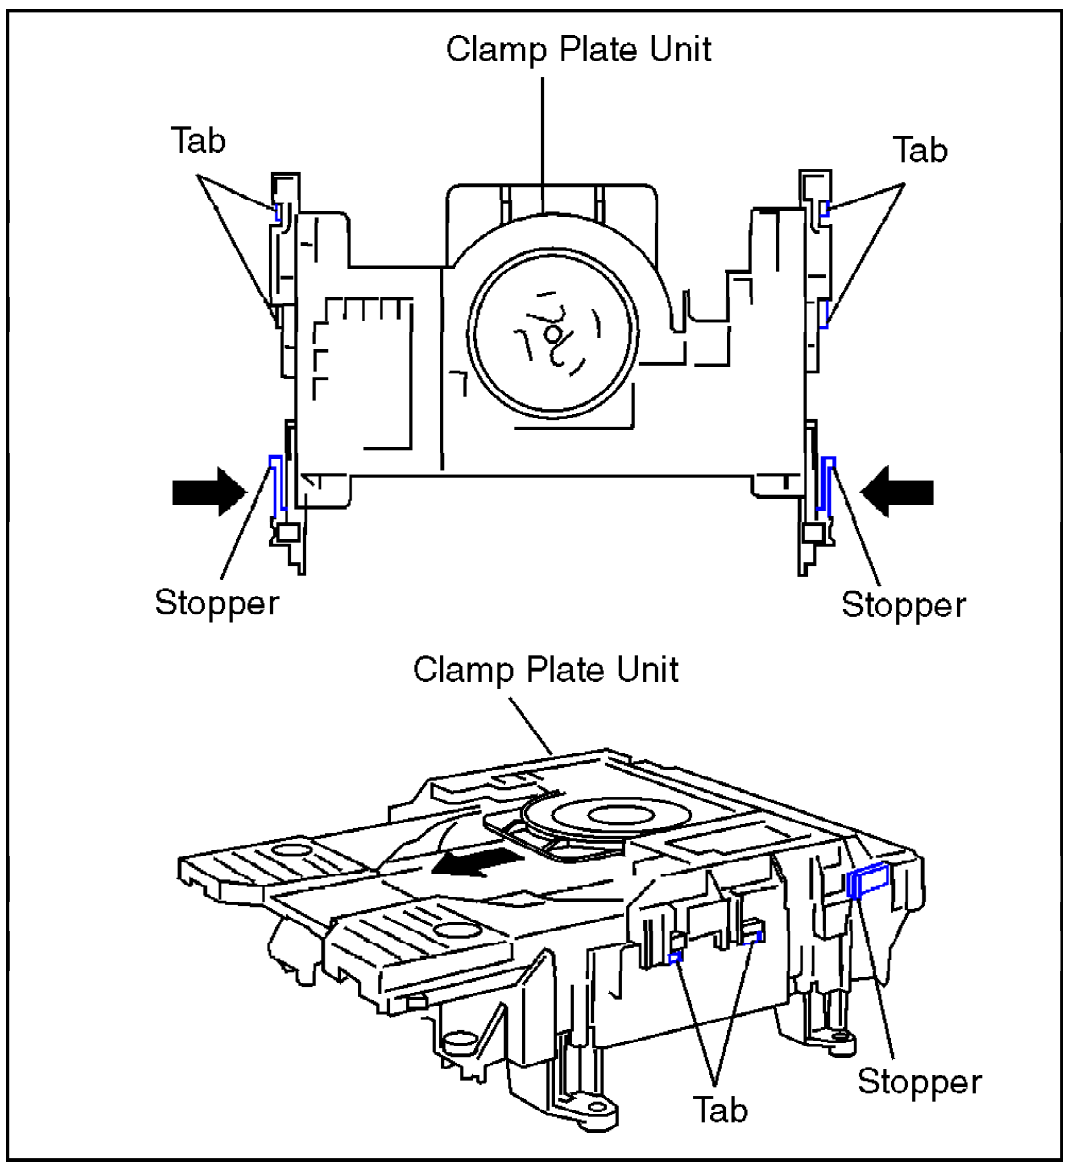
Clamp Plate Unit
Tab
Tab
Stopper
Stopper
Clamp Plate Unit
Tab
Stopper

10.5. TRAY

1. **Lift the tray.**

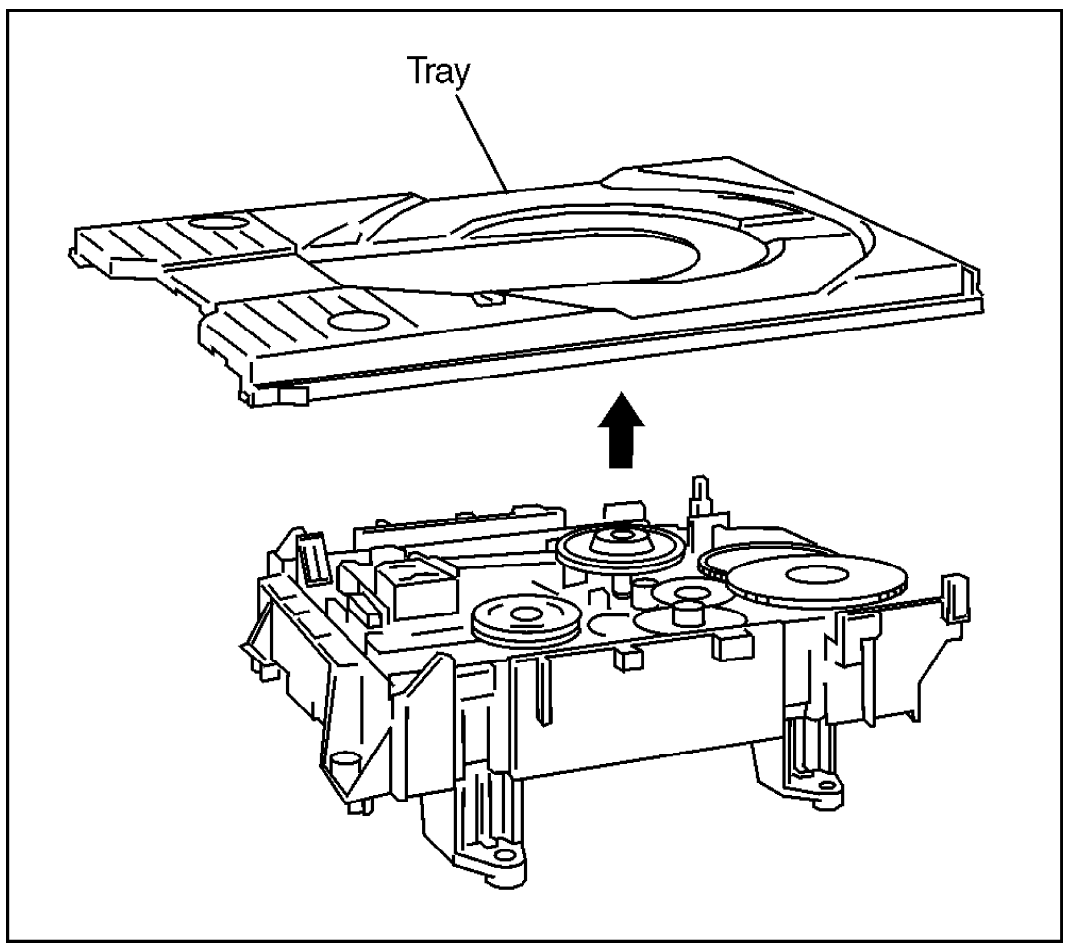

<Precautions in reassembling the tray>
Reassemble the tray so that it is in the backmost position.

1. **Turn traverse gear until cam gear leaver comes to the lever adjusting position at the end of mechanical chassis unit.**

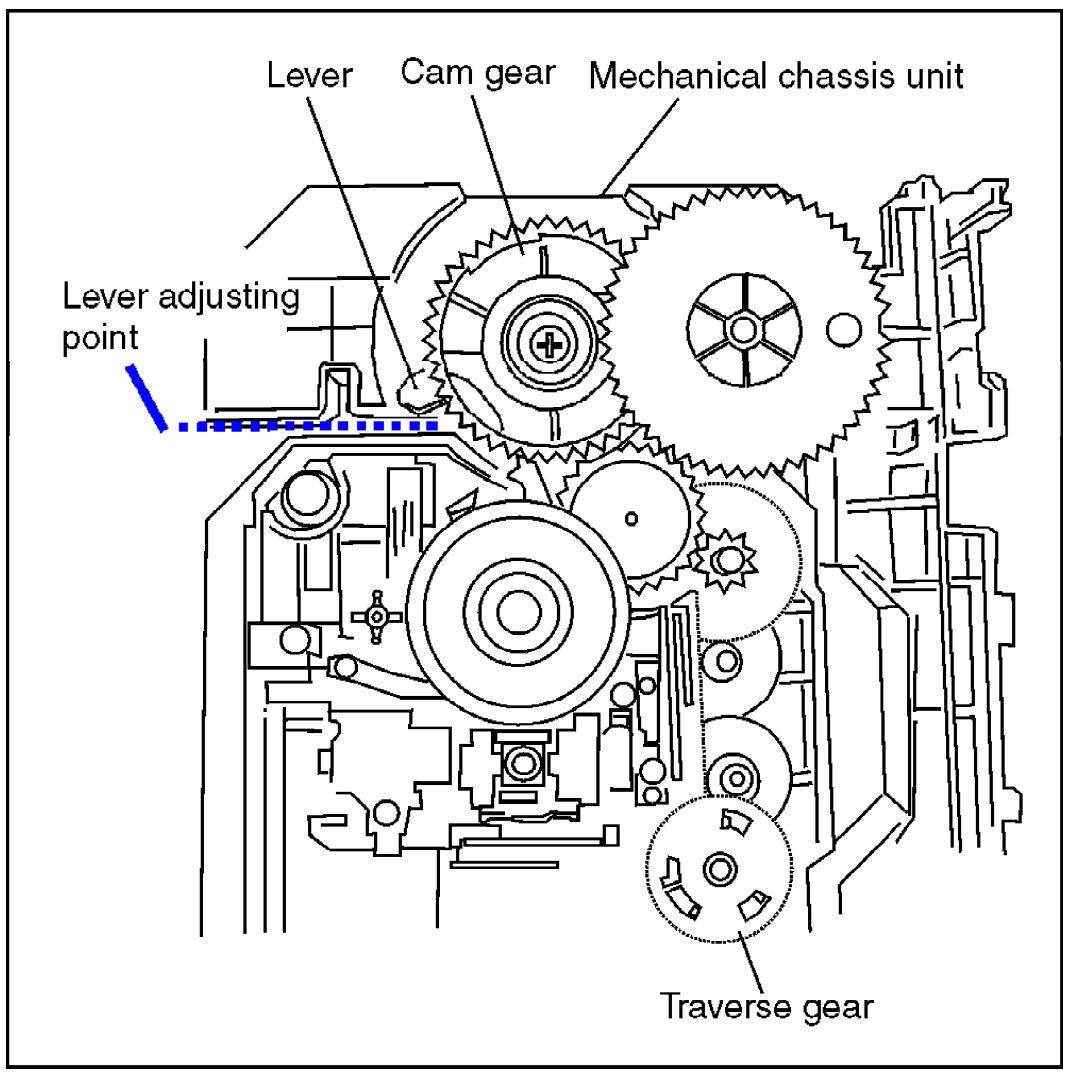
Lever
Cam gear
Mechanical chassis unit
Lever adjusting point
Traverse gear

2. **Check the position of convex phase on back of the tray, and that of concave phase on drive gear.**

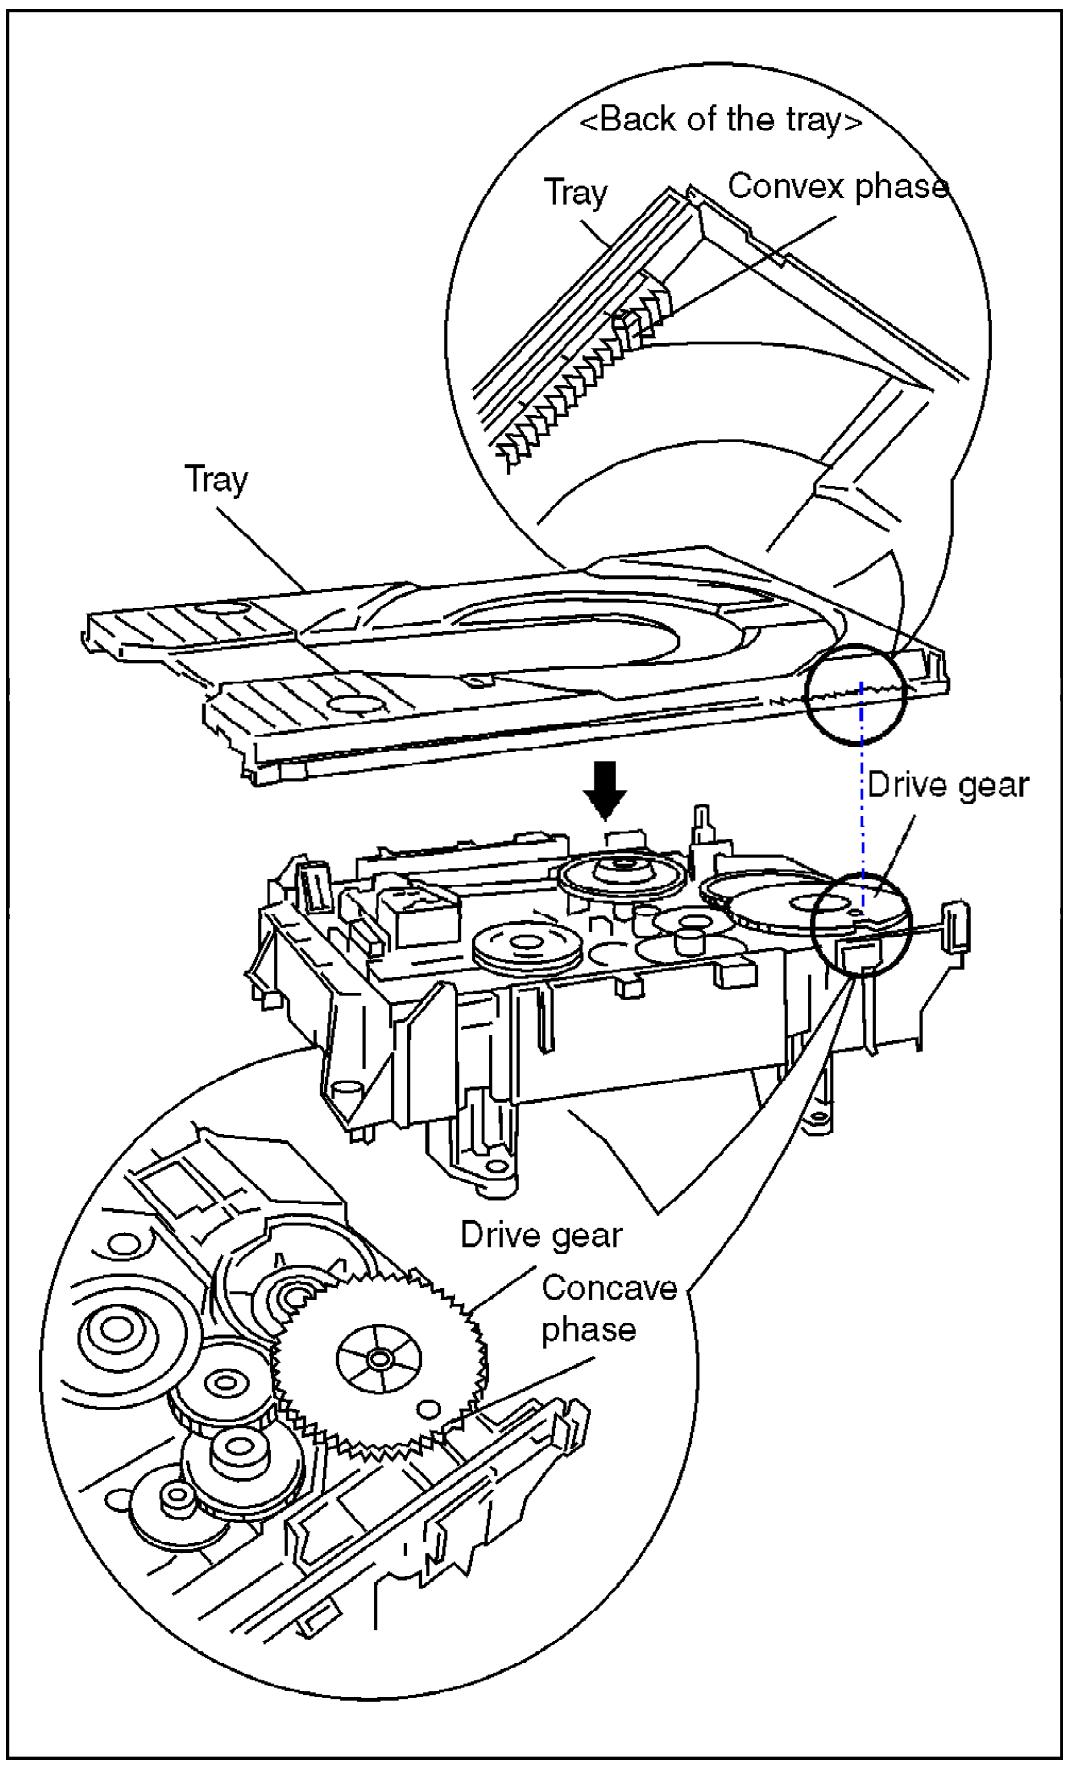
<Back of the tray>
Tray
Convex phase
Tray
Drive gear
Drive gear
Concave phase

A. Place the tray on the unit from rearward.

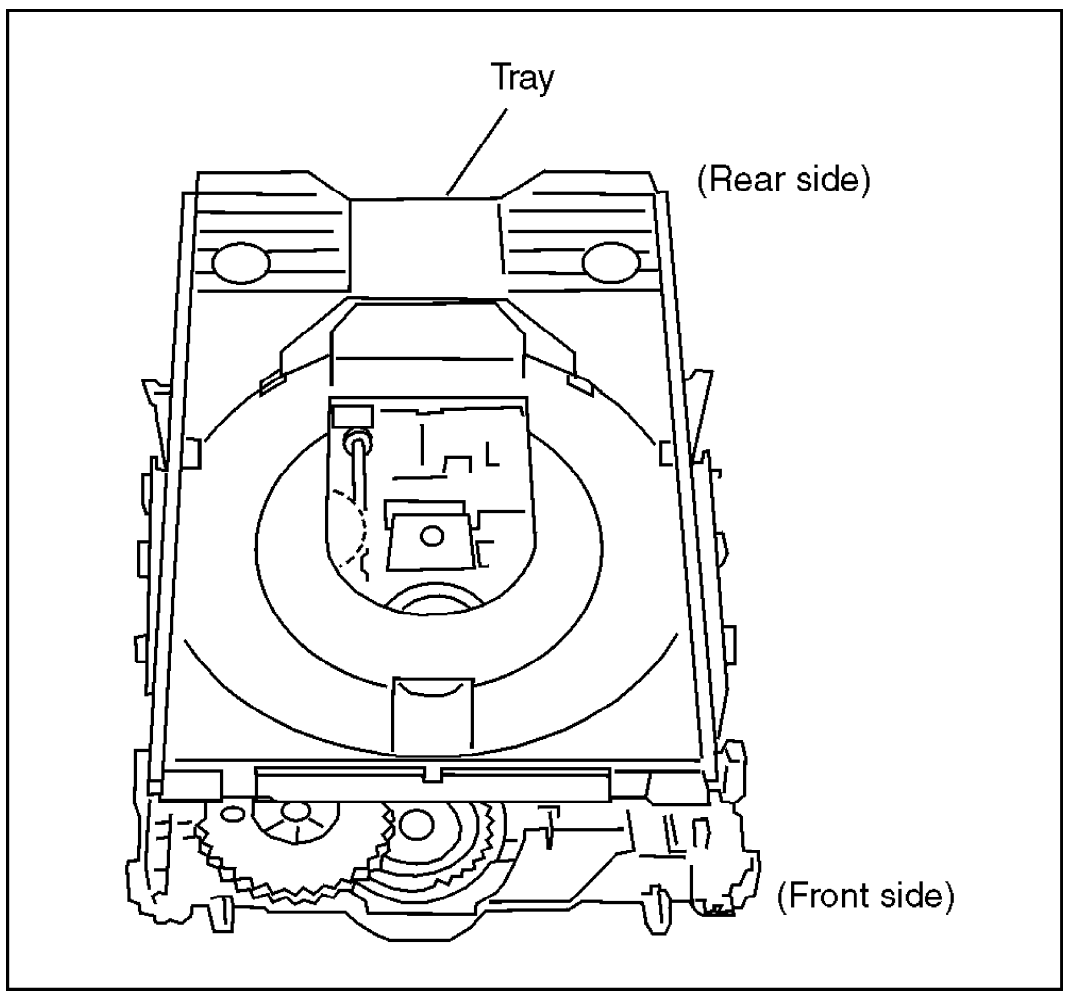
Tray
(Rear side)
(Front side)

B. Inch the tray frontward until convex phase and concave phase mate.

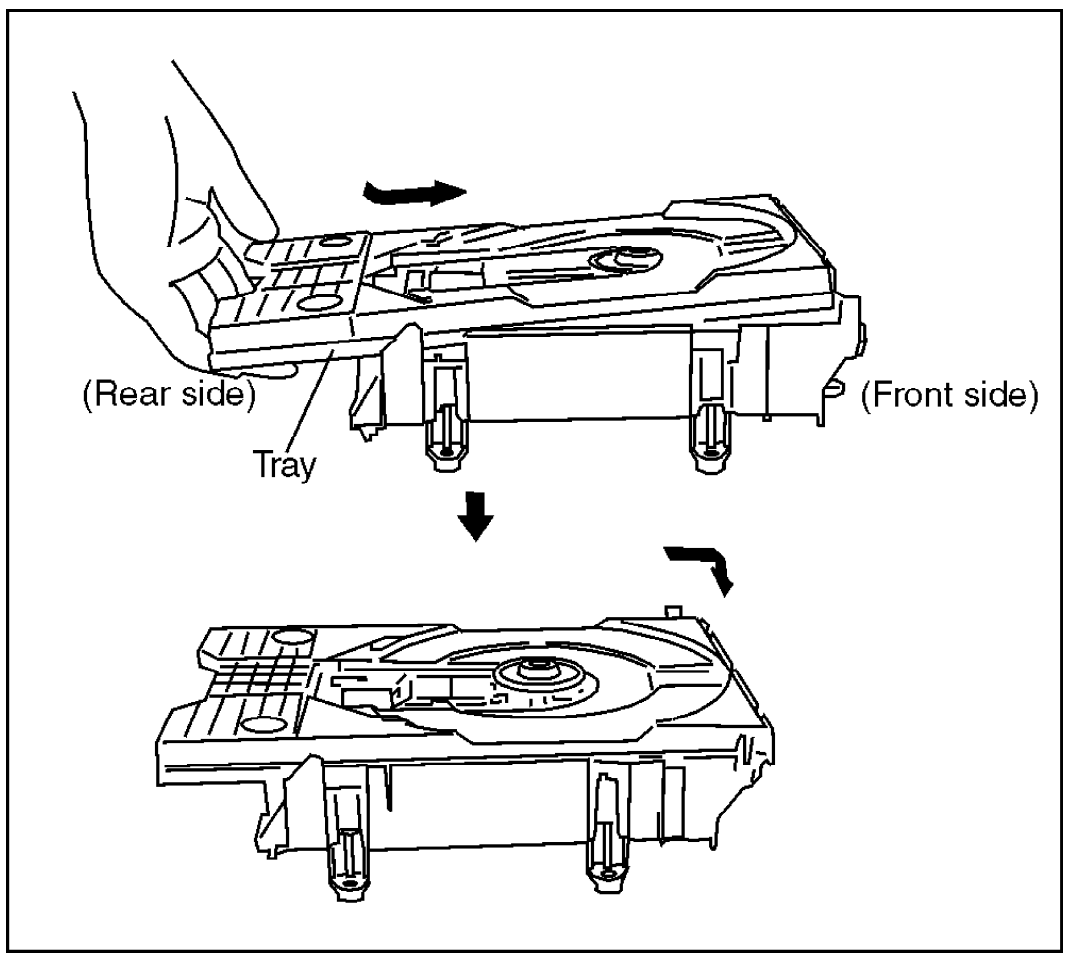
(Rear side)
Tray
(Front side)

Caution:

Make sure to mate convex phase and concave phase properly, so that the gap between turntable and tray becomes 5mm or less.

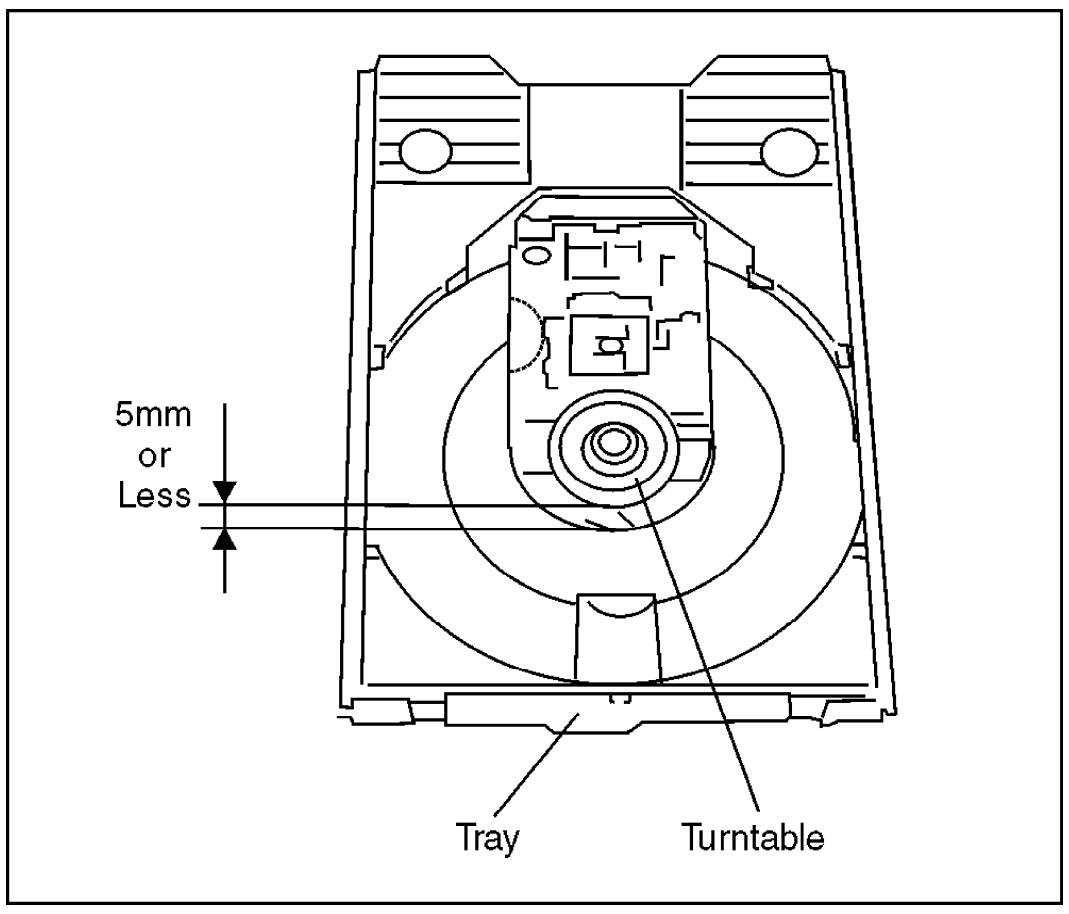
5mm
or
Less
Tray
Turntable

10.6. TRAVERSE BLOCK

1. Lift the traverse block while spreading the hook of the mechanical chassis unit.
2. Disengage the tabs from the holes of the mechanical chassis unit.

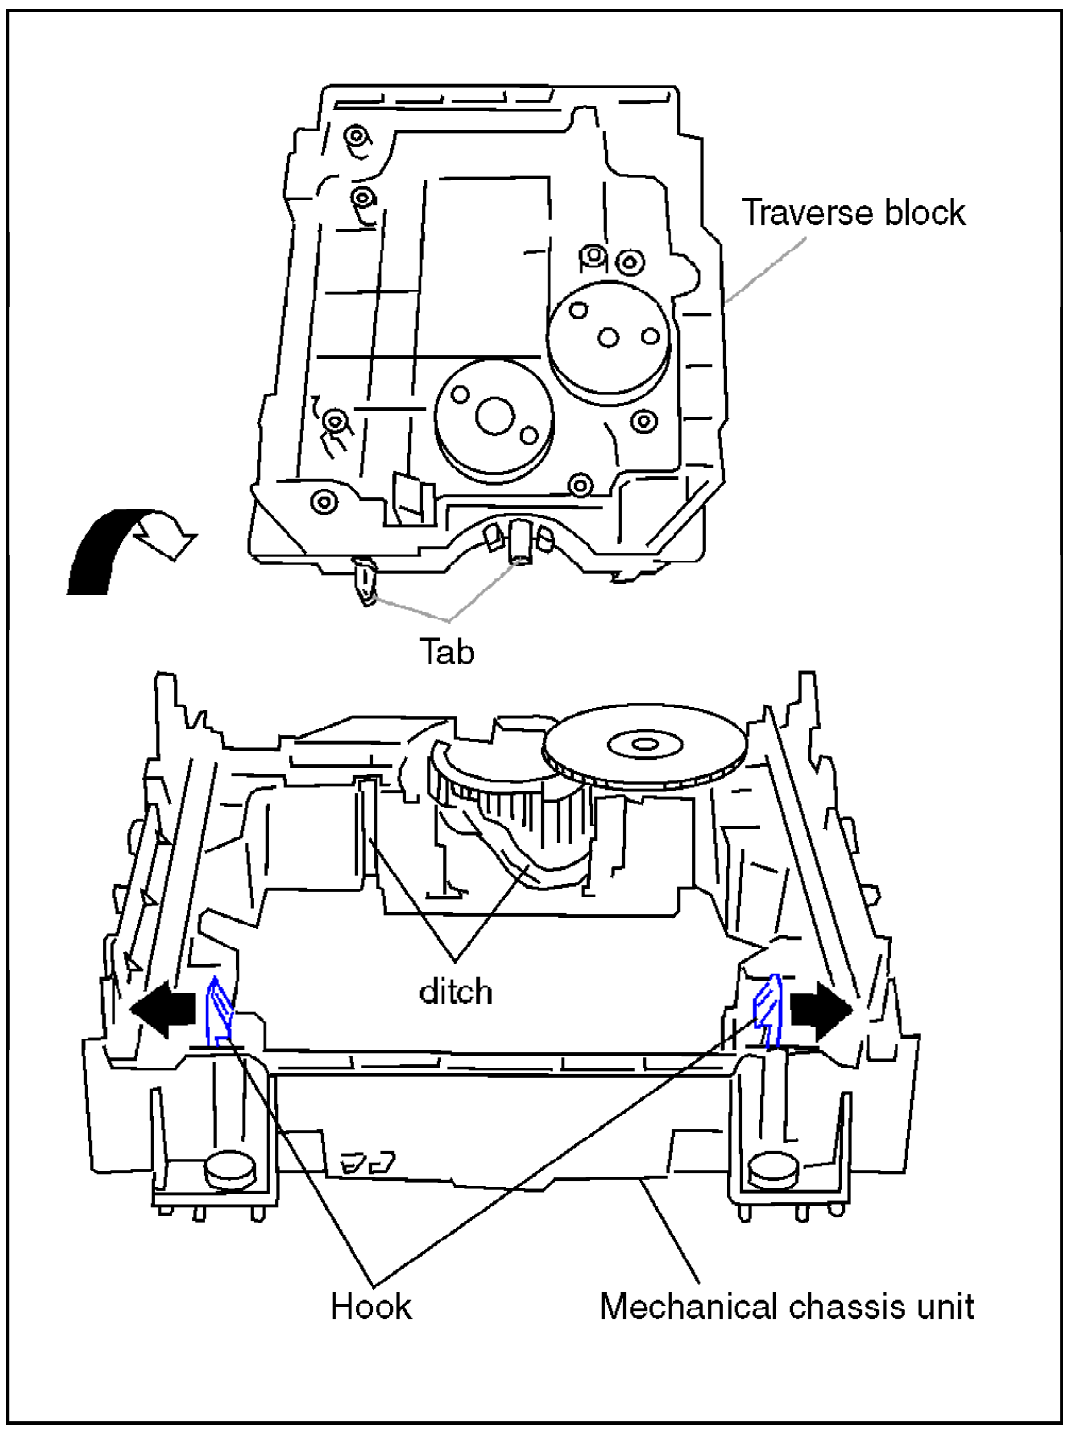
Traverse block
Tab
ditch
Hook
Mechanical chassis unit

10.7. TRAVERSE GEAR

1. Disengage the tabs from the traverse gear.
2. Remove the traverse gears B and C.

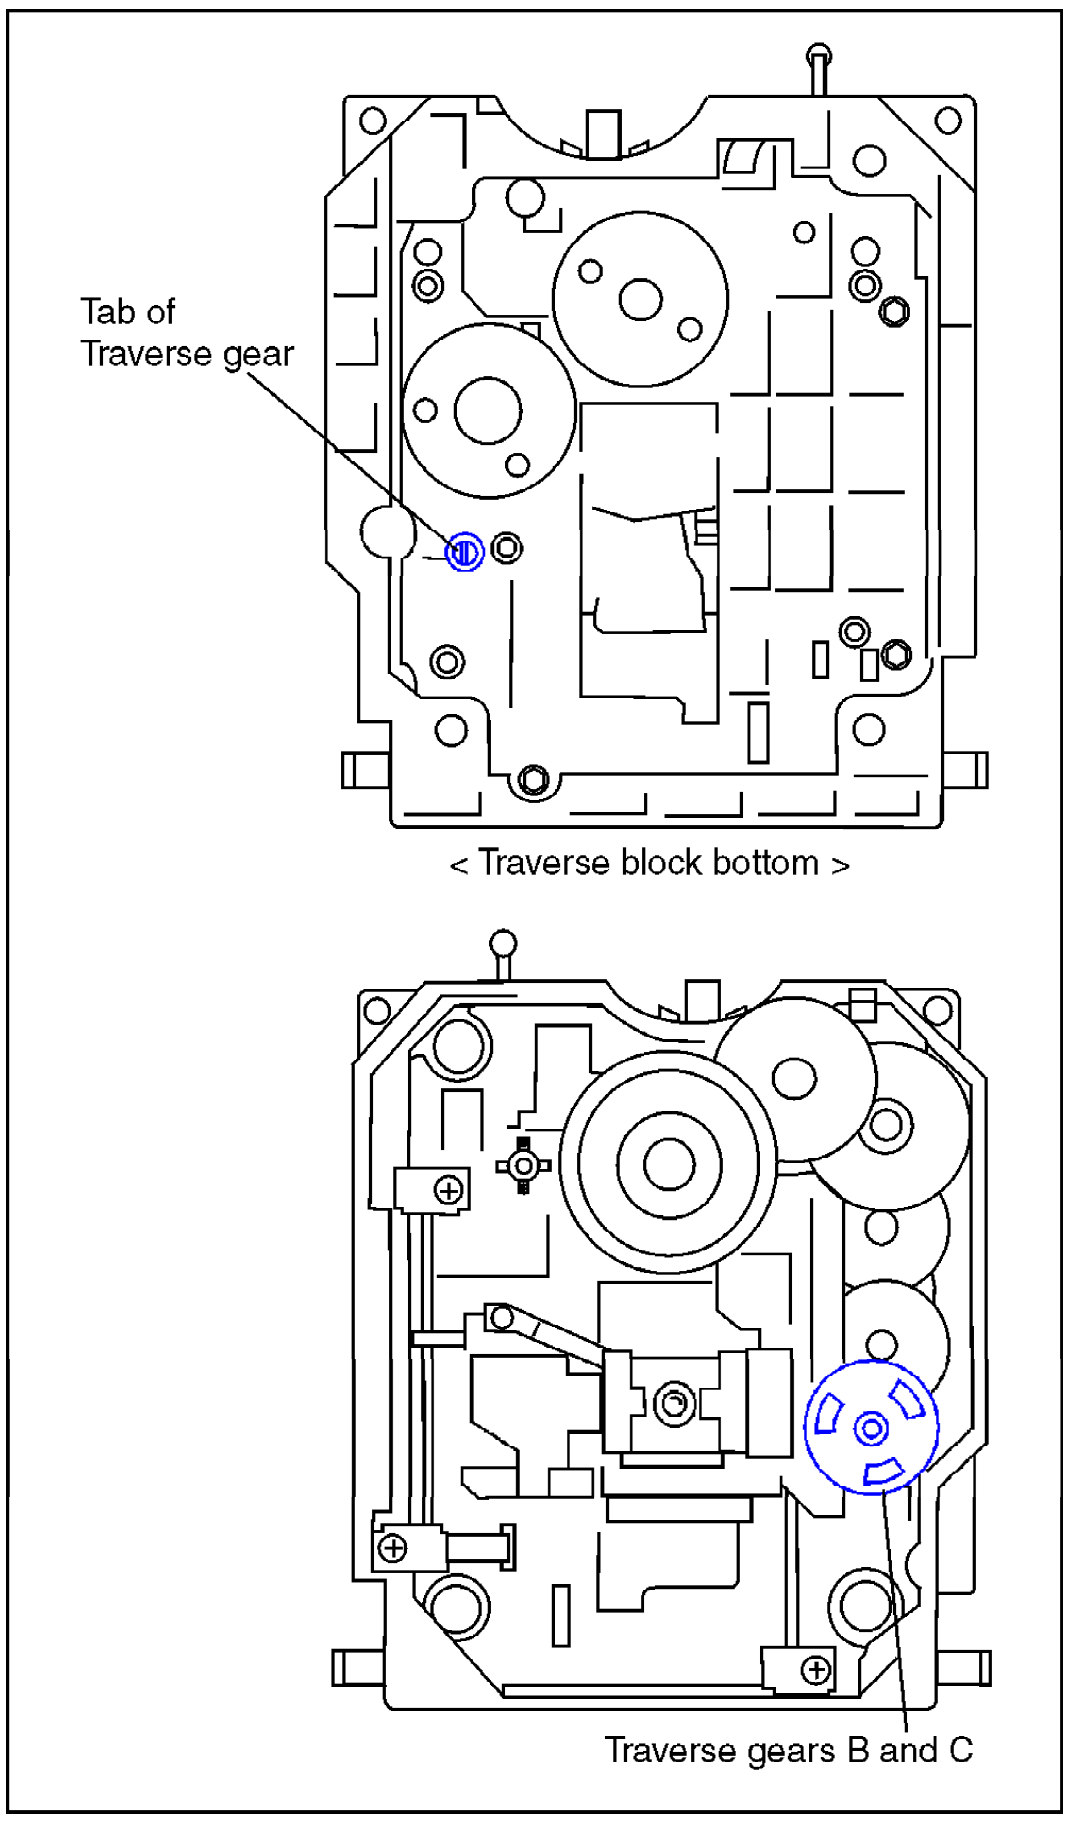
Tab of
Traverse gear
< Traverse block bottom >
Traverse gears B and C

<Precautions in reassembling the traverse block>

● **Take the following precautions when reassembling the traverse block.**

1. **Turn traverse gear on the traverse block to let trigger lever turn rightward (Front view).**
2. **Bring cam gear lever to the lever adjusting position at the end of mechanical chassis unit.**
3. **Put tabs A and B into slots A and B respectively.**
   Place tabs C into hooks to mount the traverse block on mechanical chassis unit (Slot A... Mechanical chassis unit, Slot B... Cam gear).

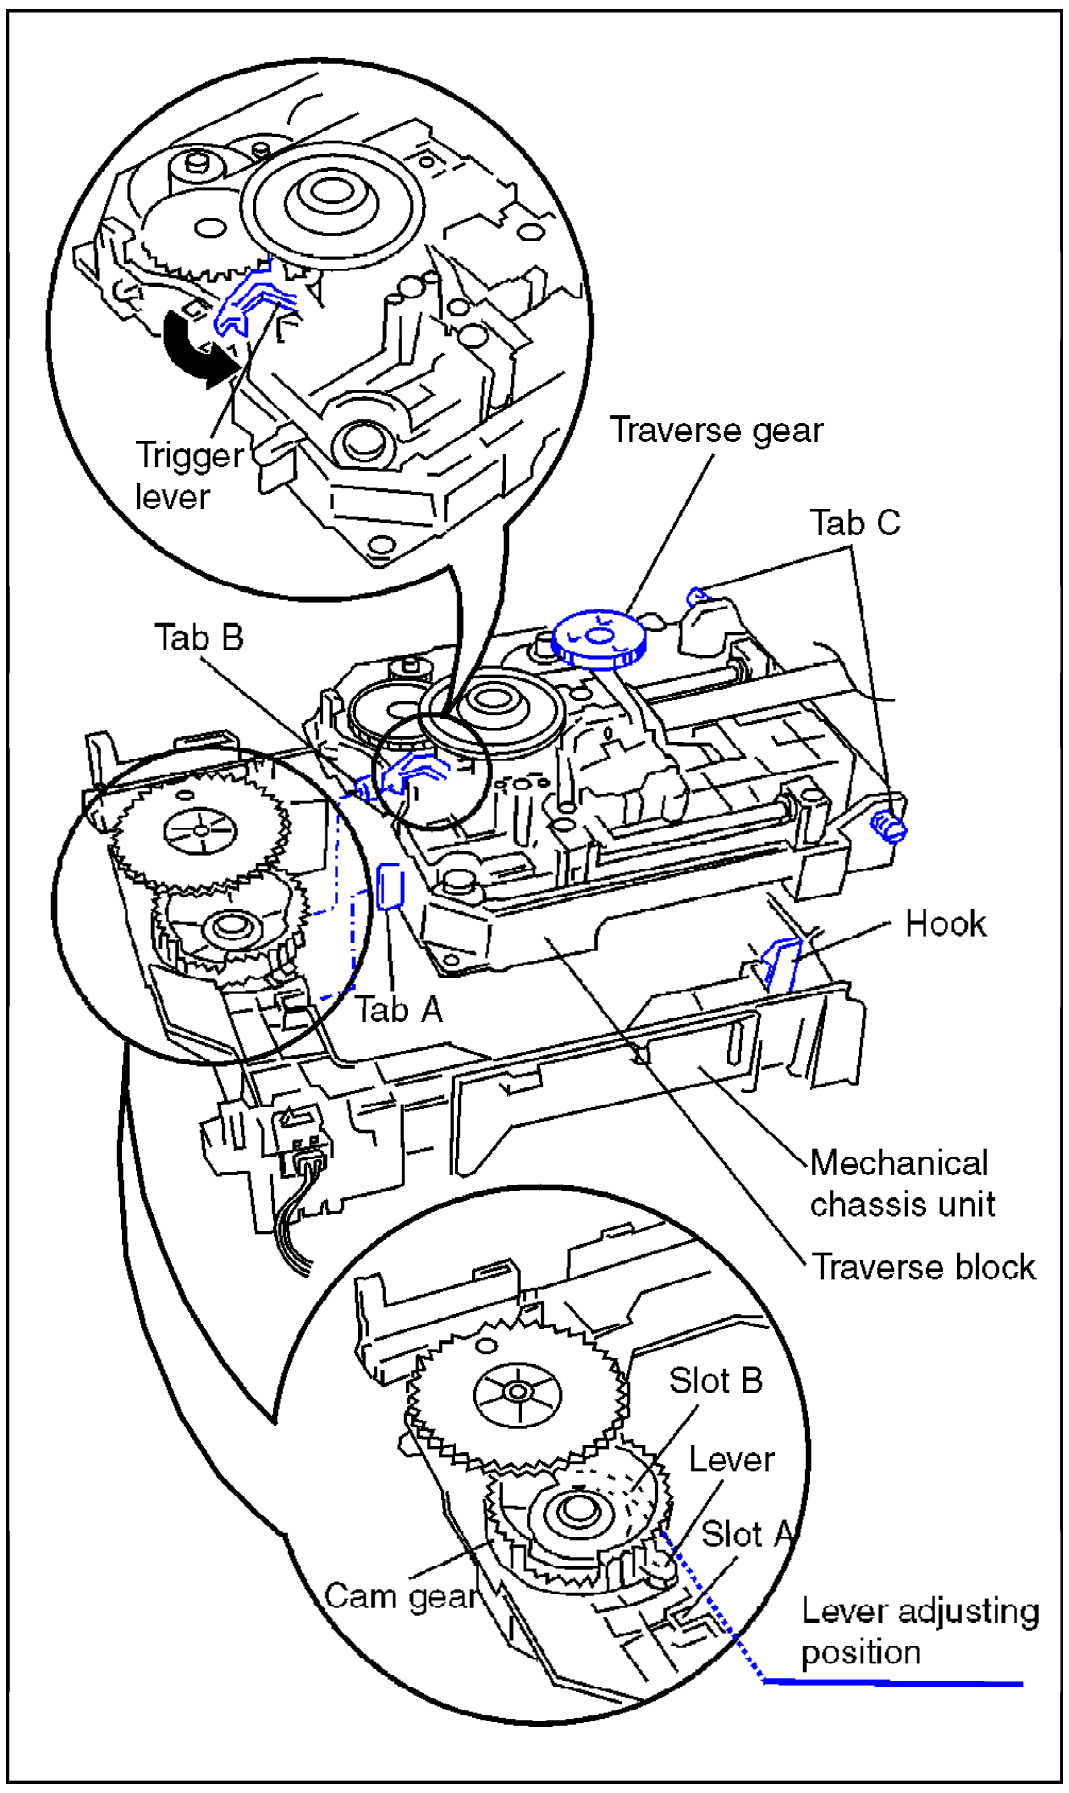
Trigger lever
Traverse gear
Tab C
Tab B
Tab A
Hook
Mechanical chassis unit
Traverse block
Slot B
Lever
Slot A
Cam gear
Lever adjusting position

10.8. OPTICAL PICKUP UNIT

1. Unscrew the screws.

2. Remove the spring holders and the springs.

3. Pull out the drive shaft and guide shaft.

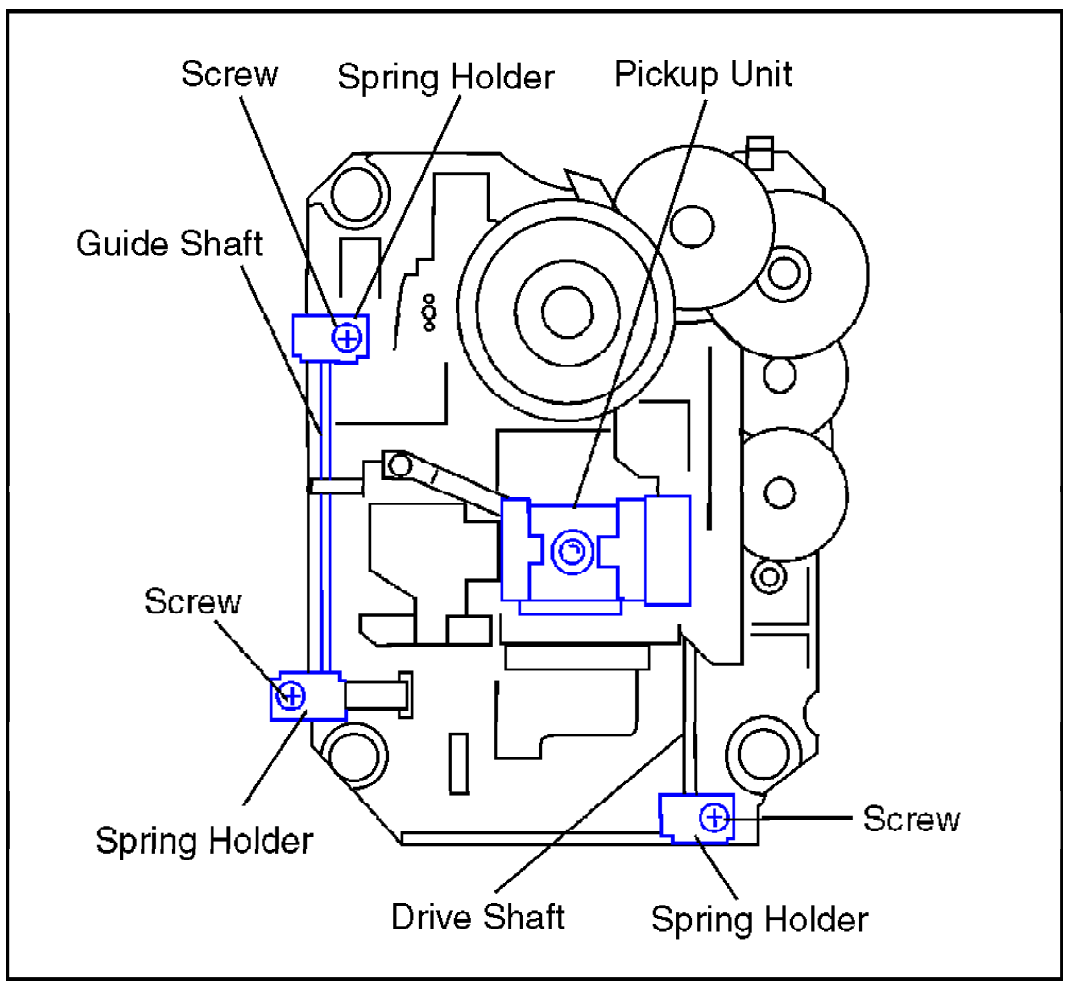
Screw
Spring Holder
Pickup Unit
Guide Shaft
Screw
Spring Holder
Drive Shaft
Spring Holder
Screw

10.8.1. DISASSEMBLING THE OPTICAL PICKUP UNIT

1. Remove the two screws and remove the TRV feed rack.
2. Remove the FFC cable.
3. Remove the optical pickup.

Fig. 1

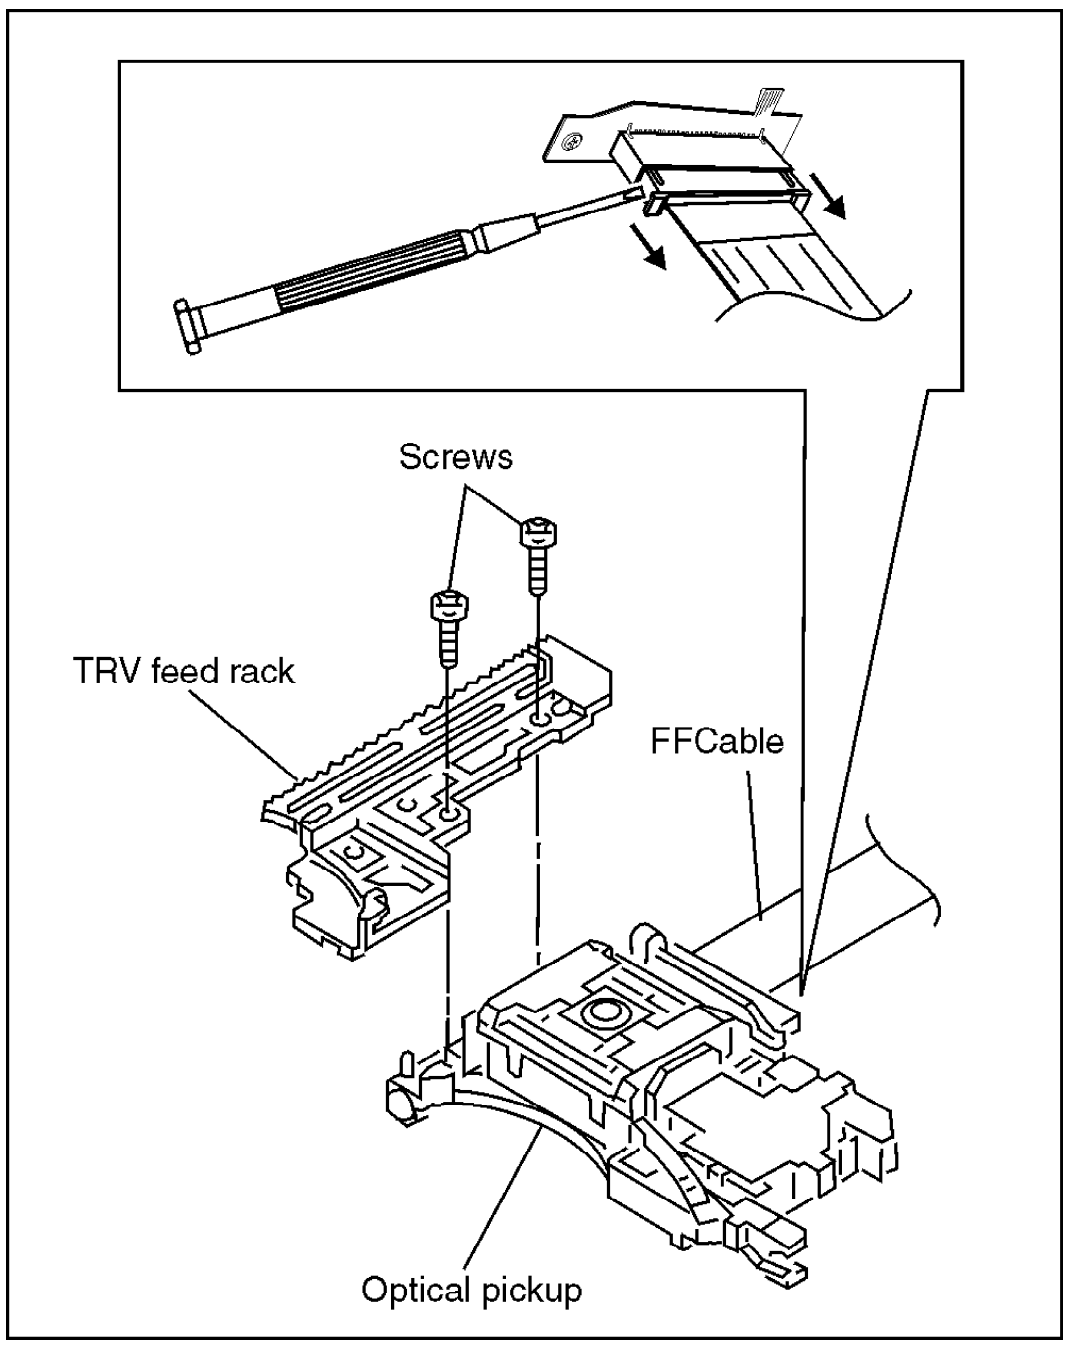

10.8.2. CAUTIONS TO BE TAKEN WHEN REPLACING THE OPTICAL PICKUP

- Replace the optical pickup according to the following procedure.

1. Install the TRV feed rack on the optical pickup (see Fig. 1).
2. Install the Optical Pickup Unit, Spring, Drive shaft, Guide shaft and Spring holder on the Traverse block.
   Cautions to be taken when assembling the unit: Install the Pickup Unit so that it is located at the rear end of the Guide shaft.
3. Install the FFCable (see Fig. 1).

Fig. 2

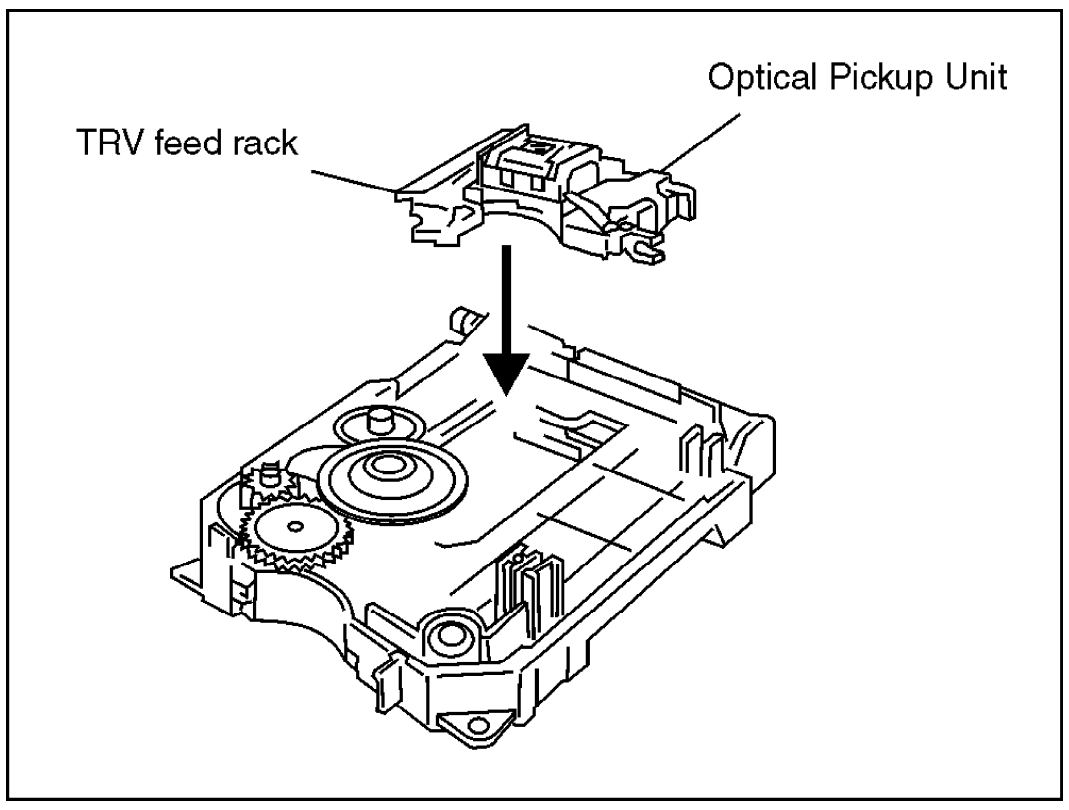
Optical Pickup Unit
TRV feed rack

Fig. 3

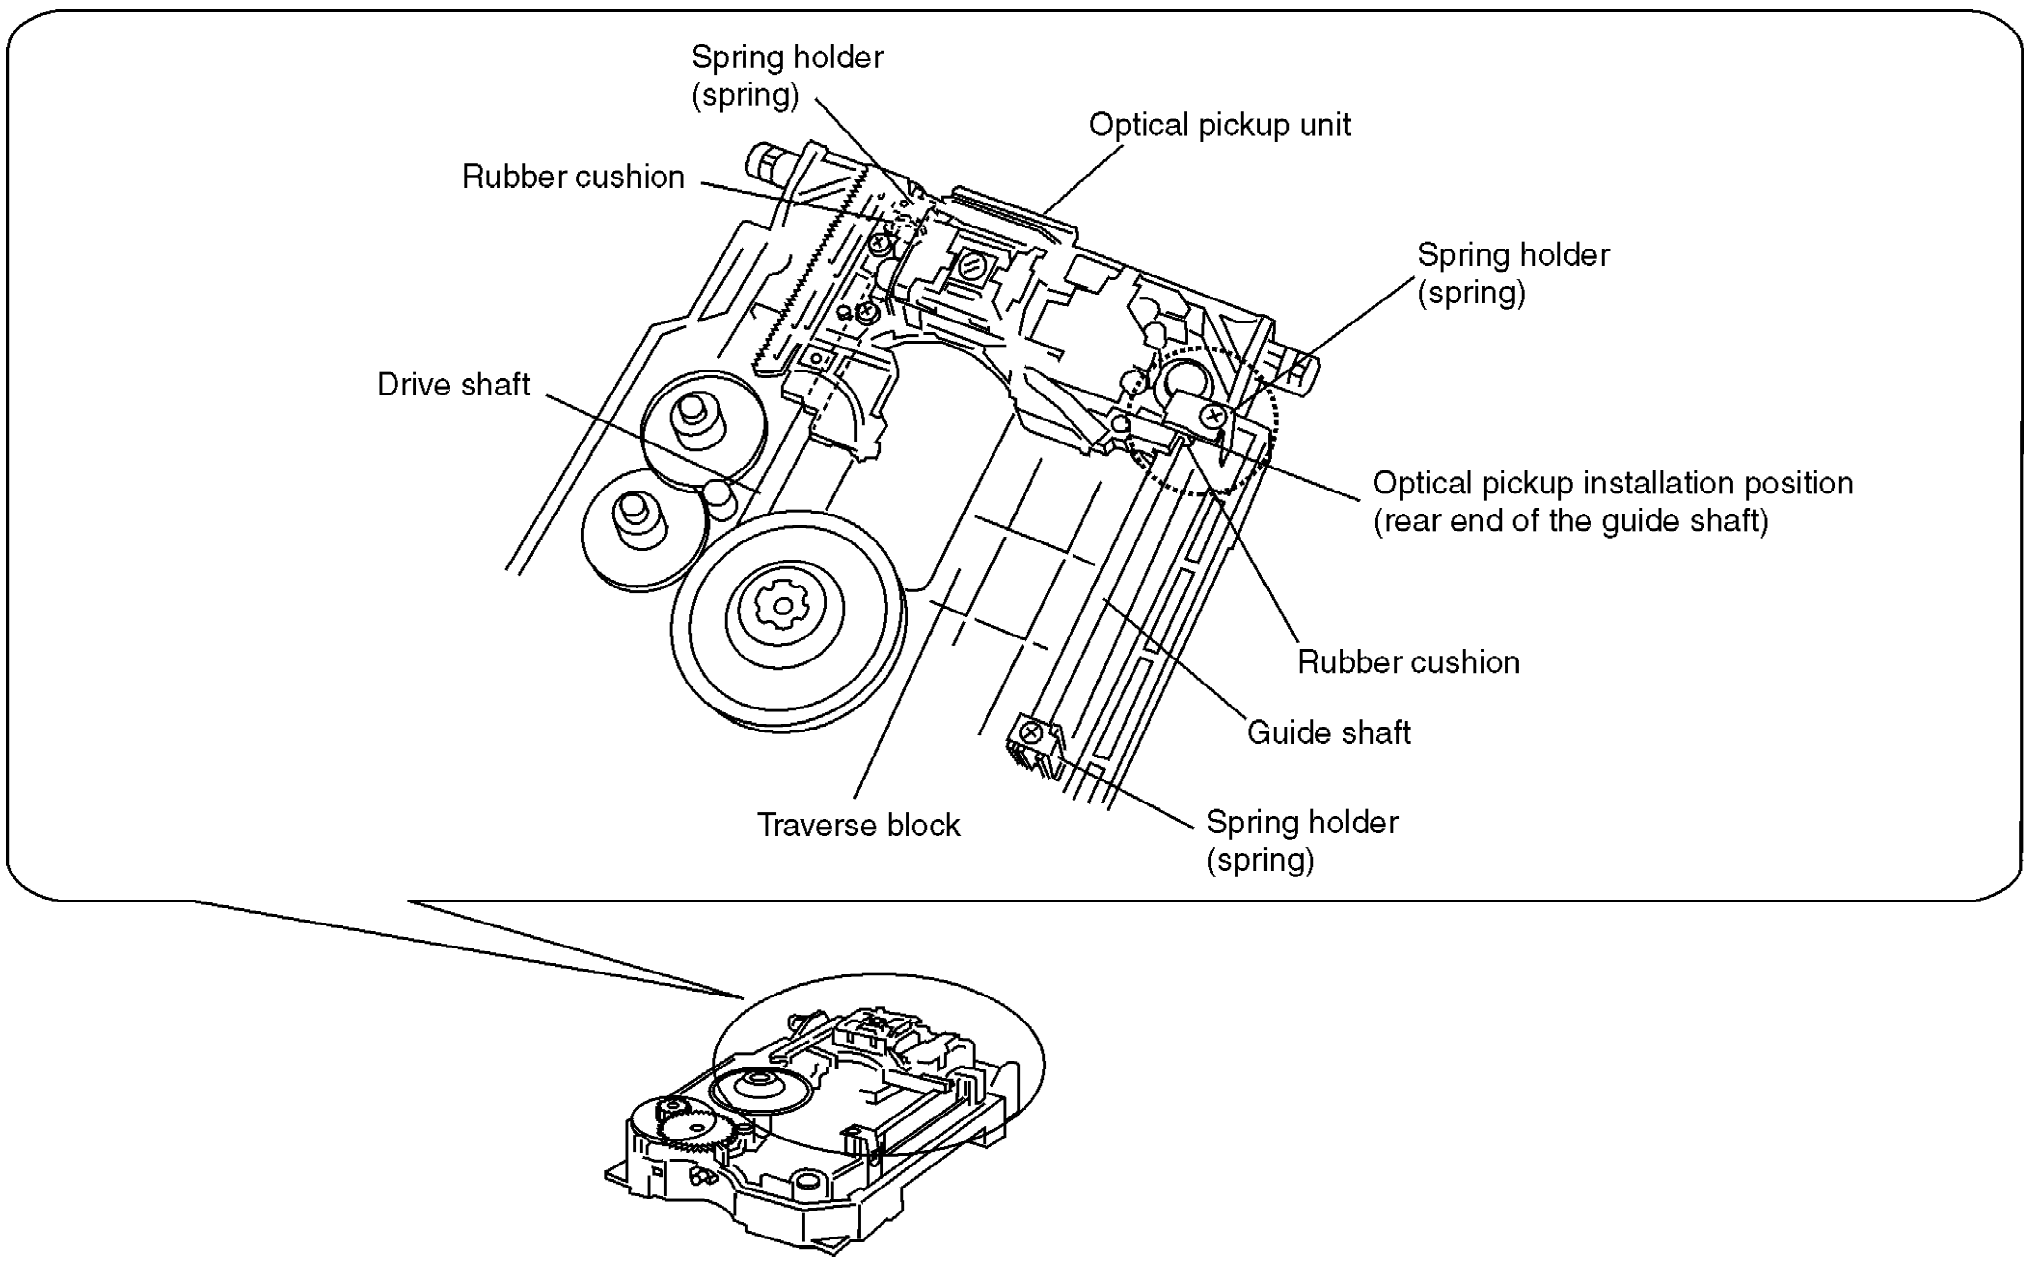
Spring holder (spring)
Optical pickup unit
Rubber cushion
Spring holder (spring)
Drive shaft
Optical pickup installation position (rear end of the guide shaft)
Rubber cushion
Guide shaft
Traverse block
Spring holder (spring)

10.9. DISASSEMBLING THE / MIDDLE CHASSIS

1. Remove the holder pins.

2. Remove the tab.

3. It lifts while pulling it in the direction of the arrow.

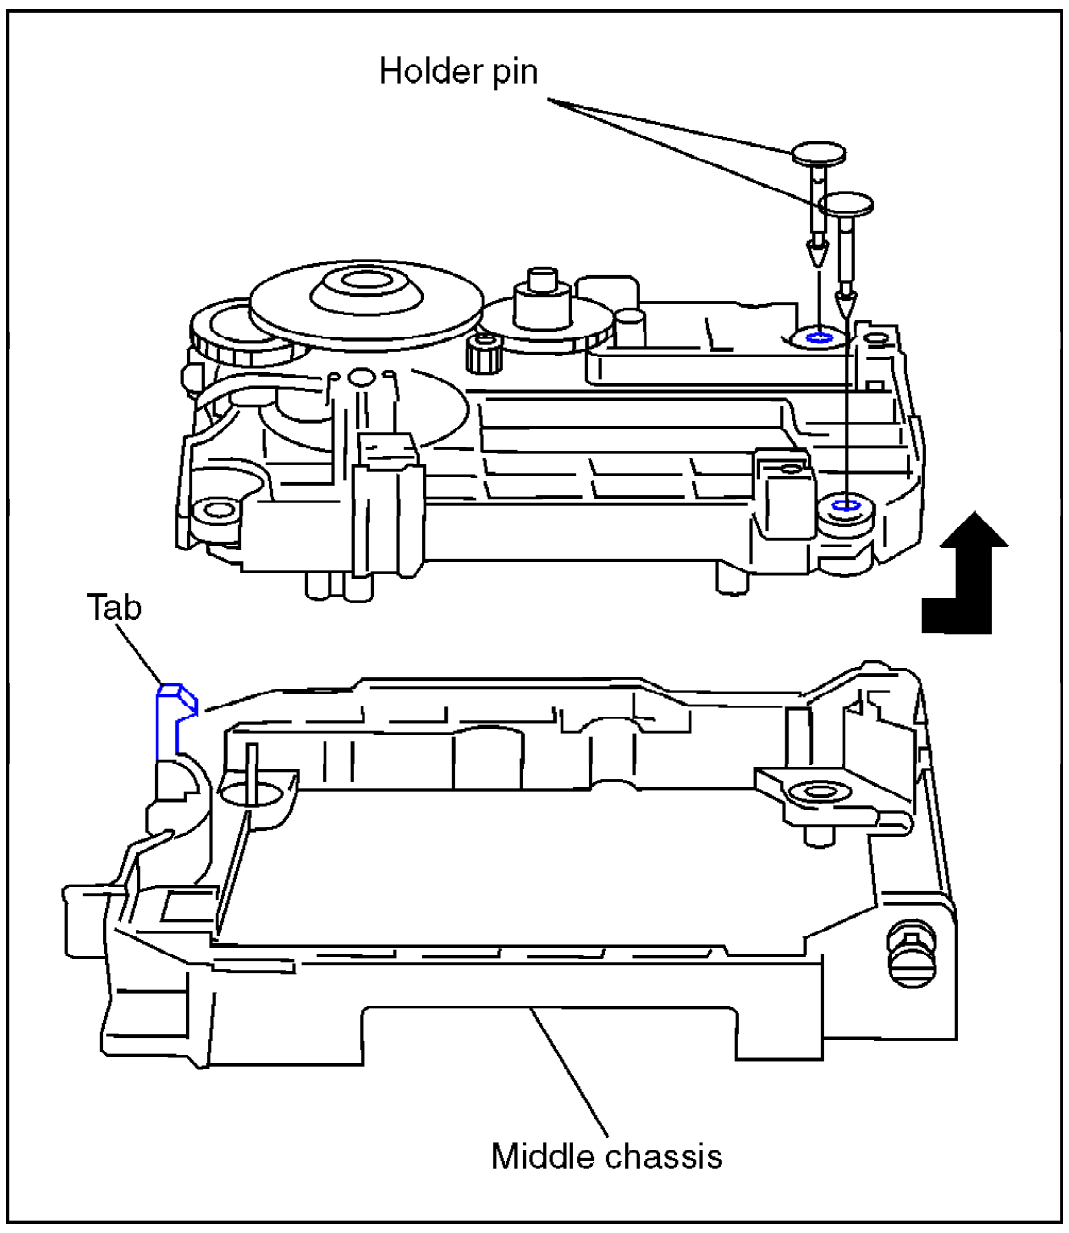
Holder pin
Tab
Middle chassis

10.10. DISASSEMBLING THE / TRAVERSE

1. **Unscrew the screw.**
2. **Remove the traverse gear A.**

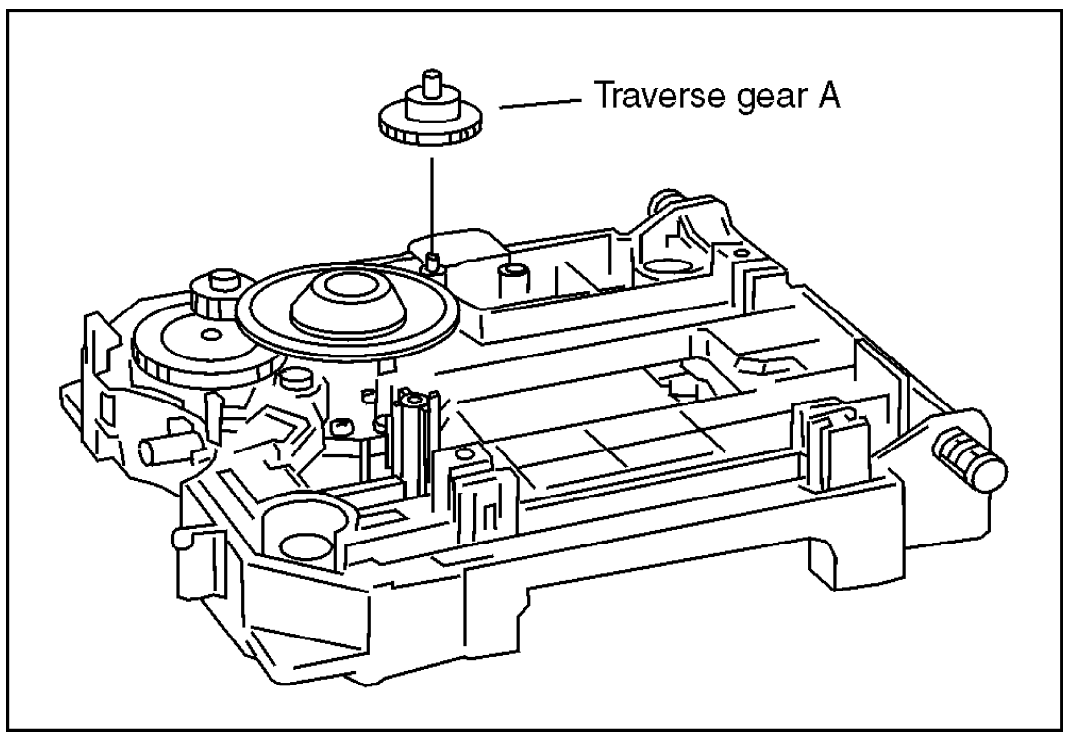
Traverse gear A

10.11. DISASSEMBLING THE / SPINDLE MOTOR UNIT /

1. **Remove the floating rubbers.**

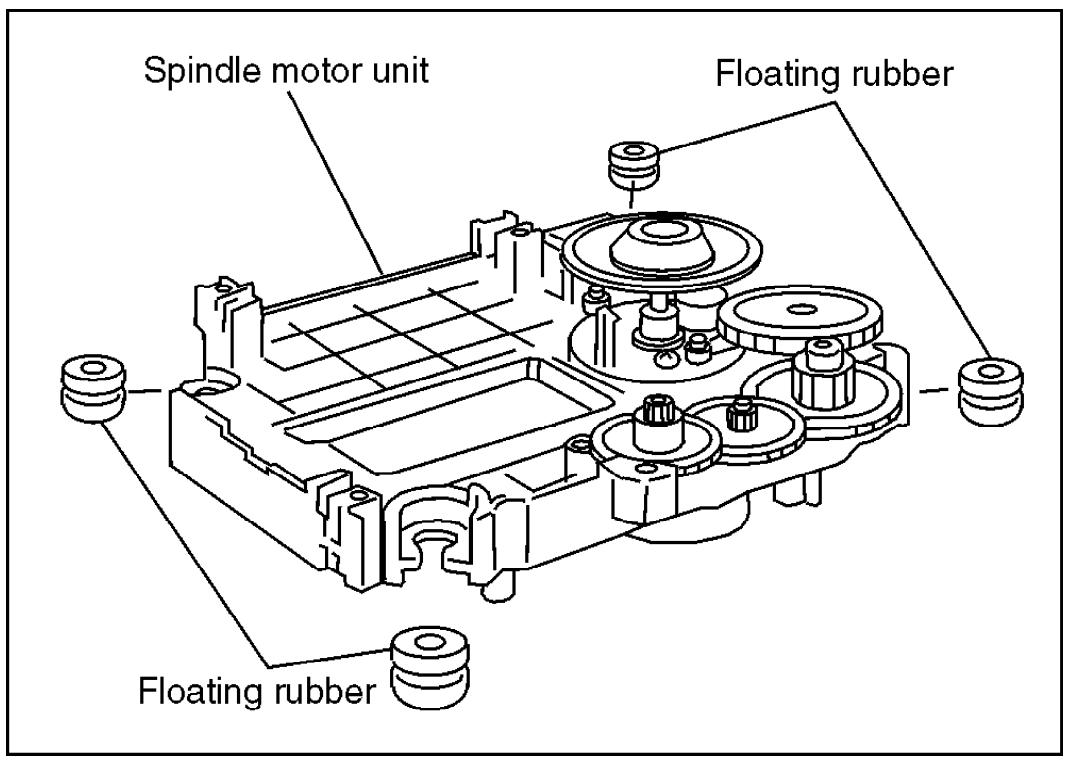
Spindle motor unit
Floating rubber
Floating rubber

11. ADJUSTMENT PROCEDURES

11.1. IMPORTANT POINTS IN ADJUSTMENT

11.1.1. IMPORTANT POINTS IN OPTICAL ADJUSTMENT

- Before starting optical adjustment be sure to take anti-static measures.
- Optical pickup tilt adjustment is needed after replacement of the following components.

1. Optical pickup unit
2. Spindle motor unit
3. Optical pickup peripheral parts (such as rail)

Notes
Adjustment is generally unnecessary after replacing other parts of the traverse unit. However, make adjustment if there is a noticeable degradation in picture quality. Optical adjustments cannot be made inside the optical pickup. Adjustment is generally unnecessary after replacing the traverse unit.

11.1.2. IMPORTANT POINTS IN ELECTRICAL ADJUSTMENT

- Follow the adjustment procedures described in this Manual.

11.2. STORING AND HANDLING TEST DISCS

- Surface precision is vital for DVD test discs. Be sure to store and handle them carefully.

1. Do not place discs directly onto the workbench, etc., after use.
2. Handle discs carefully in order to maintain their flatness. Place them into their case after use and store them vertically. Store discs in a cool place where they are not exposed to direct sunlight or air from air conditioners.
3. Accurate adjustment will not be possible if the disc is warped when placed on a surface made of glass, etc. If this happens, use a new test disc to make optical adjustments.
4. If adjustment is done using a warped disc, the adjustment will be incorrect and some discs will not be playable.

11.3. OPTICAL ADJUSTMENT

11.3.1. OPTICAL PICKUP TILT ADJUSTMENT

Measurement point	Adjustment point	Mode	Disc
	Tangential adjustment screw Tilt adjustment screw	T01 (inner periphery) play T43 (outer periphery) play	DVDR-S15 or DVDT-S01
Measuring equipment		**Adjustment value**	
None (Main unit display for servicing is used.)		Adjust to the minimum jitter value.	

11.3.1.1. ADJUSTMENT PROCEDURE

1. While pressing PAUSE and OPEN/CLOSE buttons on the main unit, press "5" on the remote control unit.
2. Confirm that "J_xxx_yyy_zz" is shown on the front display.

For your information:
"yyy" and "zz" shown to the right have nothing to do with the jitter value. "yyy" is the error counter, while "zz" is the focus drive value.

Note:
Jitter value appears on the front display.

3. Play test disc T01 (inner periphery).
4. Adjust tangential adjustment screw so that the jitter value is minimized.
5. Play test disc T43 (outer periphery).
6. Adjust tilt adjustment screw 1 so that the jitter value is minimized.
7. Play test disc T43 (outer periphery).
8. Adjust tilt adjustment screw 2 so that the jitter value is minimized.
9. Repeat adjusting tilt adjustment screws 1 and 2 alternately until the jitter value is minimized.

11.3.1.2. IMPORTANT POINTS

1. Make tangential adjustment first and then make tilt adjustment.
2. Repeat adjusting two or three times to find the optimum point.

3. Finish the procedure with tilt adjustment.

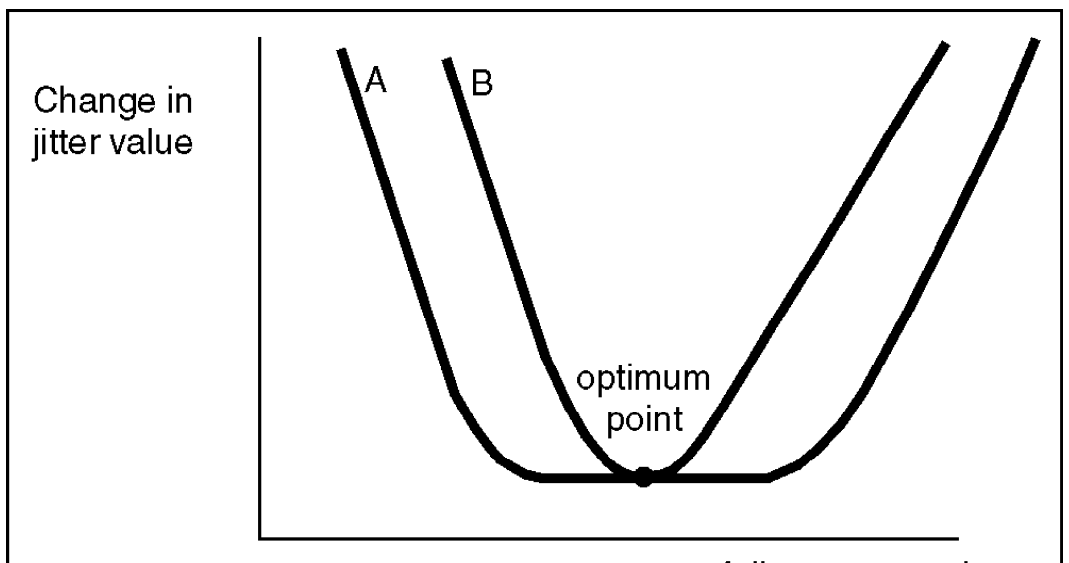

Jitter value depends on the model:
1. If the jitter value changes like B, the optimum point is easy to find.
2. If the jitter value changes like A, set the optimum point near the middle.

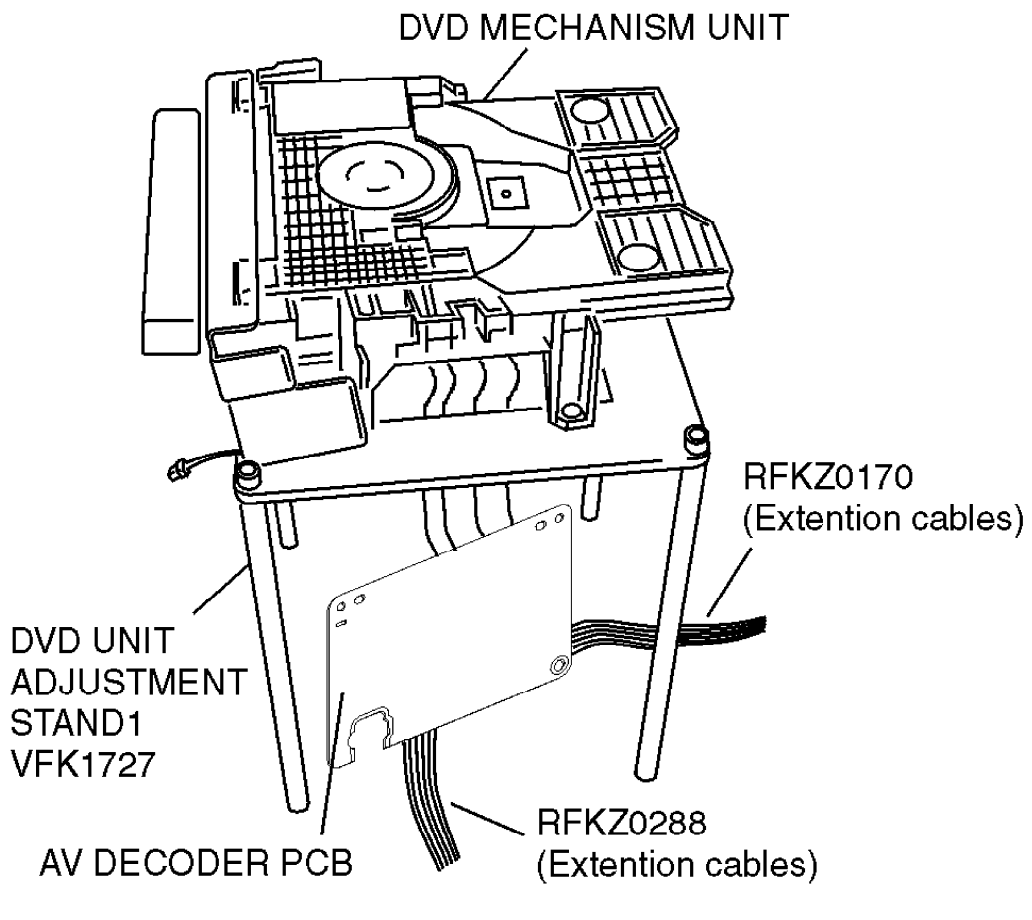
DVD MECHANISM UNIT
RFKZ0170
(Extention cables)
DVD UNIT
ADJUSTMENT
STAND1
VFK1727
AV DECODER PCB
RFKZ0288
(Extention cables)

Note:
When adjust Tilt adjustment screw 2, turn the DVD unit slightly so that the Tilt adjustment screw 2 could be adjusted.

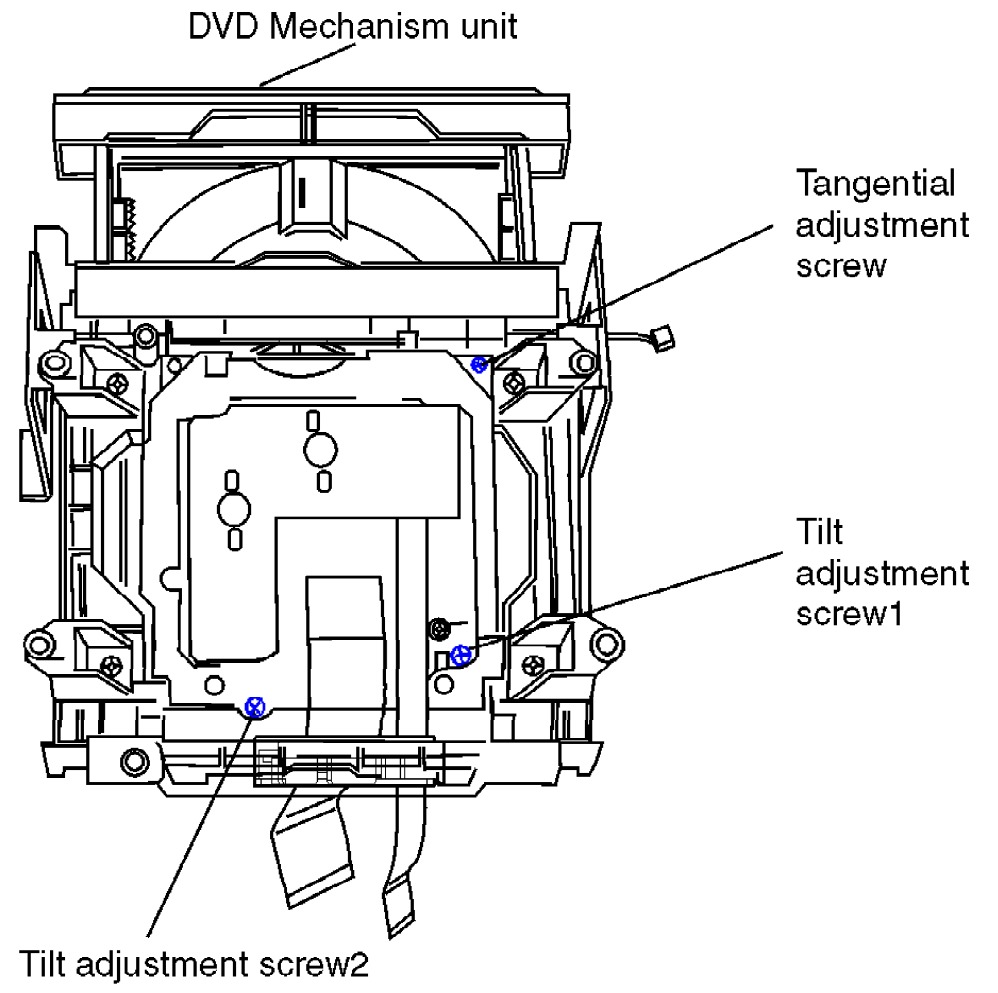
DVD Mechanism unit
Tangential
adjustment
screw
Tilt
adjustment
screw1
Tilt adjustment screw2

11.3.1.3. CHECK AFTER ADJUSTMENT

Play test disc or any other disc to make sure there is no picture degradation in the inner, middle and outer peripheries and no audio skipping. After adjustment is finished, lock each adjustment screw in position using screw lock.

11.3.1.4. PROCEDURE FOR SCREW LOCK

1. **After adjustment, remove top panel, tray, clamper base and traverse unit in this sequence.**
2. **Lay the traverse unit upside down and fix adjustment screw with screw lock.**
3. **After fixing, reassemble traverse unit, clamper base, tray and top panel.**

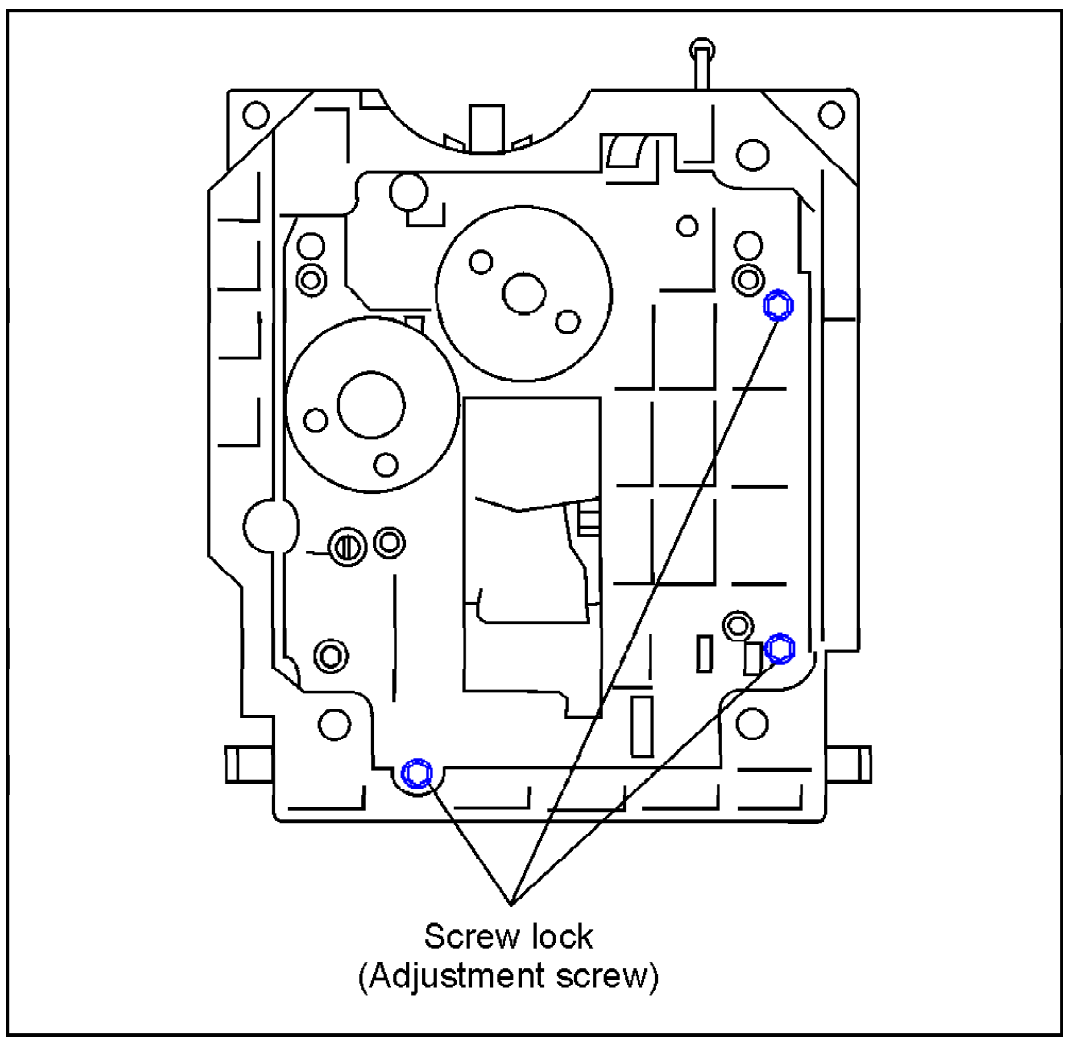

11.4. VCR ELECTRICAL ADJUSTMENT PROCEDURES

11.4.1. TEST EQUIPMENT

The following equipments are required for Electrical Adjustments.

1. **Dual-Trace Oscilloscope**
    - **Voltage Range: 0.005-5V/div**
    - **Frequency Range: DC-35MHz**
    - **Probes: 10:1 / 1:1**
2. **Frequency Counter**
    - **Frequency Range: 0-10MHz**
    - **Probes: 1:1**
3. **Universal Counter**
4. **Digital Volt Meter (D.V.M.)**

5. Video Sweep Generator
6. Sinewave Generator
7. Video Pattern Generator
8. Monitor TV
9. DC Power Supply
10. VHS Blank Tape
11. VHS Alignment Tape
    - Parts No.: VFJ8125H3F(PAL)

11.4.2. VCR SETTING

When no indication in the procedure, set each selector as follows.

1. TAPE SPEED: SP
2. CHANNEL: AV1/AV2
   (Set to signal input terminal number)

11.4.3. ADJUSTMENTS

ITEM	TP	ADJ.	MODE	INPUT	TAPE	M. EQ.	SPEC	REMA
PG SHIFTER ADJUSTMENT	---	---	PLAYBACK	---	ALIGNMENT TAPE (PAL)	---	---	Refer to proc PG SHIFTER ADJUSTMEN shown in Fig
VIDEO FREQUENCY RESPONSE ADJUSTMENT	VIDEO OUT	---	SP/LP/EP PLAYBACK (SELF-REC)	VIDEO SWEEP (See Fig. E1)	BLANK TAPE	OSCILLOSCOPE/ VIDEO SWEEP GENERATOR	SP: 0+-1 (dB) (90~110%) LP: 0+-1 (dB) (90~110%) EP: 0+-3 (dB) (70~140%) (See Fig. E2)	Refer to the procedure o VIDEO FREQ RESPONCE ADJUSTMEN as shown in

CONDITION:
BURST SIGNAL OFF / 75 ohm
TERMINATED

Fig. E1

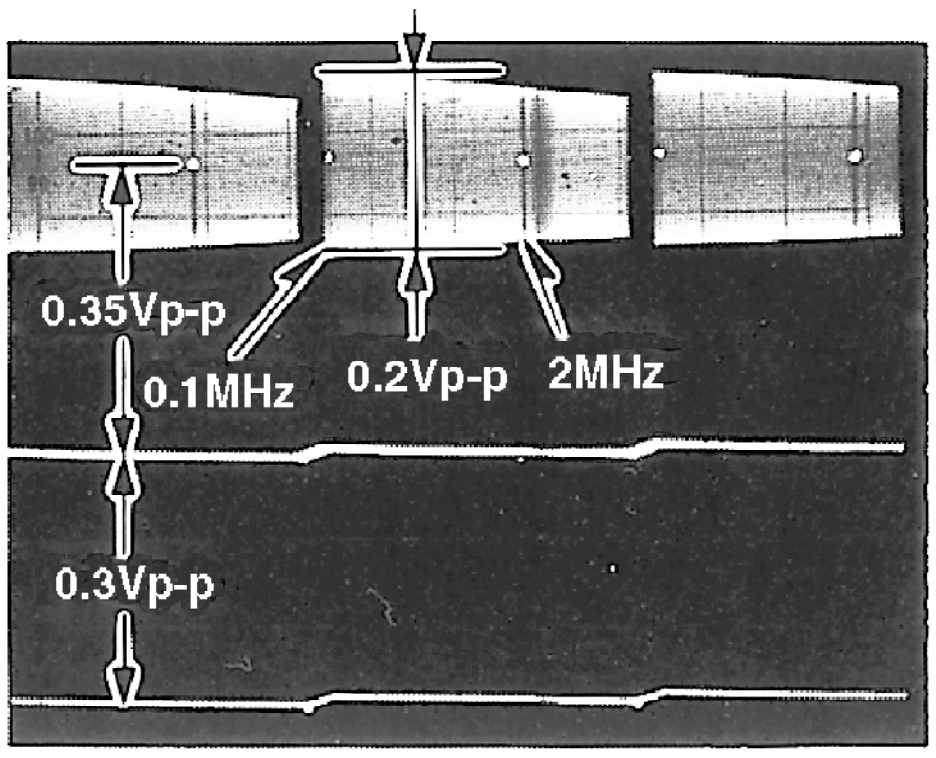

Fig. E2

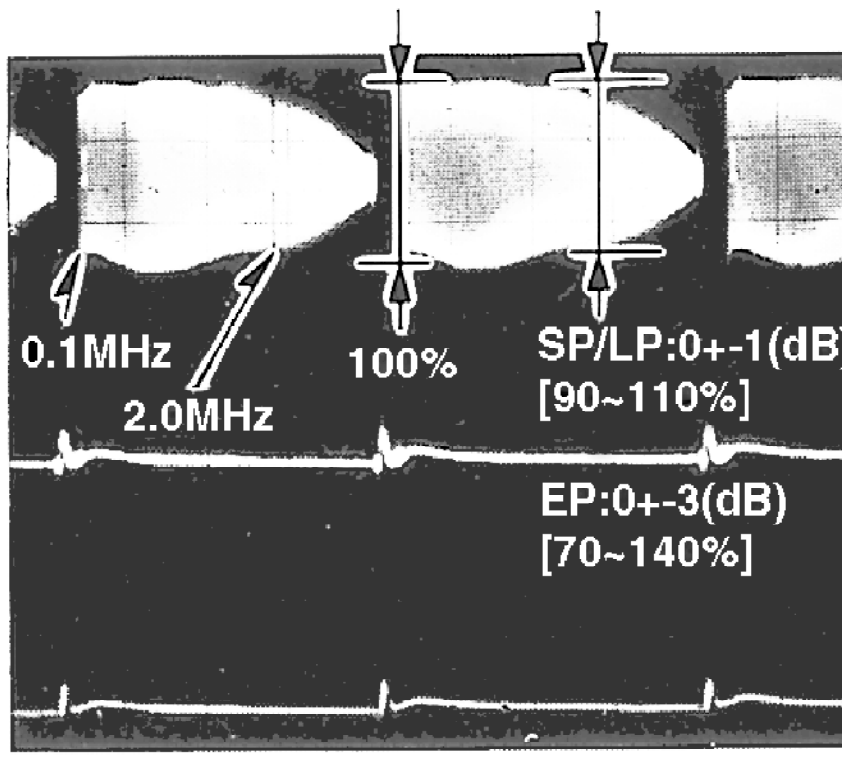

11.4.4. PG SHIFTER ADJUSTMENT / (AUTOMATIC)

Fig. E3

PROCEDURES	FIP DISPLAY
Press the FF and EJECT Keys simultaneously for 3 seconds.	
Press the FF and EJECT Keys simultaneously twice.	
Press the EJECT key for 3 seconds.	
Press the CH UP key once.	
Insert the Alignment cassette tape. (PAL:VFJ8125H3F)	
When the sequence of the automatical adjustment has been terminated, the following action has been made. *SUCCEED: The cassette tape is ejected. *ERROR : The "F2"is displayed on the FIP. (Check the Servo/Syscon circuit and Cylinder unit.)	
Release the Service mode by pressing the EJECT and FF keys simultaneously in 6 times until the FIP becomes normal indication.	

11.4.5. VIDEO FREQUENCY RESPONSE ADJUSTMENT

Fig. E4

PROCEDURES	FIP DISPLAY
Input the Video sweep signal. (See Fig.E1)	
Press the FF and EJECT Keys simultaneously for 3 seconds.	
Press the FF and EJECT Keys simultaneously twice.	
Press the EJECT key for 3 seconds.	
Press the CH UP key until "11" is displayed on FIP.	
Insert the Self-recorded tape and playback it. (SP/LP/EP mode)	
Connect the Oscilloscope to: *CH1....Video Out (TW3002).	
Press the "4" key on the remote controller. (Confirm that TW6002 becomes high(5V)).	
Adjust the Frequency response by pressing the "2"(increase) and/or "8"(decrease) key on the Remote Controller. (See Fig.E2)	
Store the Adjusted value by pressing the "5" key on the Remote Controller.	
Release the Service mode by pressing the EJECT and FF keys simultaneously in 6 times until the FIP becomes normal indication.	

11.4.6. LOCATION OF TEST POINTS & CONTROLS (MAIN PCB)

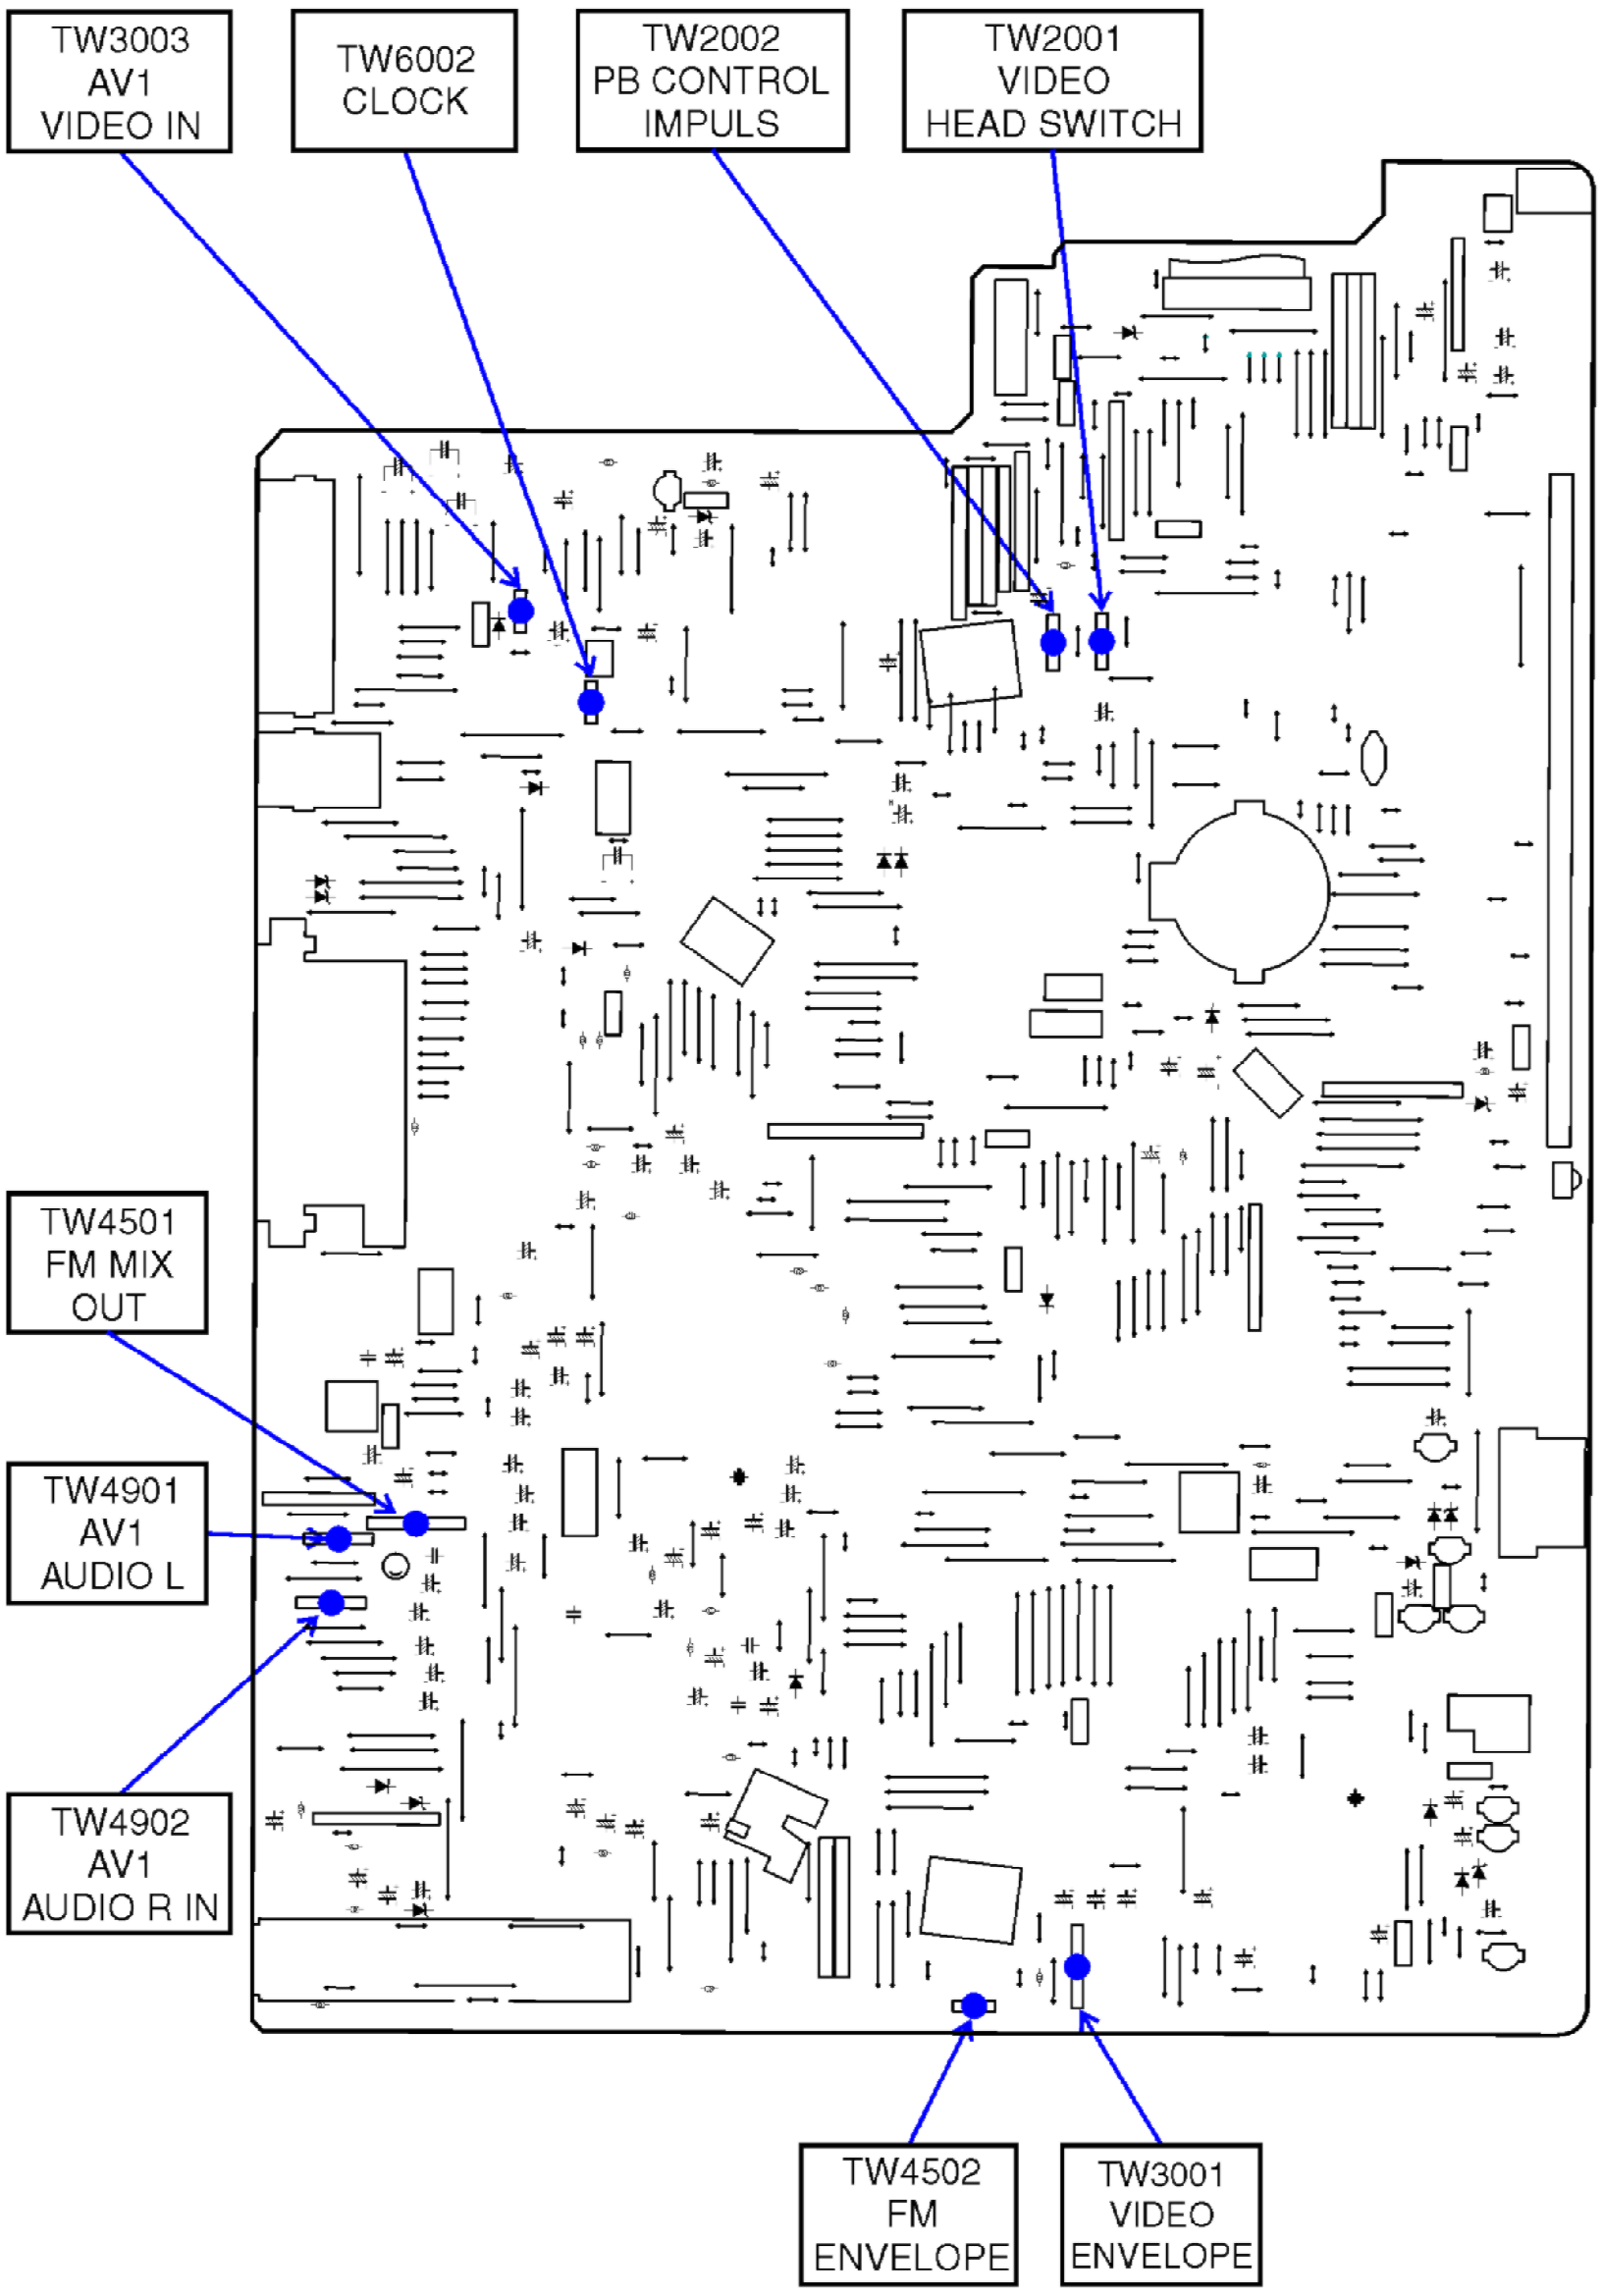
TW3003
AV1
VIDEO IN
TW6002
CLOCK
TW2002
PB CONTROL
IMPULS
TW2001
VIDEO
HEAD SWITCH
TW4501
FM MIX
OUT
TW4901
AV1
AUDIO L
TW4902
AV1
AUDIO R IN
TW4502
FM
ENVELOPE
TW3001
VIDEO
ENVELOPE

12. ABBREVIATIONS

INITIAL/LOGO		ABBREVIATIONS
A	A0~UP	ADDRESS
	ACLK	AUDIO CLOCK
	AD0~UP	ADDRESS BUS
	ADATA	AUDIO PES PACKET DATA
	ALE	ADDRESS LATCH ENABLE
	AMUTE	AUDIO MUTE
	AREQ	AUDIO PES PACKET REQUEST
	ARF	AUDIO RF
	ASI	SERVO AMP INVERTED INPUT
	ASO	SERVO AMPOUTPUT
	ASYNC	AUDIO WORD DISTINCTION SYNC
B	BCK	BIT CLOCK (PCM)
	BCKIN	BIT CLOCK INPUT
	BDO	BLACK DROP OUT
	BLKCK	SUB CODE BLOCK CLOCK
	BOTTOM	CAP. FOR BOTTOM HOLD
	BYP	BYPATH
	BYTCK	BYTE CLOCK
C	CAV	CONSTANT ANGULAR VELOCITY
	CBDO	CAP. BLACK DROP OUT
	CD	COMPACT DISC
	CDSCK	CD SERIAL DATA CLOCK
	CDSRDATA	CD SERIAL DATA
	CDRF	CD RF (EFM) SIGNAL
	CDV	COMPACT DISC-VIDEO
	CHNDATA	CHANNEL DATA
	CKSL	SYSTEM CLOCKSELECT
	CLV	CONSTANT LINEAR VELOCITY
	COFTR	CAP. OFF TRACK
	CPA	CPU ADDRESS
	CPCS	CPU CHIP SELECT
	CPDT	CPU DATA
	CPUADR	CPU ADDRESS LATCH
	CPUADT	CPU ADDRESS DATA BUS
	CPUIRQ	CPU INTERRUPT REQUEST
	CPRD	CPU READ ENABLE
	CPWR	CPU WRITE ENABLE
	CS	CHIPSELECT
	CSYNCIN	COMPOSITE SYNC IN
	CSYNCOUT	COMPOSITE SYNC OUT

INITIAL/LOGO		ABBREVIATIONS
D	DACCK	D/A CONVERTER CLOCK
	DEEMP	DEEMPHASIS BIT ON/OFF
	DEMPH	DEEMPHASIS SWITCHING
	DIG0~UP	FL DIGIT OUTPUT
	DIN	DATA INPUT
	DMSRCK	DM SERIAL DATA READ CLOCK
	DMUTE	DIGITAL MUTE CONTROL
	DO	DROP OUT
	DOUT0~UP	DATAOUTPUT
	DRF	DATA SLICE RF (BIAS)
	DRPOUT	DROP OUT SIGNAL
	DREQ	DATA REQUEST
	DRESP	DATA RESPONSE
	DSC	DIGITAL SERVO CONTROLLER
	DSLF	DATA SLICE LOOP FILTER
	DVD	DIGITAL VIDEO DISC
E	EC	ERROR TORQUE CONTROL
	ECR	ERROR TORQUE CONTROL REFERENCE
	ENCSEL	ENCODER SELECT
	ETMCLK	EXTERNAL M CLOCK (81MHz/ 40.5MHz)
	ETSCLK	EXTERNAL S CLOCK (54MHz)
F	FBAL	FOCUS BALANCE
	FCLK	FRAME CLOCK
	FE	FOCUS ERROR
	FFI	FOCUS ERROR AMP INVERTED INPUT
	FEO	FOCUS ERROR AMP OUTPUT
	FG	FREQUENCY GENERATOR
	FSC	FREQUENCY SUB CARRIER
	FSCK	FS (384 OVER SAMPLING) CLOCK
G	GND	COMMON GROUNDING (EARTH)
H	HA0~UP	HOST ADDRESS
	HD0~UP	HOST DATA
	HINT	HOST INTERRUPT
	HRXW	HOST READ/WRITE

INITIAL/LOGO		ABBREVIATIONS
I	IECOUT	IEC958 FORMAT DATA OUTPUT
	IPFRAG	INTERPOLATION FLAG
	IREF	I (CURRENT) REFERENCE
	ISEL	INTERFACE MODE SELECT
L	LDON	LASER DIODE CONTROL
	LPC	LASER POWER CONTROL
	LRCK	L CH/R CH DISTINCTION CLOCK
M	MA0~UP	MEMORY ADDRESS
	MCK	MEMORY CLOCK
	MCKI	MEMORY CLOCK INPUT
	MCLK	MEMORY SERIAL COMMAND CLOCK
	MDATA	MEMORY SERIAL COMMAND DATA
	MDQ0~UP	MEMORY DATA INPUT/OUTPUT
	MDQM	MEMORY DATA I/O MASK
	MLD	MEMORYSERIAL COMMAND LOAD
	MPEG	MOVING PICTURE EXPERTS GROUP
O	ODC	OPTICAL DISC CONTROLLER
	OFTR	OFF TRACKING
	OSCI	OSCILLATOR INPUT
	OSCO	OSCILLATOR OUTPUT
	OSD	ON SCREEN DISPLAY
P	P1~UP	PORT
	PCD	CD TRACKING PHASE DIFFERENCE
	PCK	PLL CLOCK
	PDVD	DVD TRACKING PHASE DIFFERENCE
	PEAK	CAP. FOR PEAK HOLD
	PLLCLK	CHANNEL PLL CLOCK
	PLLOK	PLL LOCK
	PWMCTL	PWM OUTPUT CONTROL
	PWMDA	PULSE WAVE MOTOR DRIVEA
	PWMOA, B	PULSE WAVE MOTOR OUT A, B

INITIAL/LOGO		ABBREVIATIONS
R	RE	READ ENABLE
	RFENV	RF ENVELOPE
	RFO	RF PHASE DIFFERENCE OUTPUT
	RS	(CD-ROM) REGISTER SELECT
	RSEL	RF POLARITY SELECT
	RST	RESET
	RSV	RESERVE
S	SBI0, 1	SERIAL DATA INPUT
	SBO0	SERIAL DATA OUTPUT
	SBT0, 1	SERIAL CLOCK
	SCK	SERIAL DATA CLOCK
	SCKR	AUDIO SERIAL CLOCK RECEIVER
	SCL	SERIAL CLOCK
	SCLK	SERIAL CLOCK
	SDA	SERIAL DATA
	SEG0~UP	FL SEGMENT OUTPUT
	SELCLK	SELECTCLOCK
	SEN	SERIAL PORT ENABLE
	SIN1, 2	SERIAL DATA IN
	SOUT1, 2	SERIAL DATA OUT
	SPDI	SERIAL PORT DATA INPUT
	SPDO	SERIAL PORT DATA OUTPUT
	SPEN	SERIAL PORT R/W ENABLE
	SPRCLK	SERIAL PORT READ CLOCK
	SPWCLK	SERIAL PORT WRITE CLOCK
	SQCK	SUB CODE Q CLOCK
	SQCX	SUBCODE Q DATA READ CLOCK
	SRDATA	SERIAL DATA
	SRMADR	SRAM ADDRESS BUS
	SRMDT0~7	SRAM DATA BUS 0~7
	SS	START/STOP
	STAT	STATUS
	STCLK	STREAM DATA CLOCK
	STD0~UP	STREAM DATA
	STENABLE	STREAM DATA INPUT ENABLE
	STSEL	STREAM DATA POLARITY SELECT
	STVALID	STREAM DATAVALIDITY
	SUBC	SUB CODE SERIAL
	SBCK	SUB CODE CLOCK
	SUBQ	SUB CODE Q DATA
	SYSCLK	SYSTEM CLOCK

INITIAL/LOGO		ABBREVIATIONS
T	TE	TRACKING ERROR
	TIBAL	BALANCE CONTROL
	TID	BALANCE OUTPUT 1
	TIN	BALANCE INPUT
	TIP	BALANCE INPUT
	TIS	BALANCE OUTPUT 2
	TPSN	OP AMP INPUT
	TPSO	OP AMP OUTPUT
	TPSP	OP AMP INVERTED INPUT
	TRCRS	TRACK CROSSSIGNAL
	TRON	TRACKING ON
	TRSON	TRAVERSE SERVO ON
V	VBLANK	V BLANKING
	VCC	COLLECTOR POWER SUPPLY VOLTAGE
	VCDCONT	VIDEO CD CONTROL (TRACKING BALANCE)
	VDD	DRAIN POWER SUPPLY VOLTAGE
	VFB	VIDEO FEED BACK
	VREF	VOLTAGE REFERENCE
	VSS	SOURCE POWER SUPPLYVOLTAGE
W	WAIT	BUS CYCLE WAIT
	WDCK	WORD CLOCK
	WEH	WRITE ENABLE HIGH
	WSR	WORD SELECT RECEIVER

INITIAL/LOGO		ABBREVIATIONS
X	X	X' TAL
	XALE	X ADDRESS LATCH ENABLE
	XAREQ	X AUDIO DATA REQUEST
	XCDROM	X CD ROM CHIP SELECT
	XCS	X CHIP SELECT
	XCSYNC	X COMPOSITE SYNC
	XDS	X DATA STROBE
	XHSYNCO	X HORIZONTAL SYNC OUTPUT
	XHINT	XH INTERRUPTREQUEST
	XI	X' TAL OSCILLATOR INPUT
	XINT	X INTERRUPT
	XMW	X MEMORY WRITE ENABLE
	XO	X' TAL OSCILLATOR OUTPUT
	XRE	X READ ENABLE
	XSRMCE	X SRAM CHIP ENABLE
	XSRMOE	X SRAM OUTPUT ENABLE
	XSRMWE	X SRAM WRITE ENABLE
	XVCS	X V-DEC CHIPSELECT
	XVDS	X V-DEC CONTROL BUS STROBE
	XVSYNCO	X VERTICAL SYNC OUTPUT

13. INPUT / OUTPUT CHART

13.1. INPUT / OUTPUT CHART FOR IC6001

13.2. TRUTH TABLE (EC/EP MODEL)

13.3. TRUTH TABLE (EB/EBL MODEL)

14. WAVEFORM TABLE

14.1. WAVEFORM

15. VOLTAGE CHART

16. INTERCONNECTION DIAGRAM

17. BLOCK DIAGRAM

17.1. POWER SUPPLY BLOCK DIAGRAM

17.2. VCR LUMINANCE & CHROMINANCE BLOCK DIAGRAM

17.3. VCR AUDIO BLOCK DIAGRAM

17.4. SYSCON & SERVO BLOCK DIAGRAM

17.5. DVD VIDEO BLOCK DIAGRAM

17.6. DVD OVERALL BLOCK DIAGRAM

17.7. DVD SERVO BLOCK DIAGRAM

17.8. DVD AUDIO BLOCK DIAGRAM

18. SCHEMATIC DIAGRAM

18.1. POWER PCB

18.2. MAIN PCB - AUDIO/VIDEO

18.3. MAIN PCB - I/O SECTION

18.4. MAIN PCB - SYSCON & SERVO

18.5. MAIN PCB - SYSCON & SERVO (ONLY REPD0024x)

18.6. AV DECODER PCB

18.7. FRONT PANEL PCB

18.8. TERMINAL PCB

19. PRINTED CIRCUIT BOARD

19.1. MAIN PCB (COMPONENT SIDE)

19.2. MAIN PCB (SOLDER SIDE)

19.3. MAIN PCB (COMPONENT SIDE - ONLY REPD0024x)

19.4. MAIN PCB (SOLDER SIDE - ONLY REPD0024x)

19.5. DECODER PCB (COMPONENT SIDE)

19.6. DECODER PCB (SOLDER SIDE)

19.7. POWER PCB

19.8. FRONT PCB

19.9. TERMINAL PCB

20. EXPLODED VIEWS

20.1. VCR CHASSIS PARTS SECTION

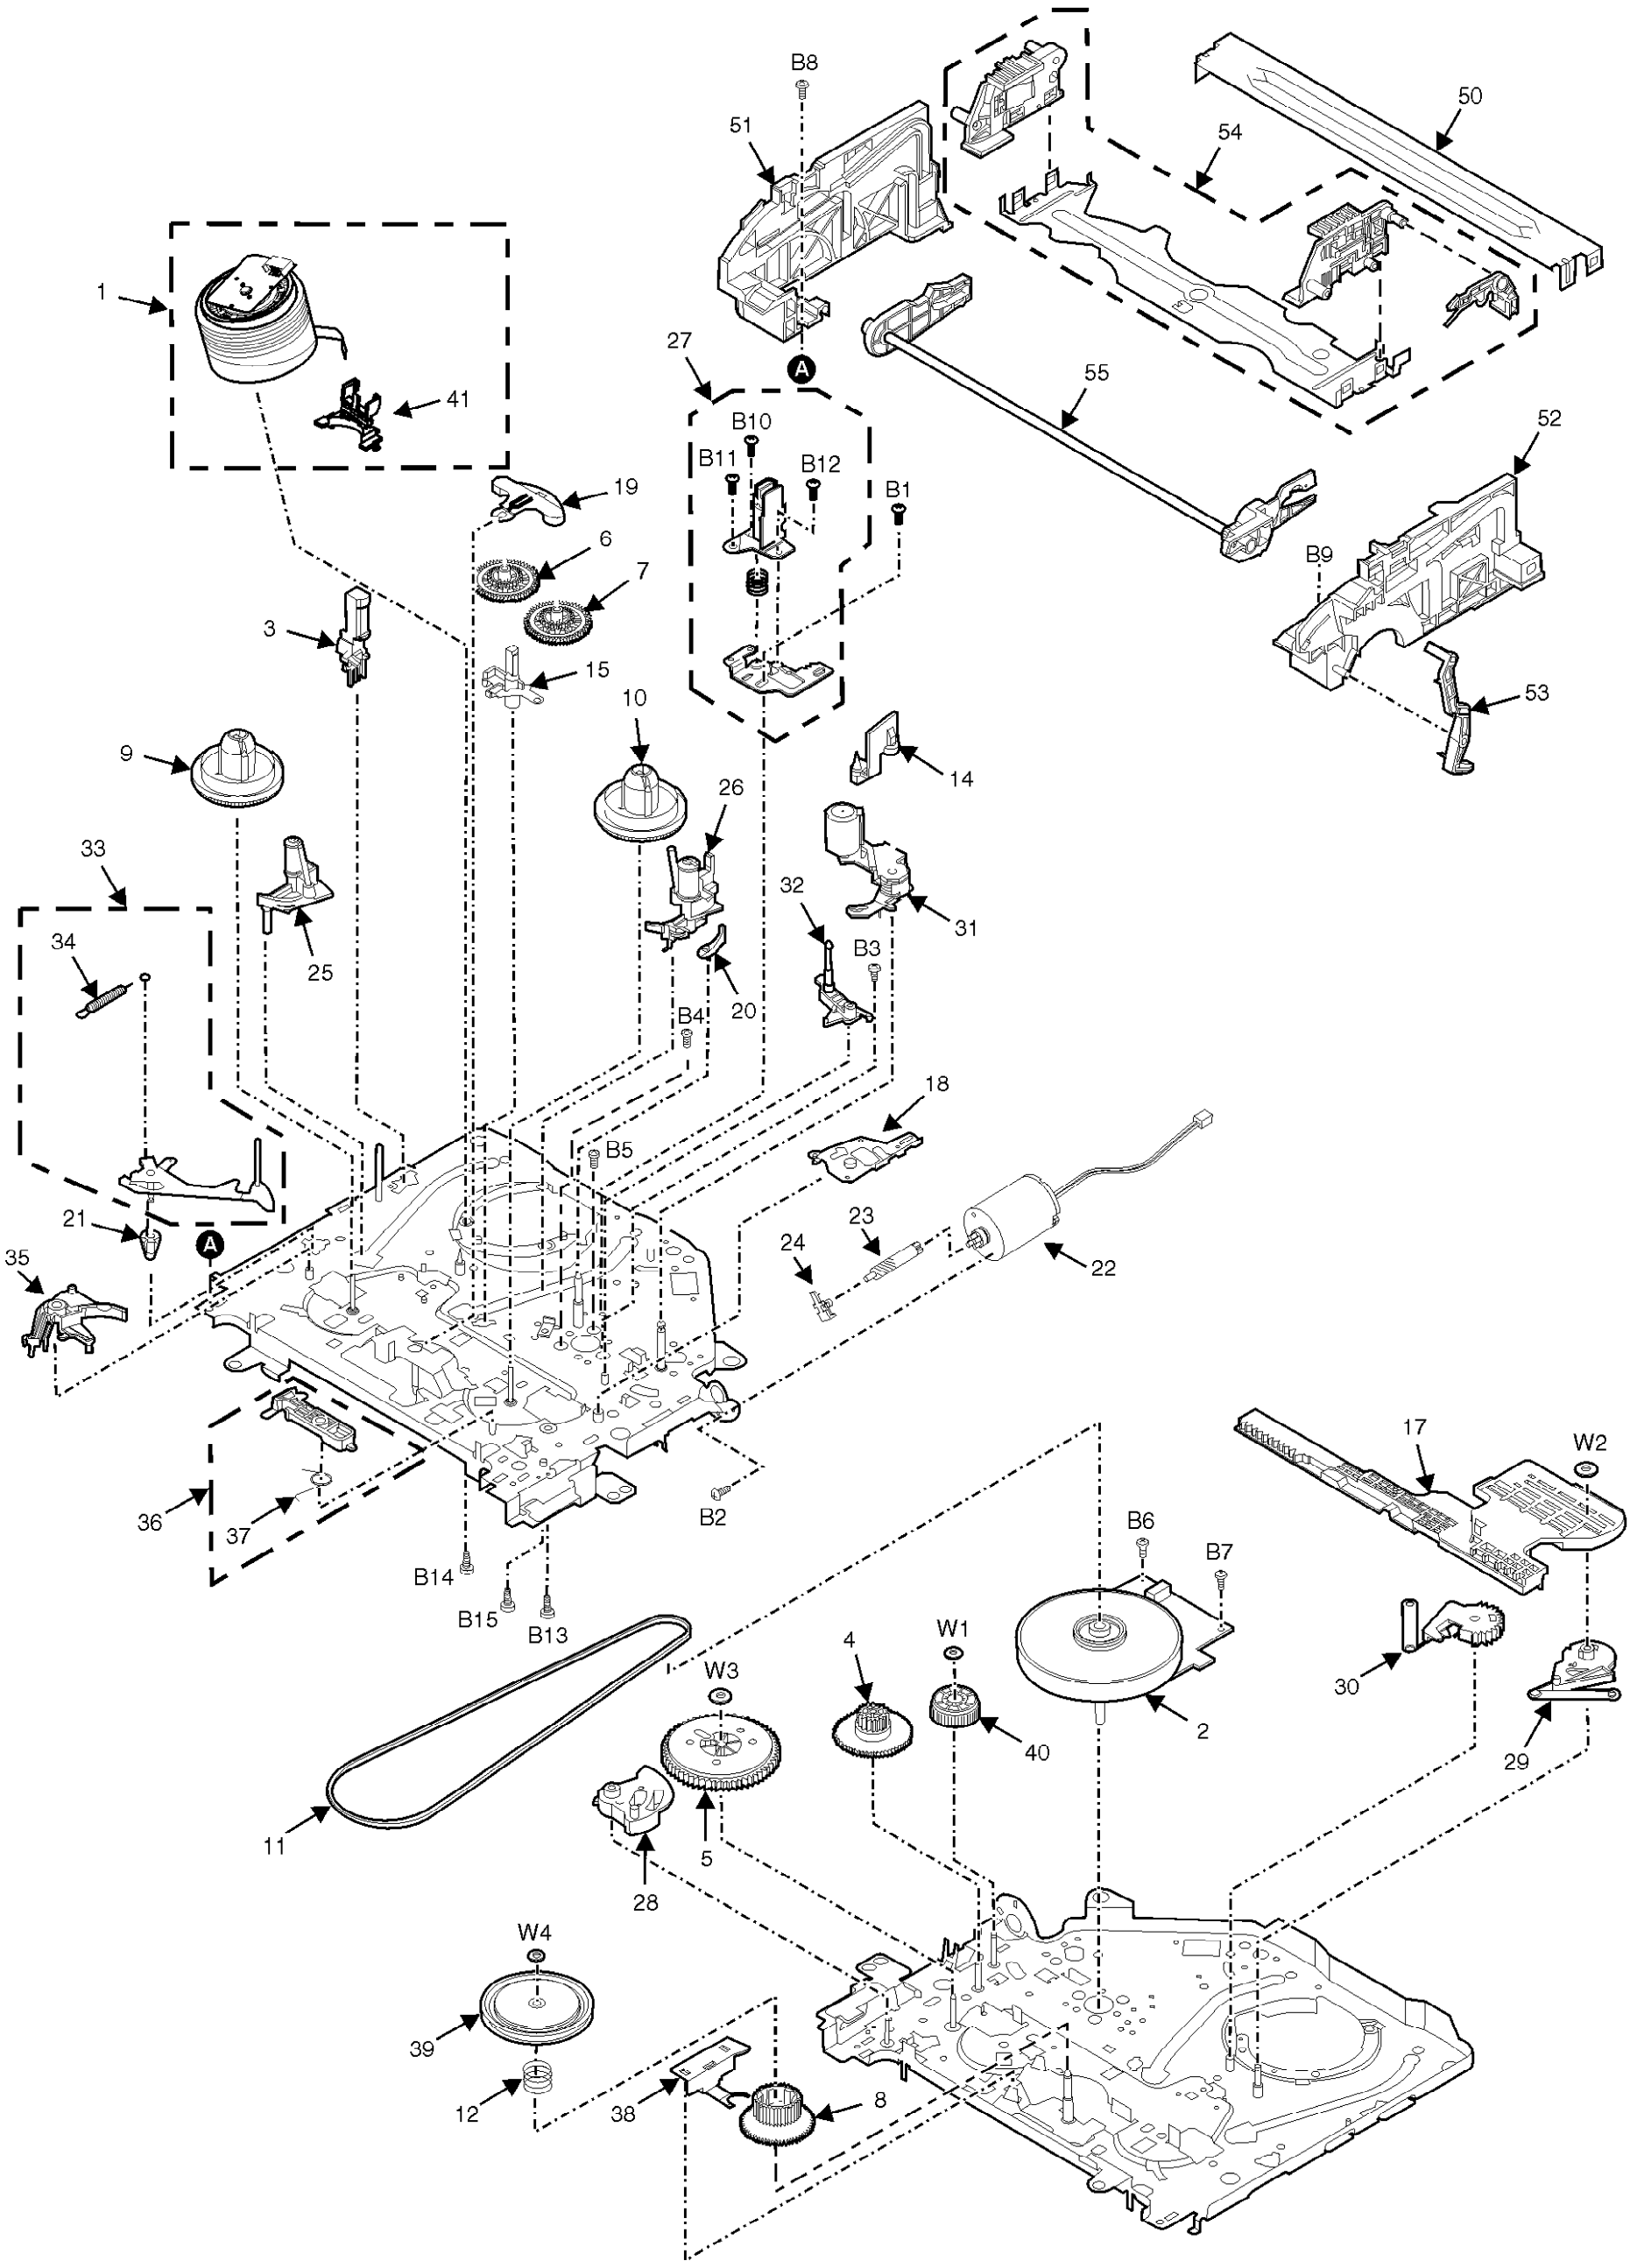
B8
51
50
54
1
41
27
A
55
B10
B11
B12
B1
19
6
7
52
B9
3
15
10
53
9
14
26
33
32
31
34
B3
25
20
B4
18
B5
21
A
23
35
24
22
17
W2
36
37
B2
B6
B7
B14
B15
B13
W1
4
W3
30
40
2
29
11
5
28
W4
39
12
38
8

20.2. DVD CHASSIS PARTS SECTION

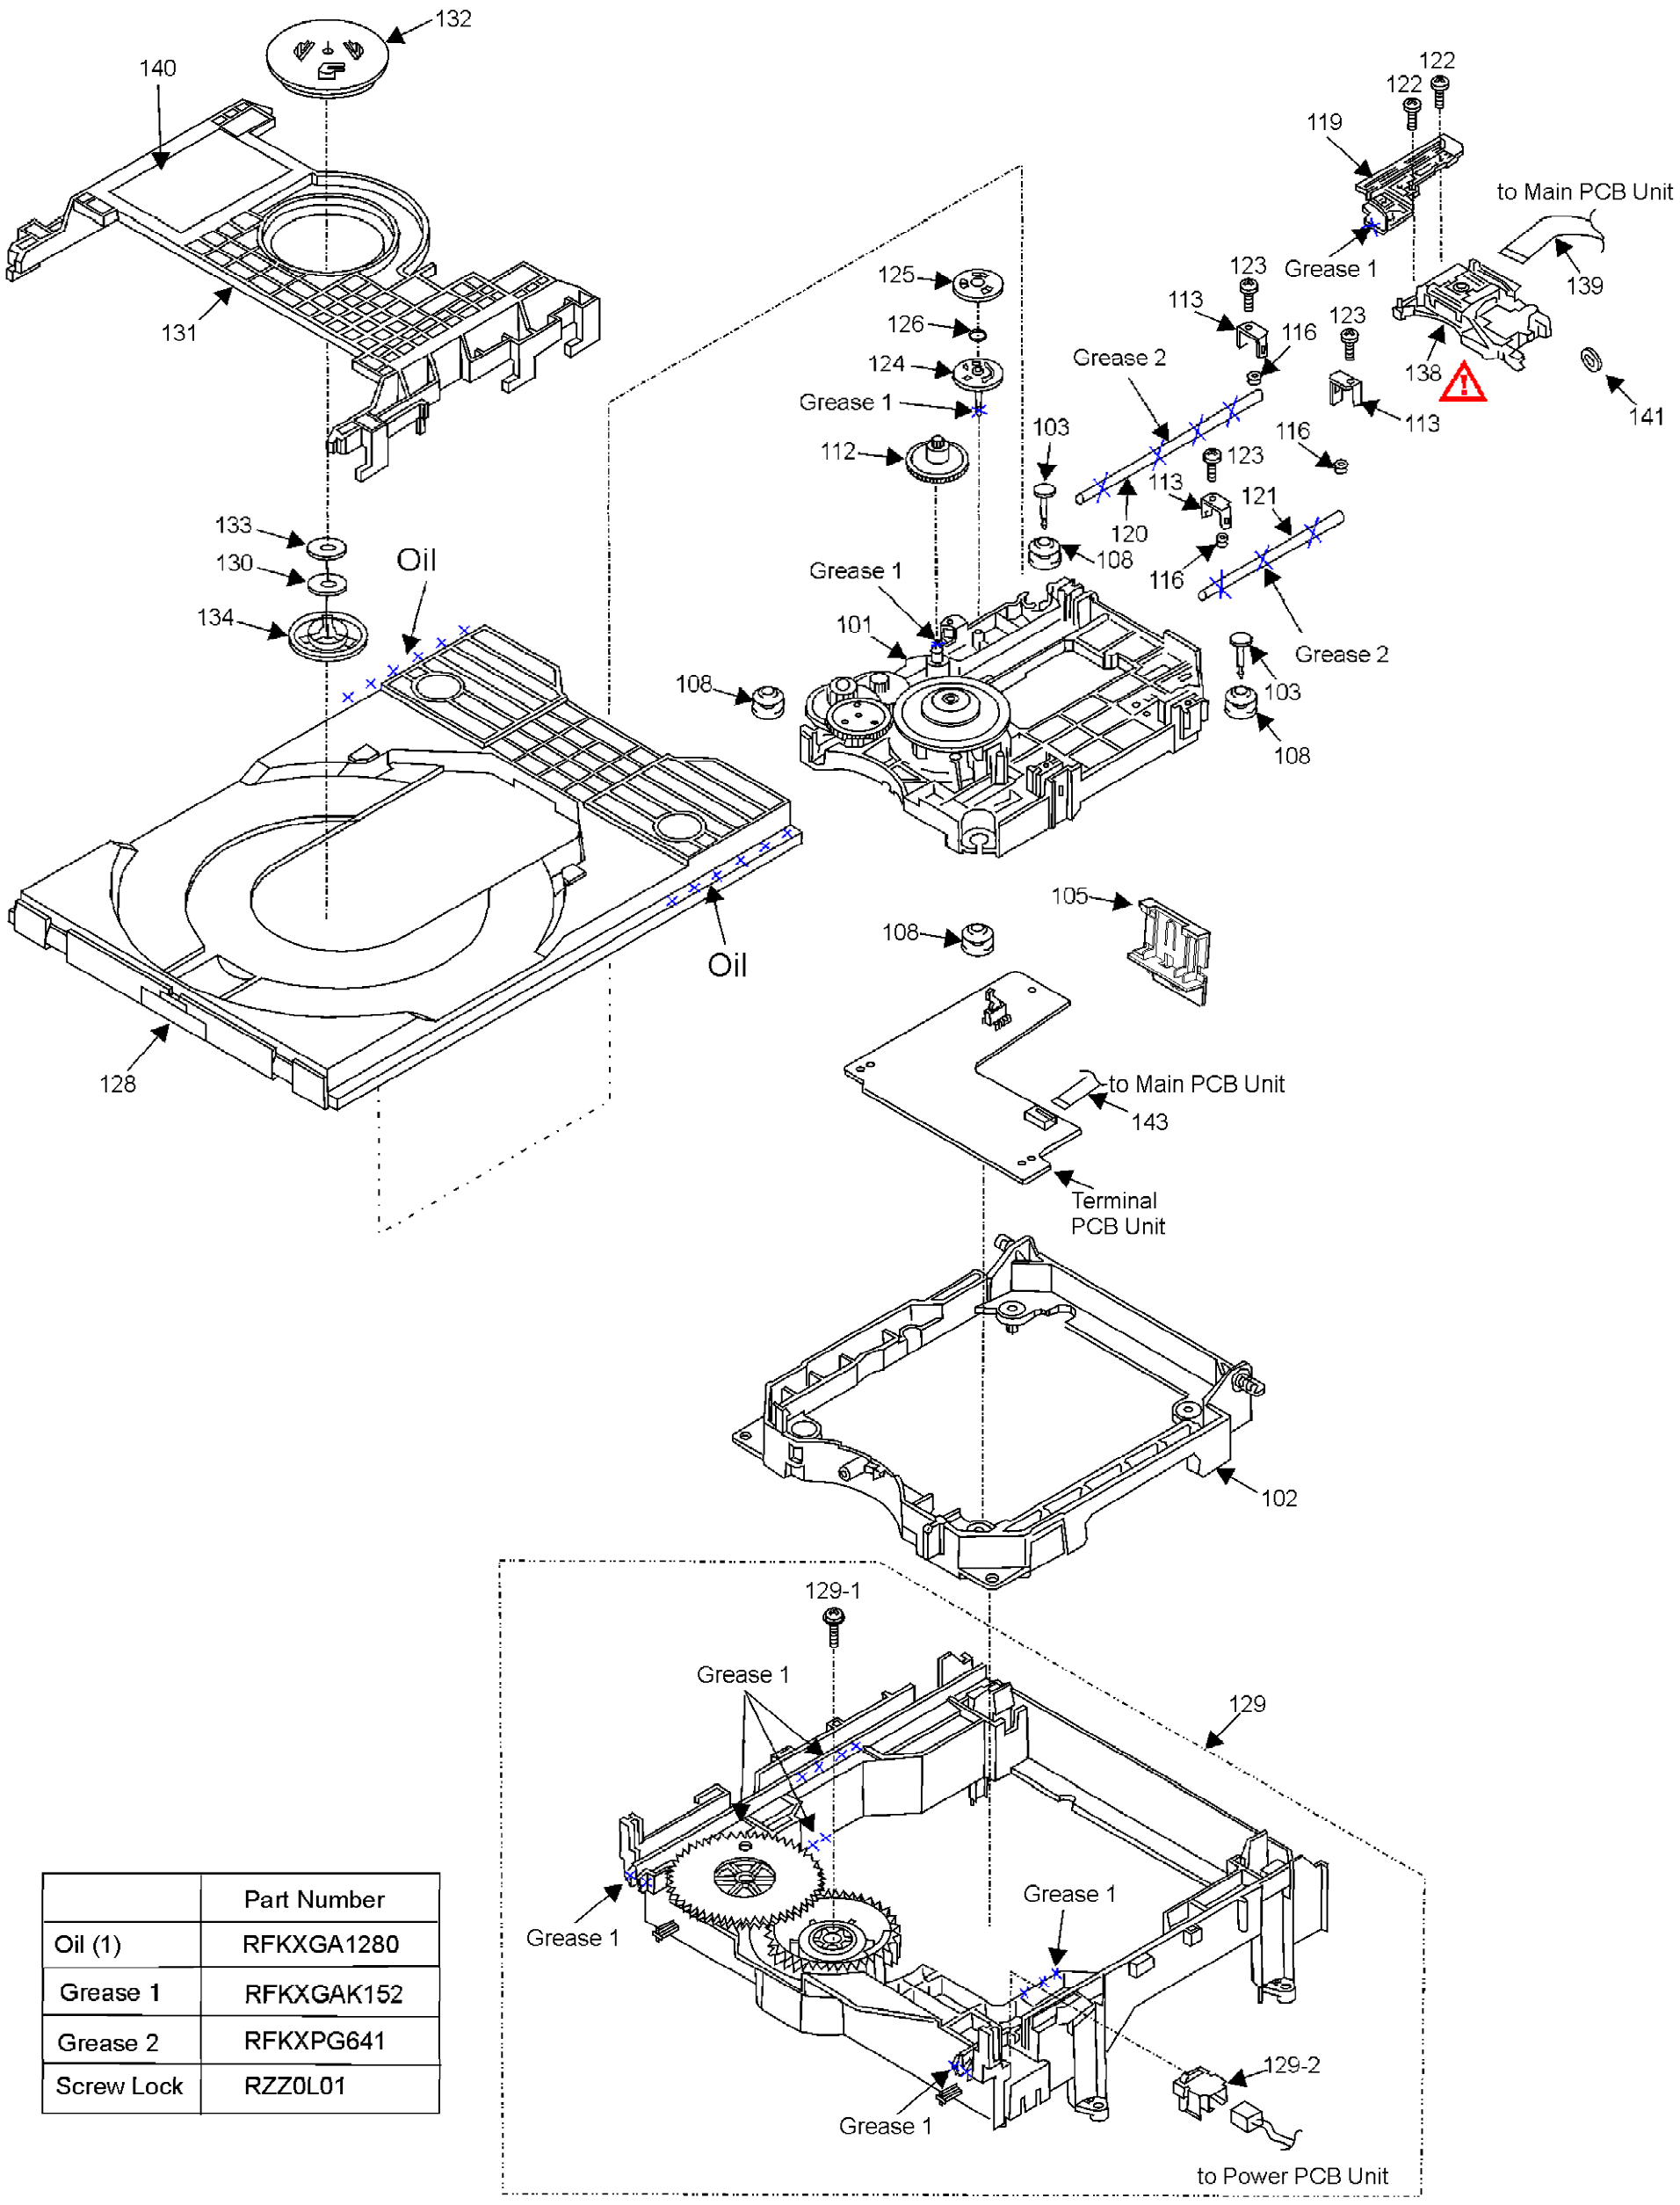
132
140
131
122
122
119
to Main PCB Unit
123
Grease 1
139
125
126
124
Grease 1
112
113
116
123
Grease 2
138
141
113
103
123
116
113
120
108
121
116
133
130
Oil
134
Grease 1
101
Grease 2
108
103
108
108
Oil
128
105
108
to Main PCB Unit
143
Terminal
PCB Unit
102
129-1
Grease 1
129
Grease 1
Grease 1
129-2
Grease 1
to Power PCB Unit

	Part Number
Oil (1)	RFKXGA1280
Grease 1	RFKXGAK152
Grease 2	RFKXPG641
Screw Lock	RZZ0L01

20.3. CASING PARTS SECTION

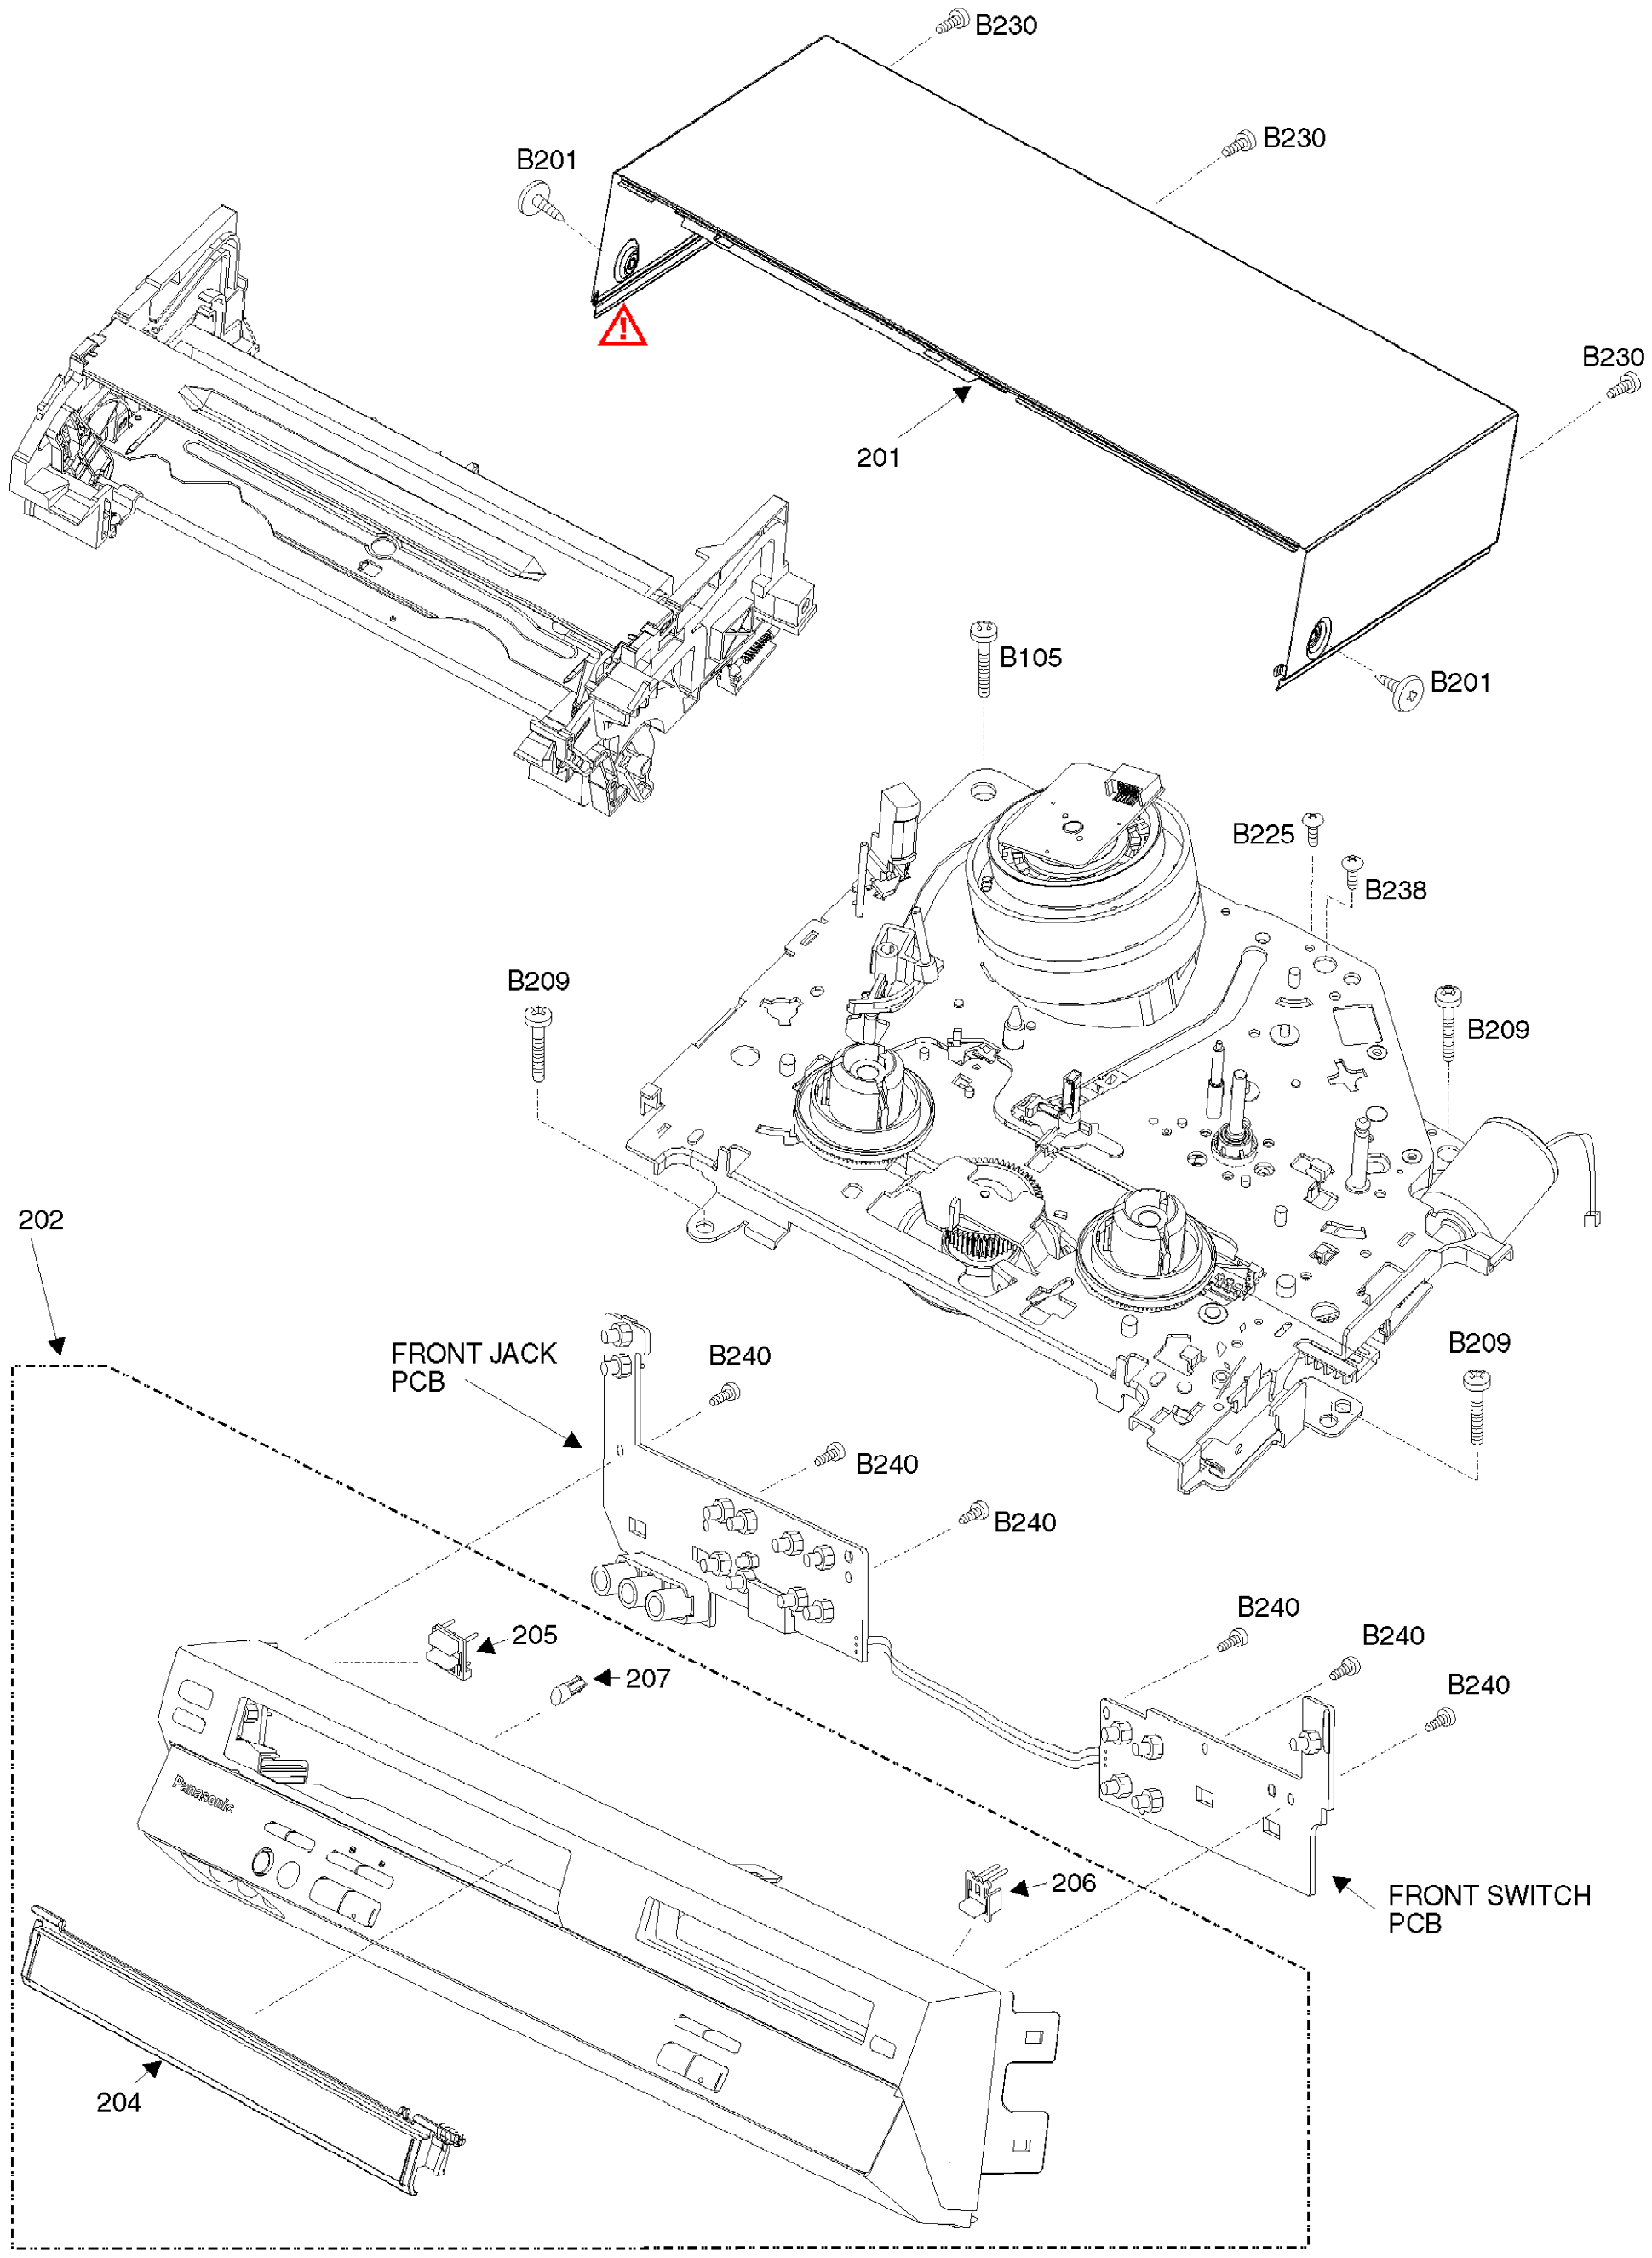
B230
B230
B201
B230
201
B105
B201
B225
B238
B209
B209
202
FRONT JACK PCB
B240
B240
B240
B209
B240
B240
B240
205
207
206
FRONT SWITCH PCB
204
Panasonic

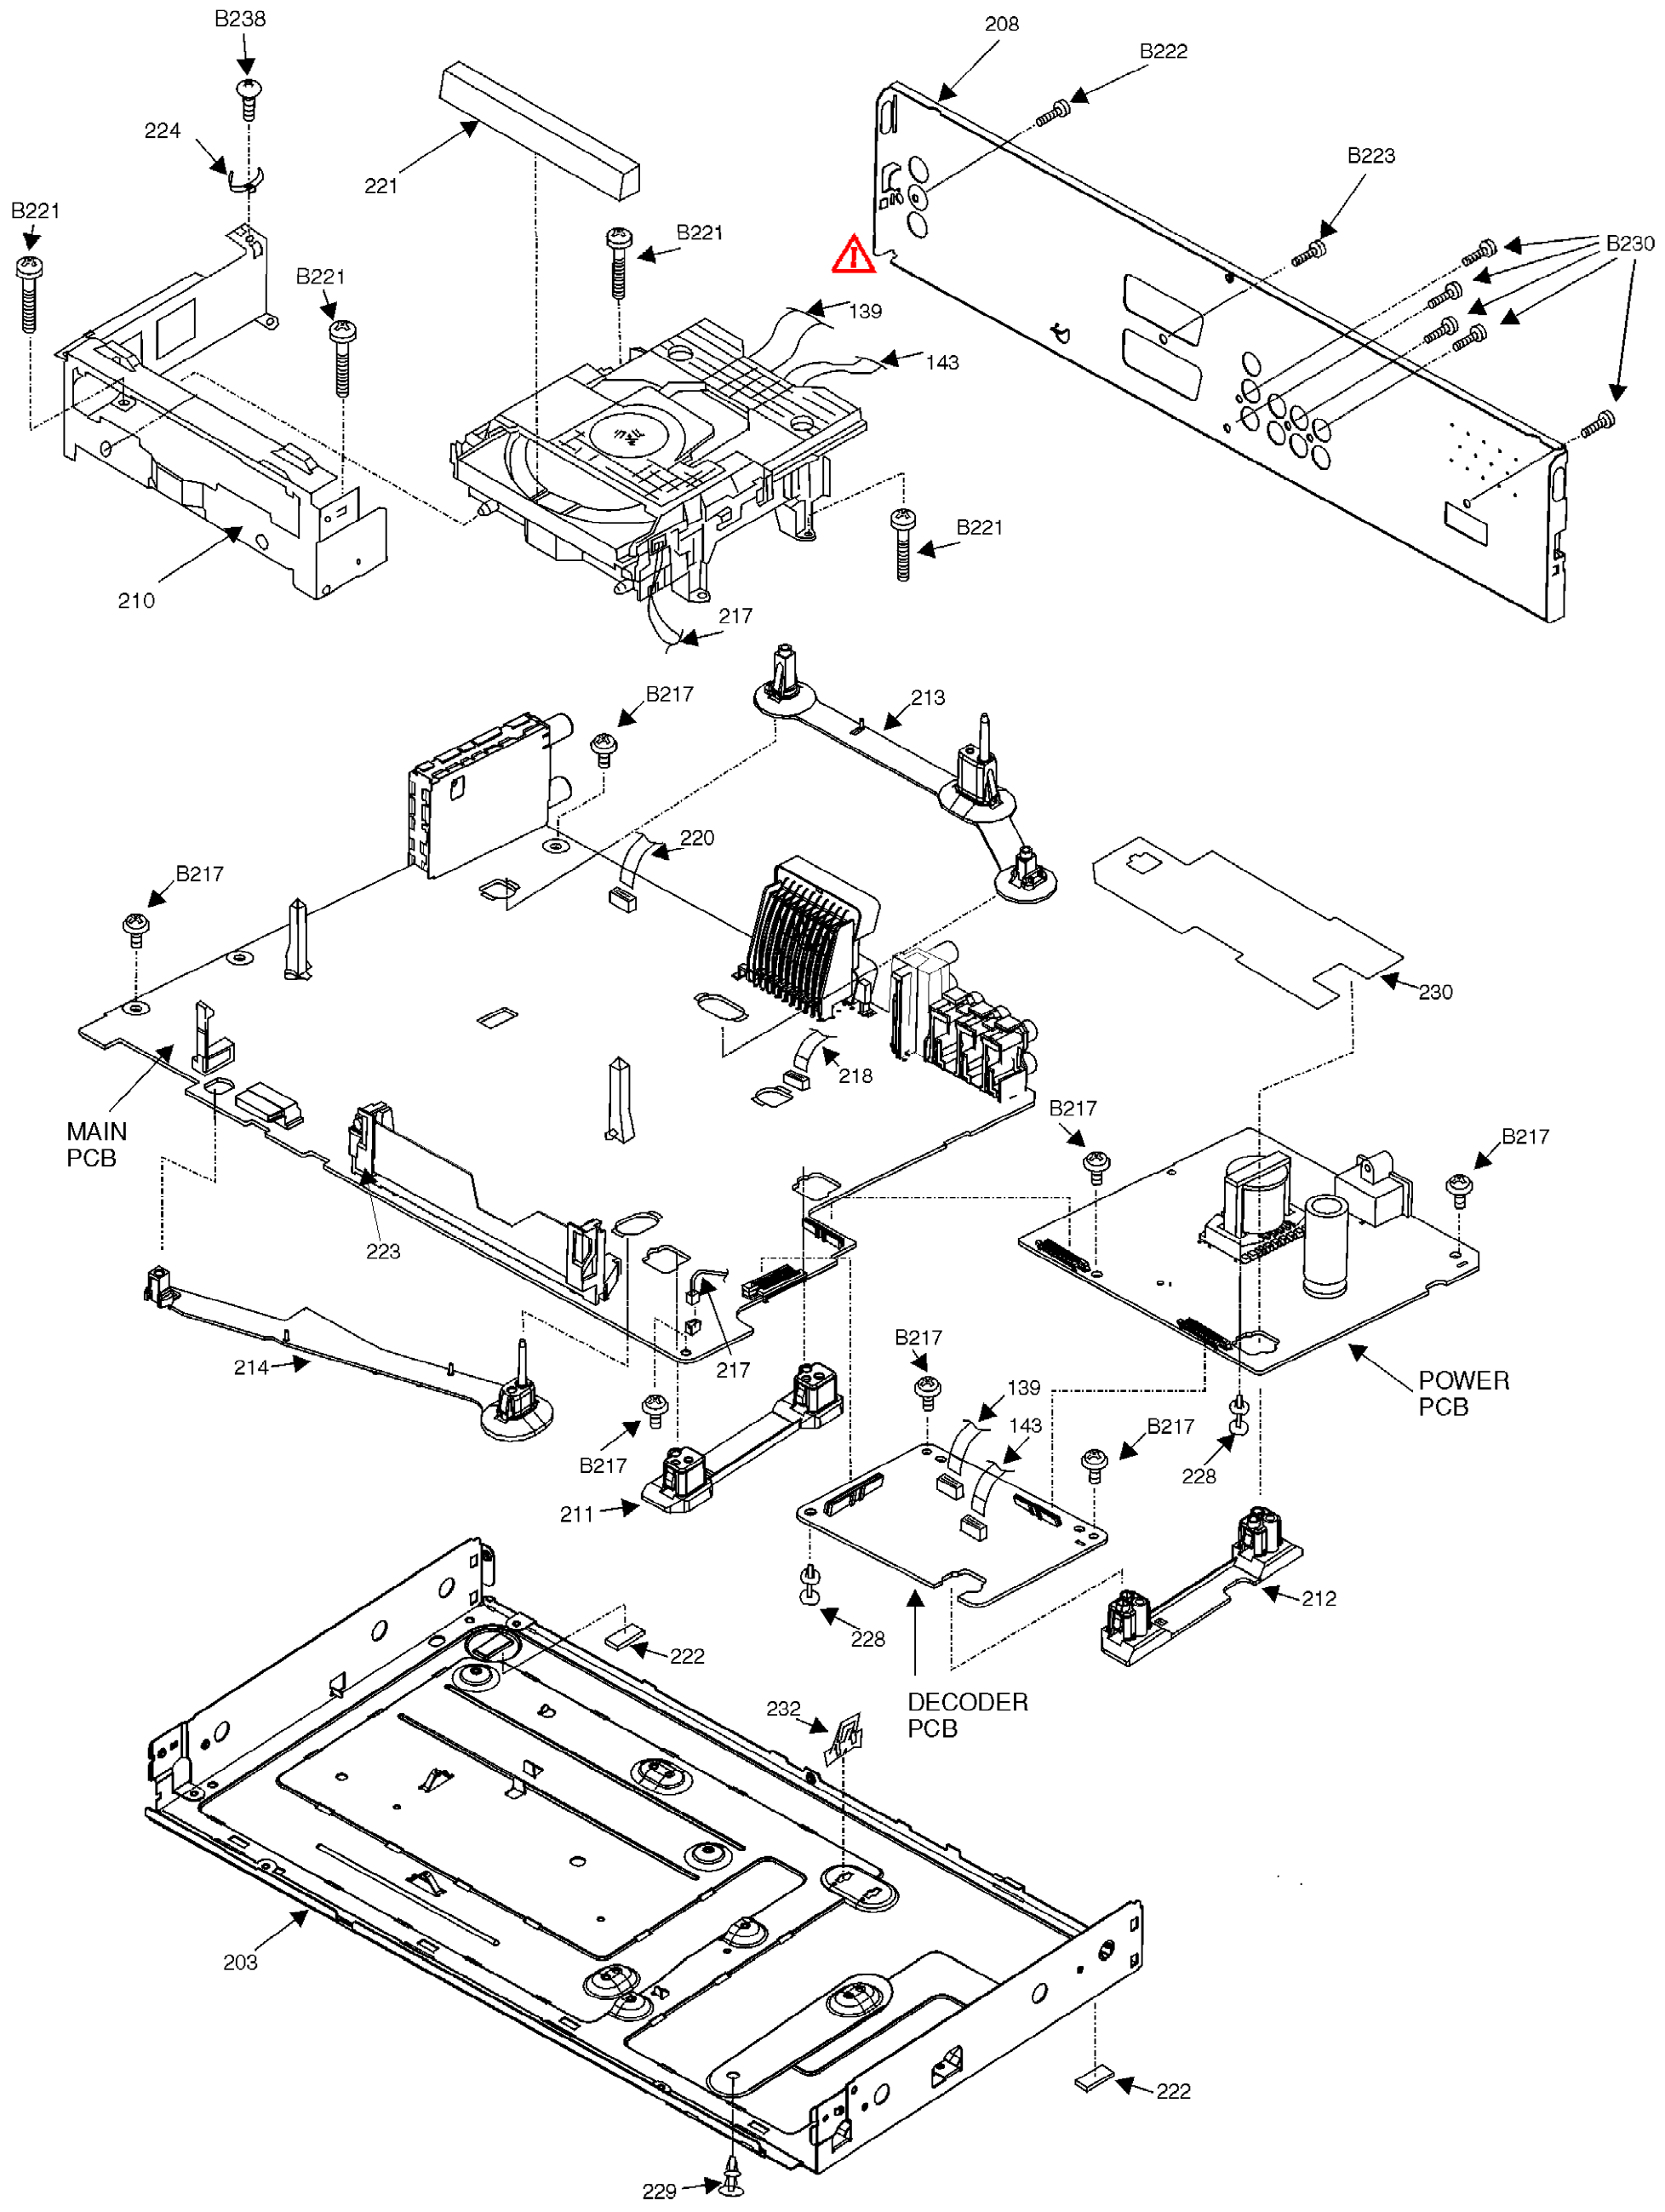
B238
208
B222
224
221
B221
B223
B230
B221
B221
139
143
210
B221
217
B217
213
220
B217
230
218
MAIN PCB
B217
B217
223
217
B217
139
143
B217
228
POWER PCB
214
B217
211
228
212
222
232
DECODER PCB
203
222
229

20.4. PACKING PARTS SECTION

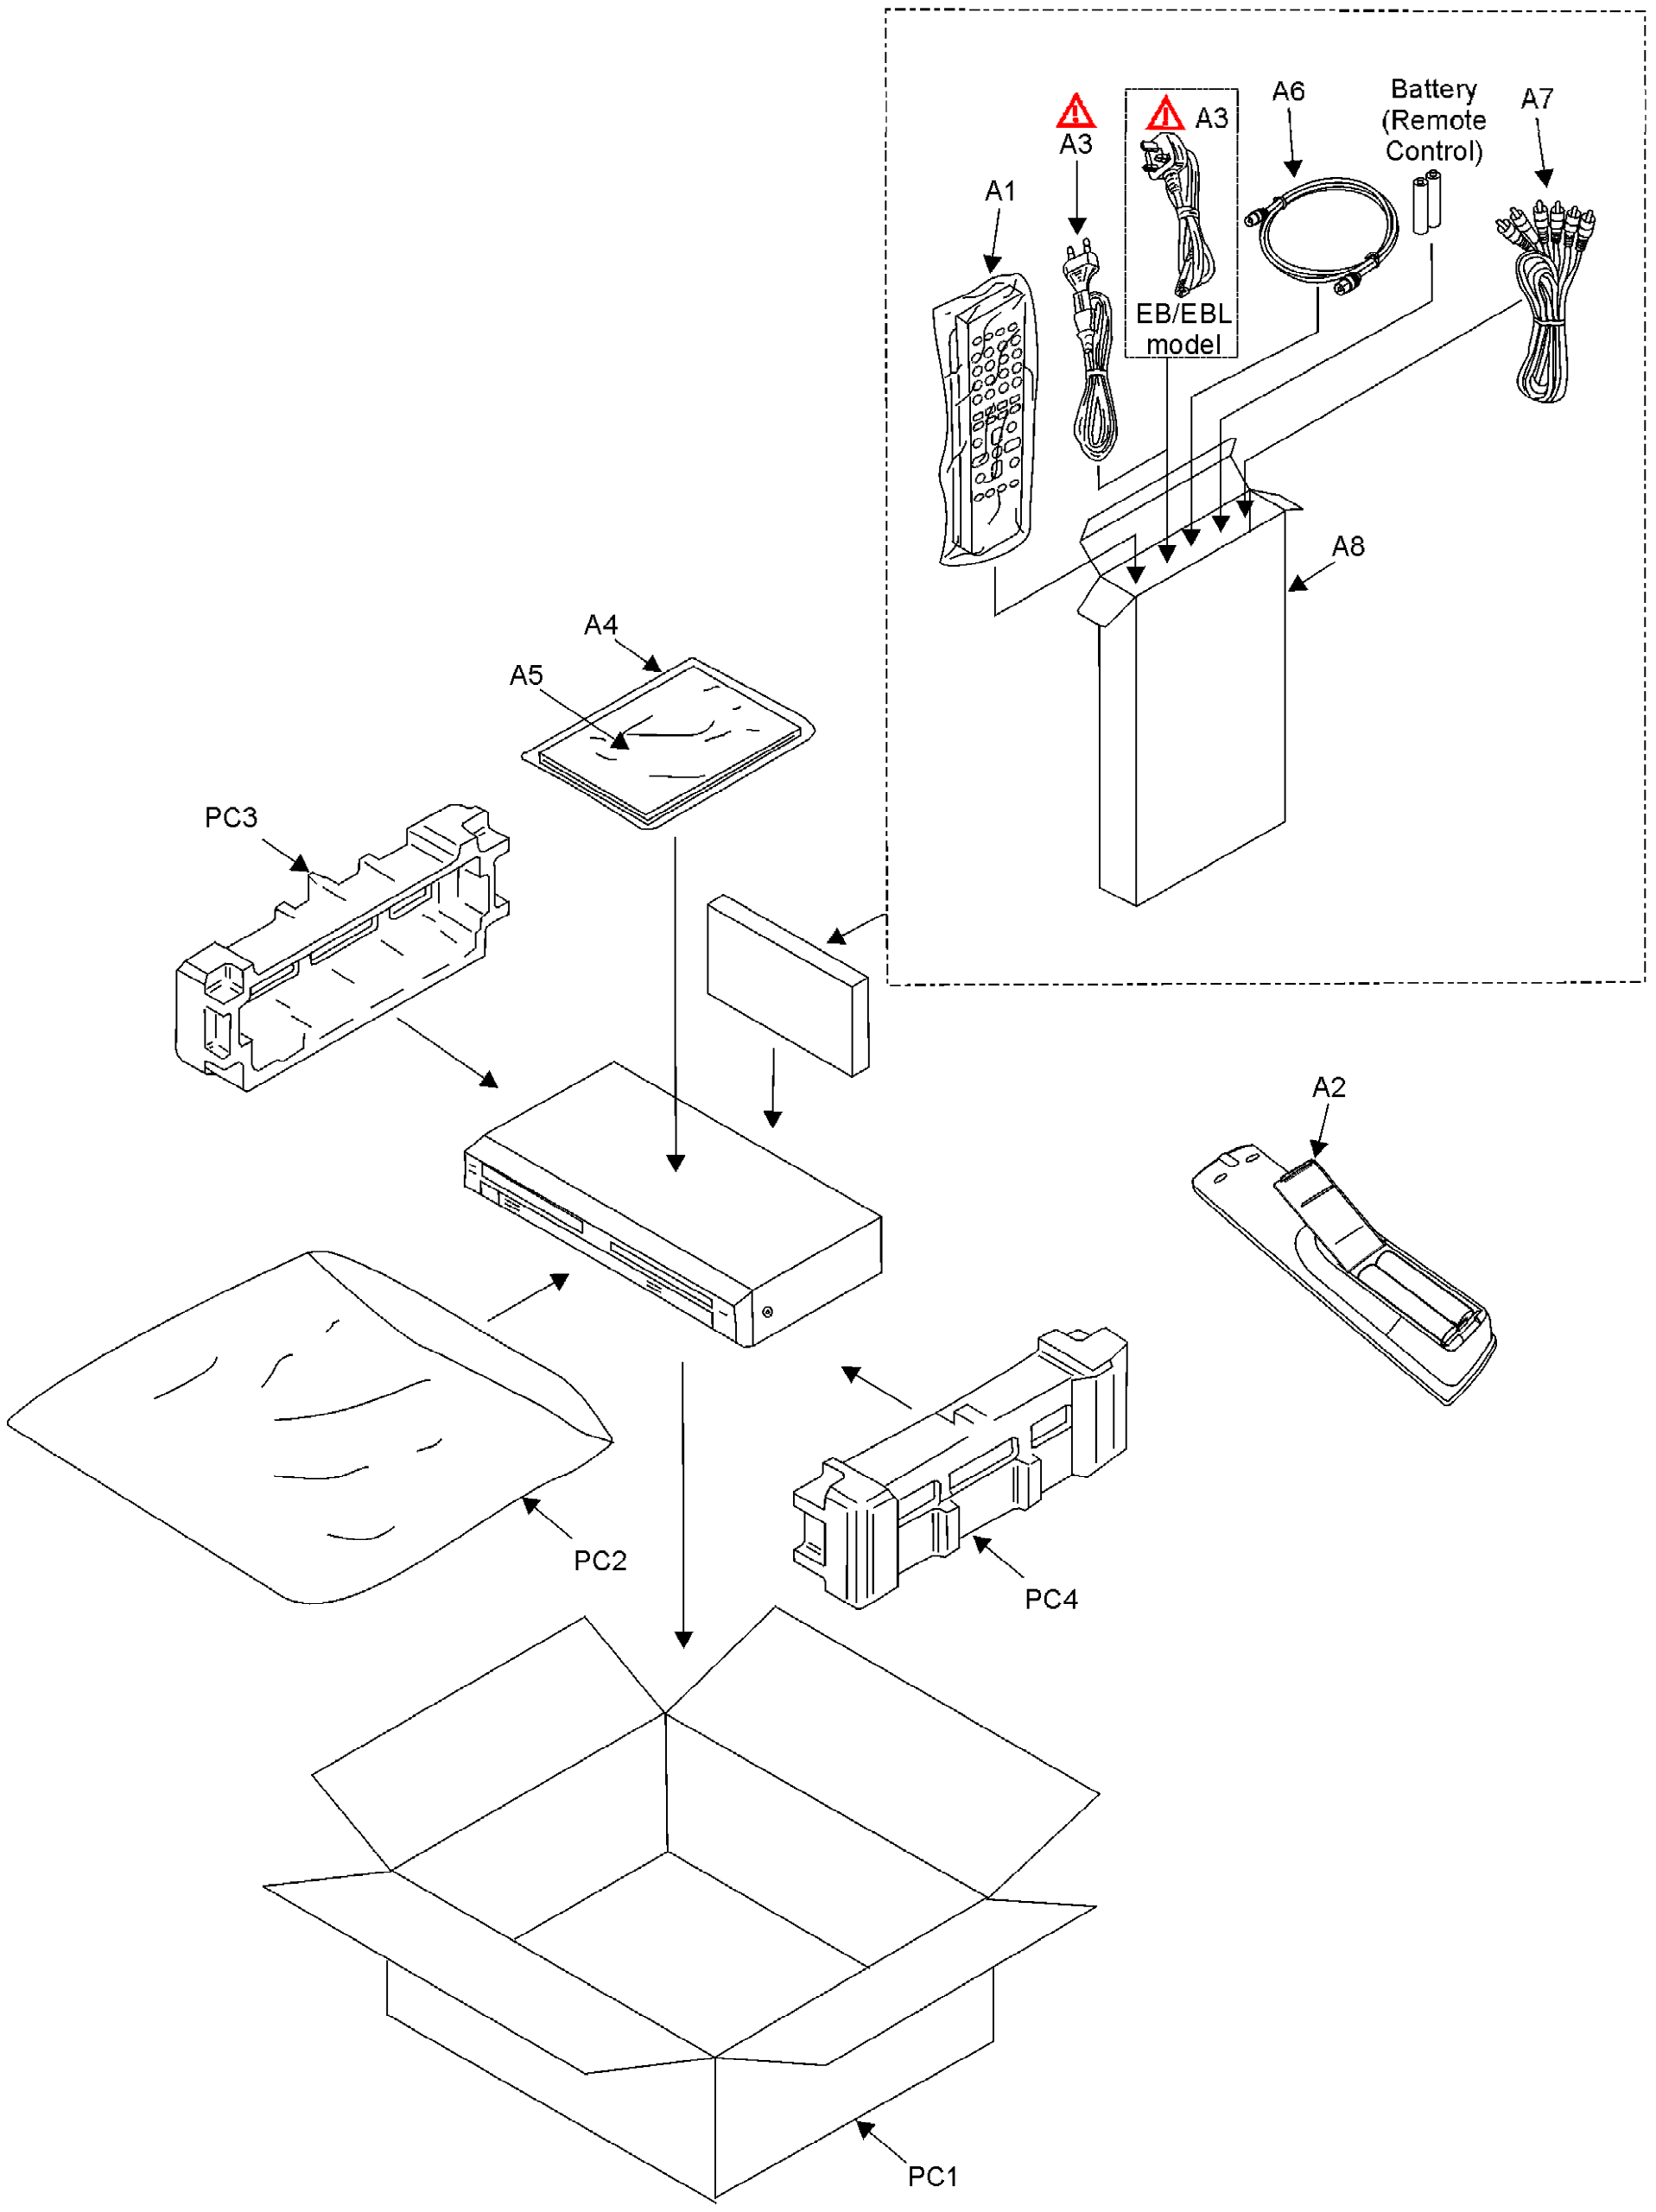
A3
A3
A6
Battery
(Remote
Control)
A7
A1
EB/EBL
model
A8
A4
A5
PC3
A2
PC2
PC4
PC1

21. REPLACEMENT PARTS LIST

Notes:

***Important safety notice:**

Components identified by ⚠; mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fireretardant (resistors), high-quality sound (capacitors), lownoise (resistors), etc. are used.

When replacing any of components, be sure to use only manufactures specified parts shown in the parts list.
Do not use any part number shown on the Schematic Diagramm for ordering. When you order a part,
please refer only to the PARTS LIST.
***Warning:**
This product uses a laser diode.
Refer to caution statements.
***The marking (RTL) indicates the retention time is limited for this item. After the discontinuation of this assembly in production, it will no longer be available.**
***PCB's are identified by " ■ " character.**

Note: The *1, *2, *3, *4, *5, *6, *7, *8, *9, *10, *11, *12 in the Remarks column shows the models as follows:

***1 = NV-VP33EP-S**
***2 = NV-VP33EG-S**
***3 = NV-VP33EG-K**
***4 = NV-VP33EC-S**
***5 = NV-VP33EC-K**
***6 = NV-VP33EB-S**
***7 = NV-VP33EBL-S**
***8 = NV-VP28EC-S**
***9 = NV-VP28EG-S**
***10 = NV-VP23EP-S**
***11 = NV-VP23EC-S**
***12 = NV-VP23EG-S**
No indication = all models

21.1. VIDEO MECHA CHASSIS UNIT

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
1	VEG1642-DKIT	RDD CYLINDER	1	
2	VEM0750	CAPSTAN UNIT	1	
3	L1AZ00000004	FE HEAD UNIT	1	
4	VDG1510	INTERMEDIATE GEAR	1	
5	VDG1511-4	MAIN CAM GEAR	1	
6	VDG1512	IDLER GEAR	1	
7	VDG1512	IDLER GEAR	1	
8	VDG1514-1	CHANGE GEAR	1	
9	VDR0372	REEL TABLE	1	
10	VDR0372	REEL TABLE	1	
11	VDV0391-2	CAPSTAN BELT	1	
12	VMB3550	CHANGE GEAR SPRING	1	
14	VMD4252	OPENER PIECE	1	⚠
15	VMD4253	LED PRISM	1	
17	VML3624-1	MAIN LEVER	1	
18	VML3626-1	PINCH CHARGE ARM	1	
19	VML3632	IDLER ARM	1	
20	VMX3092	P4 CAP	1	
21	VDB1431	TENSION ARM BOSH	1	
22	VEM0796	LOADING MOTOR UNIT	1	
23	VDG1637	WORM GEAR	1	
24	VMD4987	WORM BEARING	1	
25	VXA7105-2	SUPPLY SHAFT HOLDER UNIT	1	
26	VXA7106-2	TAKE UP SHAFT HOLDER UNIT	1	
27	L1AE00000036	AC HEAD UNIT	1	
28	VXA7311	SECTOR GEAR UNIT	1	
29	VXL3107	SUPPLY LOADING ARM UNIT	1	
30	VXL3108	TAKE UP LOADING ARM UNIT	1	
31	VXL3109-4	PINCH ARM UNIT	1	
32	VXL3110	P5 ARM UNIT	1	
33	VXL3111-1	TENSION ARM UNIT	1	
34	VMB3547-3	TENSION SPRING	1	
35	VXL3112	SUPPLY BRAKE ARM UNIT	1	
36	VXL3113	TAKE UP BRAKE ARM UNIT	1	
37	VMB3548-2	TAKE UP BRAKE SPRING	1	
38	VXL3124-2	CHANGE LEVER UNIT	1	
39	VXP2133-1	CENTRE CLUTCH UNIT	1	
40	VXP2168	TORQUE CLUTCH UNIT	1	
41	VMD4983	FPC HOLDER	1	
50	VMA0L25	TOP PLATE	1	
51	VMD4255-4	SIDE PLATE (L)	1	
52	VMD4254-4	SIDE PLATE (R) UNIT	1	
53	VML3706-1	OPENER LEVER	1	
54	VXA7110-3	CASSETTE HOLDER UNIT	1	
55	VXL3160	MAIN SHAFT UNIT	1	
B1	VHD1044	SCREW	1	
B2	XSN3+35	SCREW	1	
B3	XTN26+7J	SCREW	1	
B4	XTN26+7J	SCREW	1	
B5	XTN26+7J	SCREW	1	
B6	XTV26+5F	SCREW	1	
B7	XTV26+5F	SCREW	1	
B8	XTV26+8FR	SCREW	1	
B9	XTV26+8FR	SCREW	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
B10	VHD1066	SCREW	1	
B11	VHD1066	SCREW	1	
B12	VHD1185	SCREW	1	
B13	VHD1095	SCREW	1	
B14	VHD1117	SCREW	1	
B15	VHD1117	SCREW	1	
W1	VMX2208	WASHER	1	
W2	VMX3196	WASHER	1	
W3	VMX2699	WASHER	1	
W4	VMX3196	WASHER	1	

21.2. DVD MECHA CHASSIS UNIT

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
101	RXQ1241	TRV MOTOR UNIT	1	
102	RMR1654-K	MIDDLE CHASSIS	1	
103	RMS0712-1	FIXED PIN	2	
105	RMN0771	FFC HOLDER	1	
108	RMG0545-A1	FLOATING RUBBER	4	
112	RDG0499	TRV GEAR(A)	1	
113	RMC0415	ADJUST SP. HOLDER(A)	3	
116	RMEC0320	ADJUST SPRING	3	
119	RMM0260	TRV DRIVE RACK	1	
120	RMSC0710	DRIVE SHAFT	1	
121	RMSC0711	GUIDE SHAFT	1	
122	RHD17045	SCREW	2	
123	VHD1224-C	SCREW	3	
124	RDG0500	TRV GEAR(B)	1	
125	RDG0501	TRV GEAR(C)	1	
126	RMEC0319	TRV GEAR SPRING	1	
128	RGQ0280-K4	TRAY	1	
129	RXQ0748	MECHA CHASSIS UNIT	1	
129-1	XTW3+12S	SCREW	1	
129-2	KDF111E00093	OPEN SW	1	
130	JSMC0048	MAGNET HOLDER	1	
131	RMR1445-K	CLAMP PLATE	1	
132	RMR1447-X	MAGNET HOLDER	1	
133	XWG6FFY	WASHER	1	
134	RMR1446-X	CLAMPER	1	
138	RAF3113A-C	OPU(4.16H)	1	⚠
139	REZ1616-2	INTERFACE FFC 26P	1	
140	RQLCA0141	LASER CAUTION LABEL	1	⚠
141	RMG0561-T	CUSHION RUBBER	1	
143	REZ1615	MOTOR DRIVE FFC	1	

21.3. CASING PARTS

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
201	TOP PANEL VP31ECS	VGM2029-1	1	*1,*2,*4,*6,*7,*8,*9,*10, *11,*12
201	TOP PANEL	VGM2079-1	1	*3,*5
202	FRONT PANEL	RYPD0021A-S	1	*1
202	FRONT PANEL	RYPD0018A-S	1	*2
202	FRONT PANEL	RYPD0018A-K	1	*3
202	FRONT PANEL	RYPD0019A-S	1	*4
202	FRONT PANEL	RYPD0019A-K	1	*5
202	FRONT PANEL	RYPD0020A-S	1	*6,*7
202	FRONT PANEL	RYPD0024A-S	1	*12
202	FRONT PANEL	RYPD0025A-S	1	*11
202	FRONT PANEL	RYPD0027A-S	1	*10
202	FRONT PANEL	RYPD0022A-S	1	*9
202	FRONT PANEL	RYPD0023A-S	1	*8
203	BOTTOM CHASSIS	RMKD0005	1	
204	BLINDER PANEL	RGKD0013-S	1	*1,*2,*4,*6,*7,*8,*9,*10, *11,*12
204	BLINDER PANEL	RGKD0013-K	1	*3,*5
205	POWER BUTTON	RGUD0012-S	1	*1,*2,*4,*6,*7,*8,*9,*10, *11,*12
205	POWER BUTTON	RGUD0012-K	1	*3,*5
206	DVD OC BUTTON	RGUD0013-S	1	*1,*2,*4,*6,*7,*8,*9,*10, *11,*12
206	DVD OC BUTTON	RGUD0013-K	1	*3,*5
207	TIMER REC. CAP	RGZD0001-Q	1	
208	REAR PANEL	RGRD0007A-A	1	*1,*2,*3,*4,*5
208	REAR PANEL	RGRD0007A-B	1	*6,*7
208	REAR PANEL	RGRD0007A-D	1	*10,*11, *12
208	REAR PANEL	RGRD0007A-C	1	*8,*9
210	FRONT ANGLE	VMP7683	1	
211	DVD SPACER(L)	RMRD0002	1	
212	DVD SPACER (R)	RMRD0001	1	
213	MECHA SPACER(R)	VMX3229	1	
214	MECHA SPACER(F)	VMX3398	1	
217	WIRE CABLE 2PIN	REXD0001	1	
218	FFC (7P) (CYLINDER)	REZD0012	1	
220	FFC (6P AC-HEAD)	REZD0016	1	
221	TRAY ORNAMENT	RGKD0012-S	1	*1,*2,*4,*6,*7,*8,*9,*10, *11,*12
221	TRAY ORNAMENT	RGKD0012-K	1	*3,*5
222	FOOT	VKA0364	2	
223	FL HOLDER	RMND0005	1	
224	EARTH SPRING (T)	VMC1534	2	
228	PCB SUPPORT (POW)	RMXD0005	1	
229	PCB SPACER (MDL)	RMXD0004	1	
230	BARRIER(U)	RMZD0002	1	
232	PCB SPACER (POW)	RMXD0003	1	
B105	SCREW(R4MECH L)	VHD1452-2	1	
B201	SCREW	VHD1094	2	*1,*2,*4,*6,*7,*8,*9,*10, *11,*12
B201	SCREW	VHD1041-1	2	*3,*5
B209	SCREW(R4MECH S)	VHD1453-2	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
B217	SCREW (DECODER)	RHD30090-1	7	
B221	SCREW (DVD)	VHD1770	4	
B222	SCREW (TUNER)	XSN3+4FJK	1	
B223	SCREW (SCART)	XTB4+10GFJK	1	
B225	SCREW	XTV26+6FFJ	1	
B230	SCREW	VHD0690-1	5	
B230	SCREW	VHD0690-1	3	
B238	SCREW (MECHA)	XTW3+10PN	1	
B239	SCREW (SPRING)	XTV26+6FFJ	1	
B240	SCREW (FRONT PCB)	RHD26046	6	

21.4. PACKING PARTS

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
PC1	PACKING CASE	RPGD0022-1	1	*1,*2,*4,*6,*7,*8,*9,*10,*11,*12
PC1	PACKING CASE	RPGD0023-1	1	*3,*5
PC2	MIRAMAT BAG	RPFD0004	1	
PC3	CUSHION L	RPND0007A	1	
PC4	CUSHION R	RPND0007B	1	
A1	REMOTE	EUR7720X50	1	*1,*2,*3,*4,*5,*8,*9
A1	REMOTE	EUR7720X60	1	*6,*7
A1	REMOTE	EUR7720X70	1	*10,*11,*12
A2	BATTERY COVER	UR77EC2003	1	
A3	POWERCORD	RJA0043-1C	1	⚠ *1,*2,*3,*4,*5,*8,*9,*10,*11,*12
A3	POWERCORD	RJA0044-3C	1	⚠ *6,*7
A4	PE-BAG	RPFD0001	1	*1,*2,*3,*4,*5,*8,*9,*10,*11,*12
A4	PAPER BAG	RPFD0003	1	*6,*7
A5	O/I BOOK ENG CONT	RQTD0138-A	1	*1,*2,*3,*4,*5,*8,*9,*10,*11,*12
A5	O/I BOOK RUS	RQTD0145-R	1	*1,*10
A5	O/I BOOK POL	RQTD0146-Q	1	*1,*10
A5	O/I BOOK CZE	RQTD0147-S	1	*1,*10
A5	O/I BOOK HUN	RQTD0148-T	1	*1,*10
A5	O/I BOOK GER	RQTD0134-D	1	*2,*3,*4,*5,*8,*9,*11,*12
A5	O/I BOOK ITA	RQTD0135-V	1	*2,*3,*4,*5,*8,*9,*11,*12
A5	O/I BOOK DUT	RQTD0136-H	1	*2,*3,*4,*5,*8,*9,*11,*12
A5	O/I BOOK FRE PAL	RQTD0137-C	1	*4,*5,*8,*11
A5	O/I BOOK SPA	RQTD0139-M	1	*4,*5,*8,*11
A5	O/I BOOK POR	RQTD0140-U	1	*4,*5,*8,*11
A5	O/I BOOK ENG CONT	RQTD0138-A	1	*1,*2,*3,*4,*5,*8,*9,*10,*11,*12
A5	O/I BOOK FIN	RQTD0141-K	1	*4,*5,*8,*11
A5	O/I BOOK SWE	RQTD0142-Z	1	*4,*5,*8,*11
A5	O/I BOOK DAN	RQTD0143-J	1	*4,*5,*8,*11
A5	O/I BOOK ENG UK	RQTD0144-B	1	*6,*7
A6	RF CABLE	K1TWACC00001	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
A7	AV CORD	K2KA6CA00001	1	*1,*2,*3,*4,*5,*8,*9,*10, *11,*12
A8	ACC.BOX	VPK2246	1	

21.5. PRINTED CIRCUIT BOARD

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
■	MAIN PCB	REPD0010A	1	(RTL) *2,*3,*9
■	MAIN PCB	REPD0024A	1	(RTL) *2,*3,*9
■	MAIN PCB	REPD0010B	1	(RTL) *4,*5,*8
■	MAIN PCB	REPD0024B	1	(RTL) *4,*5,*8
■	MAIN PCB	REPD0010C	1	(RTL) *6
■	MAIN PCB	REPD0024C	1	(RTL) *6
■	MAIN PCB	REPD0010D	1	(RTL) *7
■	MAIN PCB	REPD0024D	1	(RTL) *7
■	MAIN PCB	REPD0010E	1	(RTL) *1
■	MAIN PCB	REPD0024E	1	(RTL) *1
■	MAIN PCB	REPD0010F	1	(RTL) *12
■	MAIN PCB	REPD0010G	1	(RTL) *11
■	MAIN PCB	REPD0010J	1	(RTL) *10
■	DECODER PCB	REPD0011A	1	(RTL)
■	POWER PCB	REPD0012A	1	(RTL)
■	FRONT SWITCH PCB	REPD0013A	1	(RTL)
■	FRONT JACK PCB	REPD0014A	1	(RTL)
TU7601	TUNER	ENGF7501GF	1	*2,*3,*4,*5,*8,*9,*11,*12
TU7601	TUNER	ENGF7502GF	1	*1,*10
TU7601	TUNER	ENG57D02G1F	1	*6
TU7601	TUNER	ENG57D03G1F	1	*7
■	TERMINAL PCB	REP3606A-C	1	(RTL)

21.6. ELECTRICAL PARTS

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C1001	CHIP CAPACITOR	F1H1H1030007	1	
C1003	CHIP CAPACITOR	F1H1H1030007	1	
C1004	ALU ELEC CAPACITOR	ECEA1CKA470B	1	
C1005	ALU ELEC CAPACITOR	ECEA1CKA470B	1	
C1107	ALU ELEC CAPACITOR	F2A1V3300027	1	
C1108	CHIP CAPACITOR	F1H1A2240004	1	
C1109	CHIP CAPACITOR	F1H1H1030006	1	
C1112	CAPACITOR	F0C2G473A022	1	
C1121	CERAMIC CAPACITOR	F1BAF101A013	1	
C1122	CERAMIC CAPACITOR	ECKWNA102MEV	1	⚠
C1123	CERAMIC CAPACITOR	F1BAF101A013	1	⚠
C1124	CERAMIC CAPACITOR	F1BAF101A013	1	⚠
C1125	X2 CAPACITOR	ECQU2A683MVA	1	⚠
C1126	X2 CAPACITOR	ECQU2A683MVA	1	⚠
C1142	ALU ELEC CAPACITOR	EEUEB2G330E	1	
C1200	CHIP CAPACITOR	F1H1C104A008	1	
C1220	CAPACITOR	EEUFM1A471B	1	
C1221	ALU ELEC CAPACITOR	ECA1AHG221B	1	
C1230	CAPACITOR	EEUFM1H220B	1	
C1240	CAPACITOR	EEUFM1A681B	1	
C1241	ALU ELEC CAPACITOR	ECA1AHG221B	1	
C1250	CAPACITOR	EEUFM1E471B	1	
C1251	ALU ELEC CAPACITOR	ECA1EHG101B	1	
C1260	CAPACITOR	EEUFM1A122B	1	
C1261	ALU ELEC CAPACITOR	F2A1A2210012	1	
C1270	CAPACITOR	EEUFM1H220B	1	
C1280	CAPACITOR	EEUFM1A471B	1	
C1290	ALU ELEC CAPACITOR	EEUFM1E221B	1	
C1291	ALU ELEC CAPACITOR	ECA1EHG101B	1	
C1320	ALU ELEC CAPACITOR	ECEA0JKA221B	1	
C1321	CHIP CAPACITOR	F1H1C104A008	1	
C1340	ALU ELEC CAPACITOR	ECEA0JKA221B	1	
C1341	CHIP CAPACITOR	F1H1C104A008	1	
C1360	ALU ELEC CAPACITOR	ECEA0JKA221B	1	
C1362	ALU ELEC CAPACITOR	ECEA1AKA470B	1	
C1364	CHIP CAPACITOR	F1H1H1030007	1	
C1390	ALU ELEC CAPACITOR	F2A1C221A019	1	
C1501	CHIP CAPACITOR	F1H1H1030007	1	
C1602	ALU ELEC CAPACITOR	ECEA0JKA101B	1	
C1604	ALU ELEC CAPACITOR	ECEA1AKA220B	1	
C1606	CHIP CAPACITOR	F1H1H1030007	1	
C1607	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C1608	CHIP CAPACITOR	F1H1E104A030	1	
C2501	CHIP CAPACITOR	F1H1H1030007	1	
C2504	CHIP CAPACITOR	ECJ1VB1C563K	1	
C2505	CHIP CAPACITOR	ECJ1VB1C563K	1	
C2506	CHIP CAPACITOR	ECJ1VB1C563K	1	
C2507	CHIP CAPACITOR	ECJ1VB1C563K	1	
C2508	CHIP CAPACITOR	F1H1C104A042	1	
C2509	CHIP CAPACITOR	F1H1A105A004	1	
C2510	CHIP CAPACITOR	F1H1H330A736	1	
C2511	ALU ELEC CAPACITOR	ECEA0JKN220B	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C2512	ALU ELEC CAPACITOR	ECEA1EKA4R7B	1	
C2513	CHIP CAPACITOR	ECJ1VB1H392K	1	
C2514	CHIP CAPACITOR	F1H1E104A030	1	
C2515	CHIP CAPACITOR	F1H1C104A042	1	
C2516	CHIP CAPACITOR	F1H1A2240004	1	
C2517	CHIP CAPACITOR	F1H1E223A029	1	
C2518	CHIP CAPACITOR	F1H1E223A029	1	
C2519	CHIP CAPACITOR	F1H1C104A042	1	
C2520	CHIP CAPACITOR	F1H1H1020005	1	
C2521	ALU ELEC CAPACITOR	ECEA1CKA220B	1	
C2522	ALU ELEC CAPACITOR	F2A0J471A016	1	
C2523	CHIP CAPACITOR	F1H1C104A042	1	
C2524	CHIP CAPACITOR	F1H1C104A042	1	
C2525	CHIP CAPACITOR	F1H1C104A042	1	
C2526	CHIP CAPACITOR	F1H1E104A030	1	
C2527	CHIP CAPACITOR	F1H1H182A219	1	
C2529	CHIP CAPACITOR	F1H1A105A004	1	
C2530	ALU ELEC CAPACITOR	EEUFM1E221B	1	
C3001	CHIP CAPACITOR	F1H1H1510001	1	
C3002	CHIP CAPACITOR	F1H0J1050012	1	
C3003	CHIP CAPACITOR	F1H1C104A042	1	
C3005	CHIP CAPACITOR	F1H1H2700003	1	
C3006	CHIP CAPACITOR	F1H1C104A042	1	
C3007	CHIP CAPACITOR	F1J1A105A003	1	
C3008	ALU ELEC CAPACITOR	ECEA1EKA4R7B	1	
C3010	CHIP CAPACITOR	F1J1A105A003	1	
C3011	CHIP CAPACITOR	F1H1H1030007	1	
C3012	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C3014	CHIP CAPACITOR	F1H1A105A004	1	
C3015	CHIP CAPACITOR	F1H0J1050012	1	
C3017	CHIP CAPACITOR	F1H1C104A042	1	
C3019	CHIP CAPACITOR	F1H1C104A042	1	
C3020	ALU ELEC CAPACITOR	ECEA1HKA3R3B	1	
C3021	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C3023	CHIP CAPACITOR	F1H1H1030006	1	
C3024	CHIP CAPACITOR	ECJ1VB1H331K	1	
C3025	CHIP CAPACITOR	F1H1C104A042	1	
C3026	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C3027	ALU ELEC CAPACITOR	ECEA1HKA010B	1	
C3028	ALU ELEC CAPACITOR	ECEA1HKA4R7B	1	
C3029	ALU ELEC CAPACITOR	ECEA1HKAR47B	1	
C3030	CHIP CAPACITOR	F1H1E223A029	1	
C3031	CHIP CAPACITOR	F1H1C333A041	1	
C3032	ALU ELEC CAPACITOR	ECEA1HKA3R3B	1	
C3033	CHIP CAPACITOR	F1H1C104A042	1	
C3034	ALU ELEC CAPACITOR	ECEA1HKA2R2B	1	
C3035	CHIP CAPACITOR	F1H1E223A029	1	
C3036	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C3037	CHIP CAPACITOR	F1H1H1030007	1	
C3038	CHIP CAPACITOR	ECJ1VC1H030C	1	
C3039	CHIP CAPACITOR	F1H0J1050012	1	
C3040	CHIP CAPACITOR	F1H1H1030007	1	
C3041	CHIP CAPACITOR	F1H1H1030007	1	
C3042	CHIP CAPACITOR	F1H1E104A030	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C3053	CHIP CAPACITOR	F1H1H1030007	1	
C3054	CHIP CAPACITOR	F1H1H4700004	1	
C3058	CHIP CAPACITOR	F1H1C104A042	1	
C3070	CHIP CAPACITOR	F1H1C104A042	1	
C4001	ALU ELEC CAPACITOR	ECEA0JKA101B	1	
C4003	CHIP CAPACITOR	F1H1H472A219	1	
C4004	CHIP CAPACITOR	ECJ1VB1H122K	1	
C4005	ALU ELEC CAPACITOR	ECEA0JKA220B	1	
C4006	ALU ELEC CAPACITOR	ECEA1EKA4R7B	1	
C4009	ALU ELEC CAPACITOR	ECEA0JKA220B	1	
C4011	CHIP CAPACITOR	ECJ1VB1H822K	1	
C4012	ALU ELEC CAPACITOR	ECEA1HKA4R7B	1	
C4013	CHIP CAPACITOR	F1H1H1030007	1	
C4016	CHIP CAPACITOR	F1H1C104A042	1	
C4017	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C4018	CHIP CAPACITOR	F1J1A105A003	1	
C4019	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C4020	CHIP CAPACITOR	ECJ1VC1H221J	1	
C4021	PLAST FILM CAPACITOR	ECQB1H223JF3	1	
C4022	CHIP CAPACITOR	ECJ1VB1H152K	1	
C4023	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C4024	CHIP CAPACITOR	F1H1E223A029	1	
C4026	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C4027	ALU ELEC CAPACITOR	ECEA1HKA3R3B	1	
C4301	ALU ELEC CAPACITOR	ECEA1CKA101B	1	
C4302	ALU ELEC CAPACITOR	ECA1CAK470XB	1	
C4303	ALU ELEC CAPACITOR	ECA1CAK470XB	1	
C4304	CHIP CAPACITOR	F1H1E104A030	1	
C4305	CHIP CAPACITOR	F1H1H4700004	1	
C4306	CHIP CAPACITOR	ECJ1VC1H471J	1	
C4307	CHIP CAPACITOR	F1H1E104A030	1	
C4308	CHIP CAPACITOR	F1H1H4700004	1	
C4309	CHIP CAPACITOR	ECJ1VC1H471J	1	
C4310	ALU ELEC CAPACITOR	ECEA1CKA101B	1	
C4311	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C4501	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C4502	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C4503	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C4504	PLAST FILM CAPACITOR	ECQB1H473JF3	1	
C4505	ALU ELEC CAPACITOR	ECEA1AKA330B	1	
C4506	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C4507	ALU ELEC CAPACITOR	ECEA1CKA220B	1	
C4508	PLAST FILM CAPACITOR	ECQB1H153JF3	1	
C4509	CHIP CAPACITOR	F1H1C333A041	1	
C4511	CHIP CAPACITOR	F1H1H1030007	1	
C4514	CHIP CAPACITOR	F1H1H1030007	1	
C4515	ALU ELEC CAPACITOR	ECEA0JKA101B	1	
C4516	CHIP CAPACITOR	F1H1H1030007	1	
C4517	CHIP CAPACITOR	F1H1E104A030	1	
C4519	CHIP CAPACITOR	F1H1A2240004	1	
C4520	PLAST FILM CAPACITOR	ECQB1H153JF3	1	
C4521	ALU ELEC CAPACITOR	ECEA1CKA220B	1	
C4522	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C4523	ALU ELEC CAPACITOR	ECEA1AKA330B	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4524	PLAST FILM CAPACITOR	ECQB1H473JF3	1	
C4525	ALU ELEC CAPACITOR	ECEA0JKA101B	1	
C4526	CHIP CAPACITOR	F1H1H1030006	1	
C4527	CHIP CAPACITOR	F1H1C104A042	1	
C4528	CHIP CAPACITOR	F1H1C104A042	1	
C4529	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C4530	CHIP CAPACITOR	ECJ2FB0J225K	1	*1,*2,*3,*4,*5,*6,*7
C4530	CHIP CAPACITOR	F1J0J2250003	1	*8,*9,*10,*11,*12
C4531	CHIP CAPACITOR	ECJ2FB0J225K	1	*1,*2,*3,*4,*5,*6,*7
C4531	CHIP CAPACITOR	F1J0J2250003	1	*8,*9,*10,*11,*12
C4532	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C4533	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C4534	ALU ELEC CAPACITOR	ECEA1CKA470B	1	
C4535	CHIP CAPACITOR	F1J1A105A003	1	
C4536	ALU ELEC CAPACITOR	ECEA1AKA220B	1	
C4537	CHIP CAPACITOR	F1H1E104A030	1	
C4538	CHIP CAPACITOR	F1H1C104A042	1	
C4539	CHIP CAPACITOR	F1H1H1030006	1	
C4540	CHIP CAPACITOR	F1H1C104A042	1	
C4541	CHIP CAPACITOR	F1H1C104A042	1	
C4801	CHIP CAPACITOR	F1H1H1010005	1	
C4802	CHIP CAPACITOR	F1H1H1010005	1	
C4901	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4902	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4903	ALU ELEC CAPACITOR	ECEA0JKA220B	1	
C4904	CHIP CAPACITOR	F1H1H4700004	1	
C4905	CHIP CAPACITOR	F1H1H4700004	1	
C4906	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4907	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4908	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4909	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4910	CHIP CAPACITOR	F1H1C104A042	1	
C4911	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4912	CHIP CAPACITOR	F1H1H4700004	1	
C4913	CHIP CAPACITOR	F1H1H4700004	1	
C4914	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4915	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4916	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4917	CHIP CAPACITOR	F1H1A105A004	1	
C4918	CHIP CAPACITOR	F1H1E104A030	1	
C4919	CHIP CAPACITOR	F1H1C104A042	1	
C4920	CHIP CAPACITOR	F1H1A105A004	1	
C4921	ALU ELEC CAPACITOR	ECEA0JKA221B	1	
C4922	CHIP CAPACITOR	F1H1A105A004	1	
C4923	CHIP CAPACITOR	F1H1E104A030	1	
C4924	CHIP CAPACITOR	F1H1A105A004	1	
C4925	CHIP CAPACITOR	F1H1E104A030	1	
C4926	CHIP CAPACITOR	F1H1A105A004	1	
C4927	ALU ELEC CAPACITOR	ECEA0JKA221B	1	
C4928	CHIP CAPACITOR	F1H1C104A042	1	
C4929	CHIP CAPACITOR	F1H1C104A042	1	
C4930	CHIP CAPACITOR	F1H1A105A004	1	
C4931	CHIP CAPACITOR	F1H1A105A004	1	
C4932	CHIP CAPACITOR	F1H1A105A004	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4933	CHIP CAPACITOR	F1H1A105A004	1	
C4934	ALU ELEC CAPACITOR	F2A0J102A016	1	
C4935	CHIP CAPACITOR	F1H1E104A030	1	
C4936	ALU ELEC CAPACITOR	ECEA0JKA101B	1	
C4937	CHIP CAPACITOR	F1H1C104A042	1	
C4938	ALU ELEC CAPACITOR	ECEA0JKA331B	1	
C4939	ALU ELEC CAPACITOR	ECEA0JKA331B	1	
C4940	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C4941	ALU ELEC CAPACITOR	ECEA1AKA220B	1	
C4942	CHIP CAPACITOR	F1H1E104A030	1	
C4943	CHIP CAPACITOR	F1H1E104A030	1	
C4944	CHIP CAPACITOR	F1H1E104A030	1	
C4945	CHIP CAPACITOR	F1H1H1030007	1	
C4946	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4947	CHIP CAPACITOR	ECJ1VB1H471K	1	
C4948	CHIP CAPACITOR	F1H1A105A004	1	
C4949	CHIP CAPACITOR	F1H1A105A004	1	
C4951	CHIP CAPACITOR	F1H1H4700004	1	
C4972	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C4974	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C4975	CHIP CAPACITOR	F1H1E104A030	1	
C5001	CHIP CAPACITOR	F1H1H1030006	1	
C5002	CHIP CAPACITOR	F1H1H1030006	1	
C5003	CHIP CAPACITOR	F1H1H1030006	1	
C5004	CHIP CAPACITOR	F1H1H1030006	1	
C5005	CHIP CAPACITOR	F1H1C104A042	1	
C5006	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C5007	CHIP CAPACITOR	F1H1E104A030	1	
C6003	CHIP CAPACITOR	ECJ1VB1H471K	1	
C6004	CHIP CAPACITOR	F1H1H1030007	1	
C6005	CHIP CAPACITOR	F1H1H1030007	1	
C6006	CHIP CAPACITOR	F1H1H330A736	1	
C6007	CHIP CAPACITOR	F1H1H1030007	1	
C6008	ALU ELEC CAPACITOR	F2A0J471A016	1	
C6009	CHIP CAPACITOR	ECJ1VC1H180J	1	
C6010	CHIP CAPACITOR	ECJ1VC1H180J	1	
C6011	CHIP CAPACITOR	ECJ1VC1H180J	1	
C6012	CHIP CAPACITOR	F1H1H1500009	1	
C6015	ALU ELEC CAPACITOR	ECEA1CKA100B	1	
C6016	CHIP CAPACITOR	F1H1H1030007	1	
C6017	CHIP CAPACITOR	ECJ1VB1H681K	1	
C6022	CHIP CAPACITOR	ECJ1VB1H221K	1	
C6023	CHIP CAPACITOR	F1H1A105A004	1	
C6024	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C6025	CHIP CAPACITOR	F1H1E104A030	1	
C6029	CHIP CAPACITOR	F1H1A105A004	1	
C6032	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C6035	CHIP CAPACITOR	F1H0J1050012	1	
C6036	CHIP CAPACITOR	ECJ1VB1H561K	1	
C6037	CHIP CAPACITOR	F1H1H330A736	1	
C6038	CHIP CAPACITOR	F1H1E104A030	1	
C6039	CHIP CAPACITOR	F1J1A105A003	1	
C6040	CHIP CAPACITOR	F1H1E104A030	1	
C6041	CHIP CAPACITOR	ECJ2YB0J475K	1	*1,*2,*3,*4,*5,*6,*7,*8,*9

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C6042	CHIP CAPACITOR	ECJ1VB1C563K	1	
C6101	CHIP CAPACITOR	F1H1E104A030	1	
C6103	CHIP CAPACITOR	F1H1E104A030	1	
C6104	ALU ELEC CAPACITOR	ECEA0JKA221B	1	
C6105	CHIP CAPACITOR	F1H1H104A220	1	
C6106	CHIP CAPACITOR	F1H1H1030007	1	
C6107	CHIP CAPACITOR	F1H1H1030007	1	
C6108	CHIP CAPACITOR	F1H1H1030007	1	
C6109	CHIP CAPACITOR	F1H1H1030007	1	
C6110	CHIP CAPACITOR	F1H1H1030007	1	
C7301	CHIP CAPACITOR	F1H1H1030007	1	
C7302	ALU ELEC CAPACITOR	ECEA0JKA101B	1	
C7303	CHIP CAPACITOR	F1H1H1030007	1	
C7305	CHIP CAPACITOR	F1H1H330A736	1	
C7306	CHIP CAPACITOR	F1H1H330A736	1	
C7307	CHIP CAPACITOR	F1H1H332A219	1	*2,*3,*9,*12
C7308	CHIP RESISTOR	D0GB822JA002	1	
C7308	CHIP CAPACITOR	ECJ1VC1H681J	1	*2,*3,*9,*12
C7309	CHIP CAPACITOR	F1H1H332A219	1	*2,*3,*9,*12
C7310	CHIP CAPACITOR	ECJ1VC1H681J	1	*2,*3,*9,*12
C7311	CHIP CAPACITOR	F1H1H1030007	1	
C7312	CHIP CAPACITOR	F1H1C104A042	1	
C7313	CHIP CAPACITOR	ECJ1VF1C474Z	1	*2,*3,*9,*12
C7314	CHIP CAPACITOR	F1H1C104A042	1	
C7314	CHIP CAPACITOR	F1H1H1030006	1	
C7315	CHIP CAPACITOR	F1H1H9R0A735	1	*2,*3,*9,*12
C7316	CHIP CAPACITOR	F1H1E104A030	1	
C7317	CHIP CAPACITOR	ECJ1VB1H152K	1	
C7318	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C7319	CHIP CAPACITOR	F1J1A105A003	1	
C7320	CHIP CAPACITOR	F1J1A105A003	1	
C7321	CHIP CAPACITOR	F1H1H472A219	1	
C7322	CHIP CAPACITOR	ECJ1VF1C474Z	1	*2,*3,*9,*12
C7323	CHIP CAPACITOR	F1H1E104A030	1	
C7324	CHIP CAPACITOR	ECJ1VB1H152K	1	
C7325	CHIP CAPACITOR	F1H1C104A042	1	
C7325	CHIP CAPACITOR	F1H1H1030006	1	
C7326	CHIP CAPACITOR	F1H1A105A004	1	
C7327	CHIP CAPACITOR	ECJ1VB1H152K	1	
C7328	CHIP CAPACITOR	F1H1E104A030	1	
C7328	CHIP CAPACITOR	ECJ1VF1C474Z	1	*2,*3,*9,*12
C7329	CHIP CAPACITOR	ECJ1VF1C474Z	1	*2,*3,*9,*12
C7330	CHIP CAPACITOR	F1H1C104A042	1	
C7331	CHIP CAPACITOR	F1J1A105A003	1	
C7331	CHIP CAPACITOR	F1J1C4740012	1	*2,*3,*9,*12
C7341	CHIP CAPACITOR	F1H1H472A219	1	
C7342	CHIP CAPACITOR	F1H1H472A219	1	
C7343	ALU ELEC CAPACITOR	ECEA0JKA221B	1	
C7501	ALU ELEC CAPACITOR	ECEA1VKA100B	1	
C7502	CHIP CAPACITOR	F1H1E104A030	1	
C7507	ALU ELEC CAPACITOR	F4D55473A013	1	
C7508	ALU ELEC CAPACITOR	ECEA0JKA221B	1	
C7509	CHIP CAPACITOR	ECJ1VF1E683Z	1	
C7510	CHIP CAPACITOR	F1H1H1030007	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C7511	CHIP CAPACITOR	F1H1E104A030	1	
C7603	ALU ELEC CAPACITOR	ECEA0JKA101B	1	
C7604	ALU ELEC CAPACITOR	ECEA0JKA101B	1	
C7605	CHIP CAPACITOR	F1H1H1030007	1	
C7606	CHIP CAPACITOR	F1H1H1030007	1	
C7607	ALU ELEC CAPACITOR	ECEA1HKA010B	1	
C7608	CHIP CAPACITOR	F1H1H104A220	1	
C7609	CHIP CAPACITOR	F1H1H330A736	1	
C7610	CHIP CAPACITOR	F1H1H330A736	1	
C7613	CHIP CAPACITOR	ECJ1VB1H221K	1	
C7614	ALU ELEC CAPACITOR	ECEA0JKA101B	1	
C7615	CHIP CAPACITOR	F1H1H1030007	1	
C7617	CHIP CAPACITOR	F1H1H1030007	1	
C7618	CHIP CAPACITOR	F1H1E104A030	1	
C7620	CHIP CAPACITOR	F1H1E104A030	1	
C7623	CHIP CAPACITOR	F1H1H1030007	1	
C7627	CHIP CAPACITOR	ECJ1VB1H471K	1	
C7628	CHIP CAPACITOR	F1H1H1020005	1	
C8001	CHIP CAPACITOR	F1H1E104A030	1	
C8002	CHIP CAPACITOR	F1H1E104A030	1	
C8003	CHIP CAPACITOR	F1H1E104A030	1	
C8004	CHIP CAPACITOR	F1H1E104A030	1	
C8005	CHIP CAPACITOR	F1H1A105A004	1	
C8007	CHIP CAPACITOR	F1H1E104A030	1	
C8008	CHIP CAPACITOR	F1H1E104A030	1	
C8009	CHIP CAPACITOR	F1H1E104A030	1	
C8010	CHIP CAPACITOR	F1H1E104A030	1	
C8011	CHIP CAPACITOR	F1H1E104A030	1	
C8012	CHIP CAPACITOR	F1H1E104A030	1	
C8013	CHIP CAPACITOR	F1H1E104A030	1	
C8014	CHIP CAPACITOR	F1H1E104A030	1	
C8015	CHIP CAPACITOR	F1H1C104A042	1	
C8016	CHIP CAPACITOR	F1H1E104A030	1	
C8017	CHIP CAPACITOR	F1H1E104A030	1	
C8018	CHIP CAPACITOR	F1H1E104A030	1	
C8019	CHIP CAPACITOR	ECJ2FF1A106Z	1	
C8020	CHIP CAPACITOR	F1H1E104A030	1	
C8021	CHIP CAPACITOR	F1H1E104A030	1	
C8022	CHIP CAPACITOR	ECJ2FF1A106Z	1	
C8023	CHIP CAPACITOR	ECJ2FF1A106Z	1	
C8026	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C8027	ALU ELEC CAPACITOR	ECEA0JKA470B	1	
C8028	CHIP CAPACITOR	F1H1H1010005	1	
C8029	CHIP CAPACITOR	F1H0J1050012	1	
C8030	CHIP CAPACITOR	F1H0J1050012	1	
C8032	CHIP CAPACITOR	F1H1C104A042	1	
C8035	CHIP CAPACITOR	F1H1C104A042	1	
C8036	CHIP CAPACITOR	F1H1C104A042	1	
C8037	CHIP CAPACITOR	F1H1C104A042	1	
C8038	CHIP CAPACITOR	F1H1H222A219	1	
C8039	CHIP CAPACITOR	F1H1H222A219	1	
C8040	CHIP CAPACITOR	F1H0J1050012	1	
C8041	CHIP CAPACITOR	F1H0J1050012	1	
C8042	CHIP CAPACITOR	F1H0J1050012	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C8043	**CHIP CAPACITOR**	**F1H0J1050012**	**1**	
C8044	**CHIP CAPACITOR**	**F1H0J1050012**	**1**	
C8045	**CHIP CAPACITOR**	**F1H0J1050012**	**1**	
C8046	**CHIP CAPACITOR**	**F1H0J1050012**	**1**	
C8047	**CHIP CAPACITOR**	**F1H0J1050012**	**1**	
C8048	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8049	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8050	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8051	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8052	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8053	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8054	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8055	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8056	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8057	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8058	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8059	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8060	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8061	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8062	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8063	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8064	**ALU ELEC CAPACITOR**	**EEUFM1A101B**	**1**	
C8065	**ALU ELEC CAPACITOR**	**F2A0J471A016**	**1**	
C8066	**ALU ELEC CAPACITOR**	**F2A0J471A016**	**1**	
C8067	**ALU ELEC CAPACITOR**	**ECEA0JKA221B**	**1**	
C8069	**CHIP CAPACITOR**	**ECJ1VB1E183K**	**1**	
C8070	**CHIP CAPACITOR**	**F1H1C333A041**	**1**	
C8071	**CHIP CAPACITOR**	**ECJ1VB1H562K**	**1**	
C8073	**CHIP CAPACITOR**	**F1J1C105A091**	**1**	
C8074	**CHIP CAPACITOR**	**F1J1C105A091**	**1**	
C8075	**CHIP CAPACITOR**	**F1H1H472A219**	**1**	
C8077	**CHIP CAPACITOR**	**ECJ1VC1H102J**	**1**	
C8078	**CHIP CAPACITOR**	**ECJ1VC1H102J**	**1**	
C8079	**CHIP CAPACITOR**	**ECJ1VC1H102J**	**1**	
C8080	**CHIP CAPACITOR**	**ECJ1VB1H152K**	**1**	
C8082	**CHIP CAPACITOR**	**ECJ1VC1H821J**	**1**	
C8083	**CHIP CAPACITOR**	**ECJ1VC1H100D**	**1**	
C8085	**CHIP CAPACITOR**	**F1H1H2700003**	**1**	
C8086	**ALU ELEC CAPACITOR**	**F2A0J471A016**	**1**	
C8087	**ALU ELEC CAPACITOR**	**F2A0J471A016**	**1**	
C8088	**CHIP CAPACITOR**	**ECJ1VC1H102J**	**1**	
C8089	**CHIP CAPACITOR**	**ECJ1VB1H122K**	**1**	
C8090	**CHIP CAPACITOR**	**ECJ1VC1H221J**	**1**	
C8091	**CHIP CAPACITOR**	**F1H1H1010005**	**1**	
C8092	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8101	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8102	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8103	**CHIP CAPACITOR**	**ECJ2FF1A106Z**	**1**	
C8104	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8105	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8106	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8107	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8108	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	
C8109	**CHIP CAPACITOR**	**F1H1E104A030**	**1**	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C8110	CHIP CAPACITOR	F1H1E104A030	1	
C8202	CHIP CAPACITOR	F1H1E104A030	1	
C8203	CHIP CAPACITOR	F1H1E104A030	1	
C8204	ALU ELEC CAPACITOR	EEUFM1A221B	1	
C8205	CHIP CAPACITOR	F1H1E104A030	1	
C8206	CHIP CAPACITOR	F1H1E104A030	1	
C8207	CHIP CAPACITOR	F1H1E104A030	1	
C8208	ALU ELEC CAPACITOR	ECA1CM470B	1	
C8209	ALU ELEC CAPACITOR	EEUFM1E470B	1	
C8210	CHIP CAPACITOR	F1H1E104A030	1	
C8211	CHIP CAPACITOR	F1H1C104A042	1	
C8212	CHIP CAPACITOR	F1H1C104A042	1	
C8310	CHIP CAPACITOR	F1H1H1510001	1	
C8312	CHIP CAPACITOR	F1H0J1050012	1	
C8313	CHIP CAPACITOR	F1H1E104A030	1	
C8314	CHIP CAPACITOR	F1H1E104A030	1	
C8315	CHIP CAPACITOR	F1H1E104A030	1	
C8410	CHIP CAPACITOR	F1H1E104A030	1	
C8411	ALU ELEC CAPACITOR	F2A0J471A016	1	
C8413	CHIP CAPACITOR	F1H1E104A030	1	
D1002	DIODE	MAZ4130NLF	1	
D1003	DIODE	MAZ4051NMF	1	
D1004	DIODE	MA2C165001VT	1	
D1101	DIODE	B0EAKV000015	1	
D1102	DIODE	B0EAKV000015	1	
D1103	DIODE	B0EAKV000015	1	
D1104	DIODE	B0EAKV000015	1	
D1105	DIODE	B0HADV000001	1	
D1106	DIODE	B0AAGP000004	1	
D1110	SURGE ABSORBER	ERZVA5V471	1	⚠
D1220	DIODE	B0JAME000025	1	
D1230	DIODE	B0AAGP000004	1	
D1240	DIODE	B0JAMG000010	1	
D1250	DIODE	B0HANM000021	1	
D1260	DIODE	B0JAML000010	1	
D1270	DIODE	B0AAGP000004	1	
D1280	DIODE	B0JAMG000010	1	
D1290	DIODE	B0JAML000004	1	
D1360	DIODE	MAZ4056NHF	1	
D1501	DIODE	B3EA00000072	1	
D1601	DIODE	MAZ4051NMF	1	
D1602	DIODE	MA2C165001VT	1	
D2501	DIODE	MA2C165001VT	1	
D2502	DIODE	MA2C165001VT	1	
D4501	DIODE	MA2C165001VT	1	
D4502	DIODE	MA2C165001VT	1	
D4503	DIODE	MAZ409100F	1	
D4801	LED DIODE	B3ACA0000243	1	
D4901	DIODE	MAZ4051NMF	1	
D4902	DIODE	MAZ4051NMF	1	
D4903	DIODE	MA2C165001VT	1	
D4904	DIODE	MAZ4056NHF	1	
D4905	DIODE	MA2C165001VT	1	
D4906	DIODE	MA2C165001VT	1	

[illegible]	DIODE	[illegible]	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D7301	DIODE	MA2C165001VT	1	
D7503	DIODE	B0JACE000001	1	
D7504	DIODE	MAZ4200NLF	1	
D7601	DIODE	MAZ43000MF	1	
D8001	DIODE	MA2J72800L	1	
D8002	CHIP DIODE	MA2J11100L	1	
DP7501	FL DISPLAY	A2BB00000140	1	
F1101	MINIATURE FUSE	K5D162BK0005	1	⚠
FC7501	FFC CABLE 3PIN	REZD0018	1	
IC1101	INTEGRATED CIRCUIT	C0DACZZ00009	1	
IC1200	VOLTAGE REGULATOR	C0DAEJC00006	1	
IC1320	SHUNT REGULATOR	C0CAAYA00005	1	
IC1340	SHUNT REGULATOR	C0CAAYA00005	1	
IC1390	VOLTAGE REGULATOR	C0DBZHG00017	1	
IC1501	PHOTO COUPLER	B3NAA0000073	1	
IC1502	PHOTO COUPLER	B3NAA0000073	1	
IC2501	MOTOR DRIVE IC	C1AB00001767	1	
IC3001	INTEGRATED CIRCUIT	C1AB00002084	1	
IC4301	OPERATION AMP	C0ABBB000109	1	
IC4501	INTEGRATED CIRCUIT	AN3656NFBPBV	1	
IC4502	INTEGRATED CIRCUIT	C0JBAR000292	1	
IC4901	INTEGRATED CIRCUIT	C1AB00000933	1	
IC4902	INTEGRATED CIRCUIT	C1AB00001466	1	
IC4903	INTEGRATED CIRCUIT	C1AB00001466	1	
IC4904	INTEGRATED CIRCUIT	C1AB00001466	1	
IC4905	INTEGRATED CIRCUIT	C1AB00002141	1	
IC4906	INTEGRATED CIRCUIT	C1AB00001486	1	
IC6001	SYSCON IC	C2CBJG000580	1	*1,*6,*7,*10
IC6001	SYSCON IC	C2CBJG000579	1	*2,*3,*4,*5,*8,*9,*11,*12
IC6002	EEPROM	C3EAGC000026	1	
IC6004	VOLTAGE REGULATOR	C0DBCHD00004	1	
IC6005	VOLTAGE REGULATOR	C0DBZJG00007	1	
IC6006	INTEGRATED CIRCUIT	C1AB00002140	1	*1,*2,*3,*4,*5,*6,*7,*8,*9
IC6101	MICROCONTROLLER	MN101C35DCE	1	
IC7301	INTEGRATED CIRCUIT	C1AB00002225	1	*1,*4,*5,*6,*7,*8,*10,*11
IC7301	INTEGRATED CIRCUIT	C0ZBZ0001081	1	*2,*3,*9,*12
IC7503	RESET IC	C0EBE0000120	1	
IC7504	RESET IC	C0EBH0000458	1	
IC8001	DVD-IC	MN2DS0005VP	1	
IC8002	RESET IC	C0EBE0000384	1	
IC8003	INTEGRATED CIRCUIT	C3EBGC000056	1	
IC8101	16 MBIT LOW VOLTAGE	RFKFVP82L160	1	
IC8102	SDRAM	C3ABPG000145	1	
IC8201	MOTOR IC	C0GBG0000048	1	
IC8402	INTEGRATED CIRCUIT	C0FBBK000047	1	
IP1220	IC PROTECTOR	UNH000600A	1	
IP1280	IC PROTECTOR	D4FAR4000001	1	
IR7501	REMOTE SENSOR	B3RAB0000024	1	
J1	EARTH WIRE	VEE0U97	1	
JK4801	FRONT AV 3X CINCH	K2HA303A0021	1	
JK4902	SCART CONNECTOR	K2HZ242B0002	1	
JK4903	CONNECTOR	K2HA306B0086	1	
JK4904	CONNECTOR	K2HA612B0053	1	
K1013	CHIP RESISTOR	D0YBR0000002	1	

[illegible]	CHIP RESISTOR	[illegible]	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
K4901	CHIP RESISTOR	D0YBR0000002	1	
K4902	CHIP RESISTOR	D0YBR0000002	1	
K5004	CHIP RESISTOR	D0YBR0000002	1	
K6004	CHIP RESISTOR	D0YBR0000002	1	
K7306	CHIP RESISTOR	D0YBR0000002	1	
K7307	CHIP RESISTOR	D0YBR0000002	1	
K8004	CHIP RESISTOR	D0YBR0000002	1	
K8005	CHIP RESISTOR	D0YBR0000002	1	
K8006	CHIP RESISTOR	D0YBR0000002	1	
K8007	CHIP RESISTOR	D0YBR0000002	1	
K8008	CHIP RESISTOR	D0YBR0000002	1	
K8101	CHIP RESISTOR	D0YBR0000002	1	
K8102	CHIP RESISTOR	D0YDR0000006	1	
L1102	BEAD CORES	EXCELDR35V	1	
L1120	LINE FILTER	ELF15N003AB	1	⚠
L1121	LINE FILTER	ELF15N003AB	1	⚠
L1220	CHOKE COIL RADIAL	G0A220GA0026	1	
L1240	CHOKE COIL RADIAL	G0A220GA0026	1	
L1250	CHOKE COIL RADIAL	G0A220GA0026	1	
L1260	CHOKE COIL RADIAL	G0A220GA0026	1	
L1290	CHOKE COIL RADIAL	G0A220GA0026	1	
L3002	CHOKE COIL AXIAL	G0C820JA0019	1	
L3003	CHOKE COIL AXIAL	G0C270JA0019	1	
L3004	CHOKE COIL AXIAL	G0C680JA0019	1	
L3005	CHOKE COIL AXIAL	G0C270JA0019	1	
L3006	CHOKE COIL AXIAL	G0C120JA0019	1	
L3010	CHOKE COIL AXIAL	G0C390JA0019	1	
L4002	CHOKE COIL AXIAL	G0C680JA0019	1	
L4501	CHOKE COIL AXIAL	G0C270JA0019	1	
L4502	CHOKE COIL AXIAL	G0C270JA0019	1	
L4902	CHOKE COIL AXIAL	G0C680JA0019	1	
L4903	CHOKE COIL AXIAL	G0C270JA0019	1	
L4906	CHOKE COIL AXIAL	G0C680JA0019	1	
L4971	CHOKE COIL AXIAL	G0C680JA0019	1	
L5001	CHOKE COIL AXIAL	G0C680JA0019	1	
L6001	CHOKE COIL AXIAL	G0C220JA0019	1	
L6002	CHOKE COIL AXIAL	G0C330JA0019	1	*1,*10
L6006	CHOKE COIL AXIAL	G0C100JA0019	1	*1,*2,*3,*4,*5,*6,*7,*8,*9
L6101	CHOKE COIL AXIAL	G0C820JA0019	1	
L7301	CHOKE COIL AXIAL	G0C1R0JA0019	1	
L7601	CHOKE COIL AXIAL	G0C270JA0019	1	
L7602	CHOKE COIL AXIAL	G0C270JA0019	1	
L7603	CHOKE COIL AXIAL	G0C270JA0019	1	
L7605	CHOKE COIL AXIAL	G0C2R2JA0019	1	
L7606	CHOKE COIL AXIAL	G0C390JA0019	1	
L7607	CHOKE COIL AXIAL	G0C2R2JA0019	1	
L7607	CHOKE COIL AXIAL	G0C470JA0019	1	*2,*3,*9,*12
L8002	CHIP COIL	G1C100KA0069	1	
L8003	CHIP COIL	G1C100KA0069	1	
L8004	CHIP COIL	G1C100KA0069	1	
L8005	CHIP COIL	G1C100KA0069	1	
LB1213	BEAD CORE	J0JBC0000011	1	
LB1214	BEAD CORE	J0JHC0000070	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
LB1217	BEAD CORE	J0JHC0000070	1	
LB1218	BEAD CORE	J0JHC0000070	1	
LB4002	CHIP RESISTOR	D0YBR0000002	1	
LB4004	CHIP RESISTOR	D0YBR0000002	1	
LB4308	BEAD CORE	J0JCC0000062	1	
LB4309	BEAD CORE	J0JCC0000062	1	
LB4903	CHIP RESISTOR	D0GB221JA002	1	
LB4904	CHIP RESISTOR	D0GB221JA002	1	
LB4905	CHIP RESISTOR	D0YBR0000002	1	
LB4906	CHIP RESISTOR	D0YBR0000002	1	
LB4909	CHIP RESISTOR	D0YBR0000002	1	
LB4910	CHIP RESISTOR	D0GB221JA002	1	
LB4911	CHIP RESISTOR	D0GB221JA002	1	
LB4971	CHIP RESISTOR	D0YBR0000002	1	
LB6001	CHIP RESISTOR	D0YBR0000002	1	
LB7301	CHIP RESISTOR	D0YDR0000006	1	
LB7302	BEAD CORE	J0JBC0000011	1	
LB7303	CHIP RESISTOR	D0YDR0000006	1	
LB8001	BEAD CORE	J0JCC0000062	1	
LB8002	BEAD CORE	J0JCC0000062	1	
LB8003	BEAD CORE	J0JHC0000045	1	
LB8004	BEAD CORE	J0JHC0000045	1	
LB8005	CHIP RESISTOR	D0YBR0000002	1	
LB8006	CHIP RESISTOR	D0YBR0000002	1	
LB8007	CHIP RESISTOR	D0YBR0000002	1	
LB8008	CHIP RESISTOR	D0YBR0000002	1	
LB8011	CHIP RESISTOR	D0YBR0000002	1	
LB8012	CHIP RESISTOR	D0YBR0000002	1	
LB8013	CHIP RESISTOR	D0YBR0000002	1	
LB8014	CHIP RESISTOR	D0YBR0000002	1	
LB8015	BEAD CORE	J0JDC0000047	1	
LB8016	BEAD CORE	J0JCC0000166	1	
LB8017	BEAD CORE	J0JHC0000045	1	
LB8018	BEAD CORE	J0JHC0000045	1	
LB8101	BEAD CORE	J0JHC0000045	1	
LB8302	BEAD CORE	J0JBC0000013	1	
LB8303	BEAD CORE	J0JBC0000013	1	
LB8304	BEAD CORE	J0JBC0000013	1	
LB8306	COIL (RLBV252AV-Y)	J0JBC0000019	1	
LB8401	CHIP RESISTOR	D0YBR0000002	1	
LB8402	BEAD CORE	J0JBC0000013	1	
LB8403	BEAD CORE	J0JBC0000013	1	
LB8404	BEAD CORE	J0JBC0000011	1	
P1001	CONNECTOR 13POL.	K1KB13AA0032	1	
P1101	AC INLET	K2AA2H000007	1	⚠
P1501	CONNECTOR	K1KA02A00375	1	
P2501	CONNECTOR	K1KA08A00290	1	
P2502	CONNECTOR	K1MN07A00030	1	
P4001	CONNECTOR	K1MZ02A00003	1	
P4002	CONNECTOR	K1MN06A00042	1	
P5001	CONNECTOR	K1MN09A00029	1	
P8001	CONNECTOR 26POL.	K1MN26A00061	1	
P8002	CONNECTOR	K1KB09A00047	1	
P8003	CONNECTOR 19POL.	K1KB19AA0032	1	

P3003	CONNECTOR 15P OLF	R1RD15AA0052	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
P8201	CONNECTOR 6POL.	K1MN06A00049	1	
PP4801	CONNECTOR	K1KA12B00136	1	
PP6101	CONNECTOR	K1KA02A00375	1	
PS1301	CONNECTOR	K1KA13A00074	1	
PS1302	CONNECTOR	K1KA09A00210	1	
PS4301	CONNECTOR	K1KA19A00007	1	
PS7501	CONNECTOR	K1KB12B00047	1	
Q1002	TRANSISTOR	B1AAGD000016	1	
Q1003	TRANSISTOR	B1AAGD000016	1	
Q1004	TRANSISTOR	B1AAGD000016	1	
Q1200	PHOTO COUPLER	B3PBA0000237	1	⚠
Q1321	TRANSISTOR	2SD19960SA	1	
Q1322	TRANSISTOR	2SD19960SA	1	
Q1341	TRANSISTOR	B1AAGD000016	1	
Q1360	TRANSISTOR	2SD0592ARA	1	
Q1501	PHOTO TRANSISTOR	PNB2302MF	1	
Q1502	PHOTO TRANSISTOR	PNB2302MF	1	
Q1601	TRANSISTOR	B1AAGD000016	1	
Q1602	TRANSISTOR	B1AAGD000016	1	
Q3001	TRANSISTOR	2SD0601ARN	1	
Q4003	TRANSISTOR	2SD0601ARN	1	
Q4004	TRANSISTOR	2SD0601ARN	1	
Q4005	TRANSISTOR	2SD0602ARL	1	
Q4006	TRANSISTOR	2SB0710ARL	1	
Q4901	TRANSISTOR	2SD0601ARN	1	
Q4902	TRANSISTOR	2SB0709ARL	1	
Q4903	TRANSISTOR	2SB0709ARL	1	
Q4904	TRANSISTOR	B1AAGD000016	1	
Q4905	CHIP TRANSISTOR	2SD132800L	1	
Q4906	TRANSISTOR	2SD0601ARN	1	
Q4907	TRANSISTOR	2SD0601ARN	1	
Q4908	TRANSISTOR	2SD0601ARN	1	
Q4909	TRANSISTOR	2SB0709ARL	1	
Q4910	TRANSISTOR	2SB0709ARL	1	
Q4971	TRANSISTOR	2SD0601ARN	1	
Q6001	TRANSISTOR	2SD0601ARN	1	
Q6002	TRANSISTOR	2SD0601ARN	1	
Q6003	TRANSISTOR	2SB0709ARL	1	
Q8001	TRANSISTOR	2SD1819ARL	1	
Q8002	TRANSISTOR	2SD1819ARL	1	
Q8003	SS-TRANSISTOR	2SB1218A0L	1	
Q8004	SS-TRANSISTOR	2SB1218A0L	1	
QR1001	TRANSISTOR	UNR211300L	1	
QR1002	TRANSISTOR	UNR221300L	1	
QR4001	TRANSISTOR	UNR221100L	1	
QR4002	TRANSISTOR	UNR211300L	1	
QR4005	TRANSISTOR	UNR221100L	1	
QR4501	TRANSISTOR	B1GBCFGA0002	1	
QR4502	TRANSISTOR	UNR211300L	1	
QR4503	TRANSISTOR	B1GBCFGA0002	1	
QR4504	TRANSISTOR	B1GBCFGA0002	1	
QR4901	TRANSISTOR	UNR221400L	1	
QR4902	TRANSISTOR	UNR221300L	1	
QR4903	TRANSISTOR	B1GBCFGA0002	1	

QR4[illegible]	TRANSISTOR	B1GBCFCA[illegible]	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
QR4904	TRANSISTOR	B1GBCFGA0002	1	
QR4905	TRANSISTOR	UNR211300L	1	
QR4906	TRANSISTOR	UNR221400L	1	
QR4907	TRANSISTOR	UNR221100L	1	
QR4908	TRANSISTOR	UNR221100L	1	
QR4909	TRANSISTOR	B1GBCFGA0002	1	
QR4910	TRANSISTOR	B1GBCFGA0002	1	
QR4911	TRANSISTOR	B1GBCFGA0002	1	
QR4912	TRANSISTOR	B1GBCFGA0002	1	
QR6001	TRANSISTOR	B1GBCFJA0002	1	
QR6101	TRANSISTOR	B1GDCFJJ0002	1	
QR8001	TRANSISTOR	UNR212100L	1	
QR8002	TRANSISTOR	UNR521100L	1	
QR8003	TRANSISTOR	UNR521L00L	1	
QR8005	TRANSISTOR	UNR521L00L	1	
R1002	CARBON RESISTOR	ERDS2TJ102T	1	
R1003	CARBON RESISTOR	ERDS2TJ331T	1	
R1004	CHIP RESISTOR	D0GB103JA002	1	
R1006	CARBON RESISTOR	ERDS2TJ331T	1	
R1007	CARBON RESISTOR	ERDS2TJ331T	1	
R1008	CARBON RESISTOR	ERDS2TJ332T	1	
R1010	CHIP RESISTOR	D0GB220JA002	1	
R1102	CARBON RESISTOR	ERDS2TJ100T	1	
R1103	CARBON RESISTOR	ERDS2TJ334T	1	
R1104	CARBON RESISTOR	ERDS2TJ334T	1	
R1105	SOLID RESISTOR	ERG2SJ683E	1	
R1107	METAL RESISTOR	ERX12SJR68E	1	
R1110	CARBON RESISTOR	ERDS2FJ105T	1	
R1111	CARBON RESISTOR	ERDS2FJ105T	1	
R1200	CHIP RESISTOR	D1BB33020002	1	
R1201	CHIP RESISTOR	D1BB33020002	1	
R1202	CHIP RESISTOR	D1BB2201A010	1	
R1203	CHIP RESISTOR	D1BB22020002	1	
R1204	CHIP RESISTOR	D0GB102JA002	1	
R1205	CHIP RESISTOR	D0GB222JA002	1	
R1206	CHIP RESISTOR	D0GB271JA002	1	
R1207	CHIP RESISTOR	D1BB8201A010	1	
R1208	CHIP RESISTOR	D1BB5602A010	1	
R1290	CHIP RESISTOR	D0GB103JA002	1	
R1320	CHIP RESISTOR	D0GB821JA002	1	
R1323	CHIP RESISTOR	D0YBR0000002	1	
R1325	CHIP RESISTOR	D0GB1R0JA002	1	
R1326	CHIP RESISTOR	D0GB1R0JA002	1	
R1327	CHIP RESISTOR	D0GB101JA002	1	
R1329	CHIP RESISTOR	D0YBR0000002	1	
R1333	CHIP RESISTOR	D0GB1R0JA002	1	
R1334	CHIP RESISTOR	D0GB1R0JA002	1	
R1335	CHIP RESISTOR	D0GB1R0JA002	1	
R1336	CHIP RESISTOR	D0GB1R0JA002	1	
R1340	CHIP RESISTOR	D0YBR0000002	1	
R1343	CHIP RESISTOR	D1BB20010002	1	
R1344	CHIP RESISTOR	D1BB1201A010	1	
R1345	CHIP RESISTOR	D0YBR0000002	1	
R1347	CHIP RESISTOR	D0GB101JA002	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1360	CARBON RESISTOR	ERDS2TJ471T	1	
R1390	CHIP RESISTOR	D0GB222JA002	1	
R1501	CARBON RESISTOR	ERDS2TJ151T	1	
R1502	CHIP RESISTOR	D0GB121JA002	1	
R1503	CHIP RESISTOR	D0GB273JA002	1	
R1504	CHIP RESISTOR	D0GB273JA002	1	
R1505	CHIP RESISTOR	D0YBR0000002	1	
R1609	CARBON RESISTOR	ERDS2TJ331T	1	
R2501	CHIP RESISTOR	D0GB102JA002	1	
R2502	CHIP RESISTOR	D0GB102JA002	1	
R2503	CHIP RESISTOR	D0GB103JA002	1	
R2504	CHIP RESISTOR	D0GB103JA002	1	
R2505	CHIP RESISTOR	D0GB392JA002	1	
R2506	CHIP RESISTOR	D0GB105JA002	1	
R2508	CHIP RESISTOR	D0GB473JA002	1	
R2509	CHIP RESISTOR	ERJ6GEYJ1R2V	1	
R2510	CHIP RESISTOR	ERJ6GEYJ1R5V	1	
R2511	CHIP RESISTOR	D0GB101JA002	1	
R2512	CHIP RESISTOR	D0GB221JA002	1	
R2513	CHIP RESISTOR	D0GB221JA002	1	
R2514	CHIP RESISTOR	D0GB221JA002	1	
R2515	CHIP RESISTOR	D0GB183JA002	1	
R2516	CHIP RESISTOR	D0GB102JA002	1	
R2517	CHIP RESISTOR	D0GB101JA002	1	
R3001	CHIP RESISTOR	D0GB152JA002	1	
R3002	CHIP RESISTOR	D0GB622JA002	1	
R3004	CHIP RESISTOR	D0GB562JA002	1	
R3005	CHIP RESISTOR	D0YBR0000002	1	
R3009	CHIP RESISTOR	D0GB153JA002	1	
R3010	CHIP RESISTOR	D0GB103JA002	1	
R3011	CHIP RESISTOR	D0GB102JA002	1	
R3012	CHIP RESISTOR	D0GB102JA002	1	
R3013	CHIP RESISTOR	D0GB273JA002	1	
R3014	CHIP RESISTOR	D0GB471JA002	1	
R3017	CHIP RESISTOR	D0GB102JA002	1	
R3027	CHIP RESISTOR	D0GB332JA002	1	
R3030	CHIP RESISTOR	D0GB106JA002	1	
R3041	CHIP RESISTOR	D0GB122JA002	1	
R4001	CHIP RESISTOR	D0GB332JA002	1	
R4002	CHIP RESISTOR	D0GB104JA002	1	
R4003	CHIP RESISTOR	D0GB223JA002	1	
R4004	CHIP RESISTOR	D0GB221JA002	1	
R4006	CHIP RESISTOR	D0GB223JA002	1	
R4007	CHIP RESISTOR	D0GB103JA002	1	
R4008	CHIP RESISTOR	D0GB334JA002	1	
R4009	CHIP RESISTOR	D0GB333JA002	1	*1,*4,*5,*6,*7,*8,*10,*11
R4009	CHIP RESISTOR	D0GB152JA002	1	
R4010	CHIP RESISTOR	D0GB103JA002	1	
R4011	CHIP RESISTOR	D0GB243JA002	1	*1,*4,*5,*6,*7,*8,*10,*11
R4011	CHIP RESISTOR	D0GB103JA002	1	
R4012	CHIP RESISTOR	D0GB821JA002	1	
R4014	CHIP RESISTOR	D0GB123JA002	1	
R4015	CHIP RESISTOR	D0GB822JA002	1	
R4016	CHIP RESISTOR	D0GB822JA002	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4017	CHIP RESISTOR	D0GB332JA002	1	
R4018	CHIP RESISTOR	D0GB472JA002	1	
R4019	CHIP RESISTOR	D0GB682JA002	1	
R4301	CHIP RESISTOR	D1BB1102A010	1	
R4302	CHIP RESISTOR	D1BB12020002	1	
R4303	CHIP RESISTOR	D1BB1102A010	1	
R4304	CHIP RESISTOR	D1BB12020002	1	
R4305	CHIP RESISTOR	D0GB622JA002	1	
R4306	CHIP RESISTOR	D0GB622JA002	1	
R4307	CHIP RESISTOR	D0GB102JA002	1	
R4308	CHIP RESISTOR	D0GB102JA002	1	
R4309	CHIP RESISTOR	D0GB102JA002	1	
R4501	CHIP RESISTOR	D0GB683JA002	1	
R4502	CHIP RESISTOR	D0GB683JA002	1	
R4503	CHIP RESISTOR	D0GB223JA002	1	
R4503	CHIP RESISTOR	D0GB332JA002	1	
R4504	CHIP RESISTOR	D0GB223JA002	1	
R4504	CHIP RESISTOR	D0GB332JA002	1	
R4505	CHIP RESISTOR	D0GB562JA002	1	
R4506	CHIP RESISTOR	D0GB562JA002	1	
R4507	CHIP RESISTOR	D0GB103JA002	1	
R4507	CHIP RESISTOR	D0GB102JA002	1	
R4508	CHIP RESISTOR	D0GB562JA002	1	
R4509	CHIP RESISTOR	D0GB562JA002	1	
R4510	CHIP RESISTOR	D0GB103JA002	1	
R4510	CHIP RESISTOR	D0GB102JA002	1	
R4511	CHIP RESISTOR	D0GB562JA002	1	
R4512	CHIP RESISTOR	D0GB562JA002	1	
R4513	CHIP RESISTOR	D0GB683JA002	1	
R4514	CHIP RESISTOR	D0GB683JA002	1	
R4515	CHIP RESISTOR	D0GB683JA002	1	
R4516	CHIP RESISTOR	D0GB683JA002	1	
R4517	CHIP RESISTOR	D0GB511JA002	1	
R4518	CHIP RESISTOR	D0GB472JA002	1	
R4519	CHIP RESISTOR	D0GB821JA002	1	
R4520	CHIP RESISTOR	D0GB124JA002	1	
R4521	CHIP RESISTOR	D0GB472JA002	1	
R4522	CHIP RESISTOR	D0GB511JA002	1	
R4523	CHIP RESISTOR	D0GB102JA002	1	
R4524	CHIP RESISTOR	D0GB303JA002	1	
R4525	CHIP RESISTOR	D0GB102JA002	1	
R4526	CHIP RESISTOR	D0GB102JA002	1	
R4527	CHIP RESISTOR	D0GB683JA002	1	
R4528	CHIP RESISTOR	D0GB391JA002	1	*6,*7
R4530	CHIP RESISTOR	D0GB104JA002	1	
R4531	CHIP RESISTOR	D0GB221JA002	1	
R4532	CHIP RESISTOR	D0GB104JA002	1	
R4533	CHIP RESISTOR	D0GB221JA002	1	
R4534	CHIP RESISTOR	D0GB622JA002	1	
R4535	CHIP RESISTOR	D0GB104JA002	1	
R4536	CHIP RESISTOR	D0GB473JA002	1	
R4538	CHIP RESISTOR	D0GB683JA002	1	
R4539	CHIP RESISTOR	D0GB473JA002	1	
R4540	CHIP RESISTOR	D0GB332JA002	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4541	CHIP RESISTOR	D0GB104JA002	1	
R4549	CHIP RESISTOR	D0GB472JA002	1	
R4550	CHIP RESISTOR	D0GB683JA002	1	
R4551	CHIP RESISTOR	D0GB472JA002	1	
R4552	CHIP RESISTOR	D0GB683JA002	1	
R4553	CHIP RESISTOR	D0GB223JA002	1	
R4801	CHIP RESISTOR	D0GB122JA002	1	
R4802	CHIP RESISTOR	D0GB122JA002	1	
R4803	CHIP RESISTOR	D0GB152JA002	1	
R4804	CHIP RESISTOR	D0GB152JA002	1	
R4805	CHIP RESISTOR	D0GB562JA002	1	
R4806	CHIP RESISTOR	D0GB472JA002	1	
R4807	CHIP RESISTOR	D0GB122JA002	1	
R4808	CHIP RESISTOR	D0GB682JA002	1	
R4810	CHIP RESISTOR	D1BB75R0A010	1	
R4812	CHIP RESISTOR	D0GB681JA002	1	
R4813	CHIP RESISTOR	D0GB471JA002	1	
R4814	CHIP RESISTOR	D0GB471JA002	1	
R4901	CHIP RESISTOR	D1BB75R0A010	1	
R4902	CARBON RESISTOR	ERDS2TJ471T	1	
R4903	CHIP RESISTOR	D0GB472JA002	1	
R4904	CHIP RESISTOR	D0GB103JA002	1	
R4905	CARBON RESISTOR	ERDS2TJ331T	1	
R4906	CHIP RESISTOR	D0GB331JA002	1	
R4907	CHIP RESISTOR	D0GB183JA002	1	
R4908	CHIP RESISTOR	D1BB75R0A010	1	
R4909	CHIP RESISTOR	D0GB223JA002	1	
R4910	CHIP RESISTOR	D1BB75R0A010	1	
R4911	CHIP RESISTOR	D0GB750JA002	1	
R4912	CHIP RESISTOR	D0GB331JA002	1	
R4913	CHIP RESISTOR	D1BB75R0A010	1	
R4914	CHIP RESISTOR	D0GB750JA002	1	
R4915	CHIP RESISTOR	D1BB75R0A010	1	
R4916	CARBON RESISTOR	ERDS2TJ471T	1	
R4917	CHIP RESISTOR	D0GB223JA002	1	
R4918	CHIP RESISTOR	D0GB153JA002	1	
R4919	CHIP RESISTOR	D1BB75R0A010	1	
R4920	CHIP RESISTOR	D0GB331JA002	1	
R4921	CHIP RESISTOR	D0GB331JA002	1	
R4922	CHIP RESISTOR	D1BB75R0A010	1	
R4923	CHIP RESISTOR	D1BB75R0A010	1	
R4924	CHIP RESISTOR	D1BB30R0A010	1	
R4925	CHIP RESISTOR	D1BB75R0A010	1	
R4926	CHIP RESISTOR	D1BB30R0A010	1	
R4927	CHIP RESISTOR	ERJ3RBD132V	1	
R4928	CHIP RESISTOR	ERJ3RBD132V	1	
R4929	CHIP RESISTOR	D0GB750JA002	1	
R4930	CHIP RESISTOR	D0GB750JA002	1	
R4931	CHIP RESISTOR	D0GB750JA002	1	
R4932	CHIP RESISTOR	D0GB471JA002	1	
R4933	CHIP RESISTOR	D0GB471JA002	1	
R4934	CHIP RESISTOR	D0GB750JA002	1	
R4935	CHIP RESISTOR	D0GB331JA002	1	
R4936	CHIP RESISTOR	D0GB331JA002	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4937	CHIP RESISTOR	D0GB331JA002	1	
R4938	CHIP RESISTOR	D0GB221JA002	1	
R4939	CHIP RESISTOR	D0GB331JA002	1	
R4940	CHIP RESISTOR	D0GB471JA002	1	
R4941	CHIP RESISTOR	D0GB103JA002	1	
R4942	CHIP RESISTOR	D0GB471JA002	1	
R4943	CHIP RESISTOR	D0GB104JA002	1	
R4944	CHIP RESISTOR	D0GB104JA002	1	
R4945	CHIP RESISTOR	D0GB104JA002	1	
R4946	CHIP RESISTOR	ERJ3RBD132V	1	
R4947	CHIP RESISTOR	D0GB103JA002	1	
R4948	CHIP RESISTOR	D0GB223JA002	1	
R4949	CHIP RESISTOR	D0GB223JA002	1	
R4950	CHIP RESISTOR	D0GB223JA002	1	
R4951	CHIP RESISTOR	D0GB223JA002	1	
R4952	CHIP RESISTOR	D0YBR0000002	1	
R4953	CHIP RESISTOR	ERJ3RBD132V	1	
R4954	CHIP RESISTOR	D0GB125JA002	1	
R4958	CHIP RESISTOR	D0GB221JA002	1	
R4959	CHIP RESISTOR	D0GB221JA002	1	
R4960	CHIP RESISTOR	D0GB102JA002	1	
R4961	CHIP RESISTOR	D0GB101JA002	1	
R4962	CHIP RESISTOR	D0GB101JA002	1	
R4963	CHIP RESISTOR	D0GB471JA002	1	
R4964	CHIP RESISTOR	D0GB102JA002	1	
R4965	CHIP RESISTOR	D0GB102JA002	1	
R4967	CHIP RESISTOR	D0GB103JA002	1	
R4971	CHIP RESISTOR	D1BB75R0A010	1	
R4972	CHIP RESISTOR	D0GB103JA002	1	
R4973	CHIP RESISTOR	D0GB221JA002	1	
R6002	CHIP RESISTOR	D0GB102JA002	1	
R6003	CHIP RESISTOR	D0GB101JA002	1	
R6004	CHIP RESISTOR	D0YBR0000002	1	
R6005	CHIP RESISTOR	D0GB224JA002	1	
R6006	CHIP RESISTOR	D0GB152JA002	1	
R6007	CHIP RESISTOR	D0GB473JA002	1	
R6008	CHIP RESISTOR	D0GB101JA002	1	
R6009	CHIP RESISTOR	D0GB223JA002	1	
R6010	CHIP RESISTOR	D0GB101JA002	1	
R6011	CHIP RESISTOR	D0GB221JA002	1	
R6012	CHIP RESISTOR	D0GB221JA002	1	
R6013	CHIP RESISTOR	D0GB221JA002	1	
R6014	CHIP RESISTOR	D0GB221JA002	1	
R6015	CHIP RESISTOR	D0GB241JA002	1	
R6017	CHIP RESISTOR	D0GB102JA002	1	
R6019	CHIP RESISTOR	D0GB103JA002	1	
R6020	CHIP RESISTOR	D0GB273JA002	1	
R6021	CHIP RESISTOR	D0GB273JA002	1	
R6022	CHIP RESISTOR	D0GB101JA002	1	
R6023	CHIP RESISTOR	D0GB273JA002	1	
R6025	CHIP RESISTOR	D0GB433JA002	1	
R6026	CHIP RESISTOR	D0GB393JA002	1	
R6031	CHIP RESISTOR	D0GB682JA002	1	
R6038	CHIP RESISTOR	D0GB101JA002	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6039	**CHIP RESISTOR**	**D0GB102JA002**	**1**	
R6040	**CHIP RESISTOR**	**D0GB102JA002**	**1**	
R6041	**CHIP RESISTOR**	**D0GB102JA002**	**1**	
R6046	**CHIP RESISTOR**	**D0GB472JA002**	**1**	
R6047	**CHIP RESISTOR**	**D0GB472JA002**	**1**	
R6048	**CHIP RESISTOR**	**D0GB472JA002**	**1**	
R6049	**CHIP RESISTOR**	**D0GB221JA002**	**1**	
R6052	**CHIP RESISTOR**	**D0GB221JA002**	**1**	
R6071	**CHIP RESISTOR**	**D0GB183JA002**	**1**	
R6077	**CHIP RESISTOR**	**D0GB105JA002**	**1**	
R6078	**CHIP RESISTOR**	**D0GB471JA002**	**1**	
R6079	**CHIP RESISTOR**	**D0GB471JA002**	**1**	
R6080	**CHIP RESISTOR**	**D0GB471JA002**	**1**	
R6084	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
R6085	**CHIP RESISTOR**	**D0GB472JA002**	**1**	
R6086	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6087	**CHIP RESISTOR**	**D0GB102JA002**	**1**	
R6088	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6089	**CHIP RESISTOR**	**D0GB272JA002**	**1**	***1,*2,*3,*4,*5,*6,*7,*8,*9**
R6090	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6091	**CHIP RESISTOR**	**D0GB562JA002**	**1**	
R6092	**CHIP RESISTOR**	**D0GB472JA002**	**1**	
R6102	**CHIP RESISTOR**	**D0GB222JA002**	**1**	
R6105	**CHIP RESISTOR**	**D0GB473JA002**	**1**	
R6106	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6107	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6108	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6109	**CHIP RESISTOR**	**D0GB683JA002**	**1**	
R6113	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6114	**CHIP RESISTOR**	**D0GB122JA002**	**1**	
R6114	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
R6115	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6116	**CHIP RESISTOR**	**D0GB472JA002**	**1**	
R6117	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6118	**CHIP RESISTOR**	**D0GB153JA002**	**1**	
R6119	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6120	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6121	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6122	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6123	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6124	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6125	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R6126	**CHIP RESISTOR**	**D0GB103JA002**	**1**	
R7301	**CHIP RESISTOR**	**D0GB912JA002**	**1**	***2,*3,*9,*12**
R7302	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
R7302	**CHIP RESISTOR**	**D0GB122JA002**	**1**	
R7303	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
R7304	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
R7305	**CHIP RESISTOR**	**D0GB101JA002**	**1**	
R7306	**CHIP RESISTOR**	**D0GB101JA002**	**1**	
R7307	**CHIP RESISTOR**	**D0GB562JA002**	**1**	
R7308	**CHIP RESISTOR**	**D0GB221JA002**	**1**	
R7309	**CHIP RESISTOR**	**D0GB273JA002**	**1**	
R7310	**CHIP RESISTOR**	**D0YBR0000002**	**1**	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R7310	CHIP RESISTOR	D0GB472JA002	1	
R7311	CHIP RESISTOR	D0GB752JA002	1	
R7312	CHIP RESISTOR	D0YBR0000002	1	
R7312	CHIP RESISTOR	D0GB472JA002	1	
R7316	CHIP RESISTOR	D0GB103JA002	1	
R7328	CHIP RESISTOR	D0GB221JA002	1	
R7328	CHIP RESISTOR	D0GB822JA002	1	
R7329	CHIP RESISTOR	D0GB221JA002	1	
R7329	CHIP RESISTOR	D0GB822JA002	1	
R7501	CARBON RESISTOR	ERDS2TJ3R3T	1	
R7503	CHIP RESISTOR	D0GB103JA002	1	
R7504	CARBON RESISTOR	ERDS2TJ471T	1	
R7520	CHIP RESISTOR	D0GB122JA002	1	
R7521	CHIP RESISTOR	D0GB122JA002	1	
R7523	CHIP RESISTOR	D0GB152JA002	1	
R7525	CHIP RESISTOR	D0GB562JA002	1	
R7526	CHIP RESISTOR	D0GB472JA002	1	
R7534	CHIP RESISTOR	D0GB181JA002	1	
R7535	CHIP RESISTOR	D0GB103JA002	1	
R7603	CHIP RESISTOR	D0YBR0000002	1	
R7605	CHIP RESISTOR	D0GB101JA002	1	
R7606	CHIP RESISTOR	D0YBR0000002	1	
R7607	CHIP RESISTOR	D0GB471JA002	1	
R7608	CHIP RESISTOR	D0GB101JA002	1	
R7614	CHIP RESISTOR	D0YBR0000002	1	
R8001	CHIP RESISTOR	D0GB102JA002	1	
R8002	CHIP RESISTOR	D0GB153JA002	1	
R8007	CHIP RESISTOR	D0GB152JA002	1	
R8008	CHIP RESISTOR	D0GB222JA002	1	
R8010	CHIP RESISTOR	D0GB102JA002	1	
R8012	CHIP RESISTOR	D0GB560JA002	1	
R8013	CHIP RESISTOR	D0GB560JA002	1	
R8014	CHIP RESISTOR	D0GB560JA002	1	
R8015	CHIP RESISTOR	D0GB560JA002	1	
R8016	CHIP RESISTOR	D0GB560JA002	1	
R8017	CHIP RESISTOR	D0GB560JA002	1	
R8018	CHIP RESISTOR	D0GB560JA002	1	
R8019	CHIP RESISTOR	D0GB560JA002	1	
R8020	CHIP RESISTOR	D0GB560JA002	1	
R8021	CHIP RESISTOR	D0GB560JA002	1	
R8022	CHIP RESISTOR	D0GB220JA002	1	
R8023	CHIP RESISTOR	D0GB100JA002	1	
R8024	CHIP RESISTOR	D0YBR0000002	1	
R8025	CHIP RESISTOR	D0YBR0000002	1	
R8034	CHIP RESISTOR	D0GB473JA002	1	
R8035	CHIP RESISTOR	D0GB473JA002	1	
R8040	CHIP RESISTOR	D0GB220JA002	1	
R8041	CHIP RESISTOR	D0GB220JA002	1	
R8042	CHIP RESISTOR	D0GB153JA002	1	
R8043	CHIP RESISTOR	D0GB472JA002	1	
R8044	CHIP RESISTOR	D0GB472JA002	1	
R8045	CHIP RESISTOR	D0GB472JA002	1	
R8046	CHIP RESISTOR	D0GB472JA002	1	
R8047	CHIP RESISTOR	D0GB472JA002	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R8048	CHIP RESISTOR	D0GB472JA002	1	
R8049	CHIP RESISTOR	D0GB472JA002	1	
R8050	CHIP RESISTOR	D0GB101JA002	1	
R8051	CHIP RESISTOR	D0GB102JA002	1	
R8053	CHIP RESISTOR	D0GB560JA002	1	
R8054	CHIP RESISTOR	D0GB560JA002	1	
R8055	CHIP RESISTOR	D0GB102JA002	1	
R8056	CHIP RESISTOR	D0GB102JA002	1	
R8057	CHIP RESISTOR	D0GB2R2JA002	1	
R8058	CHIP RESISTOR	D0GB2R2JA002	1	
R8059	CHIP RESISTOR	D0GB331JA002	1	
R8060	CHIP RESISTOR	D0GB331JA002	1	
R8062	CHIP RESISTOR	D0YBR0000002	1	
R8063	CHIP RESISTOR	D0YBR0000002	1	
R8064	CHIP RESISTOR	D0GB221JA002	1	
R8065	CHIP RESISTOR	D0GB222JA002	1	
R8066	CHIP RESISTOR	D0YBR0000002	1	
R8067	CHIP RESISTOR	D0GB103JA002	1	
R8070	CHIP RESISTOR	D0GB103JA002	1	
R8071	CHIP RESISTOR	D0GB103JA002	1	
R8074	CHIP RESISTOR	D0GB100JA002	1	
R8075	CHIP RESISTOR	D0GB820JA002	1	
R8076	CHIP RESISTOR	D0GB820JA002	1	
R8078	CHIP RESISTOR	D0GB822JA002	1	
R8079	CHIP RESISTOR	D0GB822JA002	1	
R8080	CHIP RESISTOR	D0GB105JA002	1	
R8081	CHIP RESISTOR	D0GB271JA002	1	
R8091	CHIP RESISTOR	D0GB473JA002	1	
R8094	CHIP RESISTOR	D0GB510JA002	1	
R8095	CHIP RESISTOR	D0GB510JA002	1	
R8101	CHIP RESISTOR	D0GB470JA002	1	
R8102	CHIP RESISTOR	D0GB751JA002	1	
R8103	CHIP RESISTOR	D0GB681JA002	1	
R8104	CHIP RESISTOR	D0GB202JA002	1	
R8201	CHIP RESISTOR	D0GB823JA002	1	
R8202	CHIP RESISTOR	D0GB823JA002	1	
R8203	CHIP RESISTOR	D0GB153JA002	1	
R8204	CHIP RESISTOR	D0GB472JA002	1	
R8205	CHIP RESISTOR	D0GB472JA002	1	
R8206	CHIP RESISTOR	D0GB473JA002	1	
R8207	CHIP RESISTOR	D0GB473JA002	1	
R8208	CHIP RESISTOR	D0GB473JA002	1	
R8209	CHIP RESISTOR	D0GB473JA002	1	
R8210	CHIP RESISTOR	ERJ6GEYJ6R8V	1	
R8211	CHIP RESISTOR	D0GB222JA002	1	
R8212	CHIP RESISTOR	D0GB222JA002	1	
R8213	CHIP RESISTOR	D0GB682JA002	1	
R8219	CHIP RESISTOR	D0GB752JA002	1	
R8220	CHIP RESISTOR	D0GB752JA002	1	
R8321	CHIP RESISTOR	ERJ3RBD393V	1	
R8322	CHIP RESISTOR	ERJ3RBD132V	1	
R8323	CHIP RESISTOR	ERJ3RBD242V	1	
R8324	CHIP RESISTOR	ERJ3RBD201V	1	
R8325	CHIP RESISTOR	ERJ3RBD101V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R8326	CHIP RESISTOR	ERJ3RBD101V	1	
R8327	CHIP RESISTOR	ERJ3RBD201V	1	
R8328	CHIP RESISTOR	D0GB512JA002	1	
R8329	CHIP RESISTOR	D0GB304JA002	1	
R8330	CHIP RESISTOR	D0GB512JA002	1	
R8407	CHIP RESISTOR	D0GB221JA002	1	
R8413	CHIP RESISTOR	D0GB101JA002	1	
R8414	CHIP RESISTOR	D0GB101JA002	1	
R8415	CHIP RESISTOR	D0GB101JA002	1	
R8416	CHIP RESISTOR	D0YBR0000002	1	
RA8001	RESISTOR ARRAY	D1H88204A024	1	
RA8002	RESISTOR ARRAY	D1H88204A024	1	
RA8003	RESISTOR ARRAY	D1H88204A024	1	
RA8004	RESISTOR ARRAY	D1H88204A024	1	
RA8005	RESISTOR ARRAY	D1H88204A024	1	
RA8006	RESISTOR ARRAY	D1H88204A024	1	
RA8007	RESISTOR ARRAY	D1H88204A024	1	
RA8401	RESISTOR ARRAY	D1H88204A024	1	
S1501	MODE SWITCH	K0ZZ00000598	1	
S4802	TOUCH SWITCH	EVQ11L07B	1	
S4803	TOUCH SWITCH	EVQ11L07B	1	
S4804	TOUCH SWITCH	EVQ11L07B	1	
S4805	TOUCH SWITCH	EVQ11L07B	1	
S4806	TOUCH SWITCH	EVQ11L07B	1	
S4807	TOUCH SWITCH	EVQ11L07B	1	
S4808	TOUCH SWITCH	EVQ11L07B	1	
S4809	TOUCH SWITCH	EVQ11L07B	1	
S4810	TOUCH SWITCH	EVQ11L07B	1	
S4811	TOUCH SWITCH	EVQ11L07B	1	
S7501	TOUCH SWITCH	EVQ11L07B	1	
S7503	TOUCH SWITCH	EVQ11L07B	1	
S7504	TOUCH SWITCH	EVQ11L07B	1	
S7506	TOUCH SWITCH	EVQ11L07B	1	
S7507	SAFETY TAB SWITCH	K0C111A00006	1	
S7508	TOUCH SWITCH	EVQ11L07B	1	
T1150	TRANSFORMER	ETS29AZ2H6AC	1	⚠
T4001	BIAS TRANSFORMER	G2A362C00003	1	
W501	CHIP RESISTOR	D0YDR0000006	1	
W502	CHIP RESISTOR	D0YBR0000002	1	
W504	CHIP RESISTOR	D0YBR0000002	1	
W505	CHIP RESISTOR	D0YBR0000002	1	
W506	CHIP RESISTOR	D0YBR0000002	1	
W509	CHIP RESISTOR	D0YBR0000002	1	
W510	CHIP RESISTOR	D0YBR0000002	1	
W511	CHIP RESISTOR	D0YBR0000002	1	
W512	CHIP RESISTOR	D0YDR0000006	1	
W513	CHIP RESISTOR	D0YBR0000002	1	
W514	CHIP RESISTOR	D0YBR0000002	1	
W515	CHIP RESISTOR	D0YBR0000002	1	
W516	CHIP RESISTOR	D0YBR0000002	1	
W517	CHIP RESISTOR	D0YDR0000006	1	
W518	CHIP RESISTOR	D0YBR0000002	1	
W519	CHIP RESISTOR	D0YDR0000006	1	
W520	CHIP RESISTOR	D0YDR0000006	1	

[illegible]	CHIP RESISTOR	[illegible]	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
W521	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W522	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W523	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W524	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W525	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W526	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W527	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W528	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W529	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W530	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W531	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W532	**CHIP RESISTOR**	**D0YDR0000006**	**1**	
W533	**CHIP RESISTOR**	**D0YDR0000006**	**1**	
W534	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W535	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W536	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W537	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W538	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W539	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W540	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W541	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W542	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W543	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W544	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W545	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W546	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W547	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W548	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W549	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W550	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W551	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W552	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W553	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W554	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W555	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W557	**CHIP RESISTOR**	**D0YDR0000006**	**1**	
W558	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W559	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W560	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W561	**CHIP RESISTOR**	**D0YDR0000006**	**1**	
W562	**CHIP RESISTOR**	**D0YDR0000006**	**1**	
W563	**CHIP RESISTOR**	**D0YDR0000006**	**1**	
W564	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W565	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W566	**CHIP RESISTOR**	**D0YDR0000006**	**1**	
W567	**CHIP RESISTOR**	**D0YDR0000006**	**1**	
W568	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W569	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W570	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W571	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W572	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W573	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W574	**CHIP RESISTOR**	**D0YBR0000002**	**1**	
W575	**CHIP RESISTOR**	**D0YBR0000002**	**1**	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
W576	CHIP RESISTOR	D0YBR0000002	1	
W577	CHIP RESISTOR	D0YBR0000002	1	
W578	CHIP RESISTOR	D0YDR0000006	1	
W579	CHIP RESISTOR	D0YDR0000006	1	
W580	CHIP RESISTOR	D0YDR0000006	1	
W581	CHIP RESISTOR	D0YBR0000002	1	
W582	CHIP RESISTOR	D0YBR0000002	1	
W583	CHIP RESISTOR	D0YBR0000002	1	
W584	CHIP RESISTOR	D0YBR0000002	1	
W585	CHIP RESISTOR	D0YBR0000002	1	
W587	CHIP RESISTOR	D0YBR0000002	1	
W588	CHIP RESISTOR	D0YDR0000006	1	
W589	CHIP RESISTOR	D0YBR0000002	1	
W590	CHIP RESISTOR	D0YBR0000002	1	
W591	CHIP RESISTOR	D0YBR0000002	1	
W592	CHIP RESISTOR	D0YBR0000002	1	
W593	CHIP RESISTOR	D0YBR0000002	1	
W594	CHIP RESISTOR	D0YBR0000002	1	
W595	CHIP RESISTOR	D0YBR0000002	1	
W596	CHIP RESISTOR	D0YBR0000002	1	
W597	CHIP RESISTOR	D0YBR0000002	1	
W598	CHIP RESISTOR	D0YBR0000002	1	
W599	CHIP RESISTOR	D0YBR0000002	1	
W600	CHIP RESISTOR	D0YBR0000002	1	
W601	CHIP RESISTOR	D0YBR0000002	1	
W602	CHIP RESISTOR	D0YBR0000002	1	
X3001	CRYSTAL OSCILLATOR	H0D443400040	1	
X6001	CRYSTAL OCSILLATOR	H0A120500004	1	
X6002	CRYSTAL OSCILLATOR	H0A327200101	1	
X6101	CERAMIC OSCILLATOR	H2D800400009	1	
X7301	CRYSTAL OSCILLATOR	H0D245500016	1	*1,*4,*5,*6,*7,*8,*10,*11
X7301	CRYSTAL OSCILLATOR	H0H400400006	1	*2,*3,*9,*12
X8001	CRYSTAL OSCILLATOR	H0J270500066	1	
ZA1103	FUSE HOLDER	EYF52BCY	1	
ZA1104	FUSE HOLDER	EYF52BCY	1	
ZJ1001	EARTH ANGLE	K9ZZ00000424	1	

21.7. Differences between / REPD0010x and REPD0024x

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C6029	CHIP CAPACITOR	F1H1A105A004	1	deleted
C6038	CHIP CAPACITOR	F1H1E104A030	1	deleted
C6039	CHIP CAPACITOR	F1J1A105A003	1	deleted
C6040	CHIP CAPACITOR	F1H1E104A030	1	deleted
C6041	CHIP CAPACITOR	ECJ2YB0J475K	1	deleted
C6042	CHIP CAPACITOR	ECJ1VB1C563K	1	deleted
IC6006	INTEGRATED CIRCUIT	C1AB00002140	1	deleted
R6038	CHIP RESISTOR	D0GB101JA002	1	deleted
R6052	CHIP RESISTOR	D0GB221JA002	1	deleted
R6085	CHIP RESISTOR	D0GB472JA002	1	deleted
R6086	CHIP RESISTOR	D0GB103JA002	1	deleted
R6087	CHIP RESISTOR	D0GB102JA002	1	deleted
R6088	CHIP RESISTOR	D0GB103JA002	1	deleted
R6089	CHIP RESISTOR	D0GB272JA002	1	deleted
R6090	CHIP RESISTOR	D0GB103JA002	1	deleted
R6091	CHIP RESISTOR	D0GB562JA002	1	deleted
R6092	CHIP RESISTOR	D0GB472JA002	1	deleted
IC6003	INTEGRATED CIRCUIT	C1AB00001293	1	added
C6027	CHIP CAPACITOR	F1H1C333A041	1	added
C6028	CHIP CAPACITOR	F1H1H222A219	1	added
C6045	CHIP CAPACITOR	F1H1H1510001	1	added
C6046	CHIP CAPACITOR	ECJ1VF1C474Z	1	added
C6047	CHIP CAPACITOR	F1H1E104A030	1	added
LB6002	CHIP RESISTOR	D0YBR0000002	1	added
LB6003	CHIP RESISTOR	D0YBR0000002	1	added
R6051	CHIP RESISTOR	D0GB564JA002	1	added
R6053	CHIP RESISTOR	D0GB682JA002	1	added
R6054	CHIP RESISTOR	D0GB125JA002	1	added
R6055	CHIP RESISTOR	D0GB682JA002	1	added
R6056	CHIP RESISTOR	D0GB125JA002	1	added
R6057	CHIP RESISTOR	D0GB104JA002	1	added
R6082	CHIP RESISTOR	D0GB121JA002	1	added
R6083	CHIP RESISTOR	D0GB103JA002	1	added
R6095	CHIP RESISTOR	D0GB222JA002	1	added
R6096	CHIP RESISTOR	D0GB221JA002	1	added
R6015	CHIP RESISTOR	D0GB121JA002	1	changed

22. DIAGRAMS FOR PRINTING A4 SIZE

22.1. BLOCK DIAGRAMMS FOR PRINTING A4 SIZE

22.2. SCHEMATIC DIAGRAMS FOR PRINTING A4 SIZE

22.3. MAIN PCB (COMPONENT SIDE) FOR PRINTING A4 SIZE

22.4. MAIN PCB (SOLDER SIDE) FOR PRINTING A4 SIZE

22.5. MAIN PCB (COMPONENT SIDE - REPD0024x) A4 SIZE

22.6. MAIN PCB (SOLDER SIDE - REPD0024x) A4 SIZE

22.7. DECODER PCB FOR PRINTING A4 SIZE

22.8. POWER PCB FOR PRINTING A4 SIZE

22.9. FRONT PCB FOR PRINTING A4 SIZE

22.10. TERMINAL PCB FOR PRINTING A4 SIZE

Ref.no.	IC1101							
Mode	1	2	3	4	5	6	7	8
Stop	5,60	1,90	0,00	265,00	265,00	1,80	14,20	0,00
Play	5,60	2,00	0,00	264,00	263,00	1,90	14,20	0,00

Ref.no.	IC1200		
Mode	1	2	3
Stop	5,00	0,00	2,40
Play	5,00	0,00	2,85

Ref.no.	IC1320		
Mode	1	2	3
Stop	1,10	0,00	1,80
Play	1,10	0,00	1,80

Ref.no.	IC1340		
Mode	1	2	3
Stop	1,10	0,00	3,80
Play	1,10	0,00	3,80

Ref.no.	IC1390				
Mode	1	2	3	4	5
Stop	11,50	2,30	8,80	0,00	0,00
Play	11,50	2,30	8,80	0,00	0,00

Ref.no.	IC2501																		
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	12,00	0,70	0,00	0,70	0,00	0,00	16,60	0,00	0,00	1,00	4,30	0,20	0,40	4,70	2,40	2,80	3,00	2,40	4,90	0,80
Play	12,00	2,40	0,00	0,70	0,00	0,00	16,60	0,00	2,80	1,80	1,80	0,60	1,40	2,60	2,40	2,80	2,80	1,30	5,60	3,70
Ref.no.																				
Mode	21	22	23	24	25	26	27													
Stop	13,80	0,80	0,80	0,00	0,80	0,00	0,00													
Play	13,40	3,70	3,70	0,00	4,00	0,00	0,00													

Ref.no.	IC3001																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	0,00	0,00	0,00	5,10	2,16	2,60	2,10	2,10	2,10	2,60	2,60	3,30	0,00	1,60	2,80	3,20	2,80	2,00	3,00	0,00
Play	0,00	0,00	0,00	5,10	2,16	2,60	2,10	2,10	1,40	1,80	1,90	0,70	0,00	2,40	2,80	4,80	2,80	1,90	2,80	4,20
Ref.no.																				
Mode	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
Stop	2,80	5,00	2,40	0,60	2,10	2,80	1,30	0,00	1,40	2,30	0,20	2,20	1,90	2,10	3,20	2,20	2,60	2,10	1,60	2,10
Play	2,80	5,00	2,40	0,90	2,10	2,80	0,90	0,00	2,20	3,00	0,35	2,20	1,90	2,10	3,00	2,20	3,60	2,10	1,40	2,10
Ref.no.																				
Mode	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
Stop	2,50	2,00	2,20	0,00	3,00	3,10	5,10	0,10	3,80	5,30	2,40	5,40	2,60	0,00	2,10	0,00	2,20	2,00	5,00	5,00
Play	2,50	2,00	2,20	0,00	3,00	3,10	5,10	0,10	3,10	5,10	1,80	5,30	0,80	0,00	2,10	0,00	2,20	2,00	5,00	5,00
Ref.no.																				
Mode	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
Stop	0,00	2,60	2,20	2,50	2,20	2,30	0,50	2,40	2,30	1,80	2,20	0,10	3,70	2,80	2,80	2,30	2,80	0,00	5,30	2,60
Play	4,00	2,20	2,20	2,50	2,20	2,80	0,50	1,20	2,00	0,90	2,20	0,10	3,70	2,40	2,80	2,30	2,10	0,00	0,00	2,60
Ref.no.																				
Mode	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
Stop	5,30	0,00	3,20	5,00	2,30	2,30	2,30	0,00	2,30	2,30	2,30	5,10	0,20	2,60	2,60	2,60	0,00	2,40	0,00	2,80
Play	4,90	0,00	0,70	5,00	2,30	2,30	2,30	0,00	2,30	2,30	2,30	5,10	0,30	2,60	2,80	2,60	0,00	2,40	0,00	2,60

Ref.no.	IC4301							
Mode	1	2	3	4	5	6	7	8
Stop	2,50	2,50	2,50	-10,00	2,50	2,50	2,50	12,00
Play	2,80	2,80	2,50	-10,00	2,60	2,50	2,80	12,00

Ref.no.	IC4501																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	2,42	0,00	2,40	0,00	0,00	2,50	2,00	0,00	0,00	0,00	0,00	2,00	0,00	0,00	0,00	2,50	0,53	2,50	2,52	2,10
Play	2,42	0,00	2,40	0,00	0,00	2,50	2,00	0,00	0,00	0,00	0,00	2,00	0,00	0,00	0,00	2,50	0,00	2,50	2,52	0,00
Ref.no.																				
Mode	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
Stop	2,10	2,10	0,00	2,10	5,10	2,10	0,00	4,30	1,80	1,75	0,00	2,50	2,50	0,50	2,50	4,60	0,00	0,00	0,00	5,00
Play	0,00	0,60	0,00	0,60	5,10	0,00	2,20	4,30	1,80	1,75	1,80	2,50	2,50	0,60	2,50	0,00	1,70	0,00	0,00	5,00
Ref.no.																				
Mode	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
Stop	0,00	4,00	4,10	3,20	1,60	4,90	2,50	2,50	0,20	0,60	6,60	6,00	6,00	0,00	0,00	0,00	6,00	12,10	6,10	0,70
Play	0,00	3,70	4,50	3,20	1,60	4,90	2,50	2,50	0,20	0,60	6,00	6,00	6,00	0,00	0,00	0,00	6,00	12,10	6,10	1,10
Ref.no.																				
Mode	61	62	63	64																
Stop	2,50	2,40	0,00	0,00																
Play	2,50	2,40	0,00	0,00																

Ref.no.	IC4502															
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Stop	0,50	2,30	0,00	0,00	0,00	1,00	-10,00	0,00	0,50	0,50	0,50	0,00	0,00	0,00	2,60	5,40
Play	0,50	2,40	0,00	0,00	0,00	0,00	-9,30	0,00	0,50	0,50	0,50	0,00	0,00	0,00	2,70	5,30

Ref.no.	IC4901																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	0,00	3,60	4,10	0,00	4,00	0,50	3,50	6,20	0,00	10,80	2,00	12,10	0,00	0,00	0,00	3,80	2,10	2,40	0,00	0,30
Play	0,00	3,60	4,10	0,00	4,20	0,50	3,50	7,10	1,70	11,80	2,00	13,90	1,70	0,00	0,00	3,80	1,10	1,10	0,00	1,20
Ref.no.																				
Mode	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36				
Stop	5,00	0,40	2,00	0,50	0,00	1,00	5,00	1,80	0,50	0,50	0,40	0,30	0,00	0,20	0,00	1,80				
Play	5,50	0,40	2,30	0,50	0,00	1,10	5,00	1,80	1,60	1,40	1,30	1,30	0,00	1,80	0,00	1,80				

Ref.no.	IC4905															
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Stop	3,10	0,00	1,20	4,90	0,00	2,30	0,00	2,20	0,00	2,30	2,50	5,00	1,60	2,50	2,80	0,00
Play	2,60	0,20	1,60	5,30	0,00	2,40	0,00	2,20	0,00	2,30	2,40	5,00	1,60	3,30	3,10	0,00

Ref.no.	IC6001																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	4,80	0,00	4,60	0,00	0,00	5,00	4,60	4,90	3,20	0,00	0,00	2,60	0,00	5,20	0,00	0,00	4,80	2,60	0,00	0,00
Play	4,80	4,50	4,60	0,00	0,00	5,00	5,00	4,90	0,70	0,00	4,80	4,80	0,00	5,40	0,00	0,00	4,80	1,40	1,70	0,00
Ref.no.																				
Mode	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
Stop	5,10	0,00	4,30	0,00	0,00	0,00	0,00	4,60	0,00	0,00	4,80	4,80	5,00	4,80	1,25	1,50	4,80	1,90	2,30	0,00
Play	4,80	0,00	4,30	4,80	0,00	0,00	0,00	0,00	0,00	0,00	4,80	4,80	0,00	4,80	1,25	1,50	4,80	1,90	1,90	0,00
Ref.no.																				
Mode	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
Stop	1,80	0,00	4,80	0,00	1,10	0,00	1,60	2,10	0,00	0,70	2,50	1,70	5,00	2,00	0,00	1,00	0,00	4,80	0,00	0,00
Play	4,80	0,00	4,80	0,00	1,70	0,00	1,60	2,10	0,00	1,60	2,50	1,60	5,00	2,00	0,00	2,00	0,00	4,80	0,00	0,00
Ref.no.																				
Mode	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
Stop	0,00	0,00	0,00	5,10	0,00	0,00	0,00	4,40	3,30	4,50	3,60	3,50	0,00	0,00	0,00	0,00	4,70	5,10	5 /0	5 /0
Play	0,00	0,00	0,00	5,10	0,00	0,00	0,20	4,40	3,30	4,50	3,60	3,50	0,00	0,00	0,00	2,50	2,40	5,10	5 /0	5 /0
Ref.no.																				
Mode	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
Stop	0,00	0,00	0,00	0,00	5,10	2,50	2,50	0,00	0,70	2,50	2,50	2,50	0,60	2,50	2,50	2,50	2,50	5,00	5,00	0,00
Play	0,00	0,00	0,00	0,00	1,00	2,50	2,50	0,00	0,70	1,30	2,50	2,50	0,60	2,50	2,50	2,50	2,50	5,00	5,00	0,00

Ref.no.	IC6002							
Mode	1	2	3	4	5	6	7	8
Stop	0,00	0,00	0,00	0,00	3,60	3,70	4,80	5,10
Play	0,00	0,00	0,00	0,00	3,90	3,70	4,80	5,10

Ref.no.	IC6006																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	0,00	2,70	5,10	5,00	0,00	4,20	4,60	5,00	5,00	0,00	2,20	2,00	0,90	5,00	5,00	3,30	2,60	4,90	5,00	4,90
Play	0,00	2,70	5,40	5,10	0,00	4,20	3,90	5,00	4,60	0,00	2,20	2,30	0,90	4,90	4,90	3,00	2,50	4,50	4,90	5,40
Ref.no.																				
Mode	21	22	23	24																
Stop	0,00	3,50	5,50	5,00																
Play	0,00	3,60	4,90	5,00																

Ref.no.	IC6101																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	3,30	4,50	4,50	1,00	4,20	4,50	4,90	4,90	2,30	2,50	0,00	0,00	NC	0,00	0,00	5,20	5,00	5,00	5,10	5,00
Play	3,30	4,50	4,50	1,00	4,20	4,50	4,90	4,90	2,30	2,50	0,00	0,00	NC	0,00	0,00	5,20	5,00	5,00	5,10	5,00
Ref.no.																				
Mode	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
Stop	3,40	1,50	0,50	5,00	0,00	5,60	5,70	2,70	NC	NC	5,00	5,00	5,10	5,00	2,40	5,00	6,00	5,30	NC	NC
Play	2,90	1,50	0,50	5,00	0,00	5,10	4,90	2,40	NC	NC	5,00	5,00	5,10	5,00	2,60	5,00	5,50	4,90	NC	NC
Ref.no.																				
Mode	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
Stop	NC	4,10	NC	2,40	NC	0,00	5,00	NC	NC	NC	6,00	-20,00	-20,00	-20,00	-20,00	-20,00	-20,00	-20,00	-20,00	NC
Play	NC	4,10	NC	2,40	NC	0,00	5,20	NC	NC	NC	1,50	-21,00	-21,00	-21,00	-21,00	-21,00	-24,00	-21,00	-21,00	NC
Ref.no.																				
Mode	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
Stop	NC	-20,00	NC	-23,00	-20,00	-20,00	-23,50	-18,00	-13,90	-15,80	-20,80	-23,30	-23,40	-20,80	-13,50	-16,00	-16,00	-13,50	-21,00	-21,00
Play	NC	-21,00	NC	-23,60	-21,00	-21,00	-23,50	-18,40	-8,30	-13,40	-18,40	-23,50	-23,60	-23,60	-13,60	-13,70	-13,70	-16,10	-18,70	-18,70
Ref.no.																				
Mode	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
Stop	-18,50	-21,00	-18,50	-13,50	-16,00	-13,50	-21,00	-21,00	-18,50	-18,50	-18,50	-21,00	-16,00	-8,70	NC	NC	NC	NC	NC	-25,30
Play	-16,20	-18,60	-16,10	-16,10	-13,60	-13,60	-21,00	-21,00	-16,10	-13,60	-18,70	-21,10	-16,20	-11,30	NC	NC	NC	NC	NC	-23,70

Ref.no.	IC7301																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	2,50	2,50	5,00	0,00	0,00	5,00	0,00	0,80	0,00	0,80	0,00	NC	0,00	1,60	1,60	0,00	0,00	2,00	0,00	0,00
Play	2,50	2,50	5,00	0,00	0,00	5,00	0,00	0,80	0,00	0,80	0,00	NC	0,00	1,60	1,60	0,00	0,00	2,00	0,00	0,00
Ref.no.																				
Mode	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
Stop	3,30	0,00	NC	2,00	2,00	5,00	0,00	5,00	3,80	3,80	0,80	0,80	0,80	0,80	5,00	0,00	5,00	2,50	NC	NC
Play	3,30	0,00	NC	2,00	2,00	5,00	0,00	5,00	3,80	3,80	0,80	0,80	0,80	0,80	5,00	0,00	5,00	2,50	NC	NC
Ref.no.																				
Mode	41	42	43	44																
Stop	2,50	5,00	2,50	0,00																
Play	2,50	5,00	2,50	0,00																

Ref.no.	IC8001																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	3,00	3,00	0,00	3,20	3,20	3,20	3,20	3,20	0,00	3,20	3,10	3,20	3,20	3,20	3,00	0,00	3,20	3,20	3,20	0,00
Play	3,00	3,00	0,00	3,20	3,20	3,20	3,20	3,20	0,00	3,20	3,10	3,20	3,20	3,20	3,00	0,00	3,20	3,20	3,20	0,00
Ref.no.																				
Mode	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
Stop	0,00	3,20	3,00	1,20	0,70	1,20	3,30	3,20	0,00	0,00	0,00	3,30	3,70	3,20	0,00	0,40	2,80	3,30	0,00	0,00
Play	0,00	3,20	2,30	1,50	1,10	1,20	0,80	3,20	0,00	0,00	0,90	0,70	2,20	3,20	0,00	1,00	2,20	3,30	0,00	0,00
Ref.no.																				
Mode	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
Stop	2,80	0,60	2,40	1,20	2,00	1,00	0,20	3,20	0,00	2,50	0,80	2,70	3,20	0,00	0,00	3,20	3,20	0,00	3,20	3,20
Play	0,00	1,40	1,60	1,20	1,00	0,70	1,00	3,20	0,00	0,00	0,90	1,80	3,20	0,00	0,00	3,20	3,20	0,00	3,20	3,20
Ref.no.																				
Mode	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
Stop	0,00	3,20	0,00	0,00	0,00	0,60	0,00	2,90	2,70	1,20	0,00	0,00	3,20	0,00	1,60	1,60	0,00	3,30	1,40	3,20
Play	0,00	3,20	1,90	0,00	0,00	0,40	0,00	2,90	2,70	1,20	0,00	0,00	3,20	0,00	1,60	2,10	0,00	0,00	3,30	0,00
Ref.no.																				
Mode	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
Stop	3,20	0,00	0,00	3,20	0,00	0,00	0,00	0,00	1,20	0,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00	3,20	0,70	0,00
Play	3,20	0,00	3,30	3,20	0,00	0,00	0,00	0,00	1,20	0,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00	3,20	0,70	0,00
Ref.no.																				
Mode	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120
Stop	2,30	2,00	1,80	0,10	0,00	0,00	3,20	2,00	2,00	1,80	1,80	1,40	0,70	1,60	1,60	1,60	1,60	3,20	1,70	1,60
Play	2,30	2,00	1,80	0,10	0,00	0,00	3,20	2,00	2,00	1,80	1,80	1,40	1,40	1,60	1,60	1,60	1,60	3,20	1,80	1,60
Ref.no.																				
Mode	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140
Stop	1,30	0,00	0,00	0,00	0,00	0,00	2,20	1,60	2,20	2,20	2,30	2,30	2,20	2,10	2,20	2,20	2,20	2,20	1,60	1,60
Play	1,30	0,00	0,00	0,00	0,00	0,00	2,20	1,60	2,20	2,20	2,20	2,20	2,20	2,40	2,20	2,20	2,20	2,20	1,60	1,80
Ref.no.																				
Mode	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160
Stop	3,20	1,20	2,20	2,10	0,00	1,60	1,60	1,50	0,30	3,20	0,00	0,00	1,30	1,30	2,20	0,30	0,00	0,80	3,20	0,00
Play	3,20	1,10	2,40	2,10	0,00	1,60	1,60	1,60	0,60	3,20	0,40	0,40	1,30	1,30	2,20	0,50	0,00	0,80	3,20	0,00
Ref.no.																				
Mode	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180
Stop	3,20	0,00	1,50	0,00	1,50	1,50	3,20	0,00	1,60	1,70	1,60	1,20	0,00	0,00	0,00	0,00	1,60	3,20	0,00	3,20
Play	3,20	0,00	1,50	0,00	1,40	1,50	3,20	0,00	1,60	1,30	1,60	1,20	0,00	0,00	0,00	0,00	1,60	3,20	0,00	3,20
Ref.no.																				
Mode	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200
Stop	0,00	3,20	0,00	0,00	0,00	0,00	0,00	0,00	0,00	3,20	0,00	0,90	1,63	0,70	1,50	3,20	1,20	1,40	1,50	0,00
Play	0,00	3,20	0,00	0,00	0,00	0,00	0,00	0,00	0,00	3,20	0,00	0,90	1,30	0,70	1,40	3,20	1,00	1,30	1,50	0,00
Ref.no.																				
Mode	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220
Stop	0,00	3,20	1,60	0,50	0,00	1,50	1,30	1,80	3,20	1,50	0,00	0,60	0,00	3,00	3,00	3,20	1,50	0,00	1,20	1,50
Play	0,00	3,20	1,50	0,60	0,00	1,30	1,30	1,40	3,20	1,50	0,50	0,70	0,00	3,00	3,00	3,20	1,30	0,00	1,20	1,50
Ref.no.																				
Mode	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240
Stop	0,00	0,00	1,40	0,00	3,20	1,30	0,00	1,33	0,00	0,00	3,20	1,40	0,00	2,50	0,00	1,20	0,00	0,00	3,20	2,60
Play	0,00	0,00	1,40	0,00	3,20	1,40	0,00	1,40	0,00	0,00	3,20	1,40	0,00	2,50	0,00	1,20	0,00	0,00	3,20	3,10
Ref.no.																				
Mode	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256				
Stop	1,28	0,00	1,30	3,20	2,97	3,20	0,00	3,20	3,00	0,00	3,00	3,00	0,00	3,30	3,30	3,00				
Play	1,30	0,00	1,50	3,20	3,20	3,20	0,00	3,20	3,00	0,00	3,00	3,00	0,00	3,30	3,20	3,00				

Ref.no.	IC8003																			
Mode	1	2	3	4	5	6	7	8												
Stop	0,00	0,00	0,00	0,00	3,30	3,30	0,00	3,30												
Play	0,00	0,00	0,00	0,00	3,30	3,30	0,00	3,30												

Ref.no.	IC8101																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	1,00	0,30	0,60	0,40	0,30	2,80	2,80	0,80	2,00	0,00	3,30	3,30	0,60	3,30	0,00	0,50	2,40	2,50	0,50	2,20
Play	0,00	3,70	3,60	3,00	3,60	3,60	3,60	3,30	0,00	0,00	3,30	3,30	0,00	3,30	0,00	0,00	0,00	3,30	3,30	3,40
Ref.no.																				
Mode	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
Stop	2,20	0,80	3,30	2,20	2,90	2,50	0,00	2,30	0,80	0,90	1,20	0,50	0,30	0,30	0,20	0,20	3,30	1,20	1,20	1,50
Play	3,60	3,60	2,70	3,30	0,00	3,30	0,00	0,90	0,80	0,90	0,90	0,80	0,70	0,60	0,50	0,15	3,30	0,40	0,40	0,30
Ref.no.																				
Mode	41	42	43	44	45	46	47	48												
Stop	1,40	1,40	1,60	1,70	2,20	0,00	3,30	0,70												
Play	0,00	1,50	2,20	0,90	1,70	0,00	3,30	1,80												

Ref.no.	IC8102																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	3,30	3,20	3,30	3,20	3,10	0,00	3,10	3,30	3,30	3,10	3,00	0,00	2,90	3,30	3,10	3,30	3,30	3,30	2,80	3,00
Play	3,30	3,20	3,40	3,30	3,30	0,00	3,30	3,30	3,30	3,30	3,30	0,00	3,30	3,30	3,30	3,60	3,30	3,30	3,10	0,60
Ref.no.																				
Mode	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
Stop	1,70	0,00	0,00	0,00	0,00	1,60	3,60	0,00	1,60	1,60	1,60	1,60	0,00	0,00	0,00	0,00	3,30	1,60	3,00	0,00
Play	0,60	0,00	0,60	0,60	0,00	0,00	3,30	0,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00	2,30	1,60	3,30	0,00
Ref.no.																				
Mode	41	42	43	44	45	46	47	48	49	50	51	52	53	54						
Stop	0,00	3,20	3,30	3,30	3,20	0,00	3,10	3,20	3,30	3,00	3,00	0,00	3,10	0,00						
Play	0,00	3,30	3,40	3,30	3,30	0,00	3,60	3,30	3,30	3,30	3,30	0,00	3,30	0,00						

Ref.no.	IC8201																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Stop	1,60	1,60	1,60	1,70	1,70	1,60	0,00	5,00	0,00	0,00	2,70	2,50	2,80	2,60	4,60	4,20	3,70	4,20	0,00	5,00
Play	1,60	1,60	1,60	1,90	1,90	1,80	0,00	5,00	3,30	0,00	2,50	2,50	2,50	2,60	4,20	4,70	5,80	2,70	0,00	5,00
Ref.no.																				
Mode	21	22	23	24	25	26	27	28												
Stop	9,00	8,90	1,70	2,40	2,40	1,70	0,00	5,00												
Play	9,00	9,00	1,80	2,40	2,40	1,70	3,40	5,00												

Ref.no.	IC8402																			
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16				
Stop	1,60	1,60	0,00	1,60	3,30	3,30	3,30	3,30	0,00	2,50	2,50	2,20	0,00	5,00	0,00	0,00				
Play	1,60	1,60	0,70	1,60	3,30	3,30	3,20	3,30	0,00	2,50	2,50	2,50	0,00	5,00	5,00	5,00				

Ref.no.	**Q1002**			**Q1003**			**Q1004**			**QR1001**			**QR1002**					
Mode	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**			
Stop	12,20	12,90	15,60	5,10	5,80	6,20	5,00	5,80	7,70	0	4,7	4,7	-9,2	5	-9,3			
Play	**12,00**	**12,70**	**14,60**	**5,10**	**5,80**	**6,20**	**5,00**	**5,80**	**7,70**	**0**	**4,7**	**4,7**	**-9,2**	**5**	**-9,3**			

Ref.no.	**Q1321**			**Q1322**			**Q1341**			**Q1360**			**Q1601**			**Q1602**		
Mode	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**
Stop	1,26	1,90	3,20	1,26	1,90	3,52	4,00	4,80	4,63	5,10	5,74	6,10	5,80	6,70	6,60	5,70	6,70	6,60
Play	**1,26**	**1,90**	**2,90**	**1,26**	**1,90**	**2,99**	**3,30**	**4,00**	**4,70**	**5,10**	**5,74**	**5,80**	**5,80**	**6,70**	**6,60**	**5,70**	**6,70**	**6,60**

Ref.no.	**Q3001**						**Q4003**			**Q4004**			**Q4005**			**Q4006**		
Mode	**E**	**B**	**C**				**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**
Stop	1,55	2,20	5,10				0,00	0,70	0,00	0,00	0,60	0,00	0,00	0,10	0,10	5,30	5,60	0,10
Play	**1,55**	**2,20**	**5,10**				**0,00**	**0,70**	**0,00**	**0,00**	**0,70**	**0,00**	**0,00**	**0,15**	**0,30**	**5,52**	**5,50**	**0,10**

Ref.no.	**QR4001**			**QR4002**			**QR4005**			**QR4501**			**QR4503**			**QR4502**		
Mode	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**
Stop	0,00	0,00	0,00	5,10	0,00	5,05	0,00	0,00	5,50	0,00	4,60	0,00	0,00	4,50	0,00	0,00	5,60	5,10
Play	**0,00**	**0,00**	**0,00**	**5,10**	**0,00**	**5,05**	**0,00**	**0,00**	**5,50**	**0,00**	**-0,80**	**0,00**	**0,00**	**-1,50**	**0,00**	**0,00**	**0,00**	**1,50**

Ref.no.	**Q4901**			**Q4902**			**Q4903**			**Q4904**			**Q4905**			**Q4906**		
Mode	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**
Stop	0,00	0,00	6,00	0,40	1,04	0,00	0,40	1,00	0,00	5,10	5,60	5,80	11,90	12,20	12,20	0,00	5,00	0,30
Play	**0,00**	**0,00**	**6,00**	**0,40**	**1,04**	**0,00**	**0,40**	**1,00**	**0,00**	**1,86**	**2,50**	**5,00**	**11,90**	**12,20**	**12,20**	**0,40**	**0,00**	**0,40**

Ref.no.	**Q4907**			**Q4908**			**Q4909**			**Q4910**								
Mode	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**						
Stop	0,00	0,70	0,00	0,00	0,70	0,00	0	0	1,3	0	0	0,9						
Play	**0,00**	**0,70**	**0,00**	**0,00**	**0,70**	**0,00**	**0,5**	**1,2**	**0**	**0,3**	**0,9**	**0**						

Ref.no.	**QR4901**			**QR4902**			**QR4903**			**QR4904**			**QR4905**			**QR4906**		
Mode	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**
Stop	0,00	1,10	0,00	0,00	4,30	0,00	0,00	0,20	3,70	0,00	0,30	4,10	0,00	1,80	0,80	0,00	1,90	0,00
Play	**0,00**	**1,10**	**0,00**	**0,00**	**4,20**	**0,00**	**0,00**	**0,20**	**3,70**	**0,00**	**0,30**	**3,70**	**0,00**	**1,80**	**0,80**	**0,00**	**1,90**	**0,00**

Ref.no.	**QR4907**			**QR4908**			**QR4909**			**QR4910**			**QR4911**			**QR4912**		
Mode	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**
Stop	0,00	0,00	0,00	0,00	0,00	1,80	0,00	5,20	0,00	0	5,5	0	0	5,2	0	0	5,2	0
Play	**0,00**	**0,70**	**0,00**	**0,00**	**0,00**	**1,80**	**0,00**	**1,30**	**0,00**	**0**	**1,3**	**0**	**0**	**-3,3**	**0**	**0**	**-3,3**	**0**

Ref.no.	**Q4971**						**Q6001**			**Q6002**			**QR6001**			**QR6101**		
Mode	**E**	**B**	**C**				**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**
Stop	1,8	2,5	5,1				0,80	1,60	5,00	0,58	1,00	5,10	0,00	5,30	0,00	5,9	5,9	1
Play	**1,8**	**3,1**	**5,1**				**1,50**	**2,50**	**5,00**	**1,00**	**1,60**	**5,10**	**0,00**	**0,00**	**12,10**	**5,9**	**5,9**	**1**

Ref.no.	**Q8001**			**Q8002**			**Q8003**			**Q8004**			**QR8001**			**QR8002**		
Mode	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**	**E**	**B**	**C**
Stop	0,00	0,00	6,20	0,00	0,00	5,50	6,20	5,00	5,30	6,20	5,90	-3,00	3,30	3,90	0,00	0,00	0,30	0,00
Play	**0,37**	**0,98**	**3,90**	**0,00**	**0,00**	**5,00**	**4,60**	**4,10**	**2,10**	**5,90**	**5,00**	**0,70**	**3,40**	**0,00**	**4,00**	**0,00**	**0,00**	**4,20**

Ref.no.	**QR8003**			**QR8005**		
Mode	**E**	**B**	**C**	**E**	**B**	**C**
Stop	3,00	4,10	4,40	2,90	3,30	5,00
Play	**3,00**	**3,80**	**4,40**	**3,20**	**3,30**	**4,80**

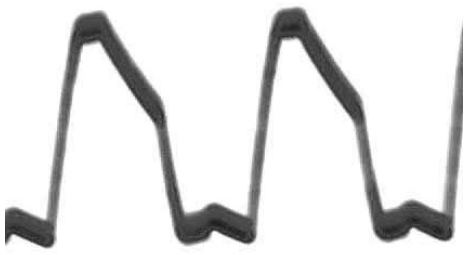

T1150-3 STOP
190Vp-p (5msec.div.)

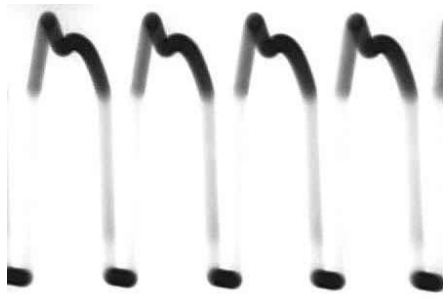

T1150-5 STOP
500Vp-p (5usec.div.)

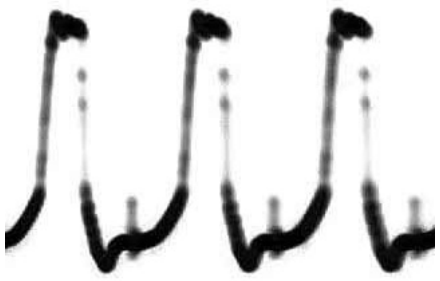

T1150-7 STOP
36Vp-p (5usec.div.)



T1150-14 STOP
100Vp-p (5usec.div.)

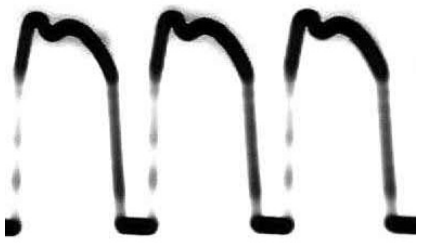

T1150-16 STOP
1.8Vp-p (5usec.div.)

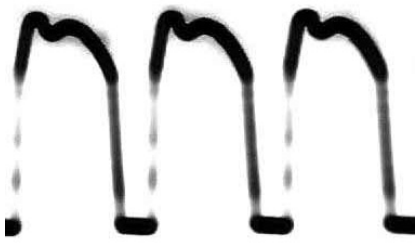

T1150-17 STOP
2.2Vp-p (5usec.div.)

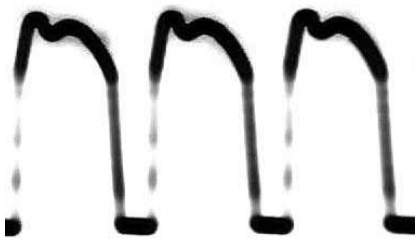

T1150-18 STOP
3.4Vp-p (5usec.div.)

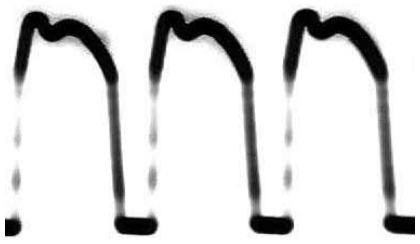

T1150-19 STOP
5.2Vp-p (5usec.div.)

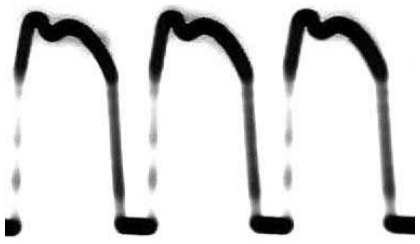

T1150-20 STOP
125Vp-p (5usec.div.)



IC6001-13 PAUSE
4.4Vp-p (10msec.div.)



IC6001-18 REC
4.4Vp-p (10msec.div.)



IC6001-52 REC
2.0Vp-p (10usec.div.)

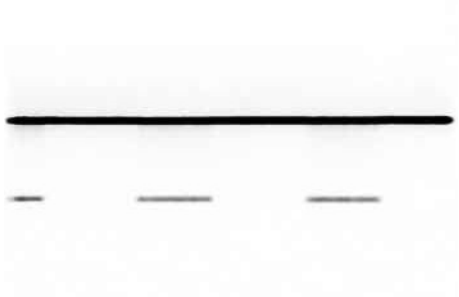

IC6001-70 REC
4.6Vp-p (10msec.div.)



IC6001-68,69 REC
5.2Vp-p (10msec.div.)



IC6001-79,80 FF/REW
5.0Vp-p (1msec.div.)

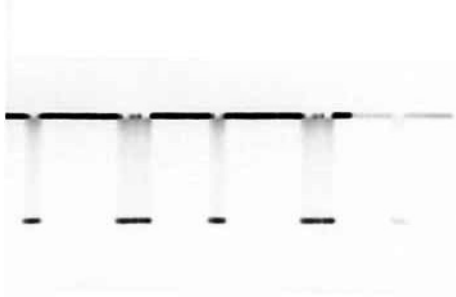

IC6001-71 REC
4.8Vp-p (10msec.div.)



IC6001-72 REC
4.8Vp-p (10msec.div.)



IC6001-94,95 REC
6.0Vp-p (10msec.div.)



IC6001-97 PLAY
4.2Vp-p (10msec.div.)



IC3001-73 REC/PLAY
4.8Vp-p (5msec.div.)



IC3001-74 REC/PLAY
4.6Vp-p (5msec.div.)



IC4501-9,14 REC
1.2Vp-p (5msec.div.)



IC4501-21 REC
1.2Vp-p (5msec.div.)



IC4501-53,57 REC/PLAY
1.2Vp-p (5msec.div.)

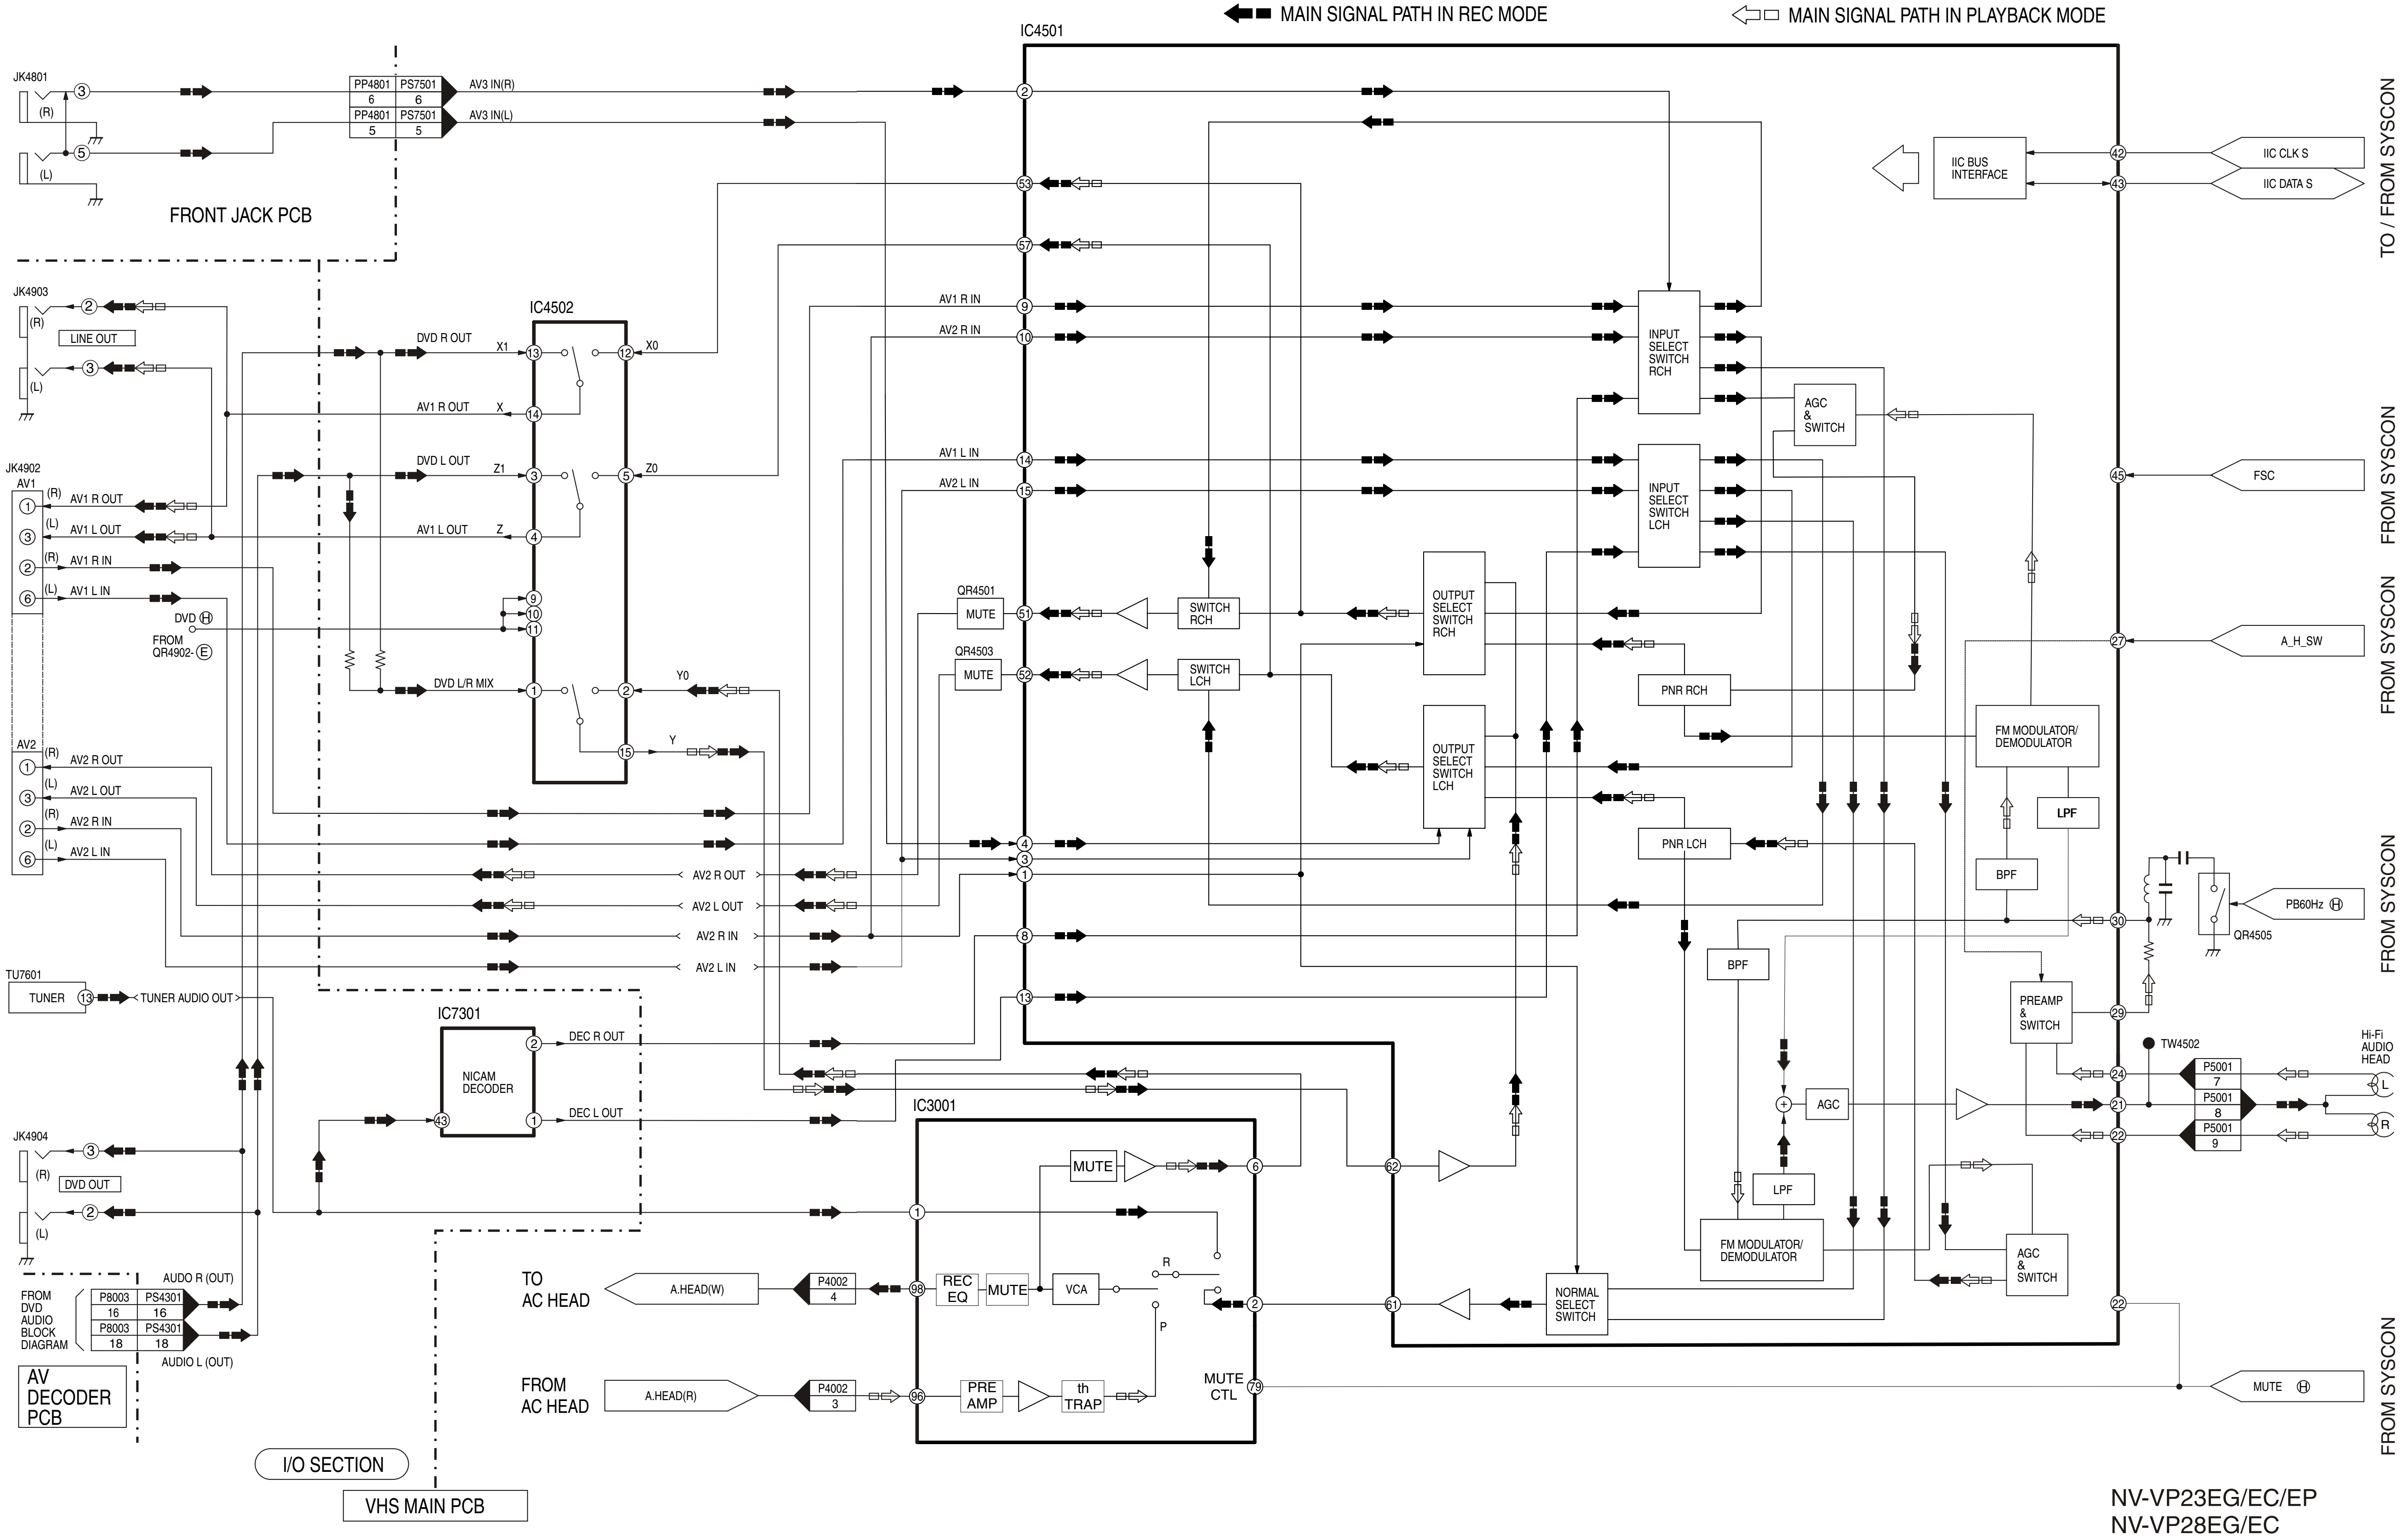
MAIN SIGNAL PATH IN REC MODE
MAIN SIGNAL PATH IN PLAYBACK MODE
IC4501
JK4801
(R)
(L)
PP4801 6
PS7501 6
PP4801 5
PS7501 5
AV3 IN(R)
AV3 IN(L)
FRONT JACK PCB
JK4903
LINE OUT
IC4502
DVD R OUT
X1
X0
AV1 R OUT
X
DVD L OUT
Z1
Z0
AV1 L OUT
Z
JK4902
AV1
AV1 R OUT
AV1 L OUT
AV1 R IN
AV1 L IN
DVD Ⓗ
FROM QR4902- Ⓔ
DVD L/R MIX
Y0
Y
AV2
AV2 R OUT
AV2 L OUT
AV2 R IN
AV2 L IN
TU7601
TUNER
TUNER AUDIO OUT
IC7301
NICAM DECODER
DEC R OUT
DEC L OUT
JK4904
DVD OUT
FROM DVD AUDIO BLOCK DIAGRAM
P8003 16
PS4301 16
P8003 18
PS4301 18
AUDIO R (OUT)
AUDIO L (OUT)
AV DECODER PCB
I/O SECTION
VHS MAIN PCB
AV1 R IN
AV2 R IN
AV1 L IN
AV2 L IN
QR4501
MUTE
QR4503
MUTE
SWITCH RCH
SWITCH LCH
OUTPUT SELECT SWITCH RCH
OUTPUT SELECT SWITCH LCH
INPUT SELECT SWITCH RCH
INPUT SELECT SWITCH LCH
AGC & SWITCH
PNR RCH
PNR LCH
FM MODULATOR/ DEMODULATOR
LPF
BPF
IIC BUS INTERFACE
IIC CLK S
IIC DATA S
FSC
A_H_SW
PB60Hz Ⓗ
QR4505
PREAMP & SWITCH
TW4502
Hi-Fi AUDIO HEAD
P5001 7
P5001 8
P5001 9
AGC
LPF
FM MODULATOR/ DEMODULATOR
AGC & SWITCH
NORMAL SELECT SWITCH
IC3001
MUTE
REC EQ
MUTE
VCA
R
P
PRE AMP
th TRAP
MUTE CTL
TO AC HEAD
A.HEAD(W)
P4002 4
FROM AC HEAD
A.HEAD(R)
P4002 3
MUTE Ⓗ
TO / FROM SYSCON
FROM SYSCON
FROM SYSCON
FROM SYSCON
FROM SYSCON

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB AUDIO
BLOCK DIAGRAM

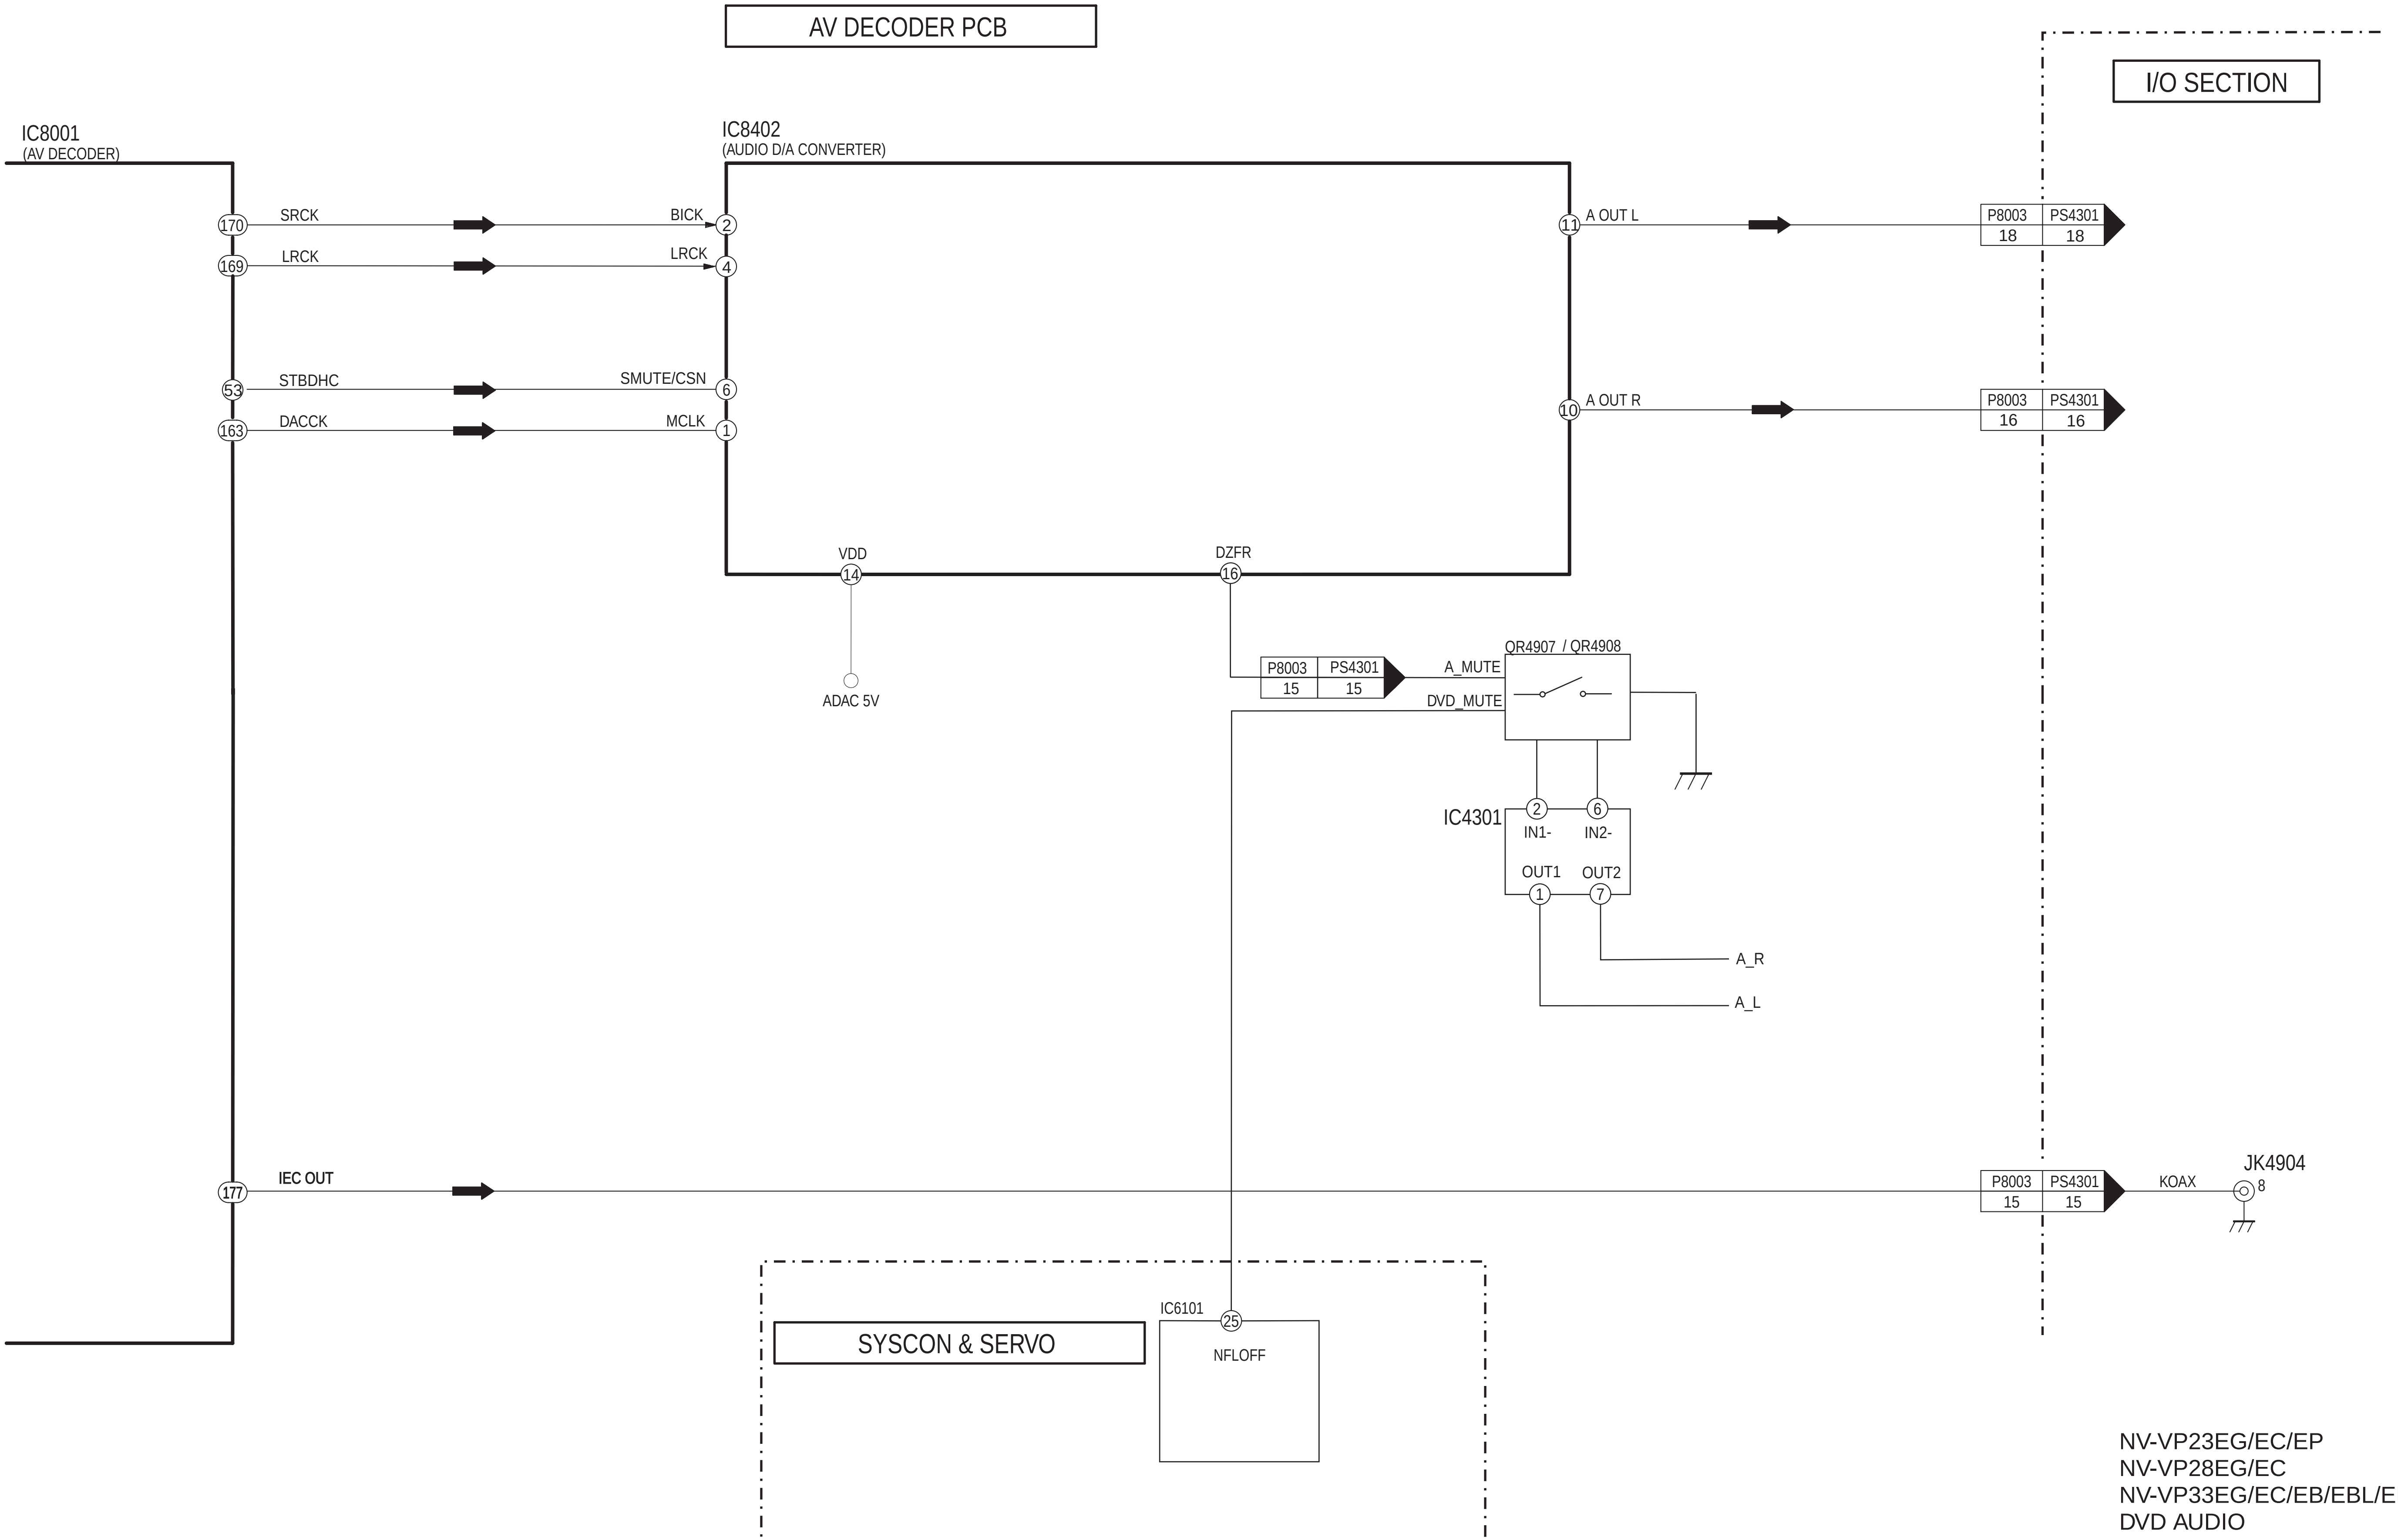
AV DECODER PCB
I/O SECTION
IC8001
(AV DECODER)
IC8402
(AUDIO D/A CONVERTER)
170
SRCK
BICK
2
169
LRCK
LRCK
4
53
STBDHC
SMUTE/CSN
6
163
DACCK
MCLK
1
11
A OUT L
P8003
18
PS4301
18
10
A OUT R
P8003
16
PS4301
16
VDD
14
ADAC 5V
DZFR
16
P8003
15
PS4301
15
A_MUTE
DVD_MUTE
QR4907 / QR4908
IC4301
2
6
IN1-
IN2-
OUT1
OUT2
1
7
A_R
A_L
177
IEC OUT
P8003
15
PS4301
15
KOAX
JK4904
8
SYSCON & SERVO
IC6101
25
NFLOFF

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
DVD AUDIO
BLOCK DIAGRAM

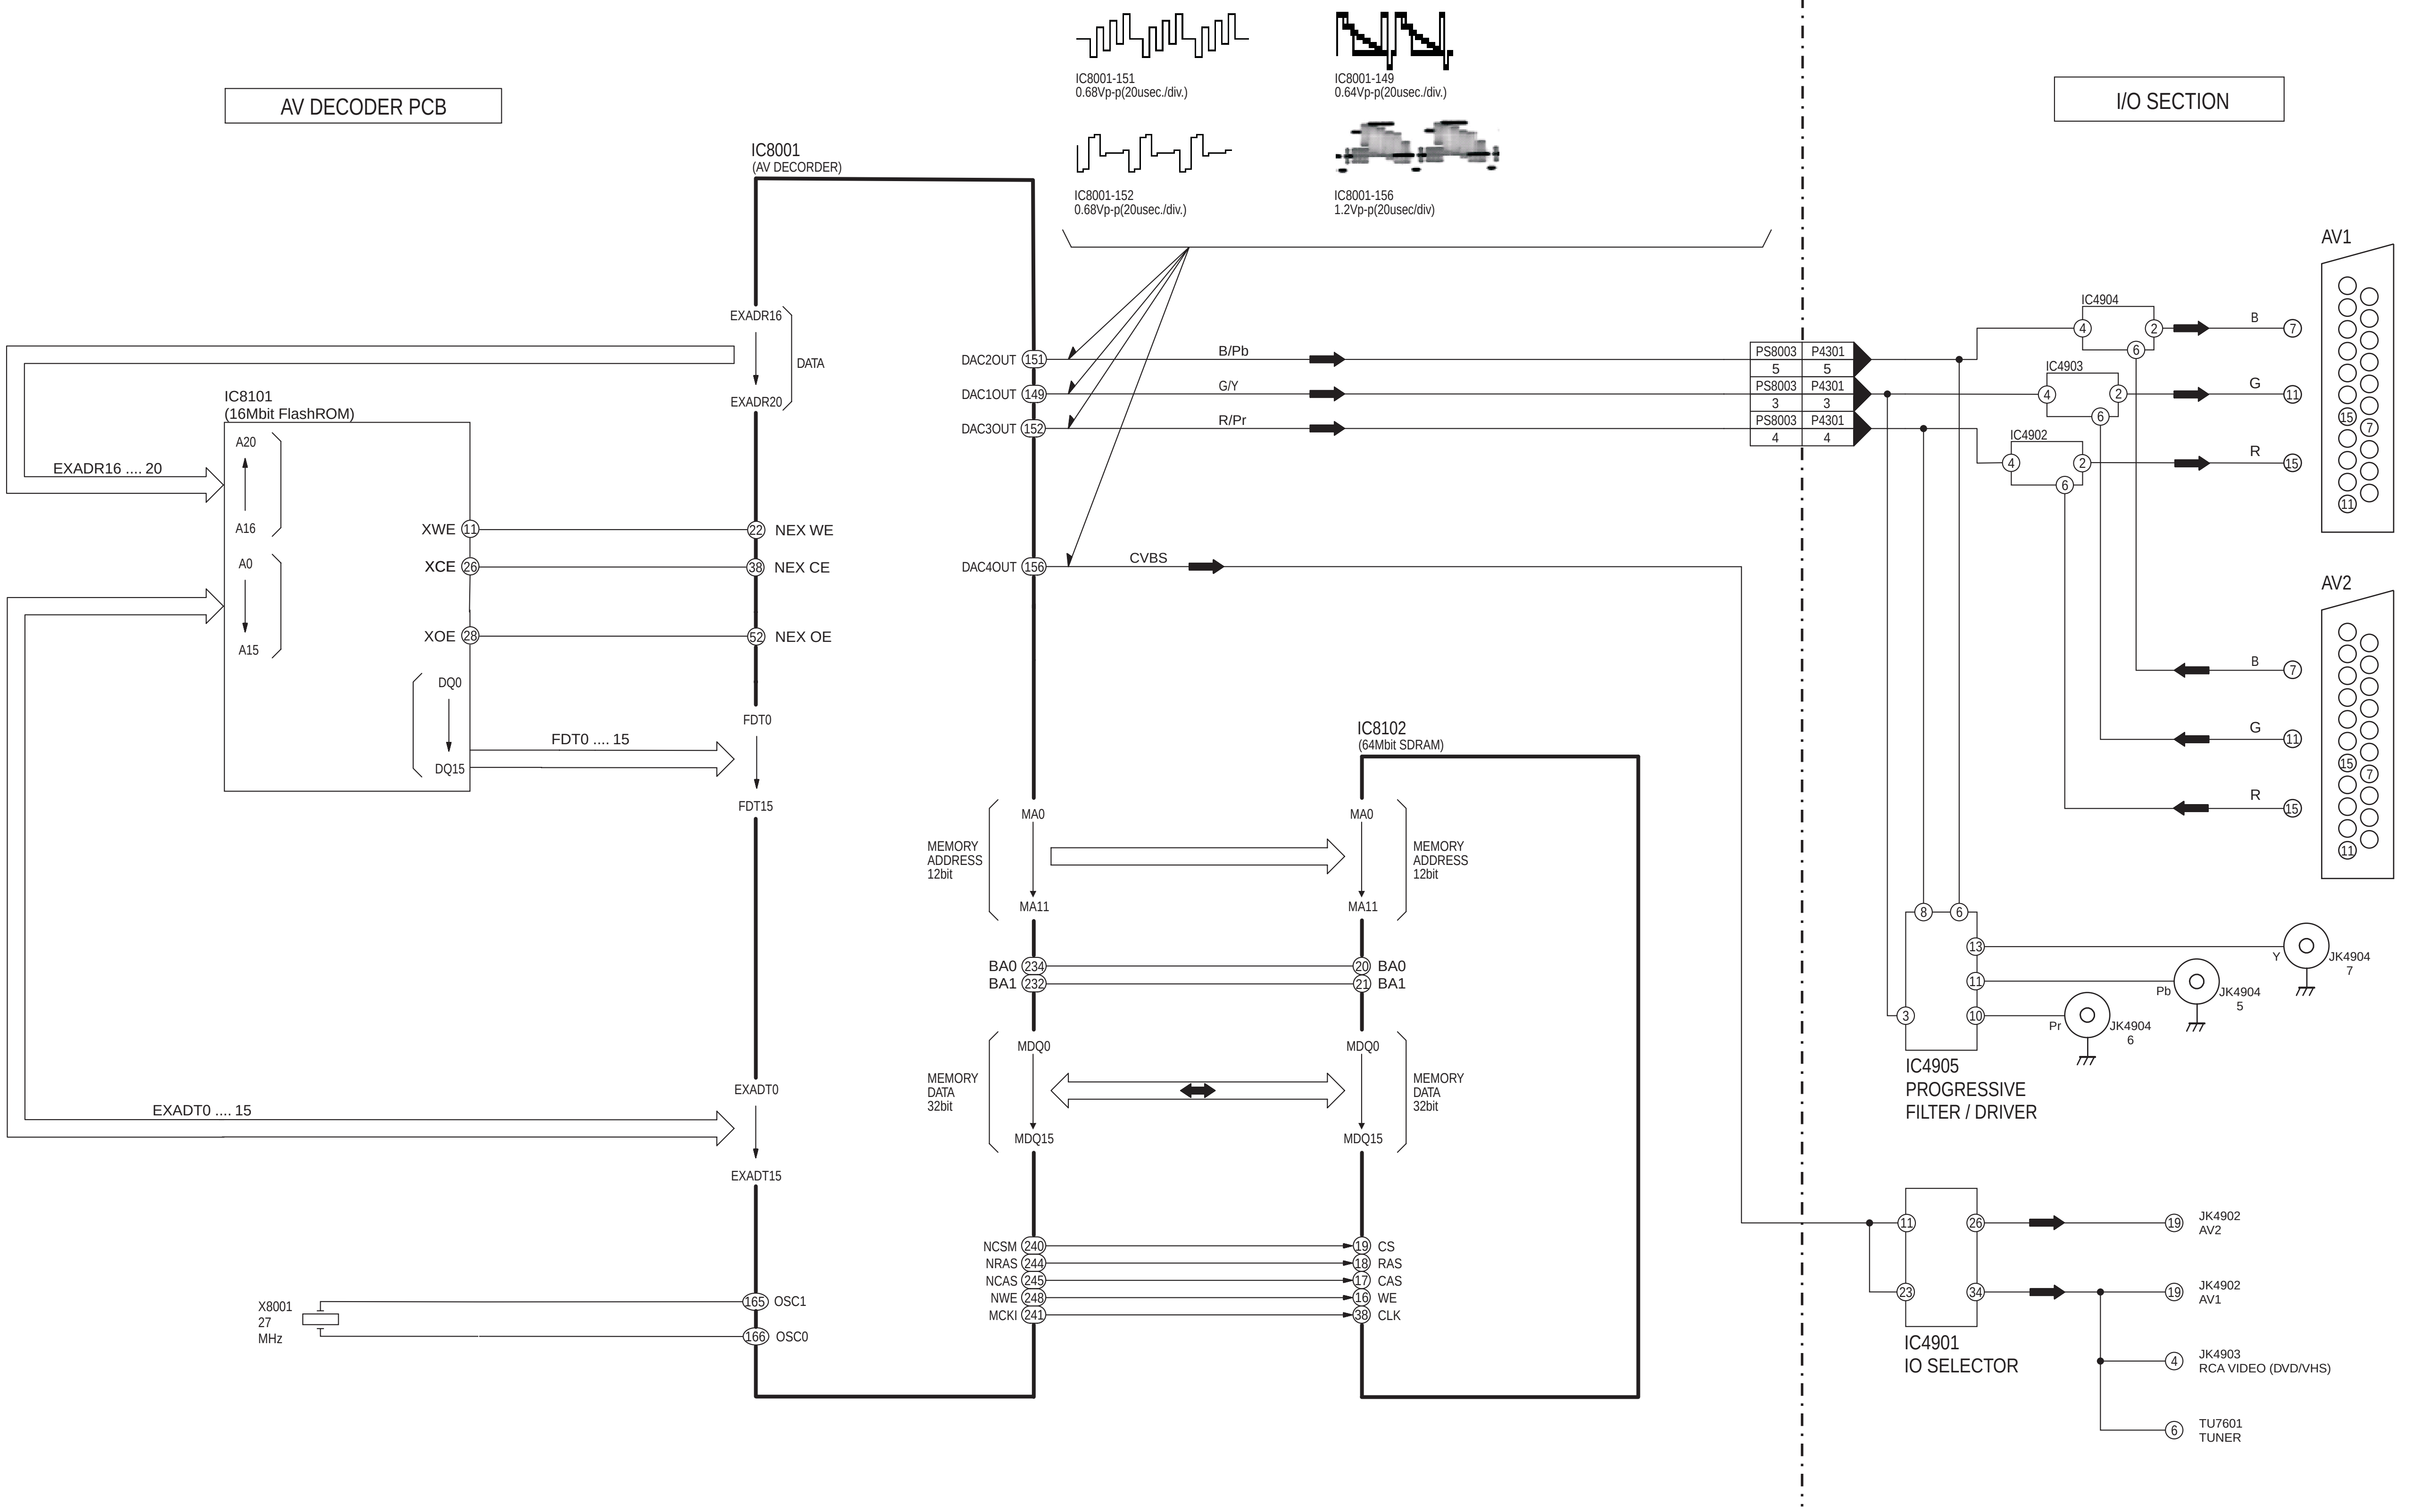
AV DECODER PCB
I/O SECTION
IC8001-151
0.68Vp-p(20usec./div.)
IC8001-149
0.64Vp-p(20usec./div.)
IC8001-152
0.68Vp-p(20usec./div.)
IC8001-156
1.2Vp-p(20usec/div)
IC8001
(AV DECORDER)
EXADR16
DATA
EXADR20
IC8101
(16Mbit FlashROM)
A20
A16
A0
A15
EXADR16 20
XWE 11
XCE 26
XOE 28
DQ0
DQ15
FDT0 15
22 NEX WE
38 NEX CE
52 NEX OE
FDT0
FDT15
DAC2OUT 151
DAC1OUT 149
DAC3OUT 152
DAC4OUT 156
B/Pb
G/Y
R/Pr
CVBS
PS8003 5
P4301 5
PS8003 3
P4301 3
PS8003 4
P4301 4
IC8102
(64Mbit SDRAM)
MA0
MA11
MEMORY ADDRESS 12bit
BA0 234
BA1 232
20 BA0
21 BA1
MDQ0
MDQ15
MEMORY DATA 32bit
EXADT0
EXADT15
EXADT0 15
NCSM 240
NRAS 244
NCAS 245
NWE 248
MCKI 241
19 CS
18 RAS
17 CAS
16 WE
38 CLK
X8001
27
MHz
165 OSC1
166 OSC0
AV1
AV2
IC4904
IC4903
IC4902
B 7
G 11
R 15
Y
JK4904 7
Pb
JK4904 5
Pr
JK4904 6
IC4905
PROGRESSIVE
FILTER / DRIVER
IC4901
IO SELECTOR
JK4902 AV2
JK4902 AV1
JK4903 RCA VIDEO (DVD/VHS)
TU7601 TUNER

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL
DVD VIDEO
BLOCK DIAGRAM

NAVIGATION

- POWER PCB
- MAIN PCB - AUDIO / VIDEO
- MAIN PCB - I/O
- MAIN PCB - SYSCON & SERVO
- AV DECODER PCB
- FRONT PANEL PCB
- TERMINAL PCB

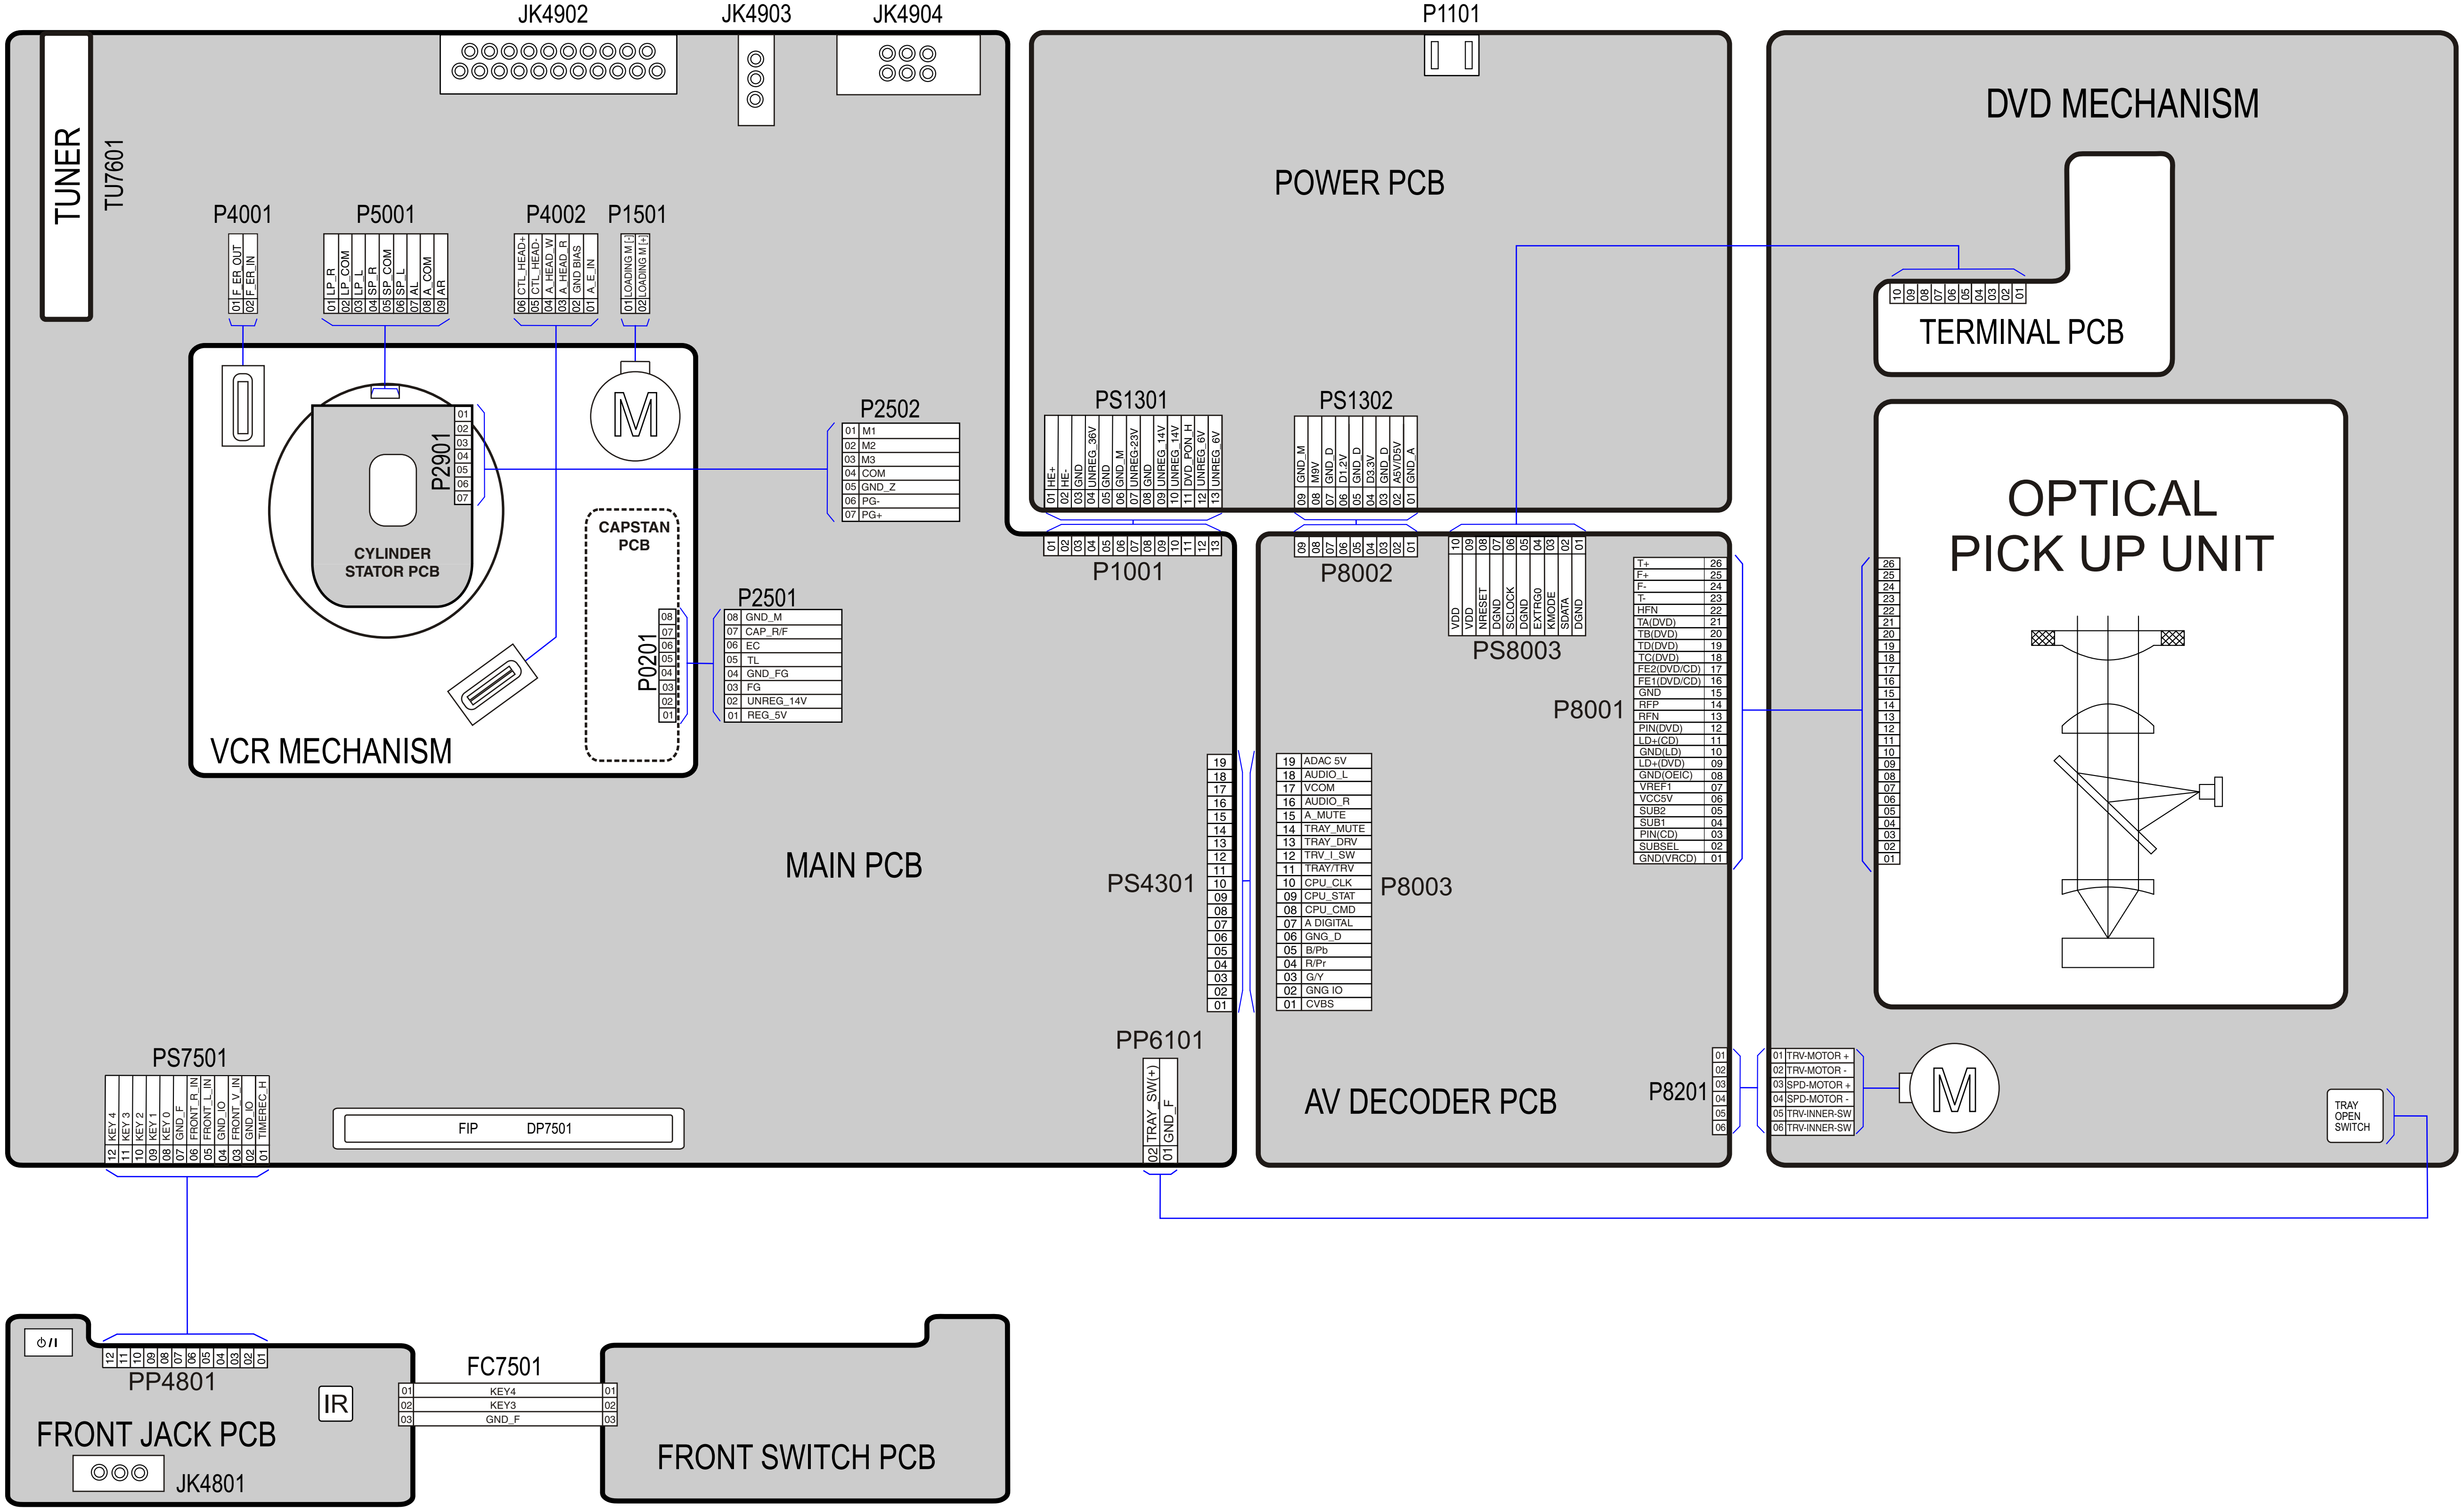

JK4902
JK4903
JK4904
P1101
TUNER
TU7601
P4001
01 F_ER_OUT
02 F_ER_IN
P5001
01 LP_R
02 LP_COM
03 LP_L
04 SP_R
05 SP_COM
06 SP_L
07 AL
08 A_COM
09 AR
P4002
06 CTL_HEAD+
05 CTL_HEAD-
04 A_HEAD_W
03 A_HEAD_R
02 GND BIAS
01 A_E_IN
P1501
01 LOADING M [-]
02 LOADING M [+]
M
P2901
01
02
03
04
05
06
07
CYLINDER STATOR PCB
CAPSTAN PCB
P0201
08
07
06
05
04
03
02
01
VCR MECHANISM
P2502
01 M1
02 M2
03 M3
04 COM
05 GND_Z
06 PG-
07 PG+
P2501
08 GND_M
07 CAP_R/F
06 EC
05 TL
04 GND_FG
03 FG
02 UNREG_14V
01 REG_5V
POWER PCB
PS1301
01 HE+
02 HE-
03 GND
04 UNREG_36V
05 GND
06 GND_M
07 UNREG-23V
08 GND
09 UNREG_14V
10 UNREG_14V
11 DVD_PON_H
12 UNREG_6V
13 UNREG_6V
P1001
01
02
03
04
05
06
07
08
09
10
11
12
13
PS1302
09 GND_M
08 M9V
07 GND_D
06 D1.2V
05 GND_D
04 D3.3V
03 GND_D
02 A5V/D5V
01 GND_A
P8002
09
08
07
06
05
04
03
02
01
DVD MECHANISM
TERMINAL PCB
10
09
08
07
06
05
04
03
02
01
PS8003
10 VDD
09 VDD
08 NRESET
07 DGND
06 SCLOCK
05 DGND
04 EXTRG0
03 KMODE
02 SDATA
01 DGND
P8001
T+ 26
F+ 25
F- 24
T- 23
HFN 22
TA(DVD) 21
TB(DVD) 20
TD(DVD) 19
TC(DVD) 18
FE2(DVD/CD) 17
FE1(DVD/CD) 16
GND 15
RFP 14
RFN 13
PIN(DVD) 12
LD+(CD) 11
GND(LD) 10
LD+(DVD) 09
GND(OEIC) 08
VREF1 07
VCC5V 06
SUB2 05
SUB1 04
PIN(CD) 03
SUBSEL 02
GND(VRCD) 01
OPTICAL PICK UP UNIT
26
25
24
23
22
21
20
19
18
17
16
15
14
13
12
11
10
09
08
07
06
05
04
03
02
01
MAIN PCB
PS4301
19
18
17
16
15
14
13
12
11
10
09
08
07
06
05
04
03
02
01
P8003
19 ADAC 5V
18 AUDIO_L
17 VCOM
16 AUDIO_R
15 A_MUTE
14 TRAY_MUTE
13 TRAY_DRV
12 TRV_I_SW
11 TRAY/TRV
10 CPU_CLK
09 CPU_STAT
08 CPU_CMD
07 A DIGITAL
06 GNG_D
05 B/Pb
04 R/Pr
03 G/Y
02 GNG IO
01 CVBS
PP6101
02 TRAY_SW(+)
01 GND_F
AV DECODER PCB
P8201
01
02
03
04
05
06
01 TRV-MOTOR +
02 TRV-MOTOR -
03 SPD-MOTOR +
04 SPD-MOTOR -
05 TRV-INNER-SW
06 TRV-INNER-SW
M
TRAY OPEN SWITCH
PS7501
12 KEY 4
11 KEY 3
10 KEY 2
09 KEY 1
08 KEY 0
07 GND_F
06 FRONT_R_IN
05 FRONT_L_IN
04 GND_IO
03 FRONT_V_IN
02 GND_IO
01 TIMEREC_H
FIP
DP7501
⏻/I
12
11
10
09
08
07
06
05
04
03
02
01
PP4801
IR
FRONT JACK PCB
JK4801
FC7501
01 KEY4 01
02 KEY3 02
03 GND_F 03
FRONT SWITCH PCB

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
INTERCONNECTION DIAGRAM

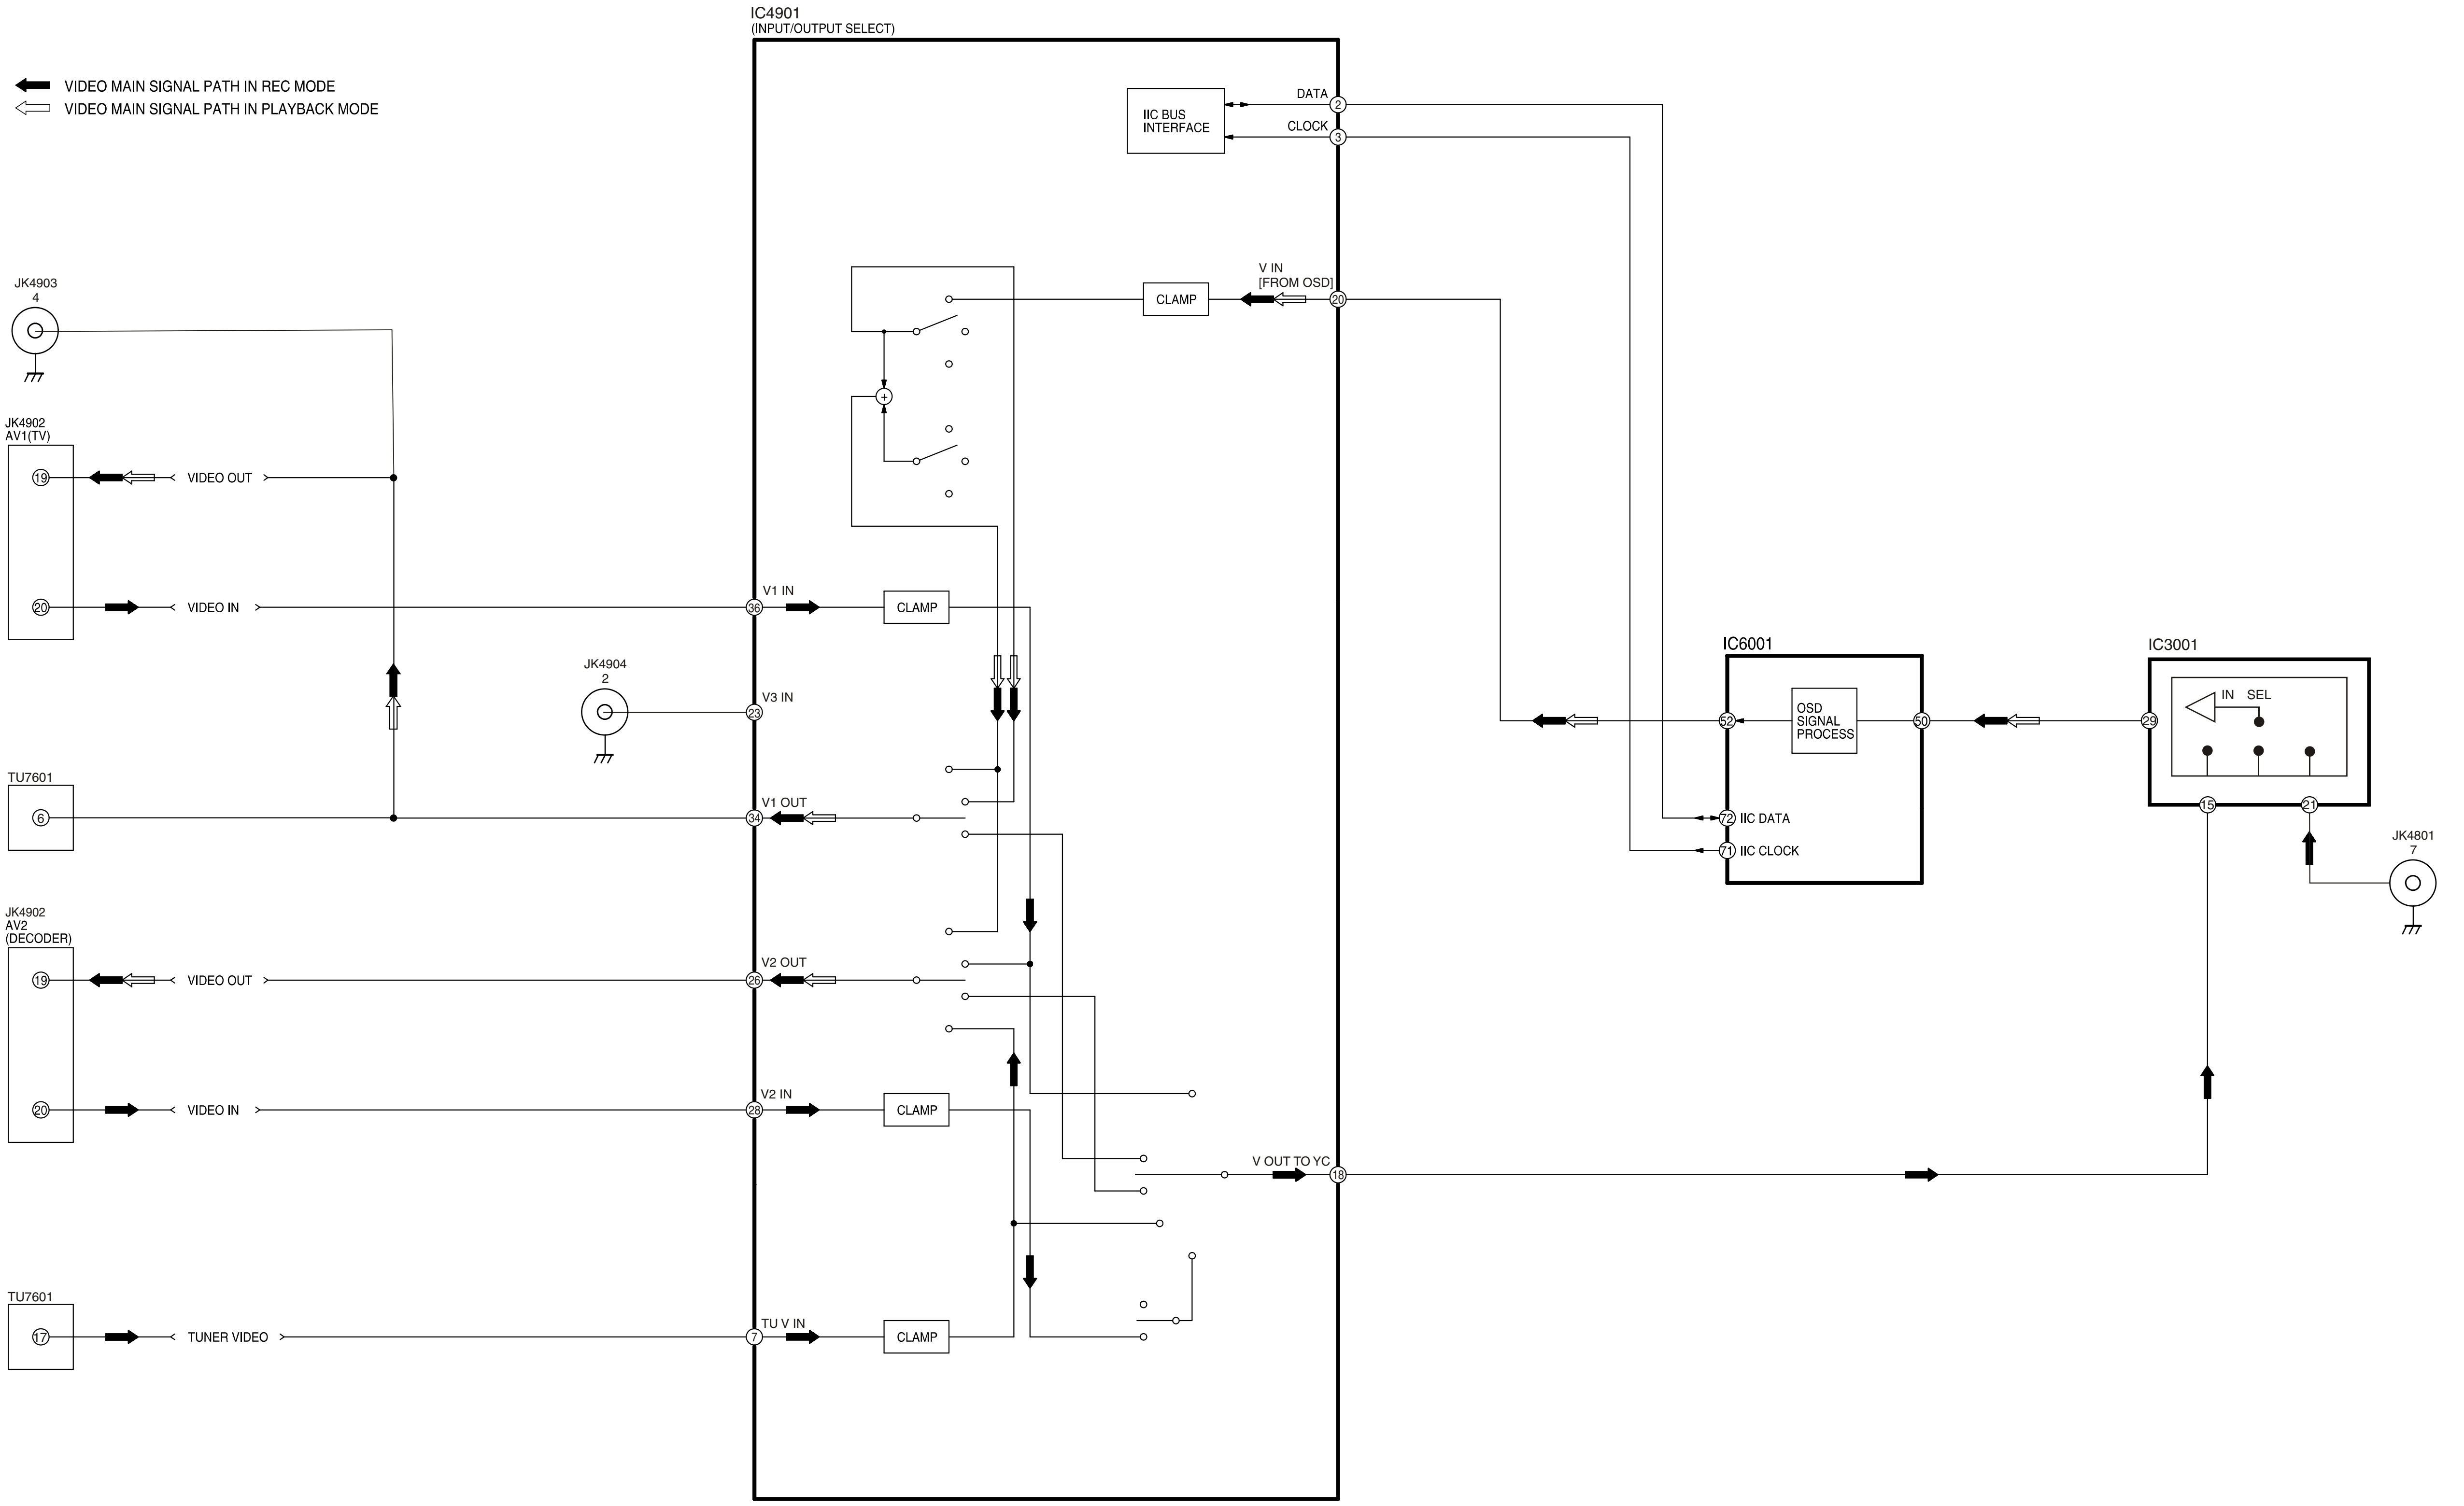
VIDEO MAIN SIGNAL PATH IN REC MODE
VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE
IC4901
(INPUT/OUTPUT SELECT)
IIC BUS INTERFACE
DATA
2
CLOCK
3
V IN
[FROM OSD]
20
CLAMP
JK4903
4
JK4902
AV1(TV)
19
VIDEO OUT
20
VIDEO IN
V1 IN
36
CLAMP
JK4904
2
V3 IN
23
TU7601
6
V1 OUT
34
JK4902
AV2
(DECODER)
19
VIDEO OUT
V2 OUT
26
20
VIDEO IN
V2 IN
28
CLAMP
V OUT TO YC
18
TU7601
17
TUNER VIDEO
TU V IN
7
CLAMP
IC6001
OSD SIGNAL PROCESS
52
50
72
IIC DATA
71
IIC CLOCK
IC3001
IN
SEL
29
15
21
JK4801
7

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL
VCR LUMINANCE & CHROMINANCE 1/2
BLOCK DIAGRAM

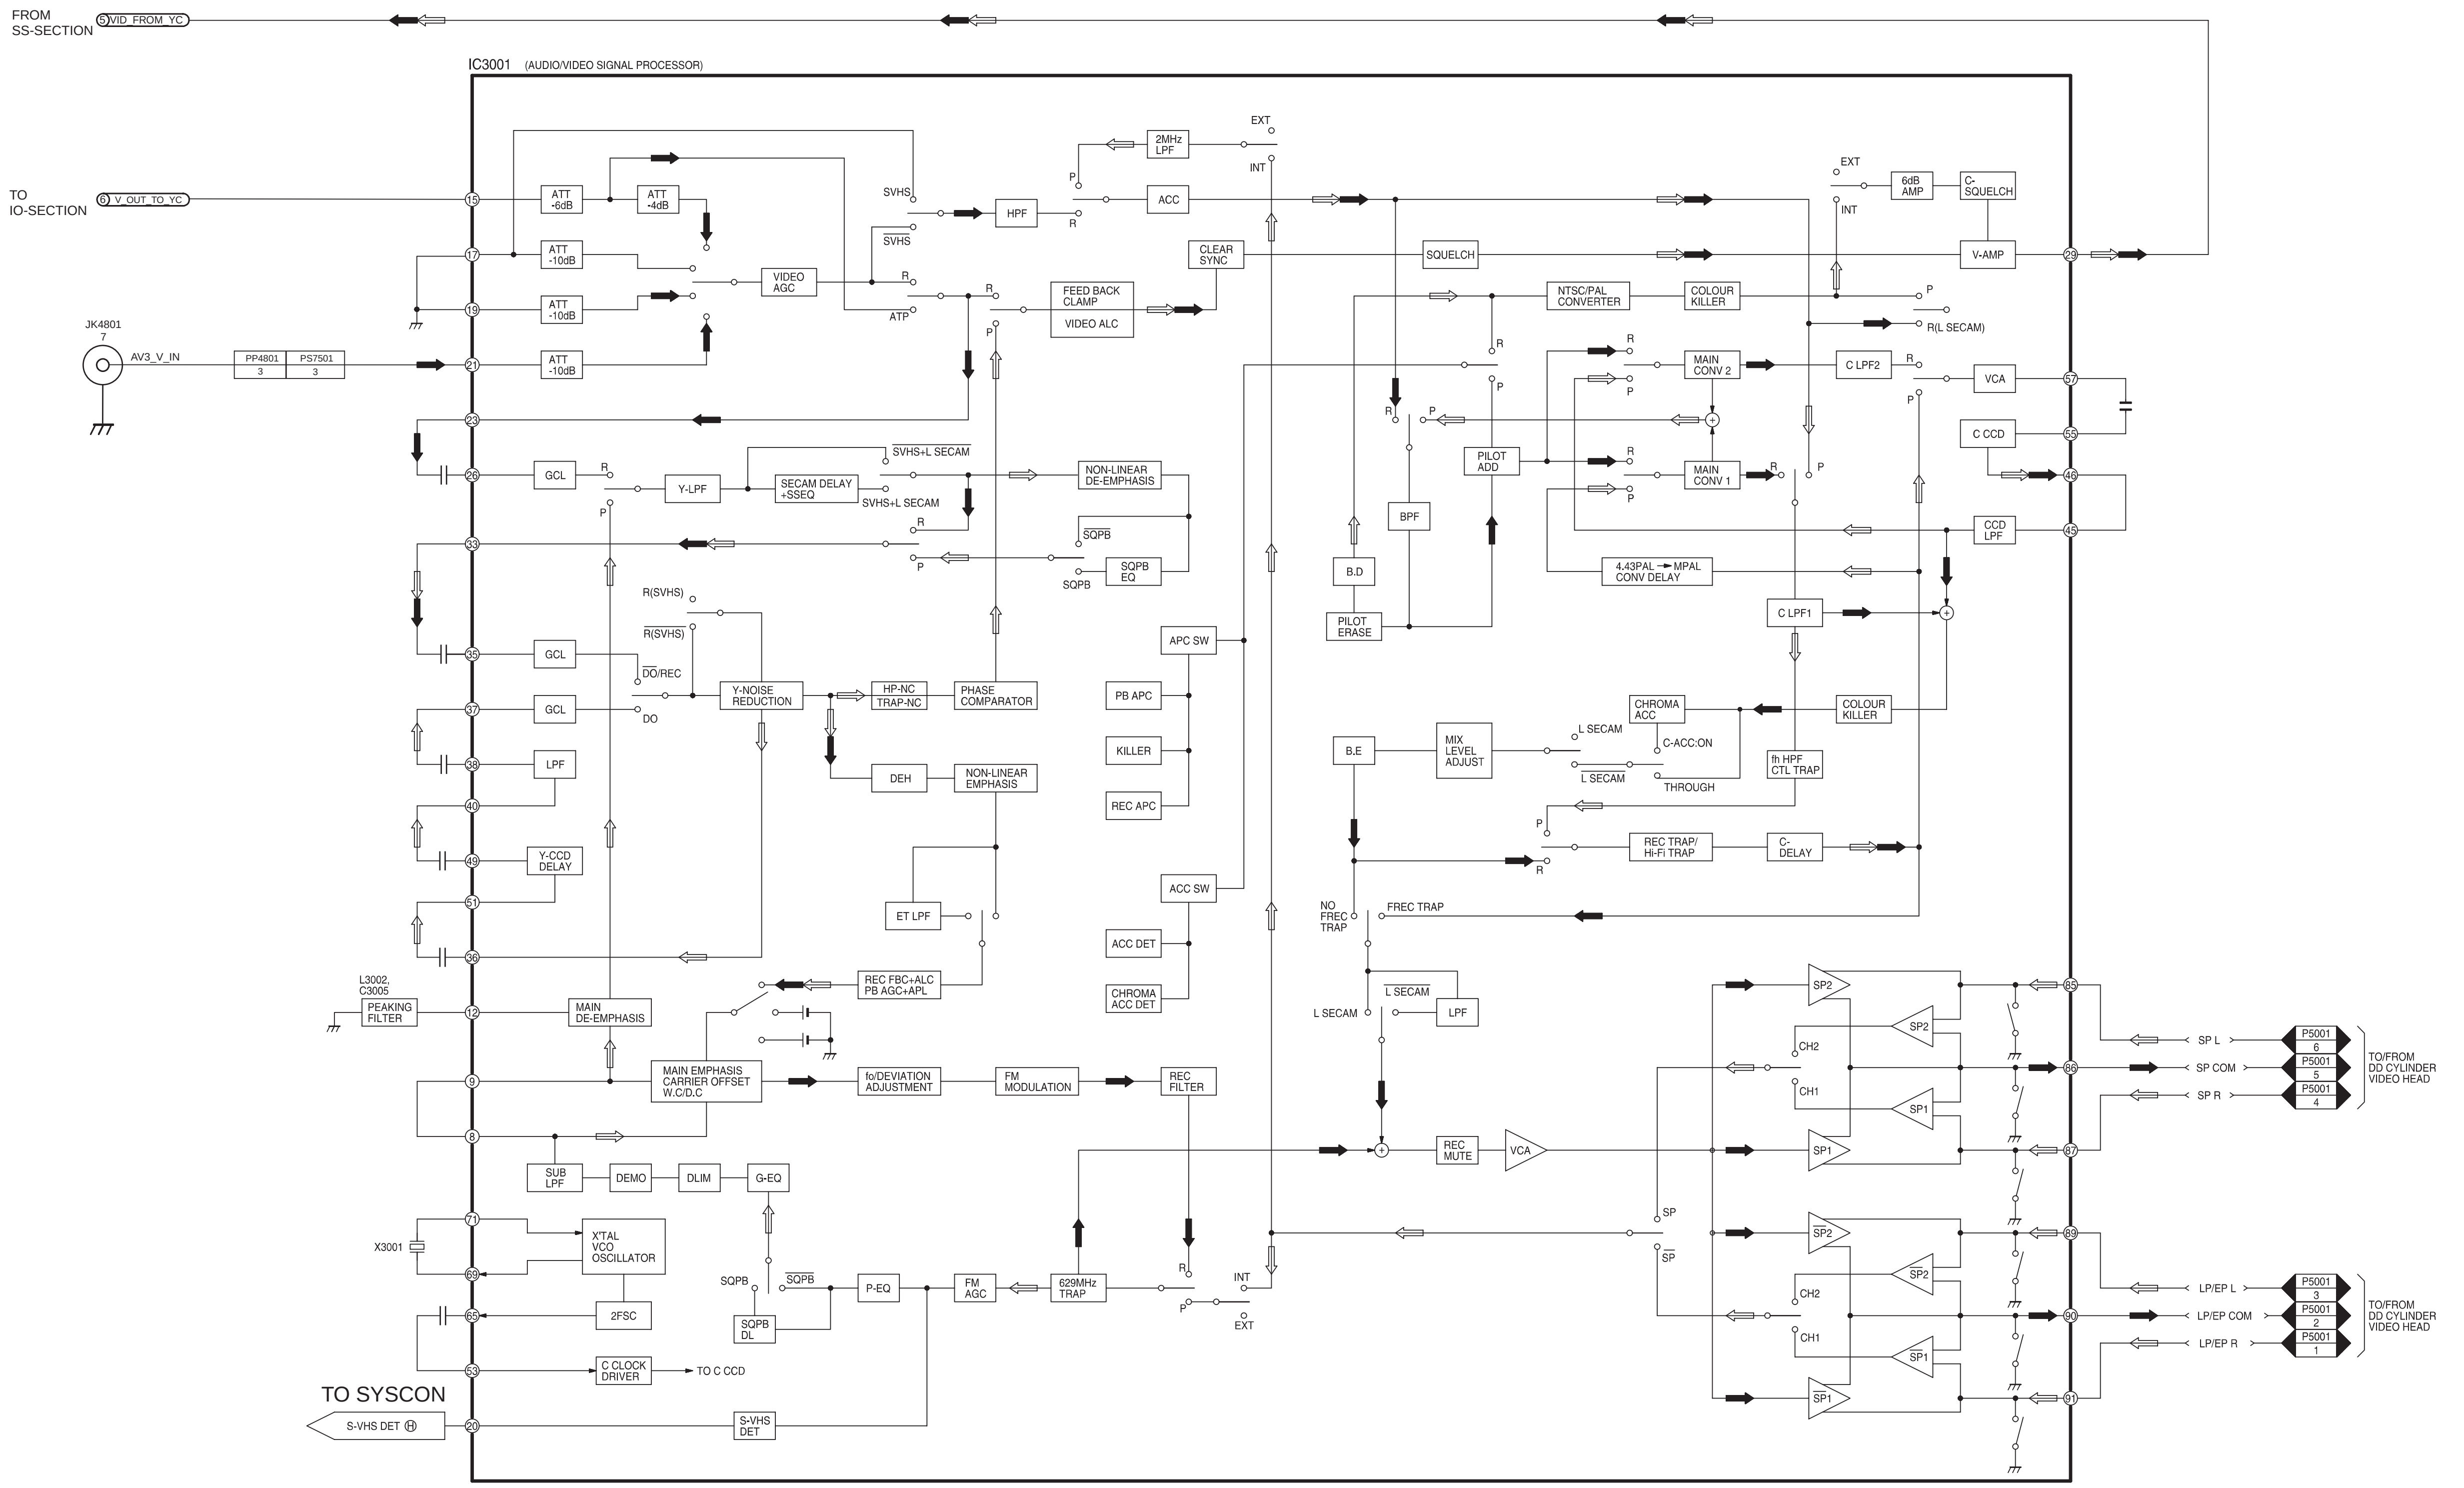
FROM
SS-SECTION
5 VID_FROM_YC
IC3001 (AUDIO/VIDEO SIGNAL PROCESSOR)
TO
IO-SECTION
6 V_OUT_TO_YC
JK4801
7
AV3_V_IN
PP4801
3
PS7501
3
ATT -6dB
ATT -4dB
ATT -10dB
ATT -10dB
ATT -10dB
VIDEO AGC
SVHS
HPF
ATP
FEED BACK CLAMP
VIDEO ALC
2MHz LPF
ACC
EXT
INT
CLEAR SYNC
SQUELCH
6dB AMP
C-SQUELCH
V-AMP
NTSC/PAL CONVERTER
COLOUR KILLER
R(L SECAM)
MAIN CONV 2
MAIN CONV 1
C LPF2
VCA
C CCD
CCD LPF
PILOT ADD
BPF
B.D
PILOT ERASE
4.43PAL → MPAL CONV DELAY
C LPF1
GCL
Y-LPF
SECAM DELAY +SSEQ
SVHS+L SECAM
NON-LINEAR DE-EMPHASIS
SQPB
SQPB EQ
R(SVHS)
Y-NOISE REDUCTION
HP-NC TRAP-NC
PHASE COMPARATOR
DO/REC
DO
DEH
NON-LINEAR EMPHASIS
LPF
Y-CCD DELAY
ET LPF
REC FBC+ALC PB AGC+APL
APC SW
PB APC
KILLER
REC APC
ACC SW
ACC DET
CHROMA ACC DET
CHROMA ACC
COLOUR KILLER
B.E
MIX LEVEL ADJUST
L SECAM
C-ACC:ON
THROUGH
fh HPF CTL TRAP
REC TRAP/ Hi-Fi TRAP
C-DELAY
NO FREC TRAP
FREC TRAP
L3002, C3005
PEAKING FILTER
MAIN DE-EMPHASIS
MAIN EMPHASIS CARRIER OFFSET W.C/D.C
fo/DEVIATION ADJUSTMENT
FM MODULATION
REC FILTER
REC MUTE
VCA
SUB LPF
DEMO
DLIM
G-EQ
X3001
X'TAL VCO OSCILLATOR
2FSC
C CLOCK DRIVER
TO C CCD
SQPB DL
P-EQ
FM AGC
629MHz TRAP
S-VHS DET
TO SYSCON
S-VHS DET H
SP
SP2
SP1
CH2
CH1
SP L
SP COM
SP R
LP/EP L
LP/EP COM
LP/EP R
P5001
TO/FROM DD CYLINDER VIDEO HEAD
15
17
19
21
23
26
33
35
37
38
40
49
51
36
12
9
8
71
69
65
53
20
29
57
55
46
45
85
86
87
88
90
91

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
VCR LUMINANCE & CHROMINANCE 2/2
BLOCK DIAGRAM

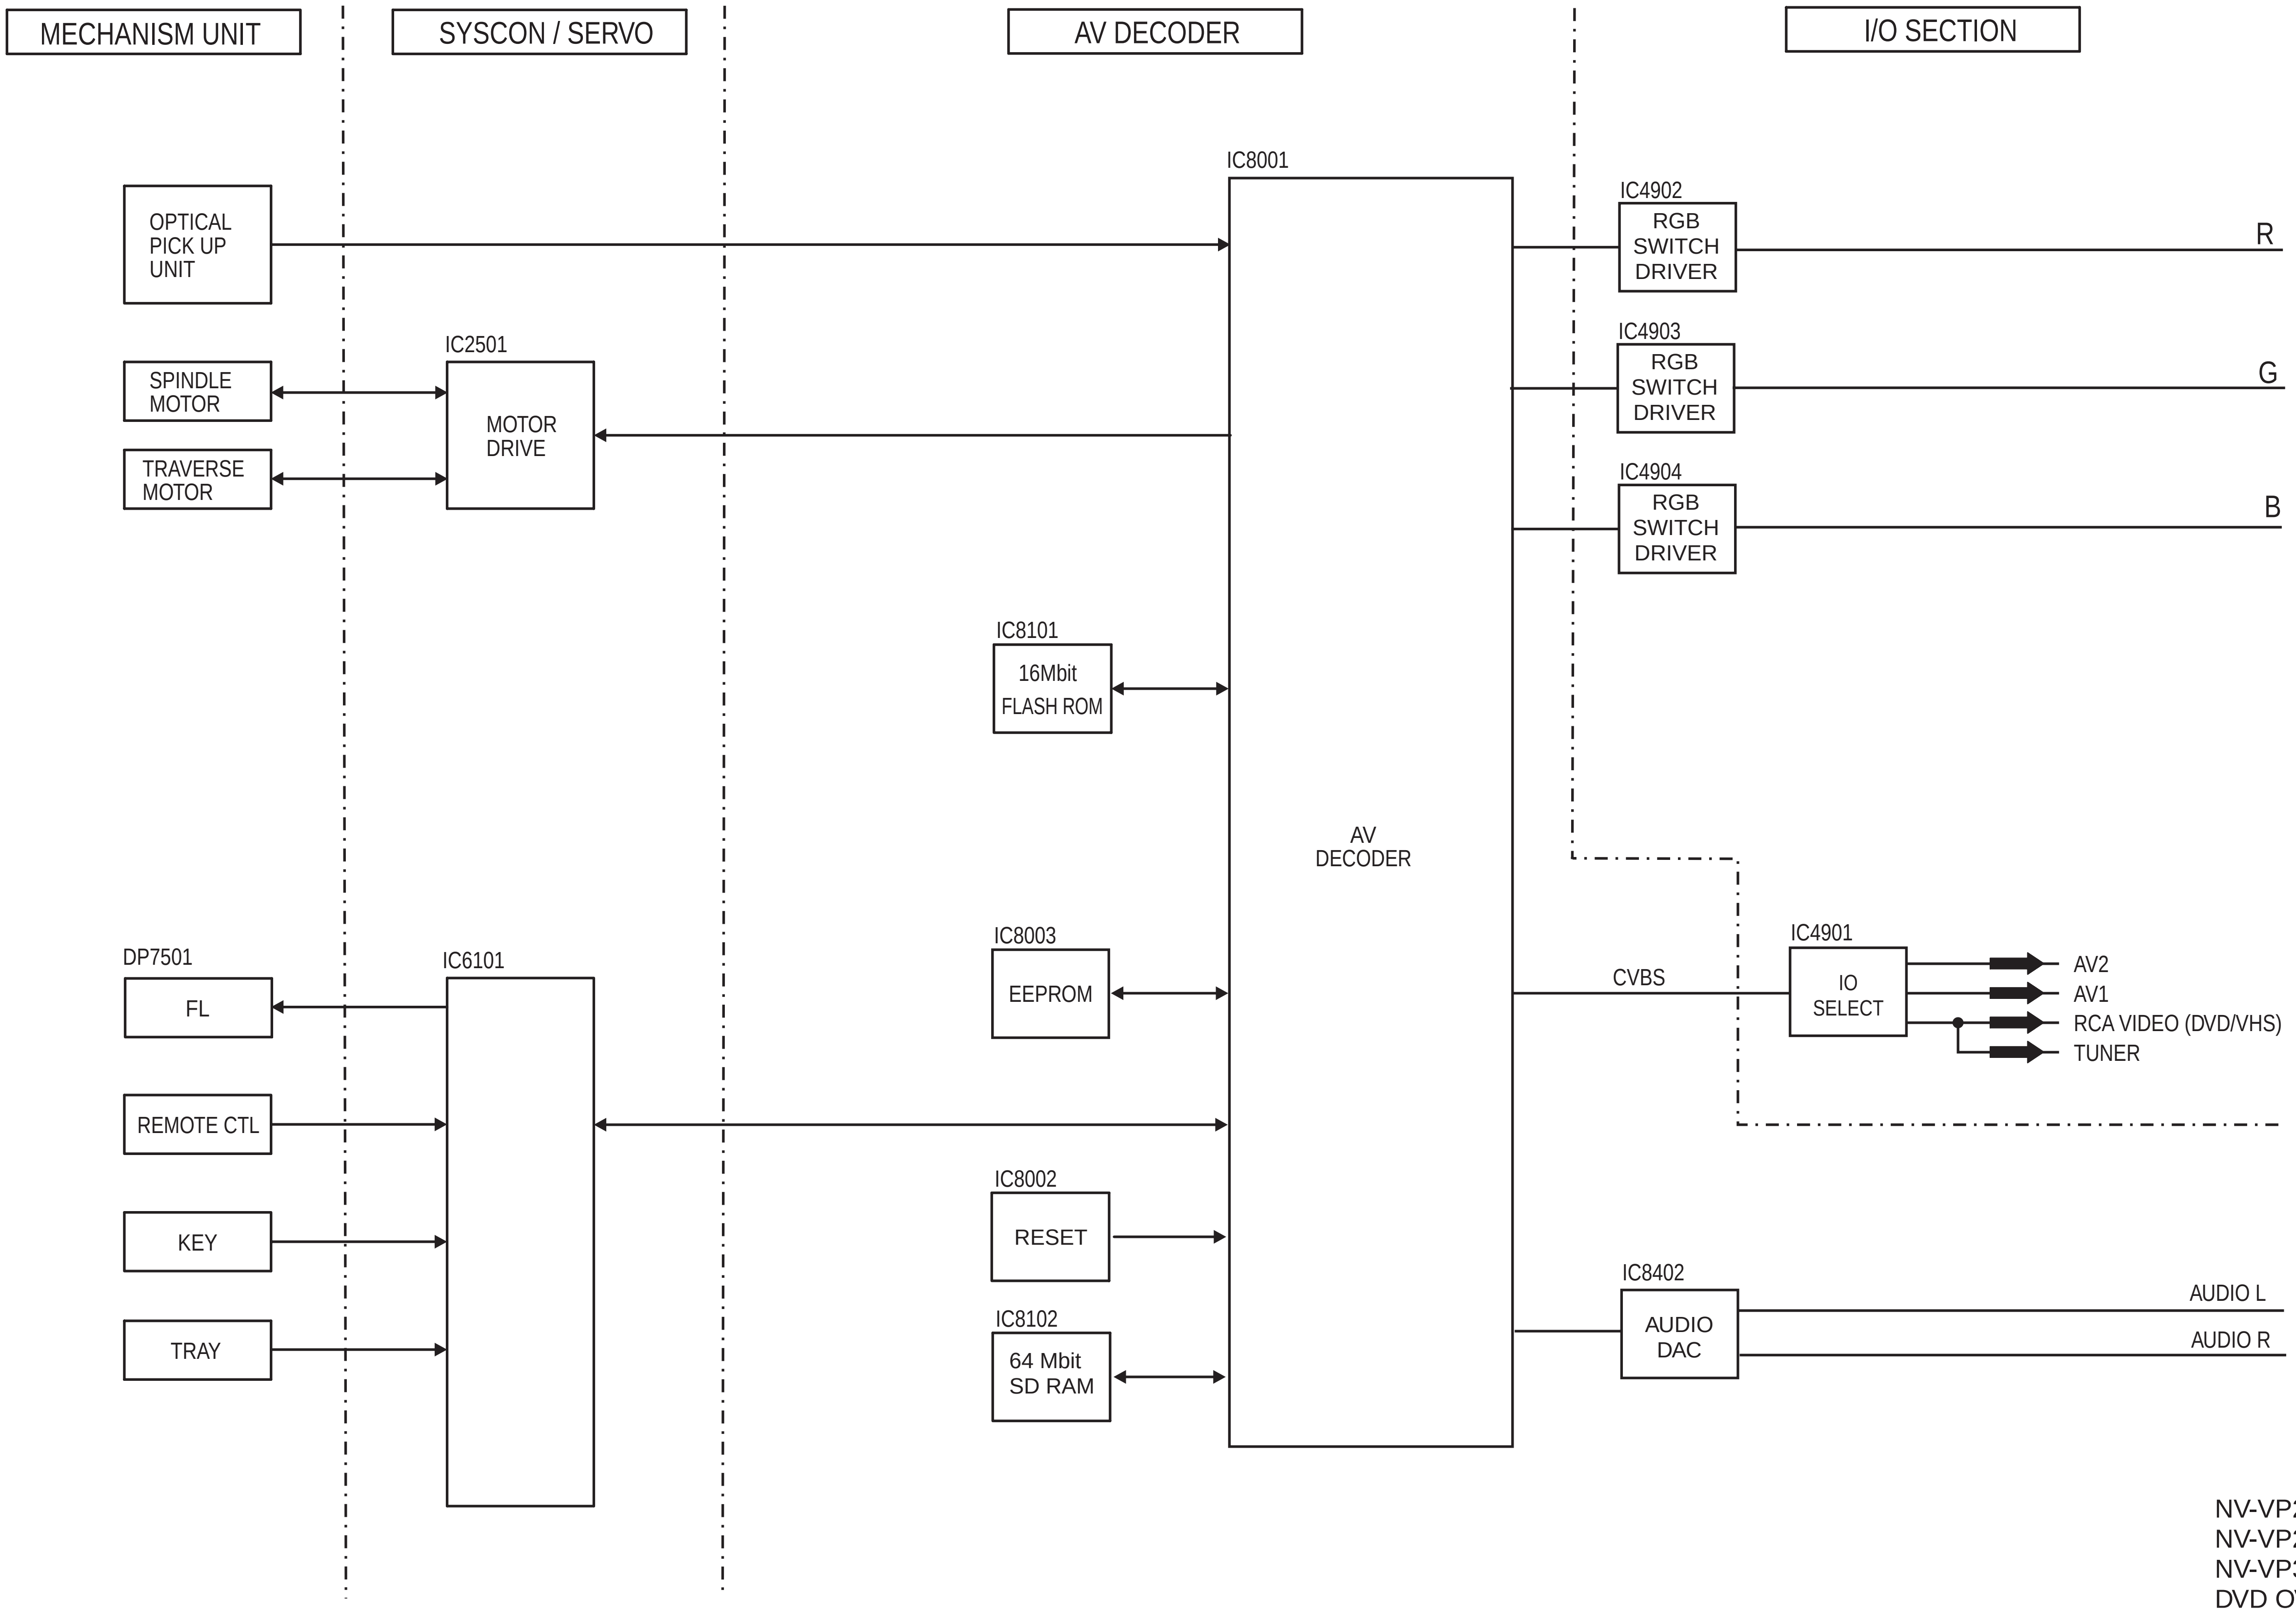
MECHANISM UNIT
SYSCON / SERVO
AV DECODER
I/O SECTION
OPTICAL PICK UP UNIT
SPINDLE MOTOR
TRAVERSE MOTOR
IC2501
MOTOR DRIVE
IC8001
AV DECODER
IC4902
RGB SWITCH DRIVER
R
IC4903
RGB SWITCH DRIVER
G
IC4904
RGB SWITCH DRIVER
B
IC8101
16Mbit FLASH ROM
IC8003
EEPROM
IC8002
RESET
IC8102
64 Mbit SD RAM
DP7501
FL
REMOTE CTL
KEY
TRAY
IC6101
CVBS
IC4901
IO SELECT
AV2
AV1
RCA VIDEO (DVD/VHS)
TUNER
IC8402
AUDIO DAC
AUDIO L
AUDIO R

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL
DVD OVERALL
BLOCK DIAGRAM

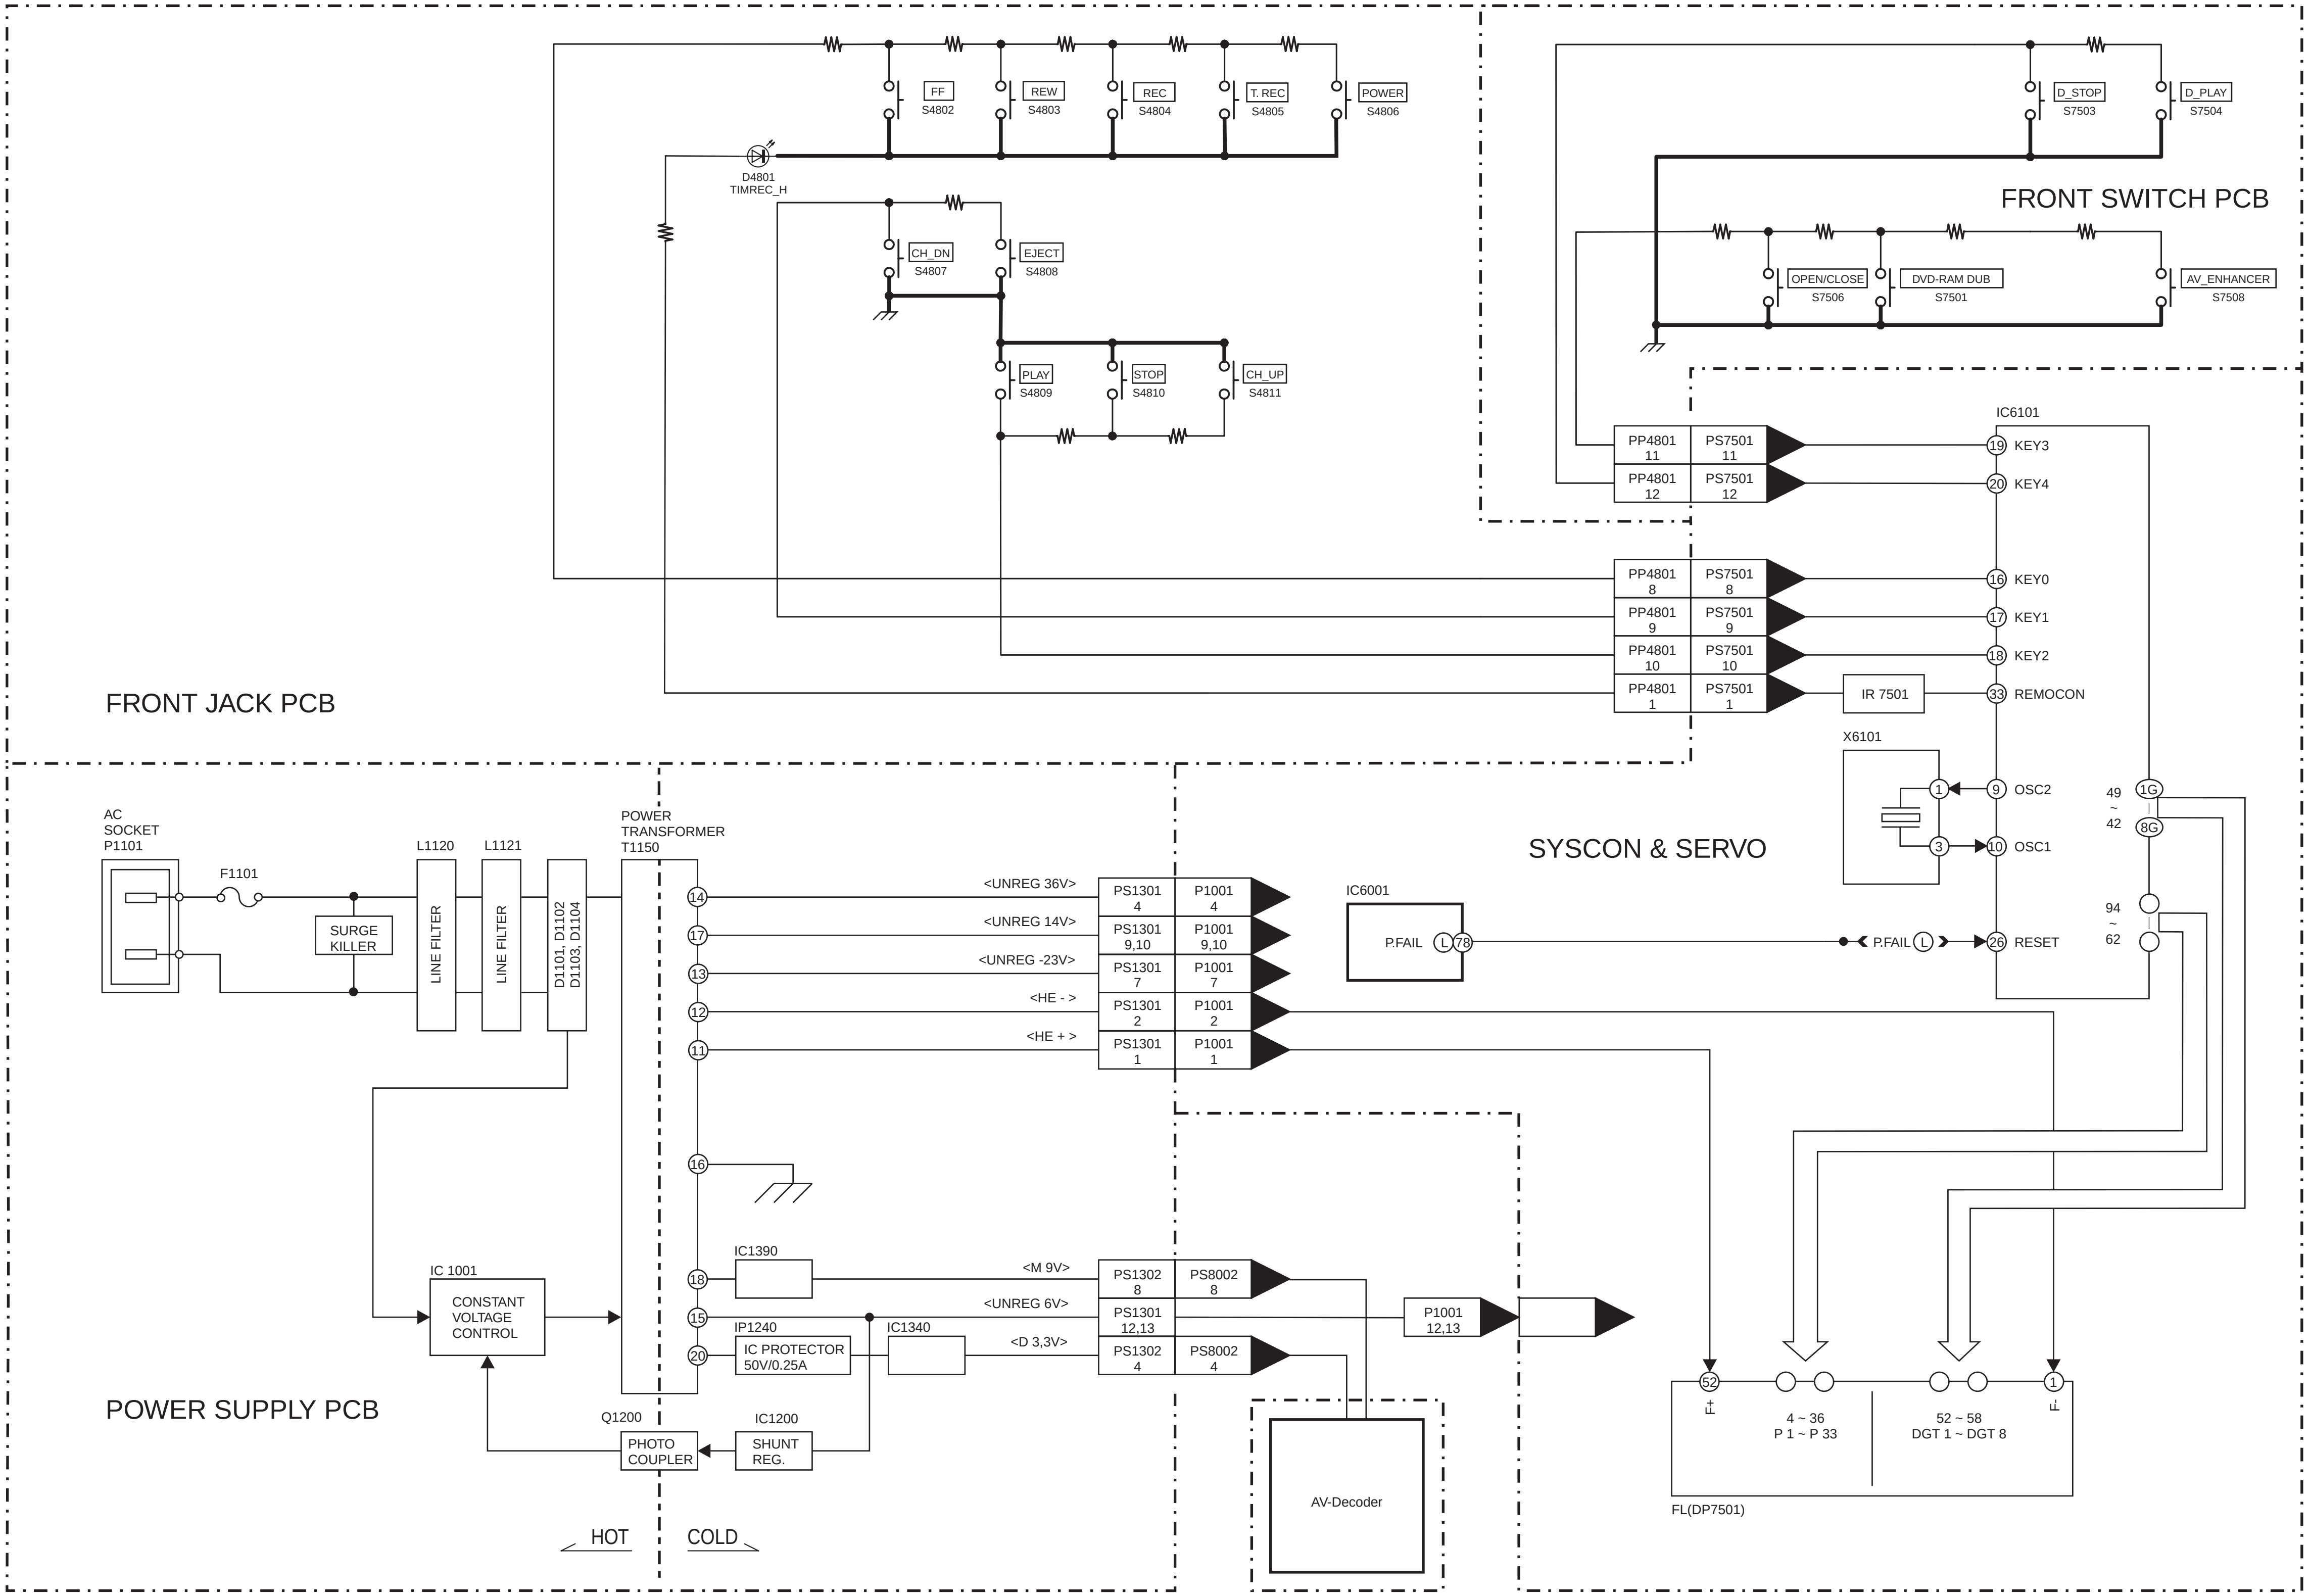
FRONT JACK PCB
FF
S4802
REW
S4803
REC
S4804
T. REC
S4805
POWER
S4806
D4801
TIMREC_H
CH_DN
S4807
EJECT
S4808
PLAY
S4809
STOP
S4810
CH_UP
S4811
FRONT SWITCH PCB
D_STOP
S7503
D_PLAY
S7504
OPEN/CLOSE
S7506
DVD-RAM DUB
S7501
AV_ENHANCER
S7508
IC6101
PP4801 11
PS7501 11
19 KEY3
PP4801 12
PS7501 12
20 KEY4
PP4801 8
PS7501 8
16 KEY0
PP4801 9
PS7501 9
17 KEY1
PP4801 10
PS7501 10
18 KEY2
PP4801 1
PS7501 1
IR 7501
33 REMOCON
X6101
1
9 OSC2
3
10 OSC1
49 ~ 42
1G
8G
94 ~ 62
SYSCON & SERVO
IC6001
P.FAIL L 78
P.FAIL L
26 RESET
AC SOCKET P1101
F1101
SURGE KILLER
L1120
LINE FILTER
L1121
LINE FILTER
D1101, D1102
D1103, D1104
POWER TRANSFORMER T1150
14 <UNREG 36V>
PS1301 4
P1001 4
17 <UNREG 14V>
PS1301 9,10
P1001 9,10
13 <UNREG -23V>
PS1301 7
P1001 7
12 <HE - >
PS1301 2
P1001 2
11 <HE + >
PS1301 1
P1001 1
16
IC 1001
CONSTANT VOLTAGE CONTROL
18
IC1390
<M 9V>
PS1302 8
PS8002 8
15
IP1240
<UNREG 6V>
PS1301 12,13
P1001 12,13
20
IC PROTECTOR 50V/0.25A
IC1340
<D 3,3V>
PS1302 4
PS8002 4
Q1200
PHOTO COUPLER
IC1200
SHUNT REG.
AV-Decoder
52
F+
4 ~ 36
P 1 ~ P 33
52 ~ 58
DGT 1 ~ DGT 8
1
F-
FL(DP7501)
POWER SUPPLY PCB
HOT
COLD

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
POWER PCB
BLOCK DIAGRAM

⬅ VIDEO MAIN SIGNAL PATH IN REC MODE

⇦ VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE

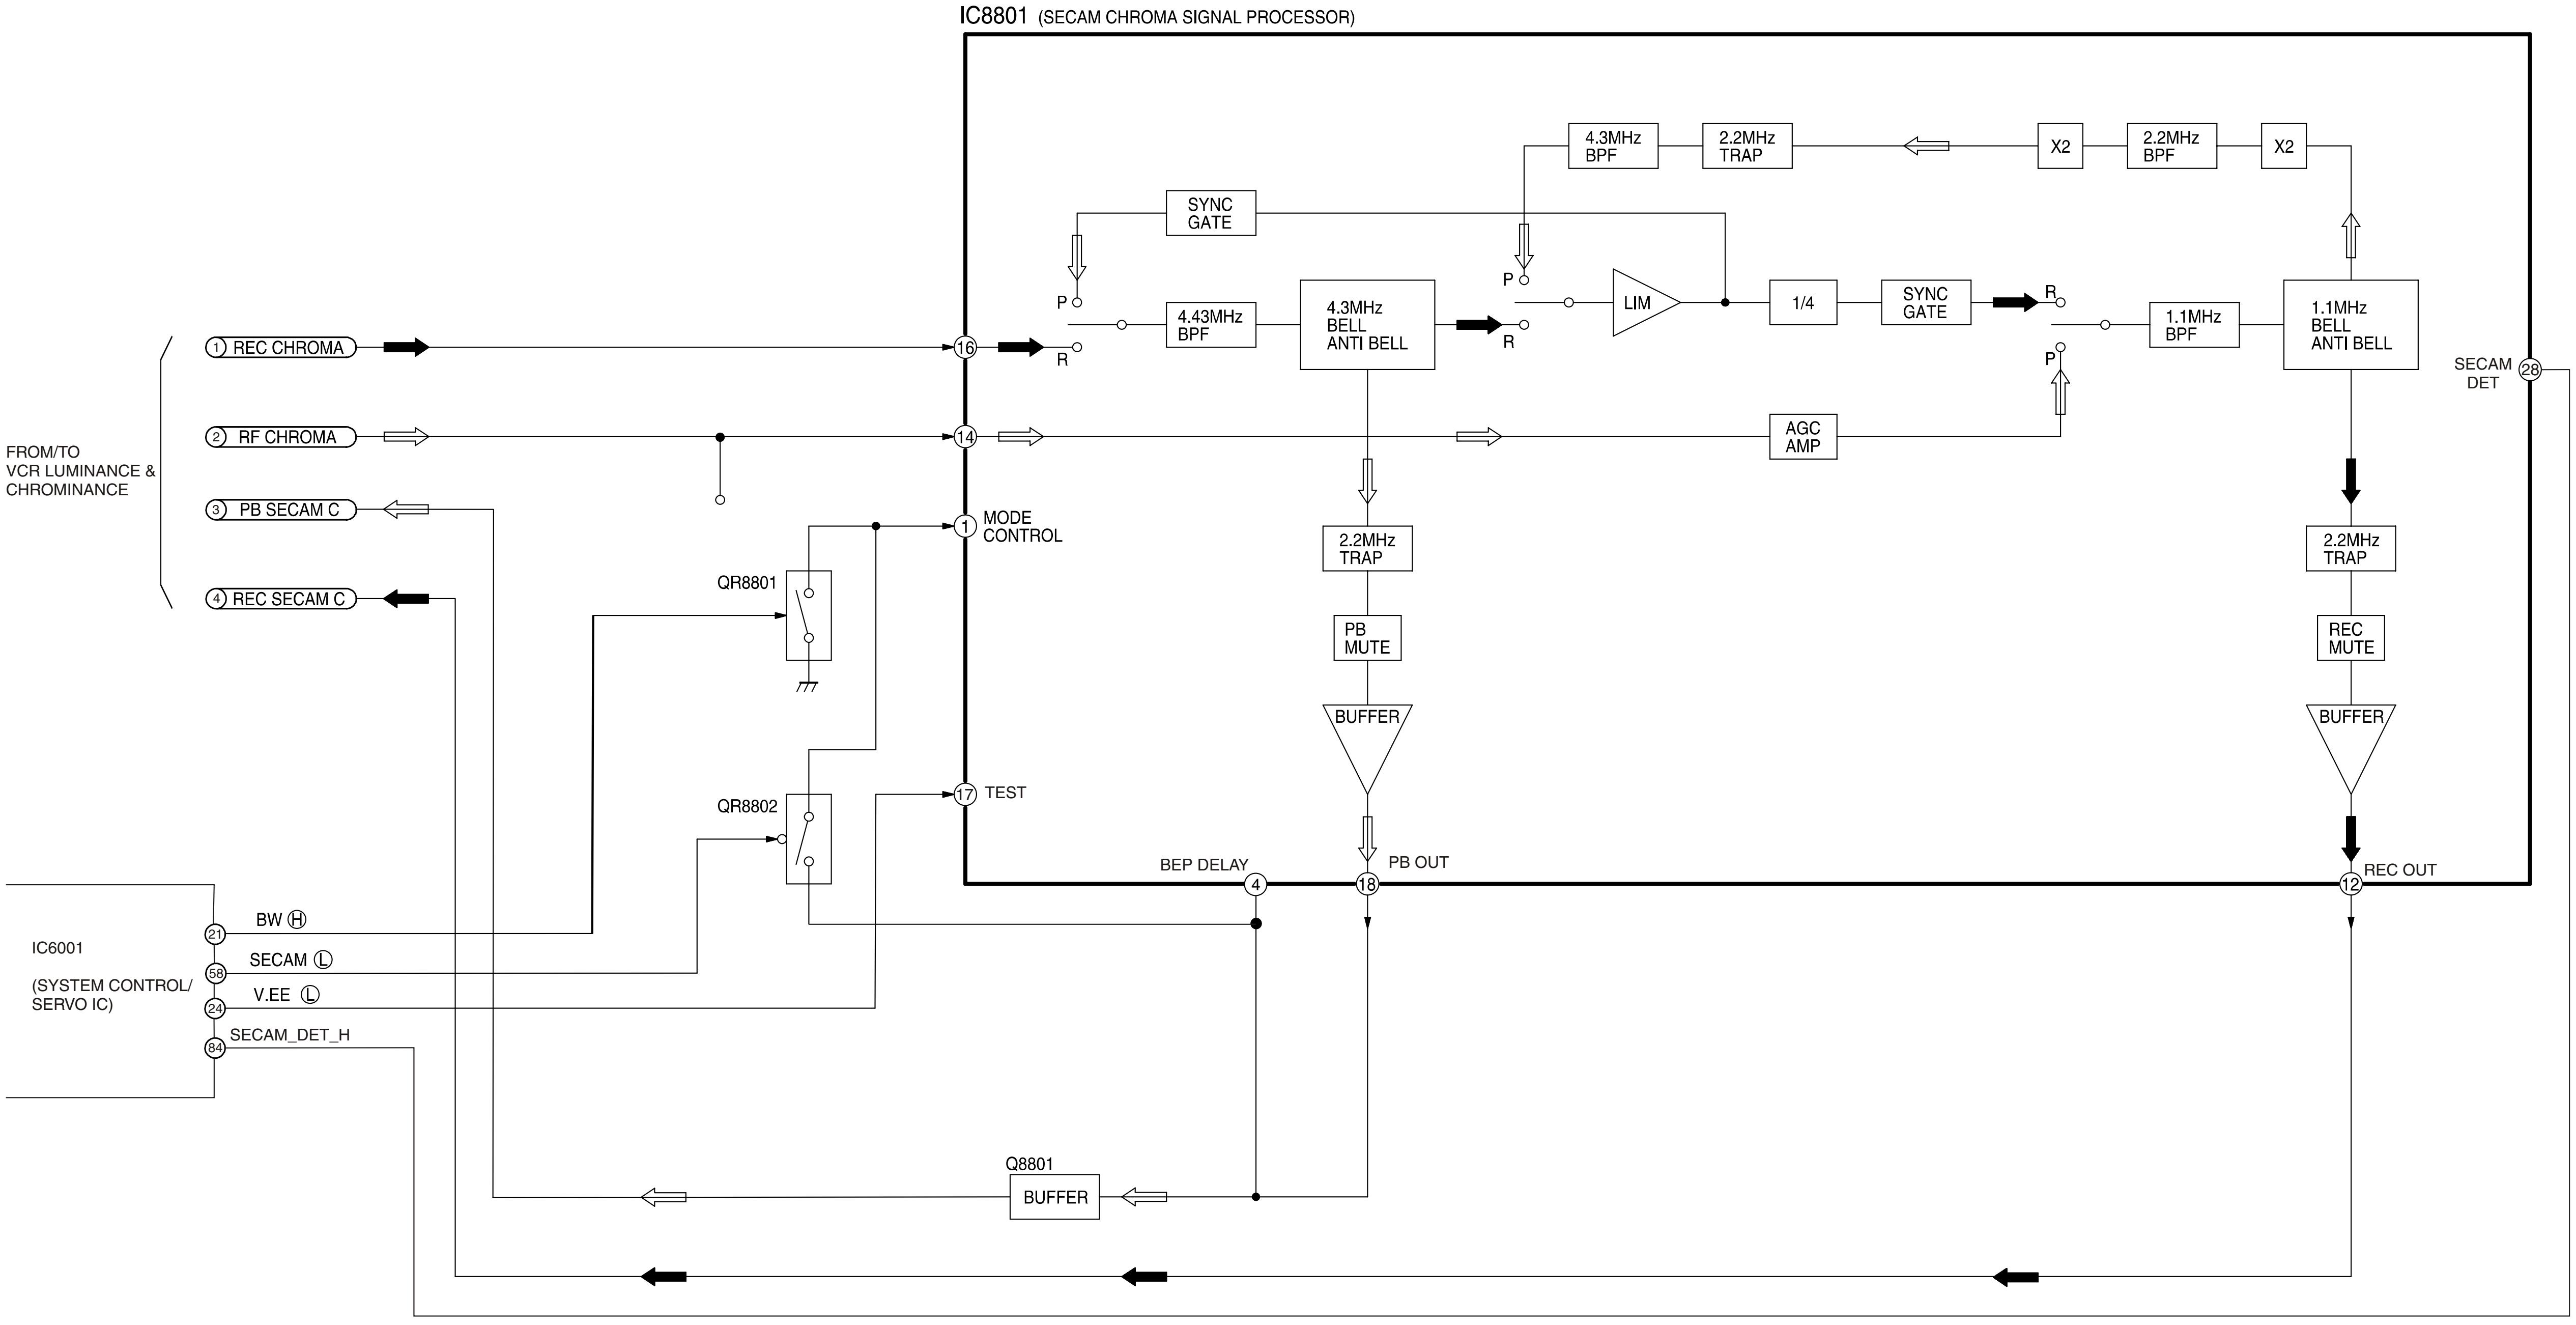
IC8801 (SECAM CHROMA SIGNAL PROCESSOR)
4.3MHz BPF
2.2MHz TRAP
X2
2.2MHz BPF
X2
SYNC GATE
P
R
4.43MHz BPF
4.3MHz BELL ANTI BELL
LIM
1/4
SYNC GATE
1.1MHz BPF
1.1MHz BELL ANTI BELL
SECAM DET
28
AGC AMP
FROM/TO VCR LUMINANCE & CHROMINANCE
1 REC CHROMA
2 RF CHROMA
3 PB SECAM C
4 REC SECAM C
16
14
1 MODE CONTROL
17 TEST
QR8801
QR8802
2.2MHz TRAP
PB MUTE
BUFFER
2.2MHz TRAP
REC MUTE
BUFFER
BEP DELAY
4
18 PB OUT
12 REC OUT
IC6001
(SYSTEM CONTROL/ SERVO IC)
21 BW Ⓗ
58 SECAM Ⓛ
24 V.EE Ⓛ
84 SECAM_DET_H
Q8801
BUFFER

NV-VP33EF
SECAM
BLOCK DIAGRAM

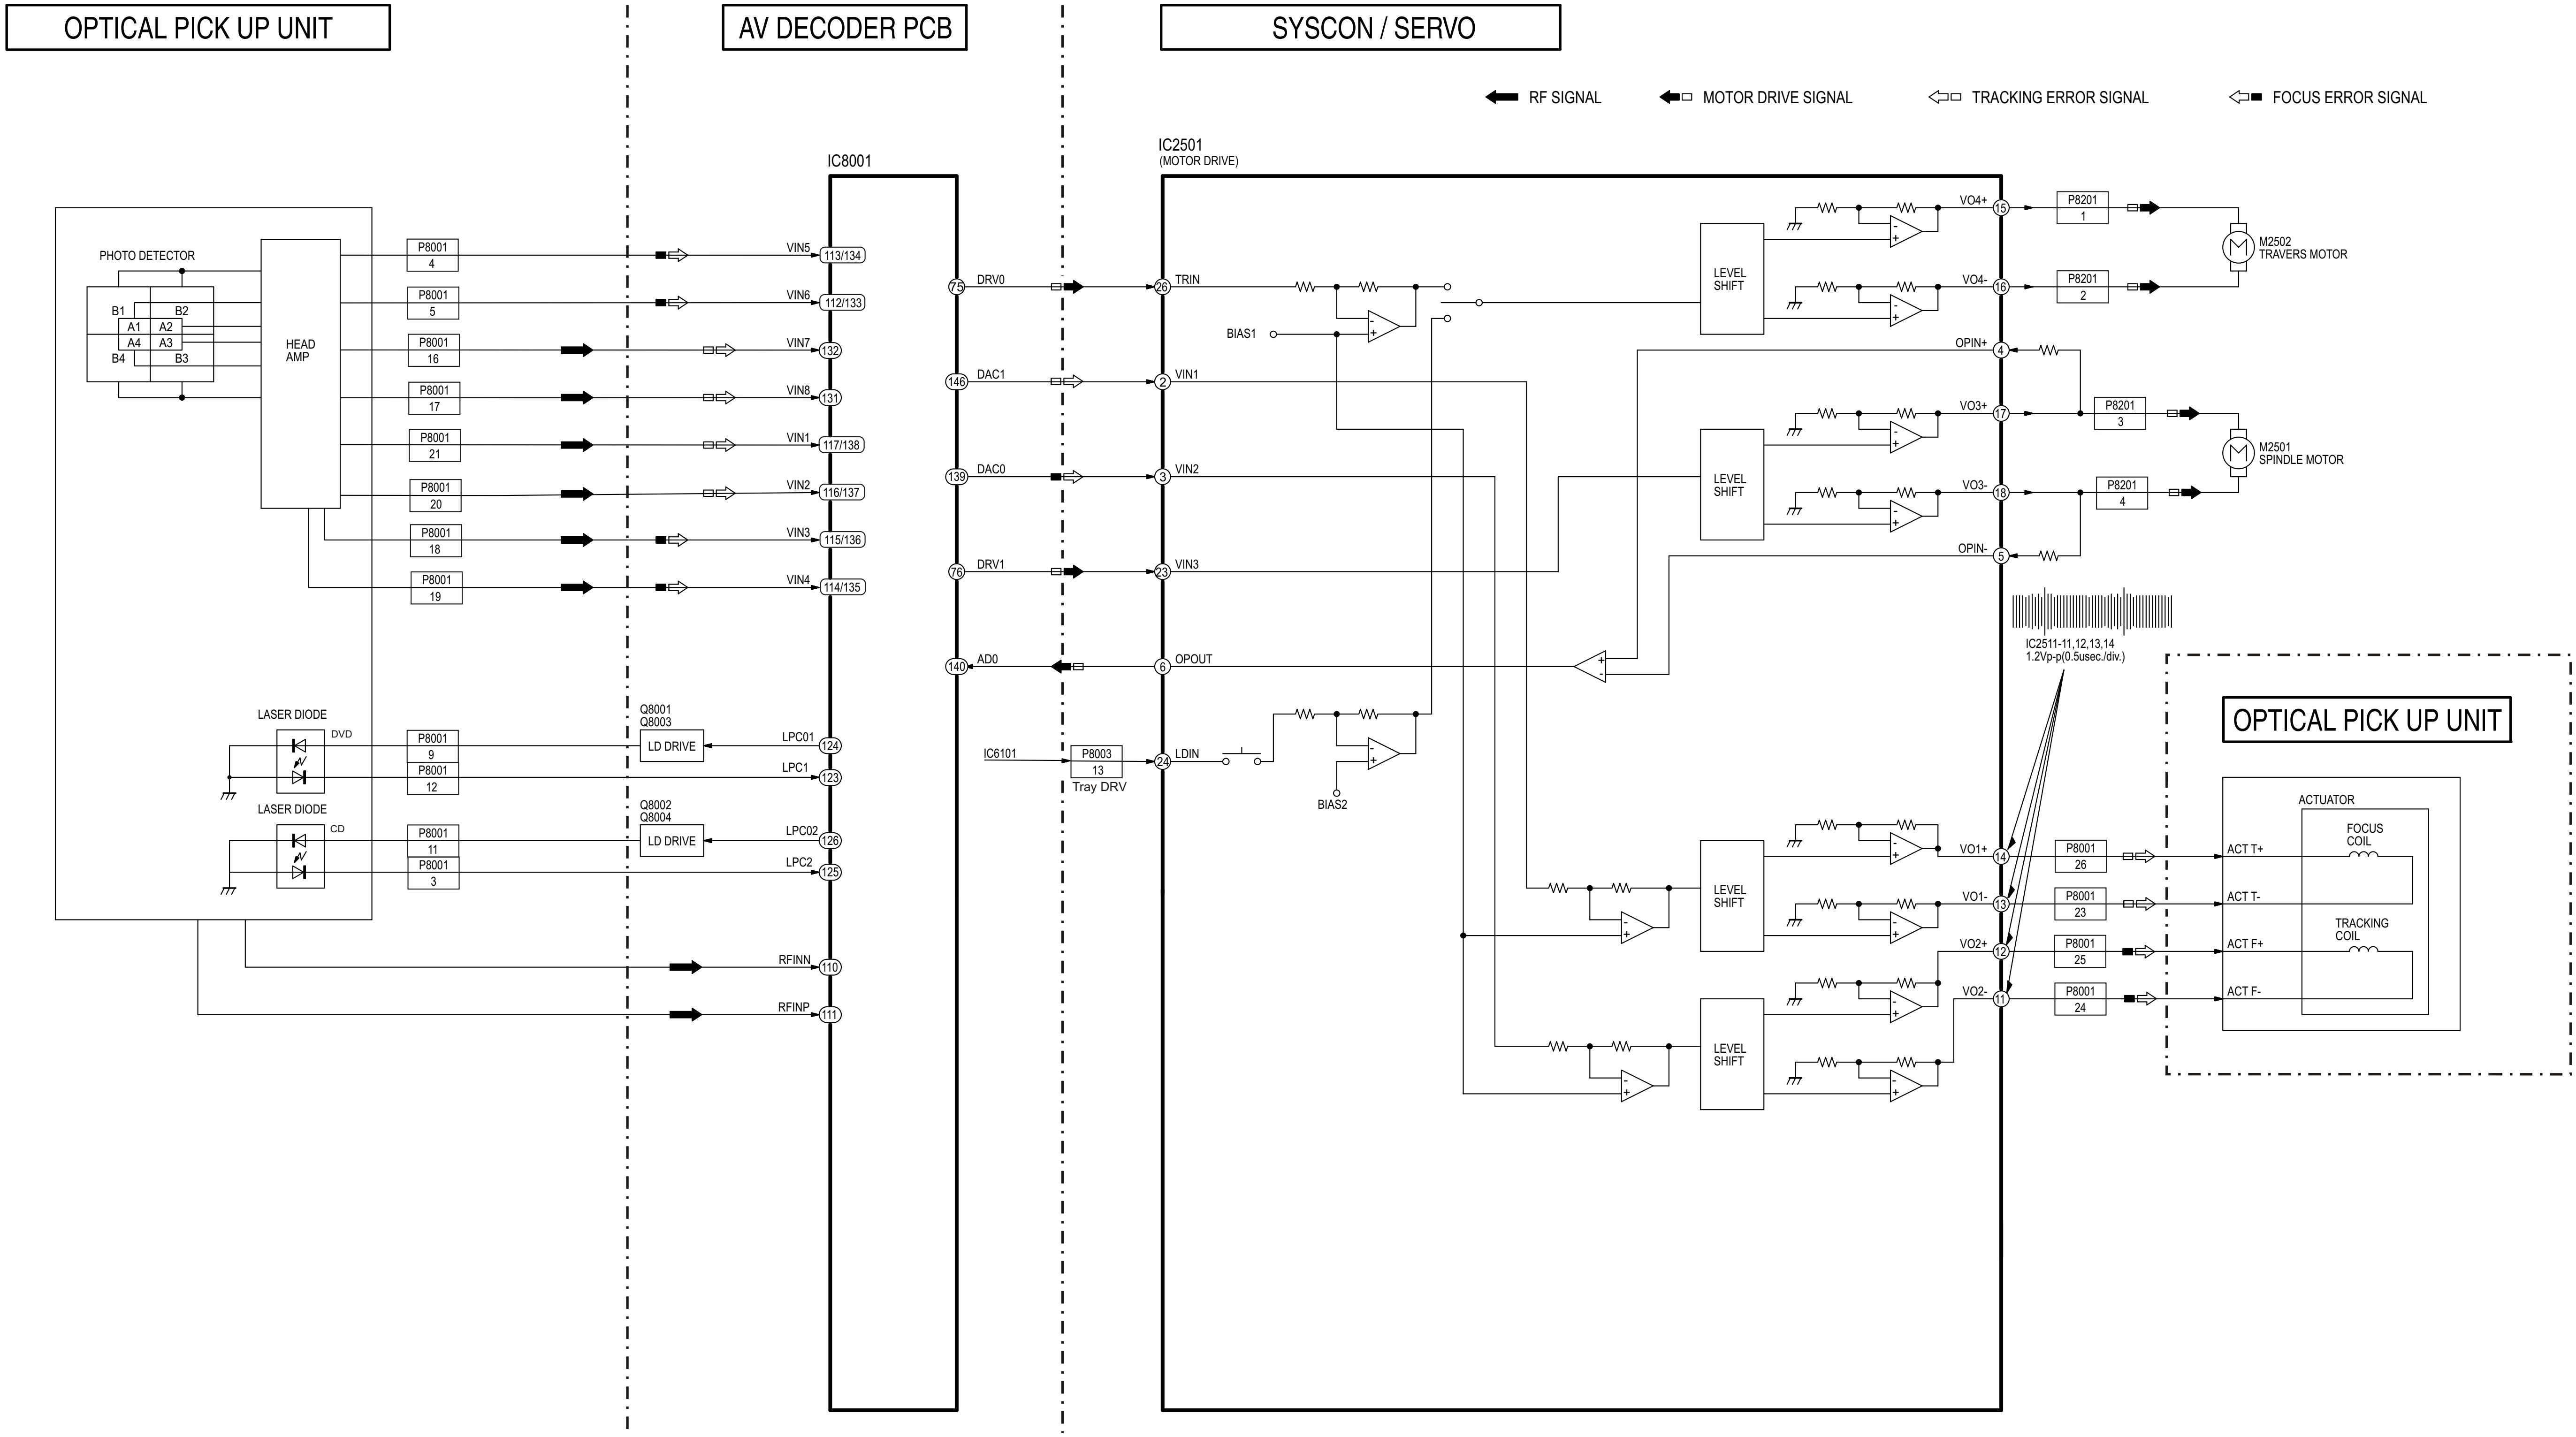
OPTICAL PICK UP UNIT
AV DECODER PCB
SYSCON / SERVO
RF SIGNAL
MOTOR DRIVE SIGNAL
TRACKING ERROR SIGNAL
FOCUS ERROR SIGNAL
IC8001
IC2501
(MOTOR DRIVE)
PHOTO DETECTOR
B1 B2 A1 A2 A4 A3 B4 B3
HEAD AMP
P8001 4
P8001 5
P8001 16
P8001 17
P8001 21
P8001 20
P8001 18
P8001 19
VIN5 113/134
VIN6 112/133
VIN7 132
VIN8 131
VIN1 117/138
VIN2 116/137
VIN3 115/136
VIN4 114/135
LASER DIODE
DVD
LASER DIODE
CD
P8001 9
P8001 12
P8001 11
P8001 3
Q8001 Q8003
LD DRIVE
Q8002 Q8004
LD DRIVE
LPC01 124
LPC1 123
LPC02 126
LPC2 125
RFINN 110
RFINP 111
75 DRV0
146 DAC1
139 DAC0
76 DRV1
140 AD0
IC6101
P8003 13
Tray DRV
26 TRIN
2 VIN1
3 VIN2
23 VIN3
6 OPOUT
24 LDIN
BIAS1
BIAS2
LEVEL SHIFT
VO4+ 15
VO4- 16
OPIN+ 4
VO3+ 17
VO3- 18
OPIN- 5
VO1+ 14
VO1- 13
VO2+ 12
VO2- 11
P8201 1
P8201 2
P8201 3
P8201 4
M2502 TRAVERS MOTOR
M2501 SPINDLE MOTOR
IC2511-11,12,13,14
1.2Vp-p(0.5usec./div.)
P8001 26
P8001 23
P8001 25
P8001 24
OPTICAL PICK UP UNIT
ACTUATOR
ACT T+
ACT T-
ACT F+
ACT F-
FOCUS COIL
TRACKING COIL

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
DVD SERVO SECTION
BLOCK DIAGRAM

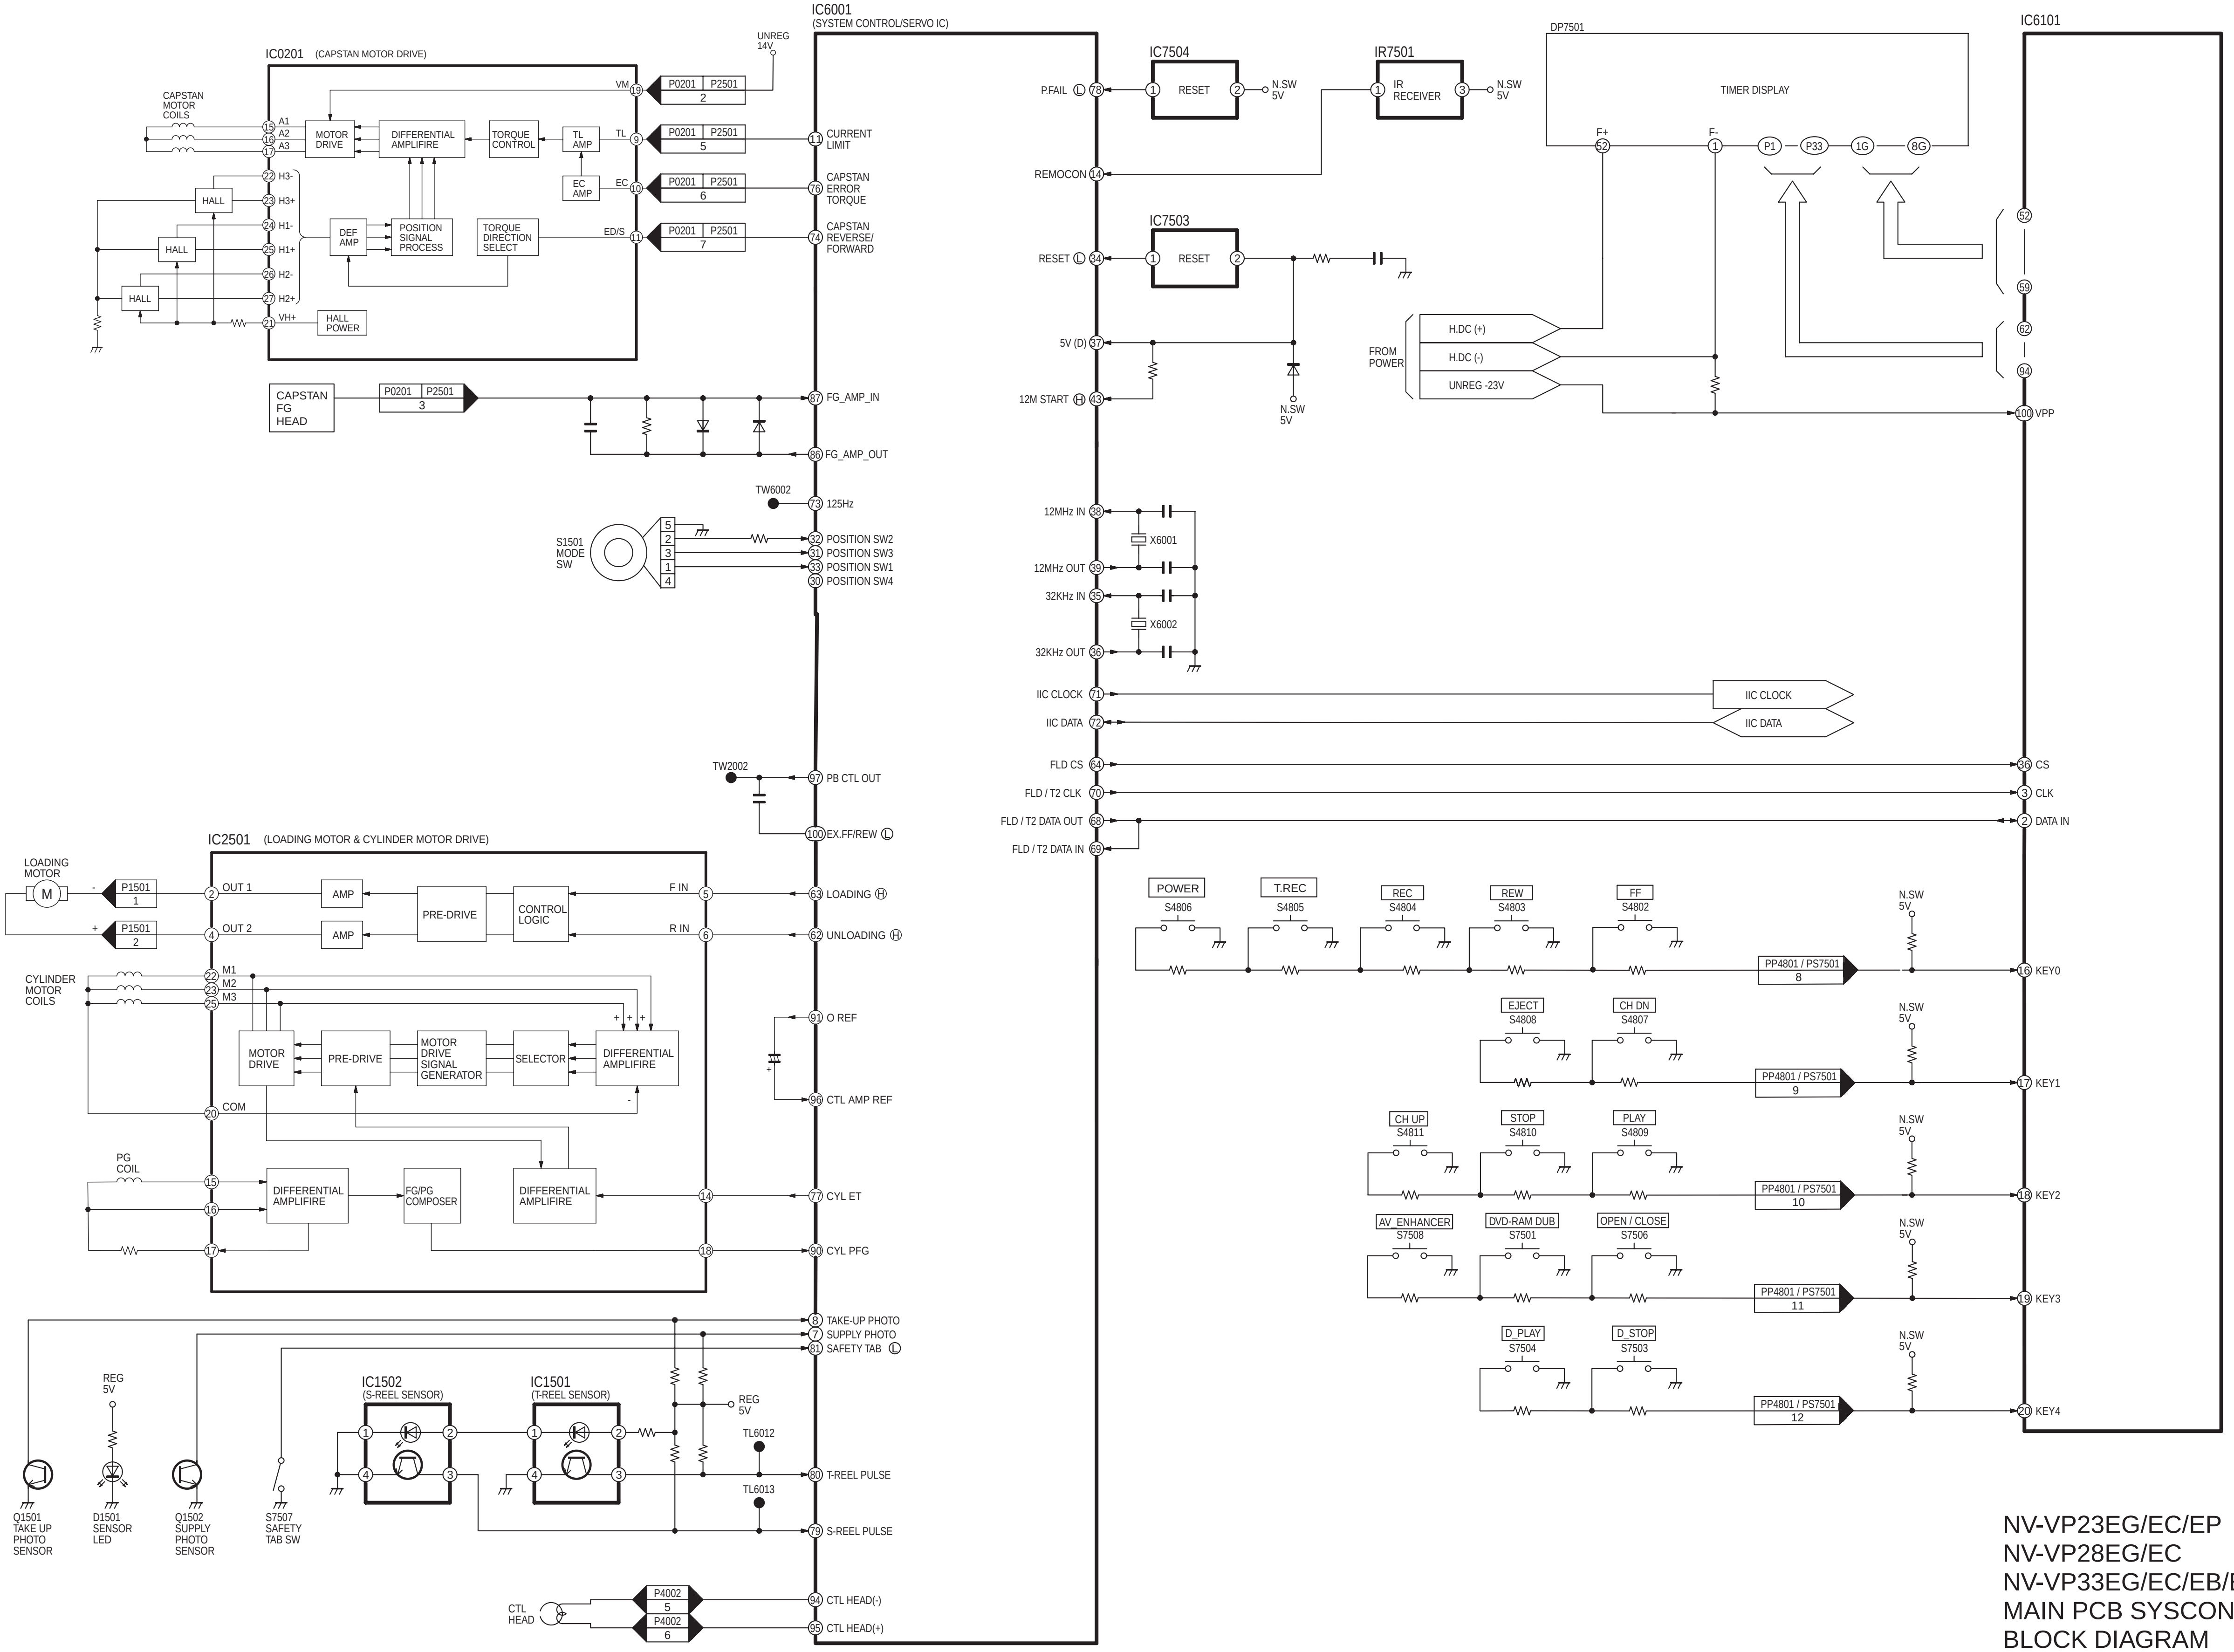
IC6001
(SYSTEM CONTROL/SERVO IC)
IC0201 (CAPSTAN MOTOR DRIVE)
UNREG 14V
CAPSTAN MOTOR COILS
A1
A2
A3
H3-
H3+
H1-
H1+
H2-
H2+
VH+
HALL
HALL
HALL
MOTOR DRIVE
DIFFERENTIAL AMPLIFIRE
TORQUE CONTROL
TL AMP
EC AMP
DEF AMP
POSITION SIGNAL PROCESS
TORQUE DIRECTION SELECT
HALL POWER
VM
TL
EC
ED/S
P0201
P2501
CURRENT LIMIT
CAPSTAN ERROR TORQUE
CAPSTAN REVERSE/ FORWARD
CAPSTAN FG HEAD
FG_AMP_IN
FG_AMP_OUT
TW6002
125Hz
S1501 MODE SW
POSITION SW2
POSITION SW3
POSITION SW1
POSITION SW4
TW2002
PB CTL OUT
EX.FF/REW Ⓛ
IC2501 (LOADING MOTOR & CYLINDER MOTOR DRIVE)
LOADING MOTOR
M
P1501
OUT 1
OUT 2
AMP
AMP
PRE-DRIVE
CONTROL LOGIC
F IN
R IN
LOADING Ⓗ
UNLOADING Ⓗ
CYLINDER MOTOR COILS
M1
M2
M3
COM
MOTOR DRIVE
PRE-DRIVE
MOTOR DRIVE SIGNAL GENERATOR
SELECTOR
DIFFERENTIAL AMPLIFIRE
O REF
CTL AMP REF
PG COIL
DIFFERENTIAL AMPLIFIRE
FG/PG COMPOSER
DIFFERENTIAL AMPLIFIRE
CYL ET
CYL PFG
TAKE-UP PHOTO
SUPPLY PHOTO
SAFETY TAB Ⓛ
REG 5V
IC1502 (S-REEL SENSOR)
IC1501 (T-REEL SENSOR)
REG 5V
TL6012
TL6013
T-REEL PULSE
S-REEL PULSE
Q1501 TAKE UP PHOTO SENSOR
D1501 SENSOR LED
Q1502 SUPPLY PHOTO SENSOR
S7507 SAFETY TAB SW
CTL HEAD
P4002
CTL HEAD(-)
CTL HEAD(+)
P.FAIL Ⓛ
REMOCON
RESET Ⓛ
5V (D)
12M START Ⓗ
IC7504
RESET
N.SW 5V
IR7501
IR RECEIVER
N.SW 5V
IC7503
RESET
N.SW 5V
DP7501
TIMER DISPLAY
F+
F-
P1
P33
1G
8G
FROM POWER
H.DC (+)
H.DC (-)
UNREG -23V
IC6101
VPP
12MHz IN
X6001
12MHz OUT
32KHz IN
X6002
32KHz OUT
IIC CLOCK
IIC DATA
IIC CLOCK
IIC DATA
FLD CS
FLD / T2 CLK
FLD / T2 DATA OUT
FLD / T2 DATA IN
CS
CLK
DATA IN
POWER S4806
T.REC S4805
REC S4804
REW S4803
FF S4802
EJECT S4808
CH DN S4807
CH UP S4811
STOP S4810
PLAY S4809
AV_ENHANCER S7508
DVD-RAM DUB S7501
OPEN / CLOSE S7506
D_PLAY S7504
D_STOP S7503
PP4801 / PS7501
N.SW 5V
KEY0
KEY1
KEY2
KEY3
KEY4

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB SYSCON & SERVO
BLOCK DIAGRAM

(REPD0011A)

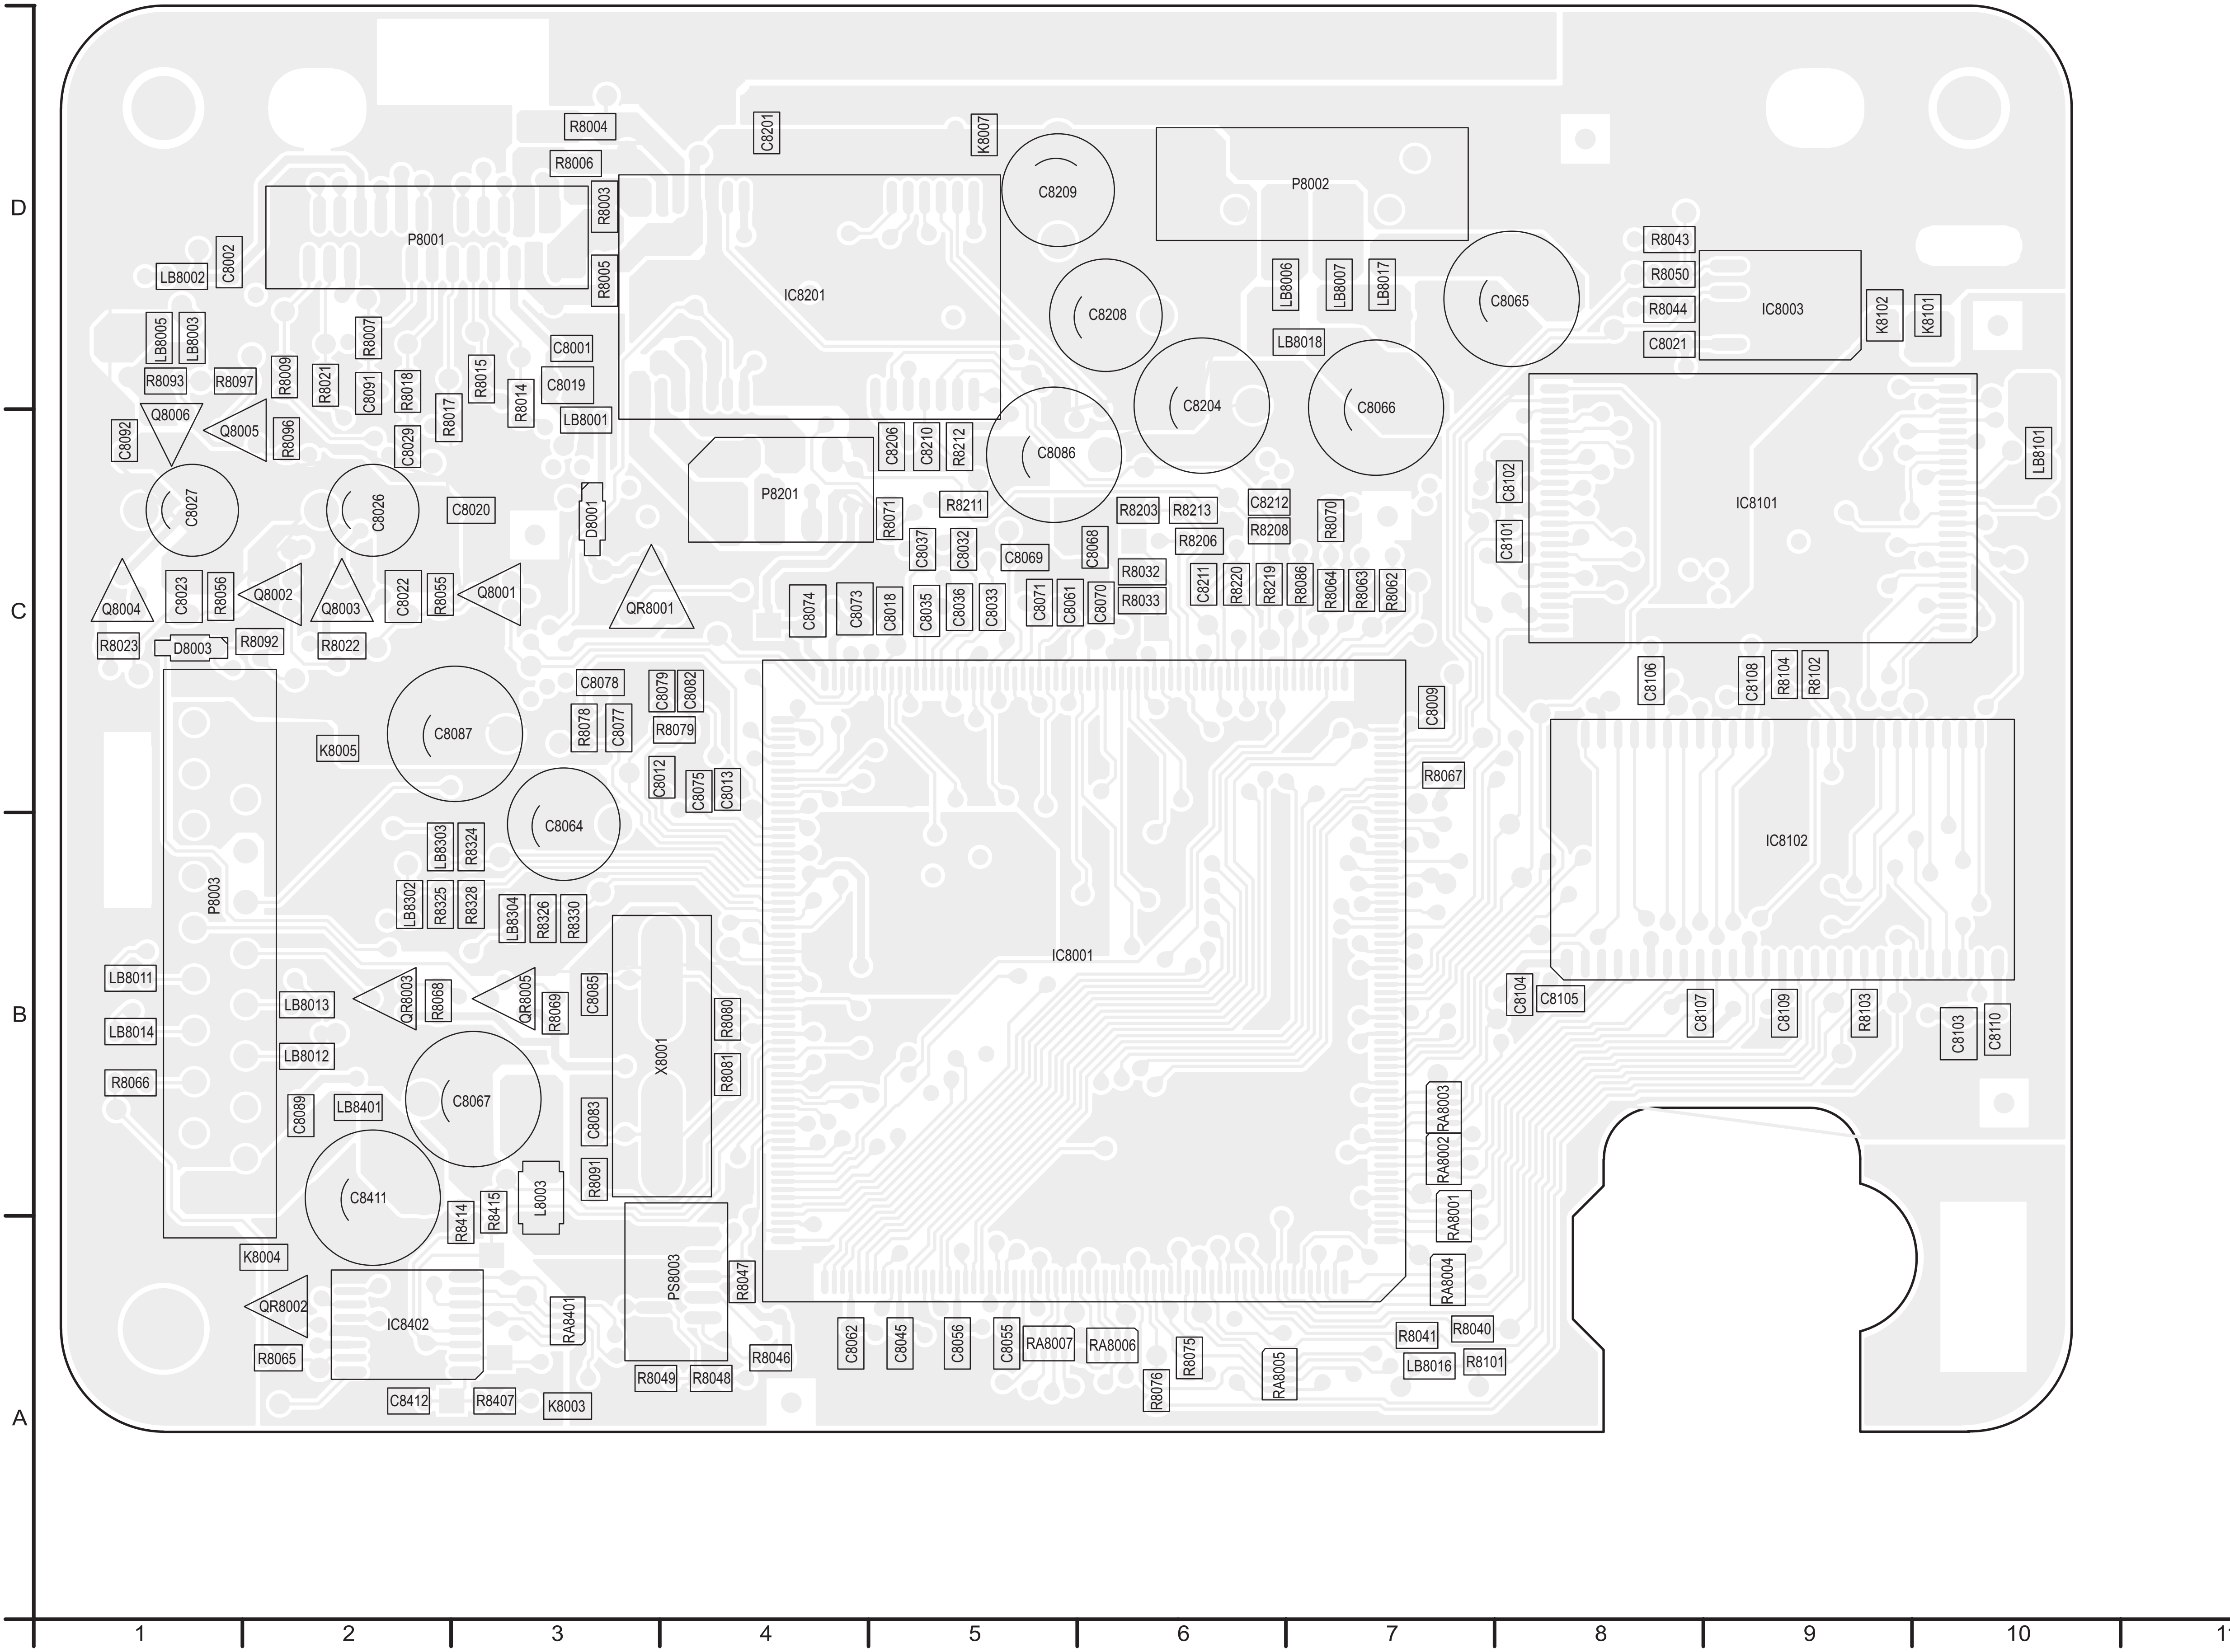
D
C
B
A
1
2
3
4
5
6
7
8
9
10
11
12
R8004
C8201
K8007
R8006
R8003
C8209
P8002
P8001
IC8201
R8005
R8043
R8050
C8208
LB8006
LB8007
LB8017
C8065
IC8003
K8102
K8101
R8044
LB8002
C8002
LB8005
LB8003
R8007
C8001
LB8018
C8021
C8204
C8066
R8093
R8097
R8009
R8021
C8091
R8018
R8015
C8019
R8014
LB8001
Q8006
R8017
C8086
Q8005
C8092
R8096
C8029
C8206
C8210
R8212
LB8101
C8102
P8201
IC8101
C8027
C8026
C8020
D8001
R8211
C8212
R8203
R8213
R8071
R8070
C8037
C8032
C8069
C8068
R8208
R8206
C8101
R8032
C8211
R8220
R8219
R8086
R8064
R8063
R8062
Q8004
C8023
R8056
Q8002
Q8003
C8022
R8055
Q8001
QR8001
C8074
C8073
C8018
C8035
C8036
C8033
C8071
C8061
C8070
R8033
R8023
D8003
R8092
R8022
C8078
C8079
C8082
C8106
C8108
R8104
R8102
C8087
R8078
C8077
R8079
C8009
K8005
C8012
C8075
C8013
R8067
C8064
LB8303
R8324
IC8102
P8003
LB8302
R8325
R8328
LB8304
R8326
R8330
IC8001
LB8011
QR8003
R8068
QR8005
R8069
C8085
R8080
C8104
C8105
C8107
C8109
R8103
C8103
C8110
LB8013
LB8014
LB8012
X8001
R8081
R8066
C8067
RA8003
C8089
LB8401
C8083
RA8002
C8411
R8414
R8415
L8003
R8091
RA8001
PS8003
K8004
R8047
RA8004
QR8002
IC8402
RA8401
C8062
C8045
C8056
C8055
RA8007
RA8006
R8075
R8041
R8040
R8065
R8046
R8049
R8048
R8076
RA8005
LB8016
R8101
C8412
R8407
K8003

DECODER PCB	
IC8001	B5
IC8003	D9
IC8101	C9
IC8102	B9
IC8201	D5
IC8402	A2
Q8001	C3
Q8002	C2
Q8003	C2
Q8004	C1
Q8005	C1
Q8006	C1
QR8001	C3
QR8002	A2
QR8003	B2
QR8005	B3
P8001	D2
P8002	D7
P8003	B1
P8201	C4
PS8003	A4
X8001	B3

ADDRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
DECODER PCB
COMPONENT SIDE

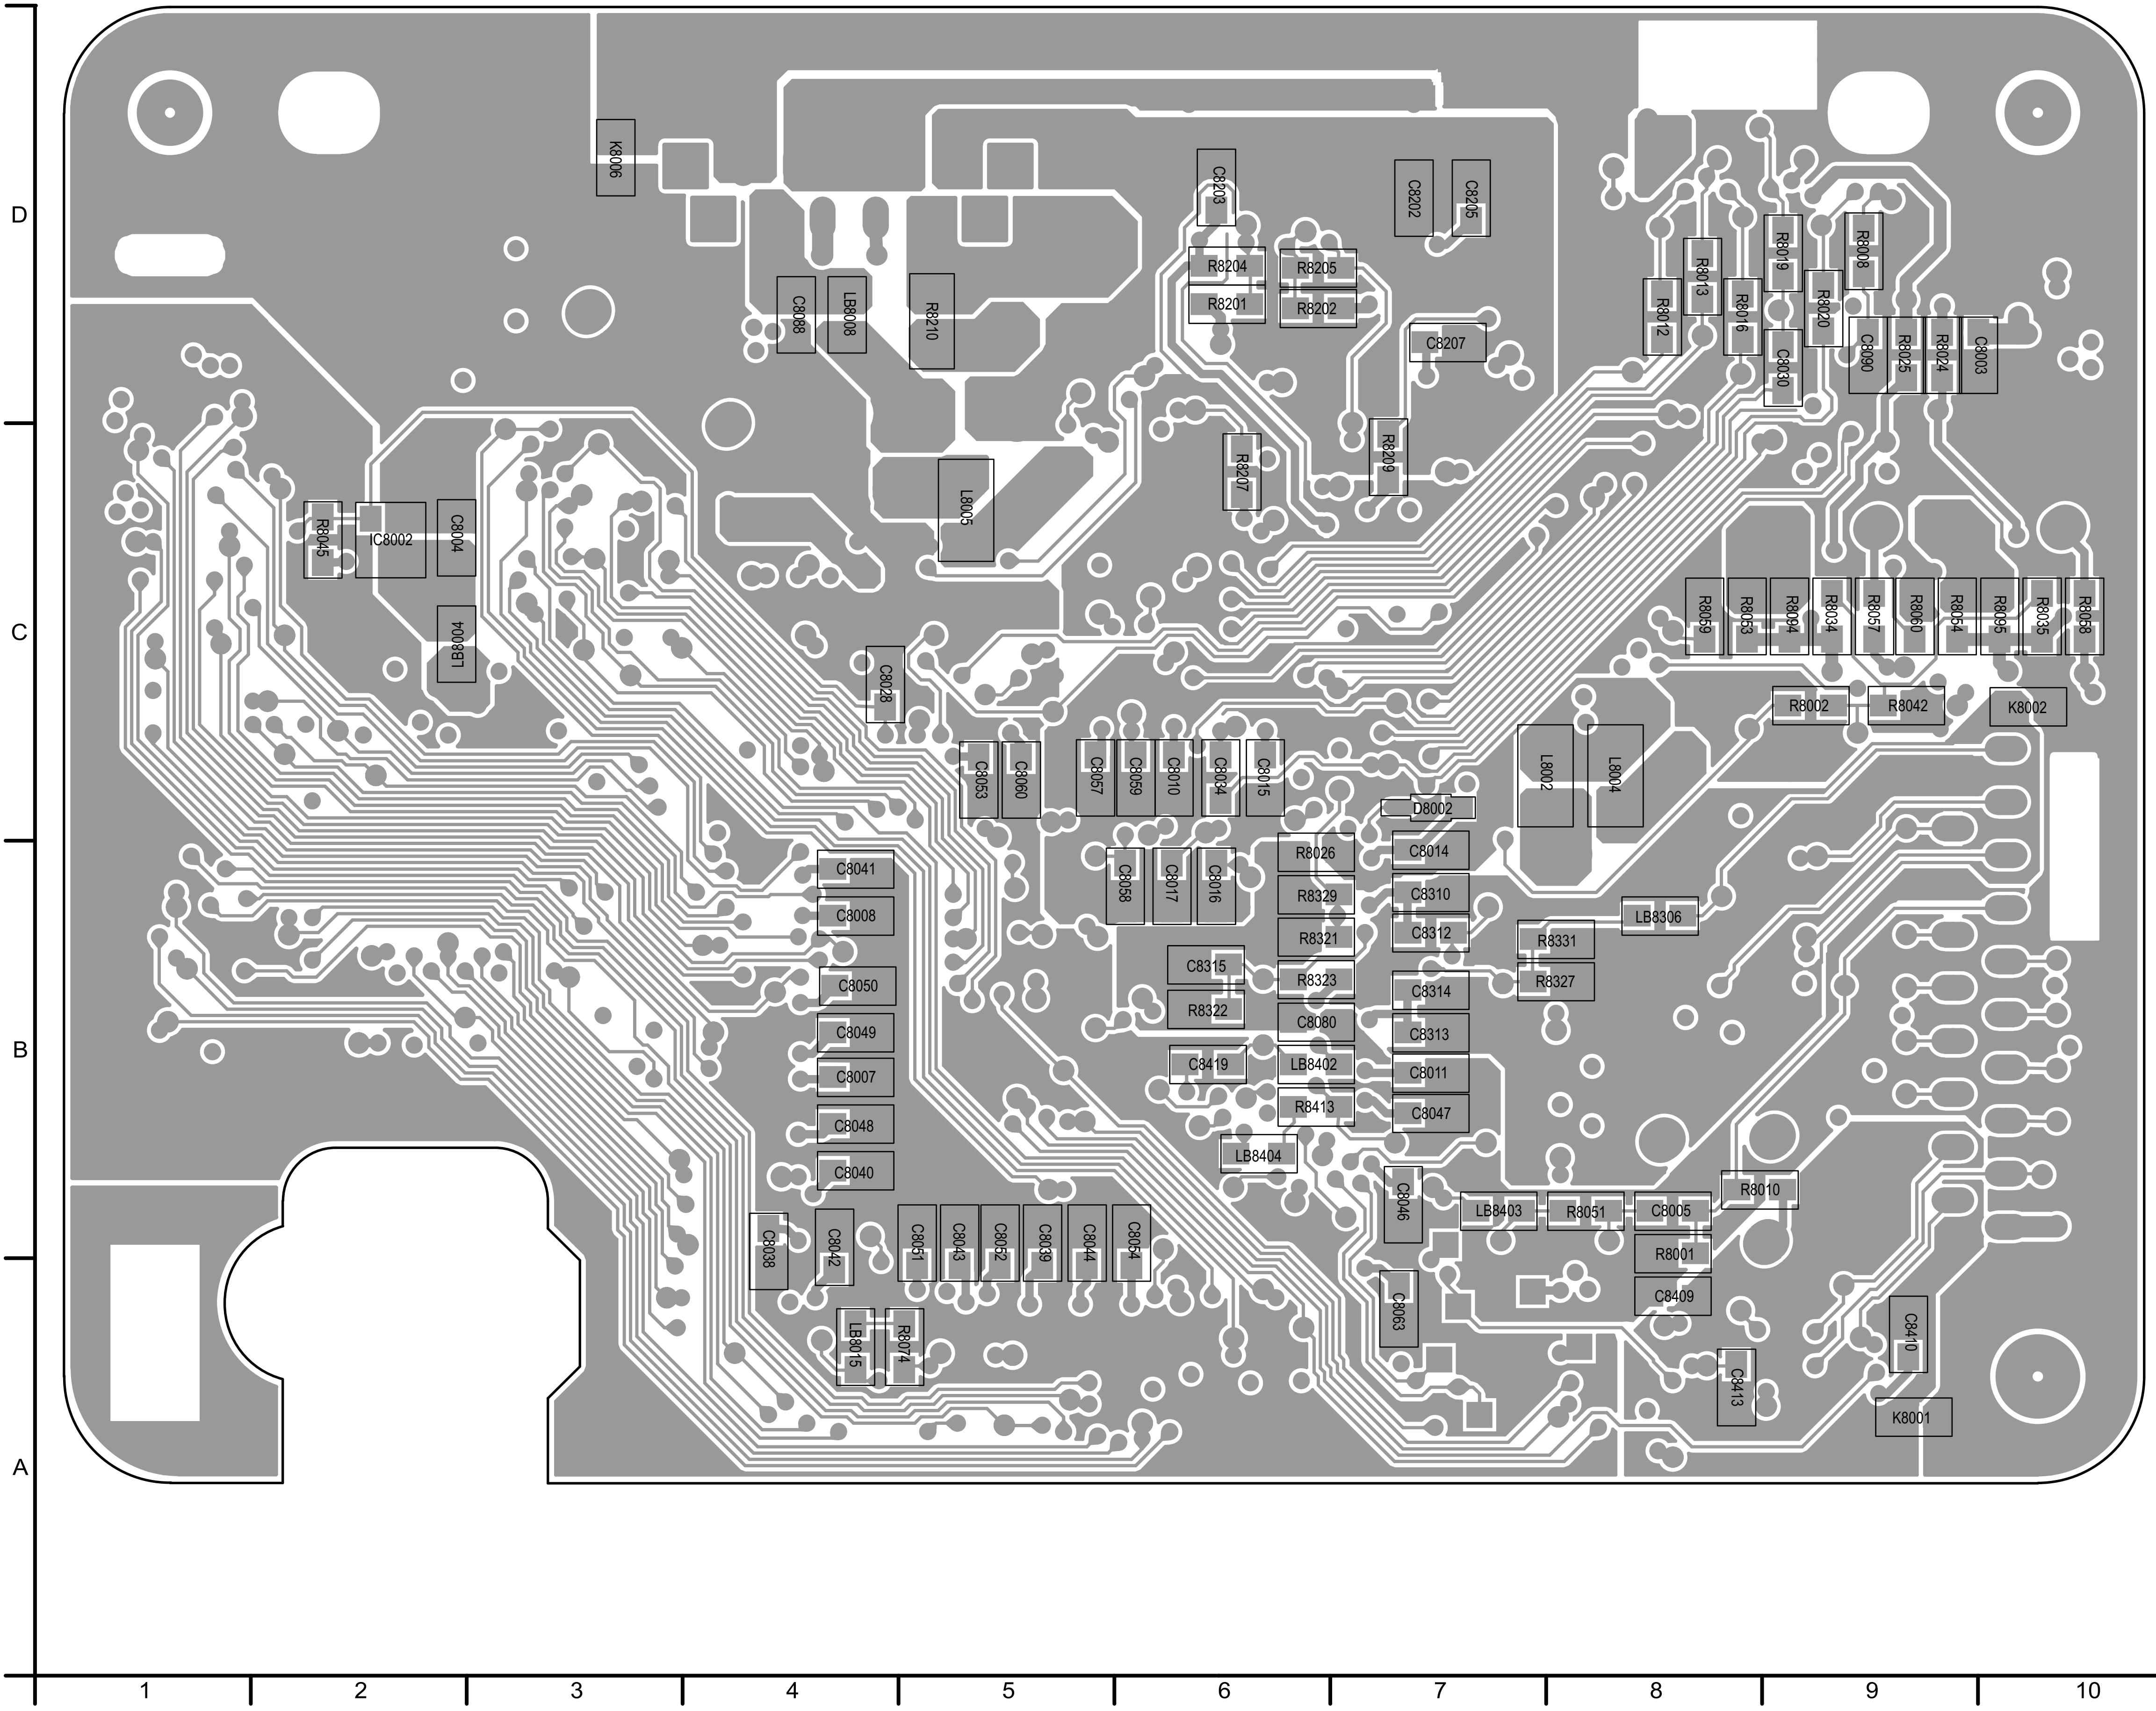
D
C
B
A
K8006
C8203
C8202
C8205
R8204
R8205
R8201
R8202
R8019
R8008
R8013
R8020
R8012
R8016
C8088
LB8008
R8210
C8207
C8090
R8025
R8024
C8003
C8030
R8209
R8207
L8005
R8045
IC8002
C8004
LB8004
R8059
R8053
R8094
R8034
R8057
R8060
R8054
R8095
R8035
R8058
C8028
R8002
R8042
K8002
L8002
L8004
C8053
C8060
C8057
C8059
C8010
C8034
C8015
D8002
R8026
C8014
C8041
C8058
C8017
C8016
R8329
C8310
C8008
R8321
C8312
LB8306
R8331
C8315
R8323
C8314
R8327
C8050
R8322
C8080
C8313
C8049
C8419
LB8402
C8011
C8007
R8413
C8047
C8048
LB8404
C8040
C8046
R8010
LB8403
R8051
C8005
C8038
C8042
C8051
C8043
C8052
C8039
C8044
C8054
R8001
C8409
C8063
C8410
LB8015
R8074
C8413
K8001
1
2
3
4
5
6
7
8
9
10
11
12

DECODER PCB	
IC8002	C2

ADDRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
DECODER PCB
SOLDER SIDE

FRONT JACK COMPONENT SIDE (REPD0014A)

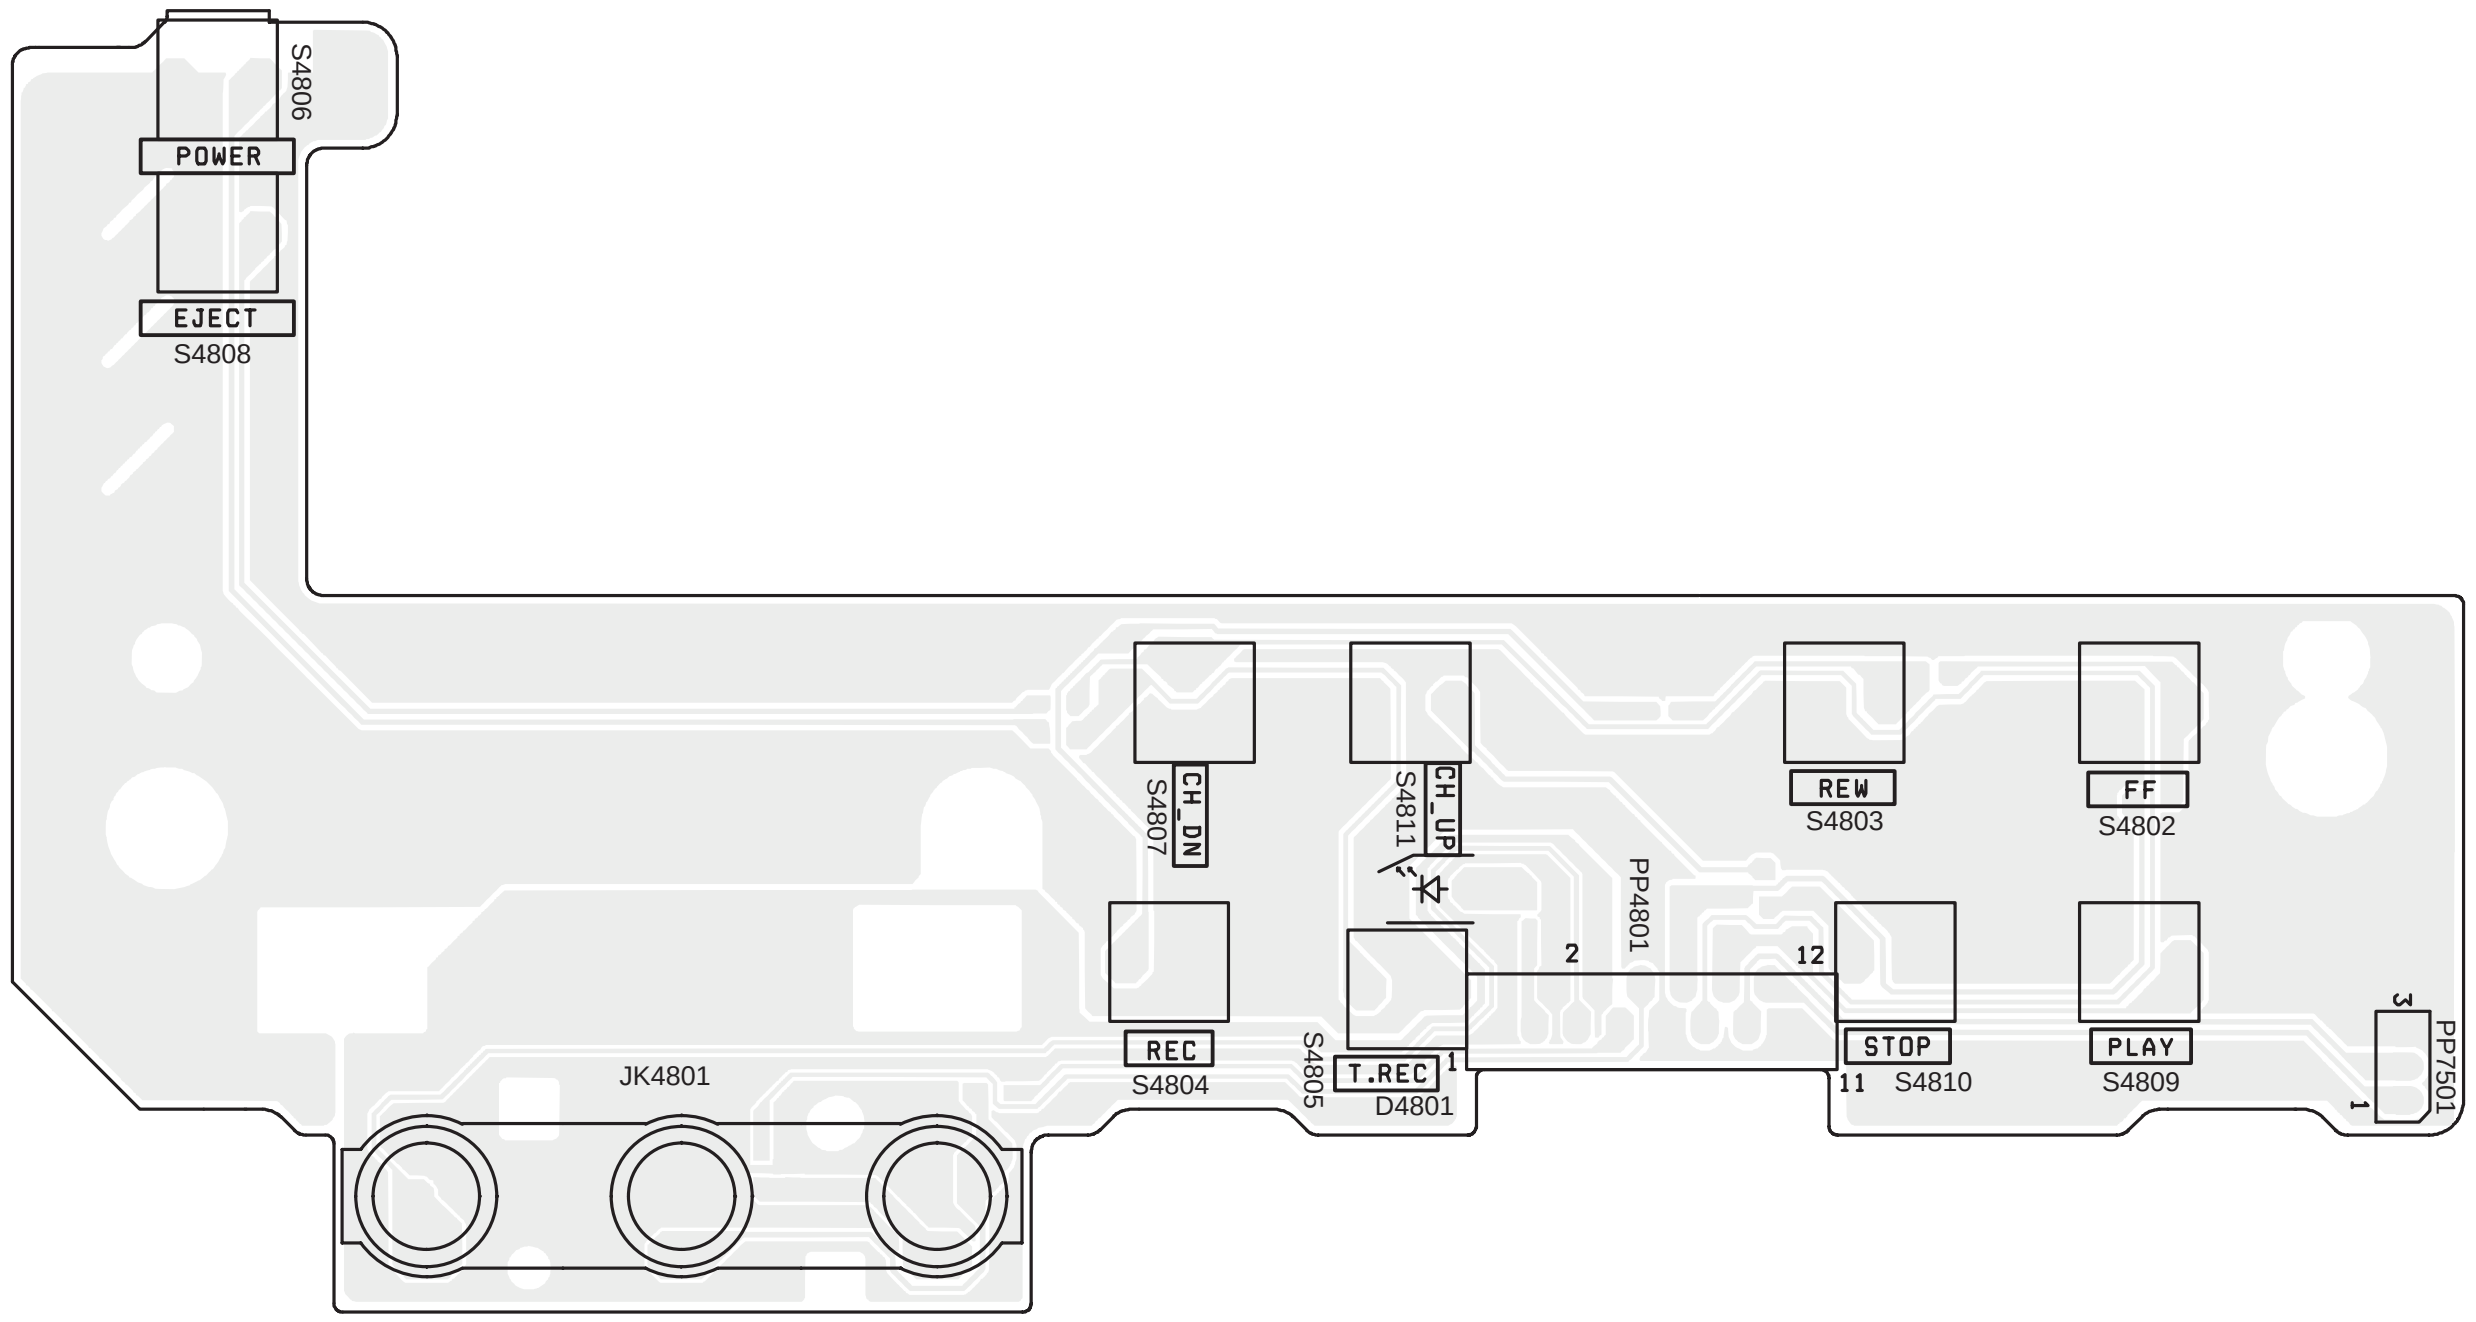
S4806
POWER
EJECT
S4808
CH_DN
S4807
CH_UP
S4811
REW
S4803
FF
S4802
PP4801
2
12
REC
S4804
S4805
T.REC
D4801
1
STOP
11
S4810
PLAY
S4809
3
PP7501
1
JK4801

FRONT SWITCH COMPONENT SIDE (REPD0013A)

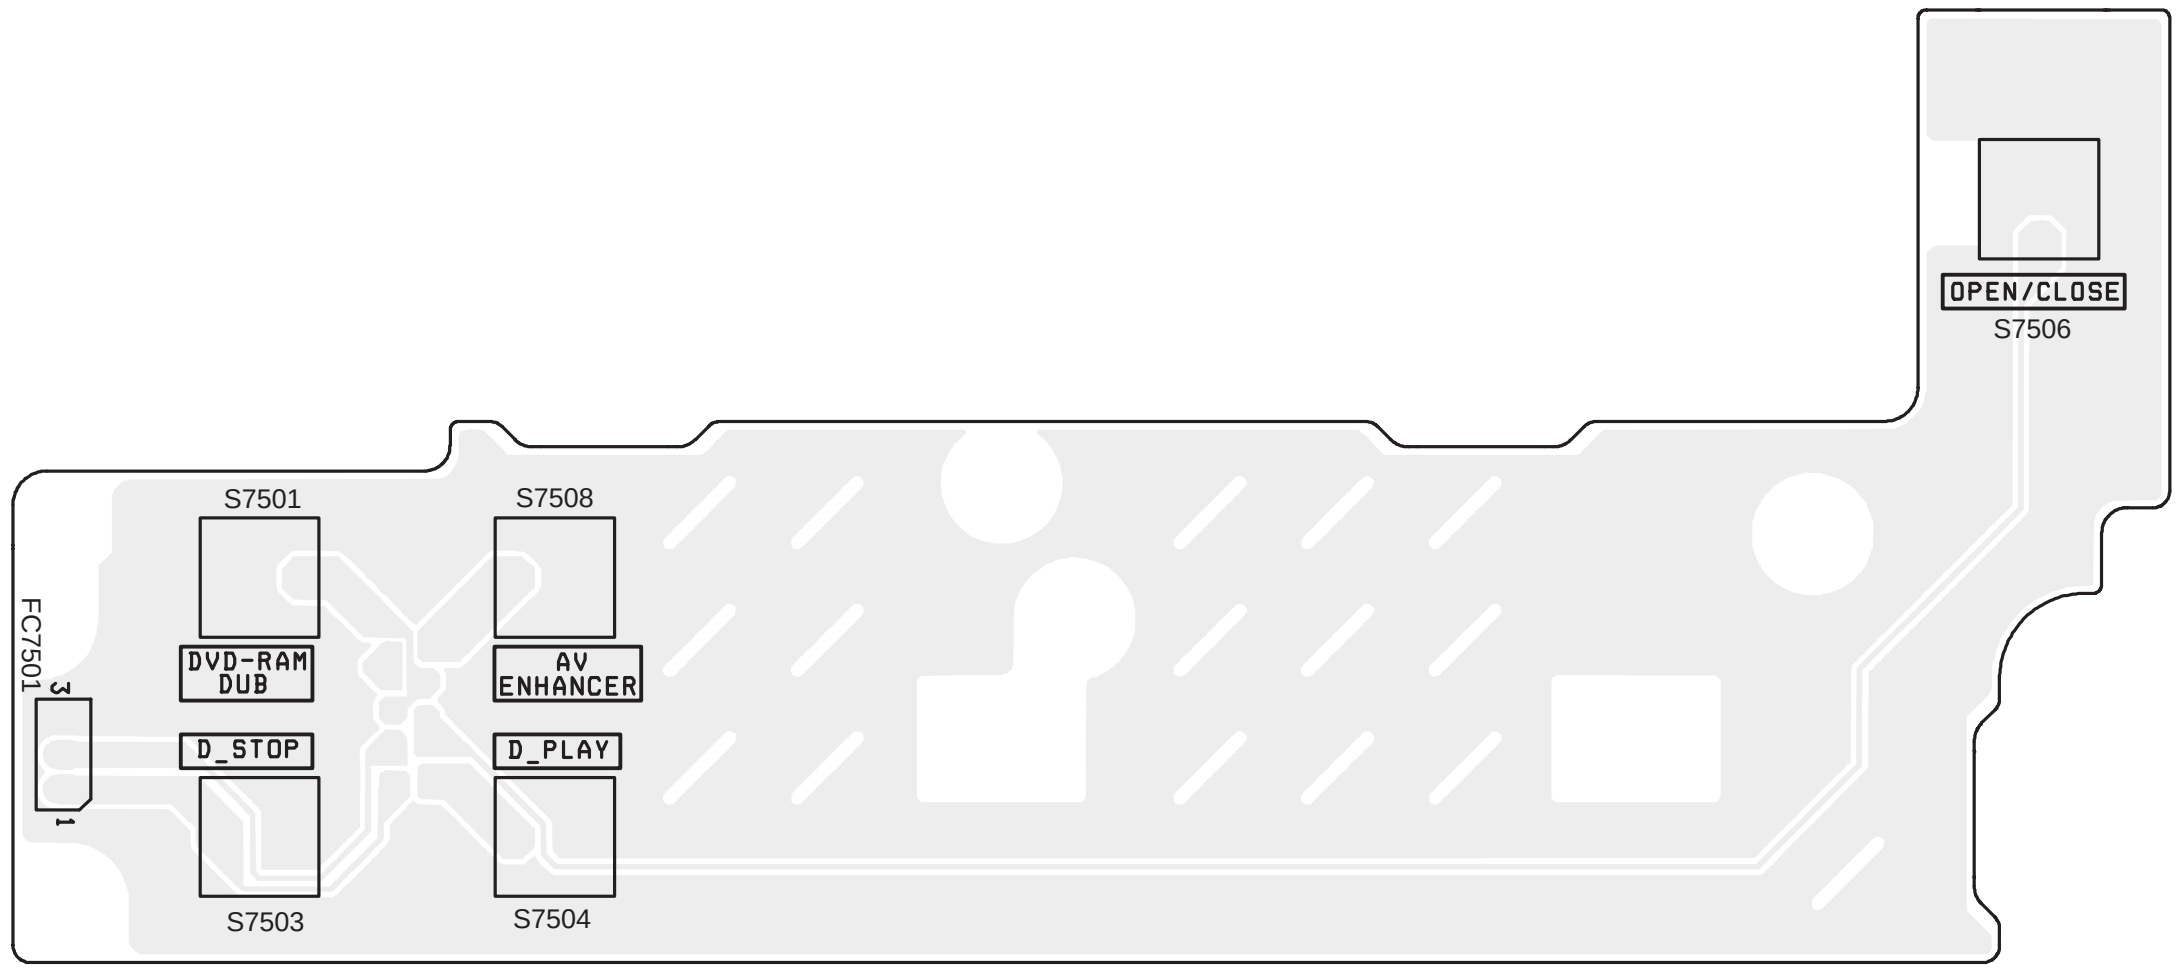
OPEN/CLOSE
S7506
S7501
S7508
FC7501
3
DVD-RAM DUB
AV ENHANCER
D_STOP
D_PLAY
1
S7503
S7504

FRONT JACK SOLDER SIDE

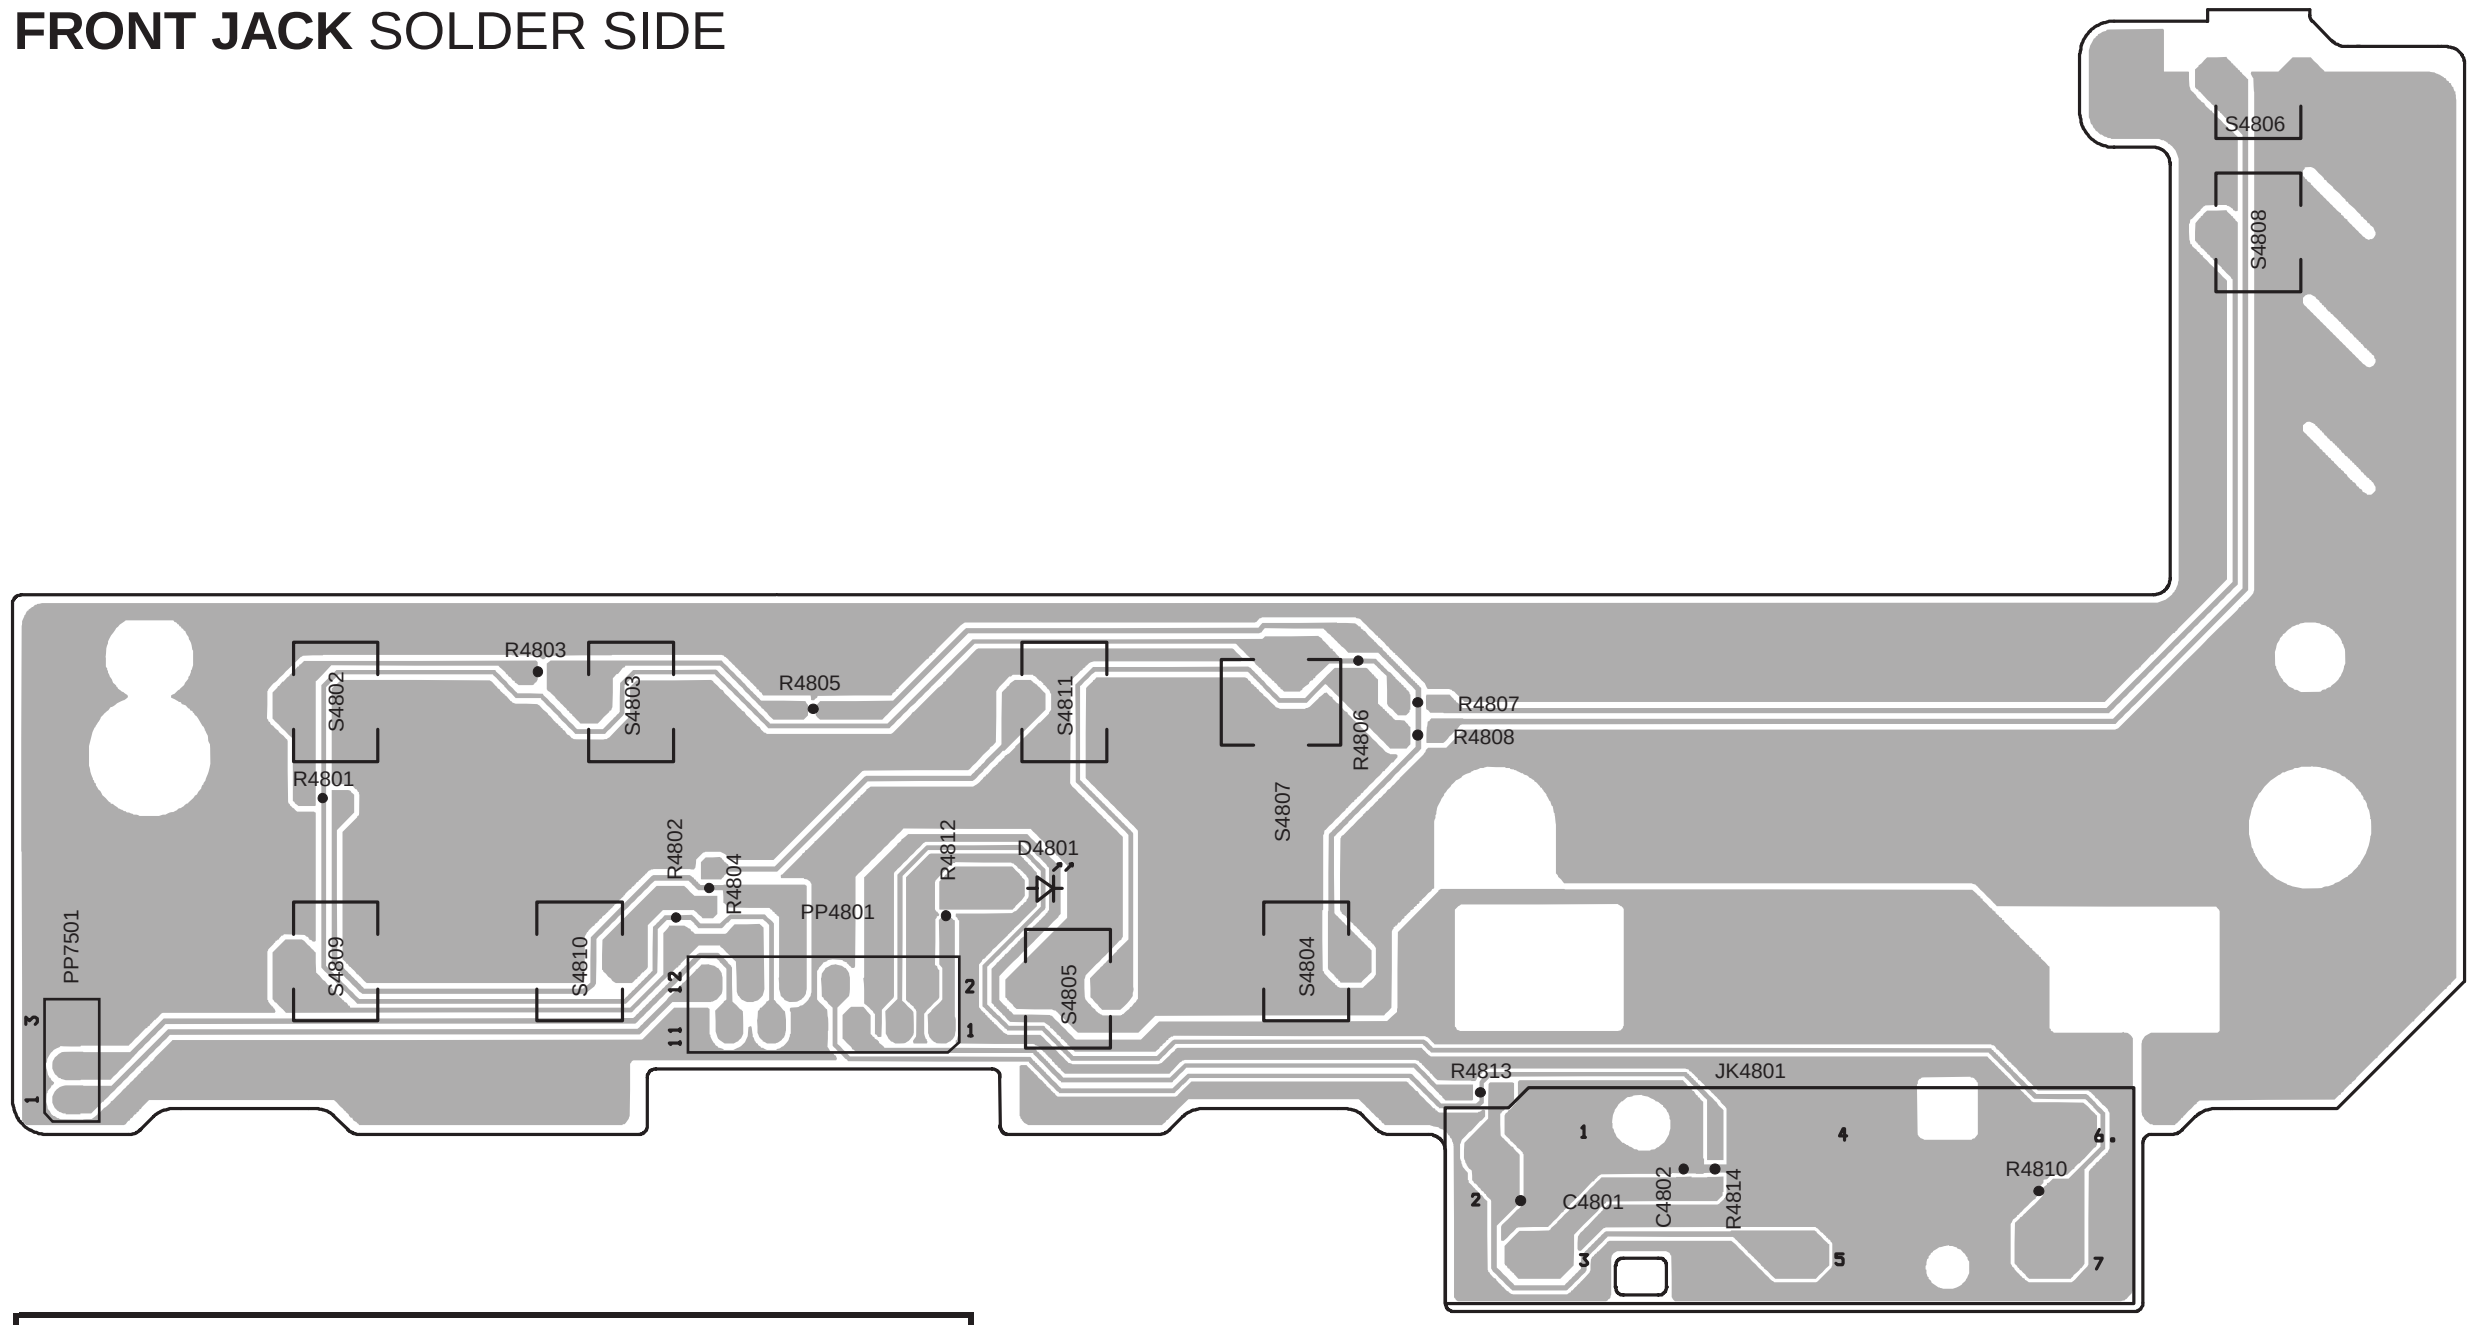
S4806
S4808
R4803
R4805
S4802
S4803
S4811
R4807
R4808
R4806
R4801
S4807
R4802
R4804
R4812
D4801
PP4801
PP7501
S4809
S4810
12
2
11
1
S4805
S4804
R4813
JK4801
1
4
6
2
C4801
C4802
R4814
R4810
3
5
7

FRONT SWITCH SOLDER SIDE

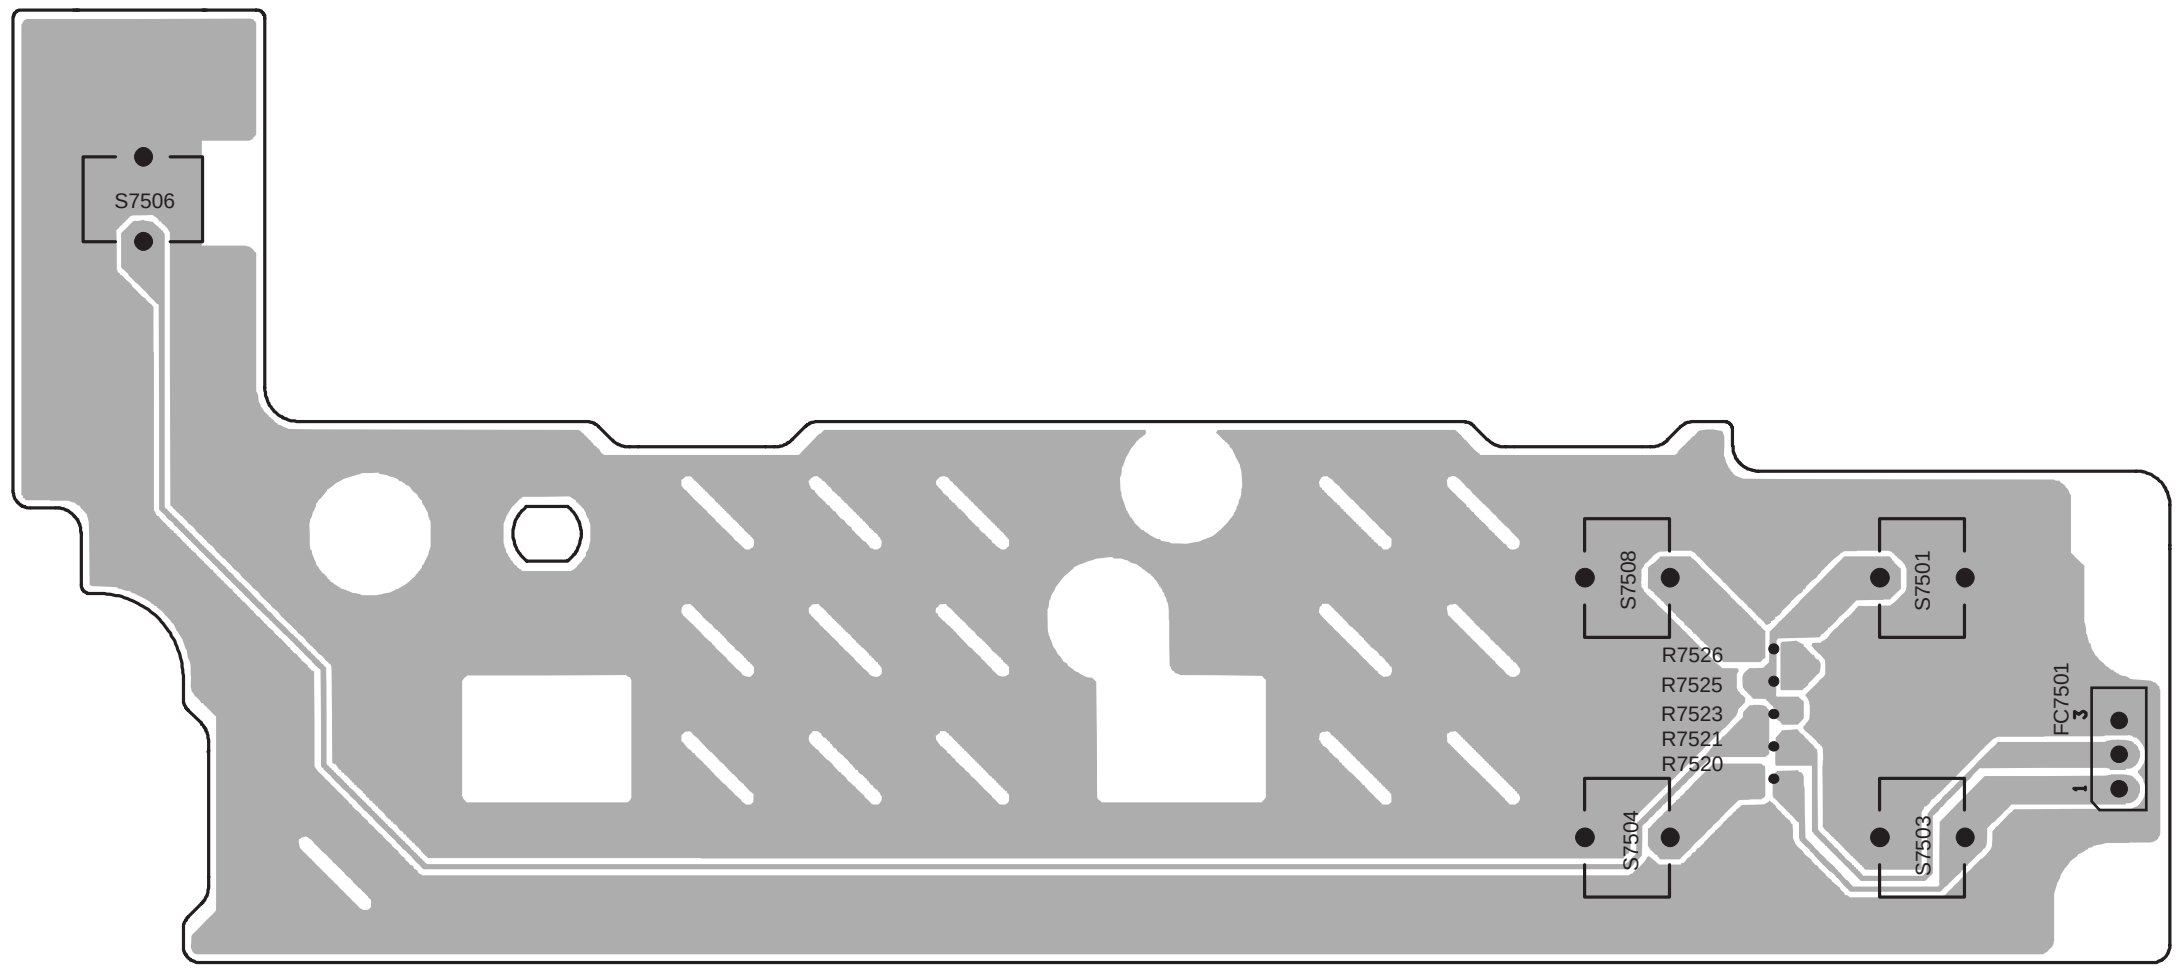
S7506
S7508
S7501
R7525
R7525
R7523
R7521
R7520
FC7501
1
3
S7504
S7503

FRONT JACK PCB

	Component	Solder		Component	Solder
JK4801	B2	B1	S4806	D1	C6
PP4801	C4	B3	S4807	C4	B4
PP7501	C6	B1	S4808	D1	B6
S4802	C6	B2	S4809	C6	B1
S4803	C5	B2	S4810	C5	B2
S4804	C4	B4	S4811	C4	B3
S4805	C4	B3			

ADRESS INFORMATION

FRONT SWITCH PCB

	Component	Solder
FC7501	C7	B11
S7501	C7	B11
S7503	C7	B11
S7504	C8	B10
S7506	D11	B7
S7508	C8	B10

ADRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
FRONT JACK PCB / FRONT SWITCH PCB
COMPONENT SIDE / SOLDER SIDE

(REPD0024A: NV-VP28EG / NV-VP33EG) (REPD0024B: NV-VP28EC / NV-VP33EC) (REPD0024C: NV-VP33EB) (REPD0024D: NV-VP33EBL) (REPD0024E: NV-VP33EP)

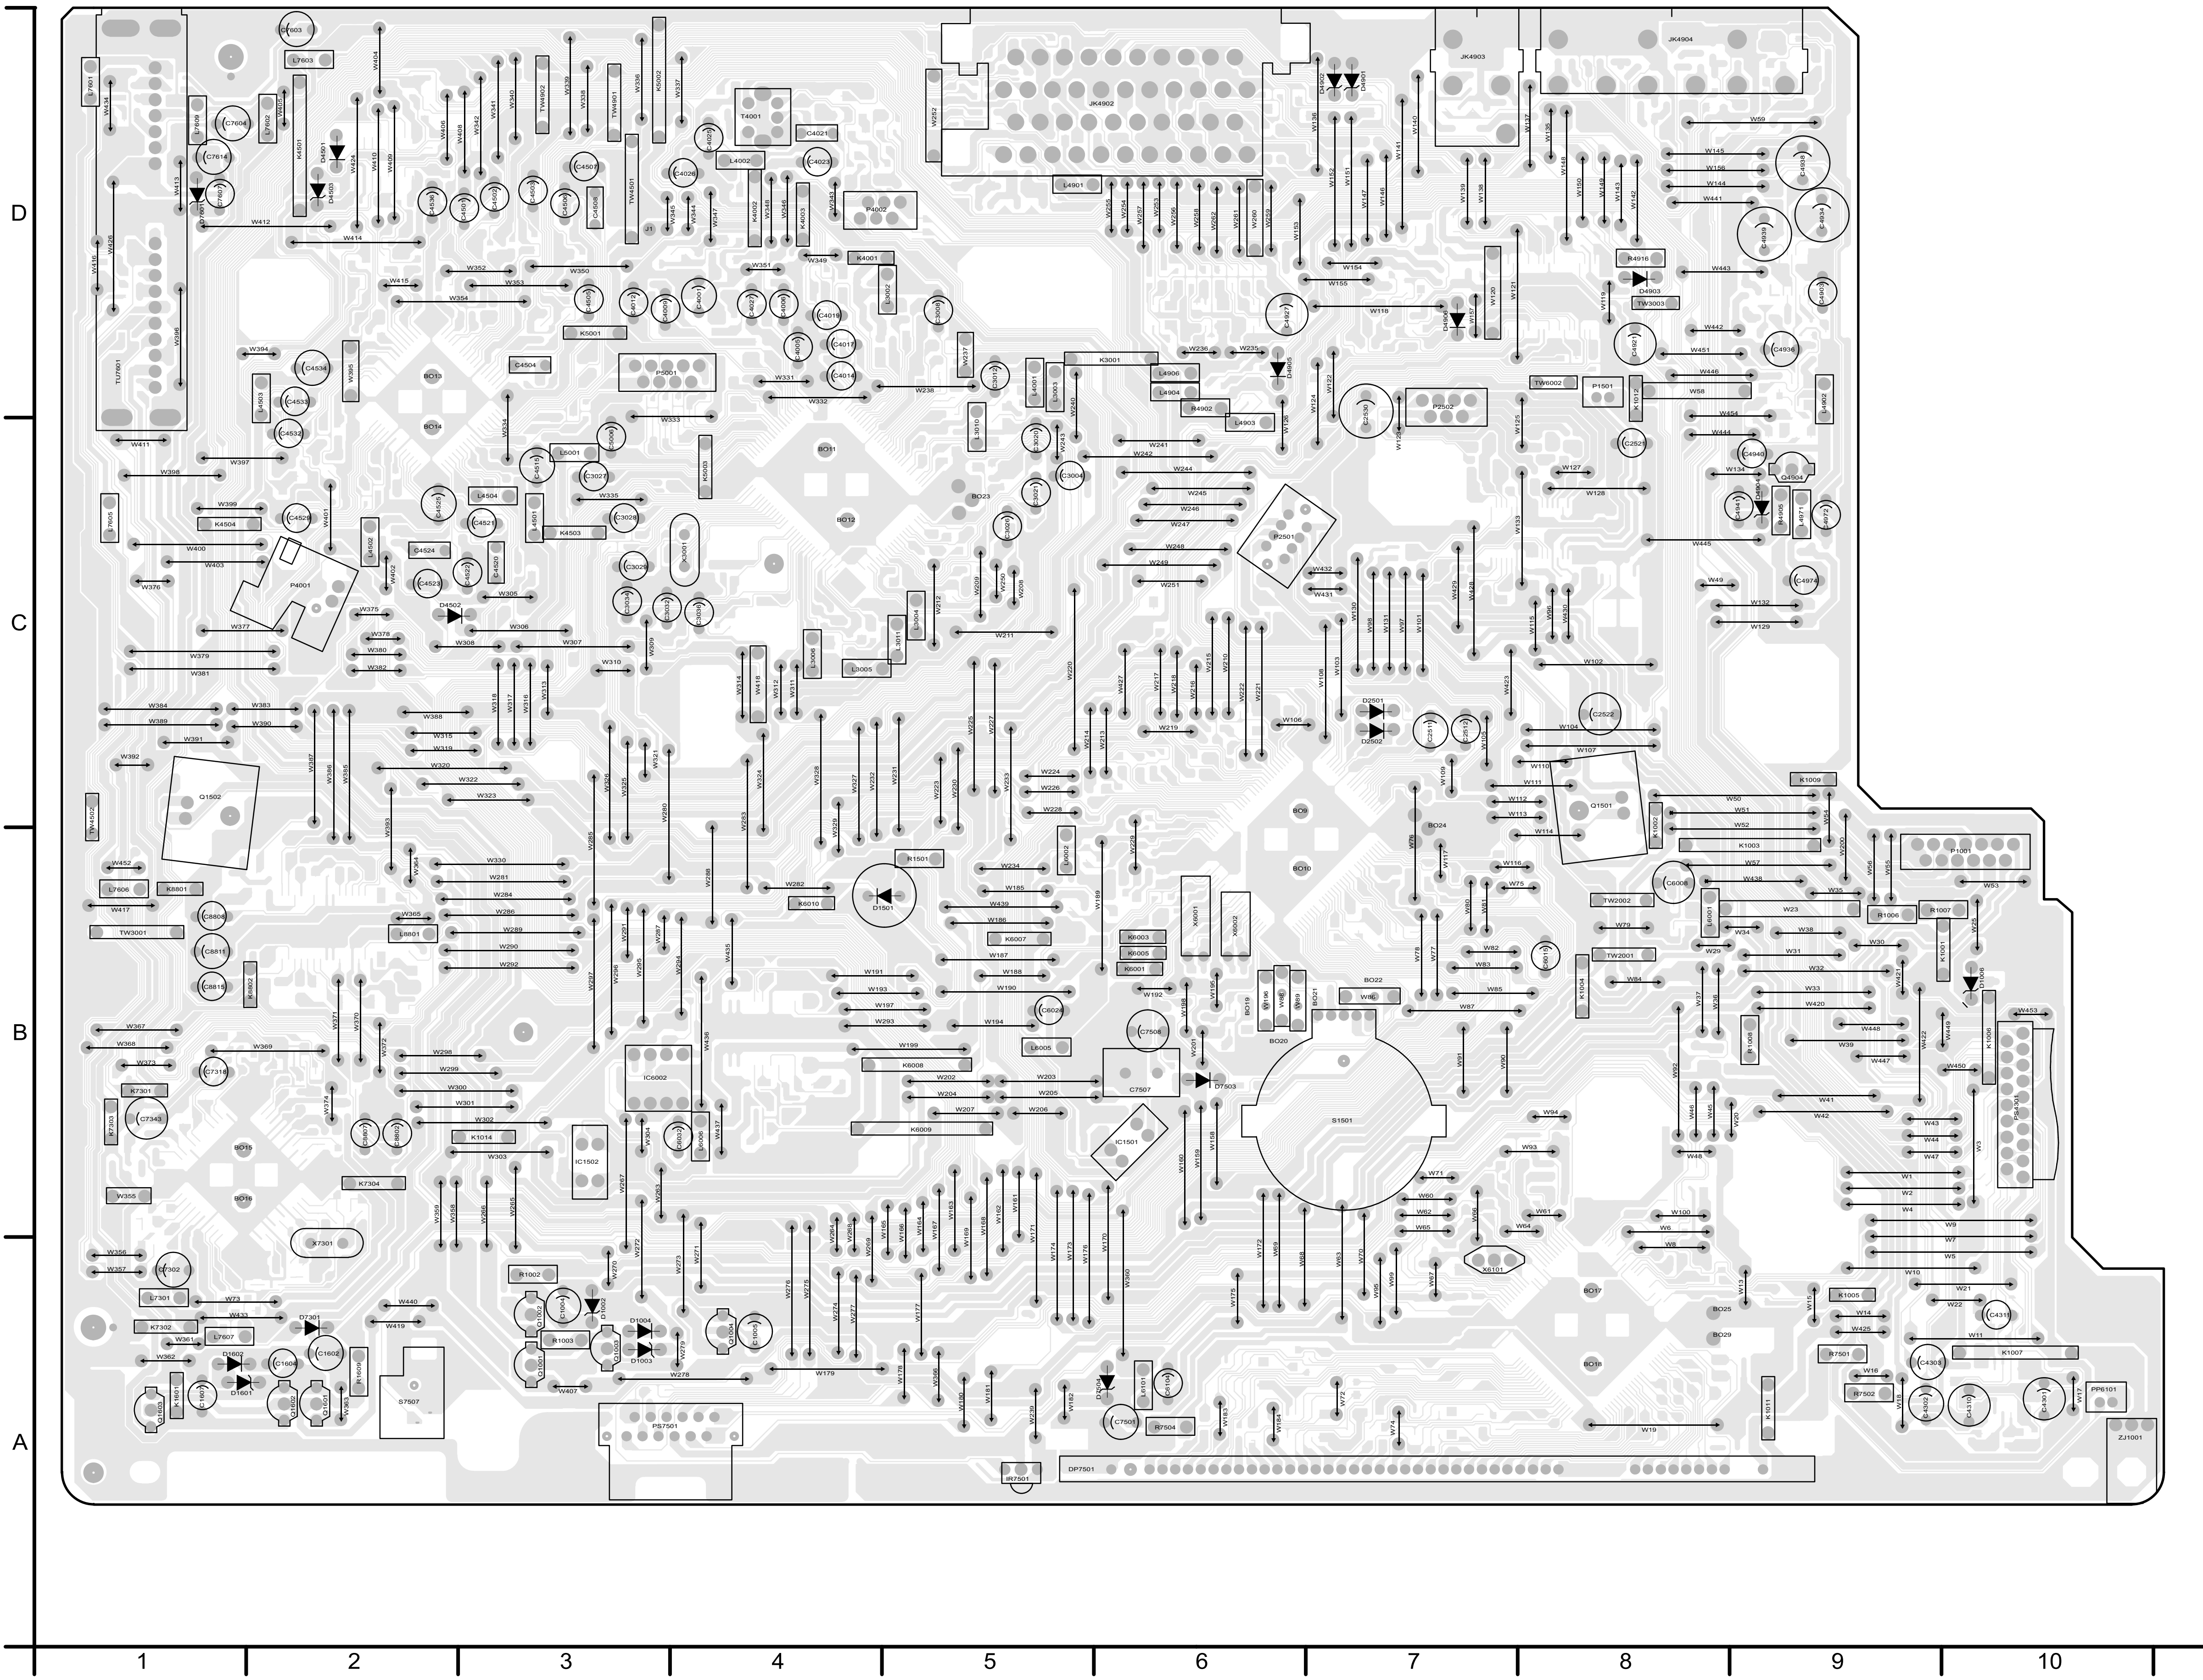

MAIN PCB	
IC1501	B6
IC1502	B3
IC6002	B3
JK4902	D5
JK4903	D7
JK4904	D8
Q1001	A3
Q1002	A3
Q1003	A3
Q1004	A4
Q1501	C8
Q1502	C1
Q1601	A2
Q1602	A2
Q1603	A1
Q4904	C9
P1001	B9
P1501	D8
P2501	C6
P2502	D7
P4001	C2
P4002	D5
P5001	D3
PS4301	B10
PS7501	A3
DP 7501	A6
PP6101	A10
X3001	C4
X6001	B6
X6002	B6
X6101	A7
X7301	A2
S1501	B7
S7507	A2
TW2001	B8
TW2002	B8
TW3001	B1
TW3003	D8
TW4501	D4
TW4501	D3
TW4502	C1
TW4901	D3
TW4902	D3
TW6002	D8
TU7601	D1

ADRESS INFORMATION

NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB
COMPONENT SIDE

(REPD0024A: NV-VP28EG / NV-VP33EG) (REPD0024B: NV-VP28EC / NV-VP33EC) (REPD0024C: NV-VP33EB) (REPD0024D: NV-VP33EBL) (REPD0024E: NV-VP33EP)

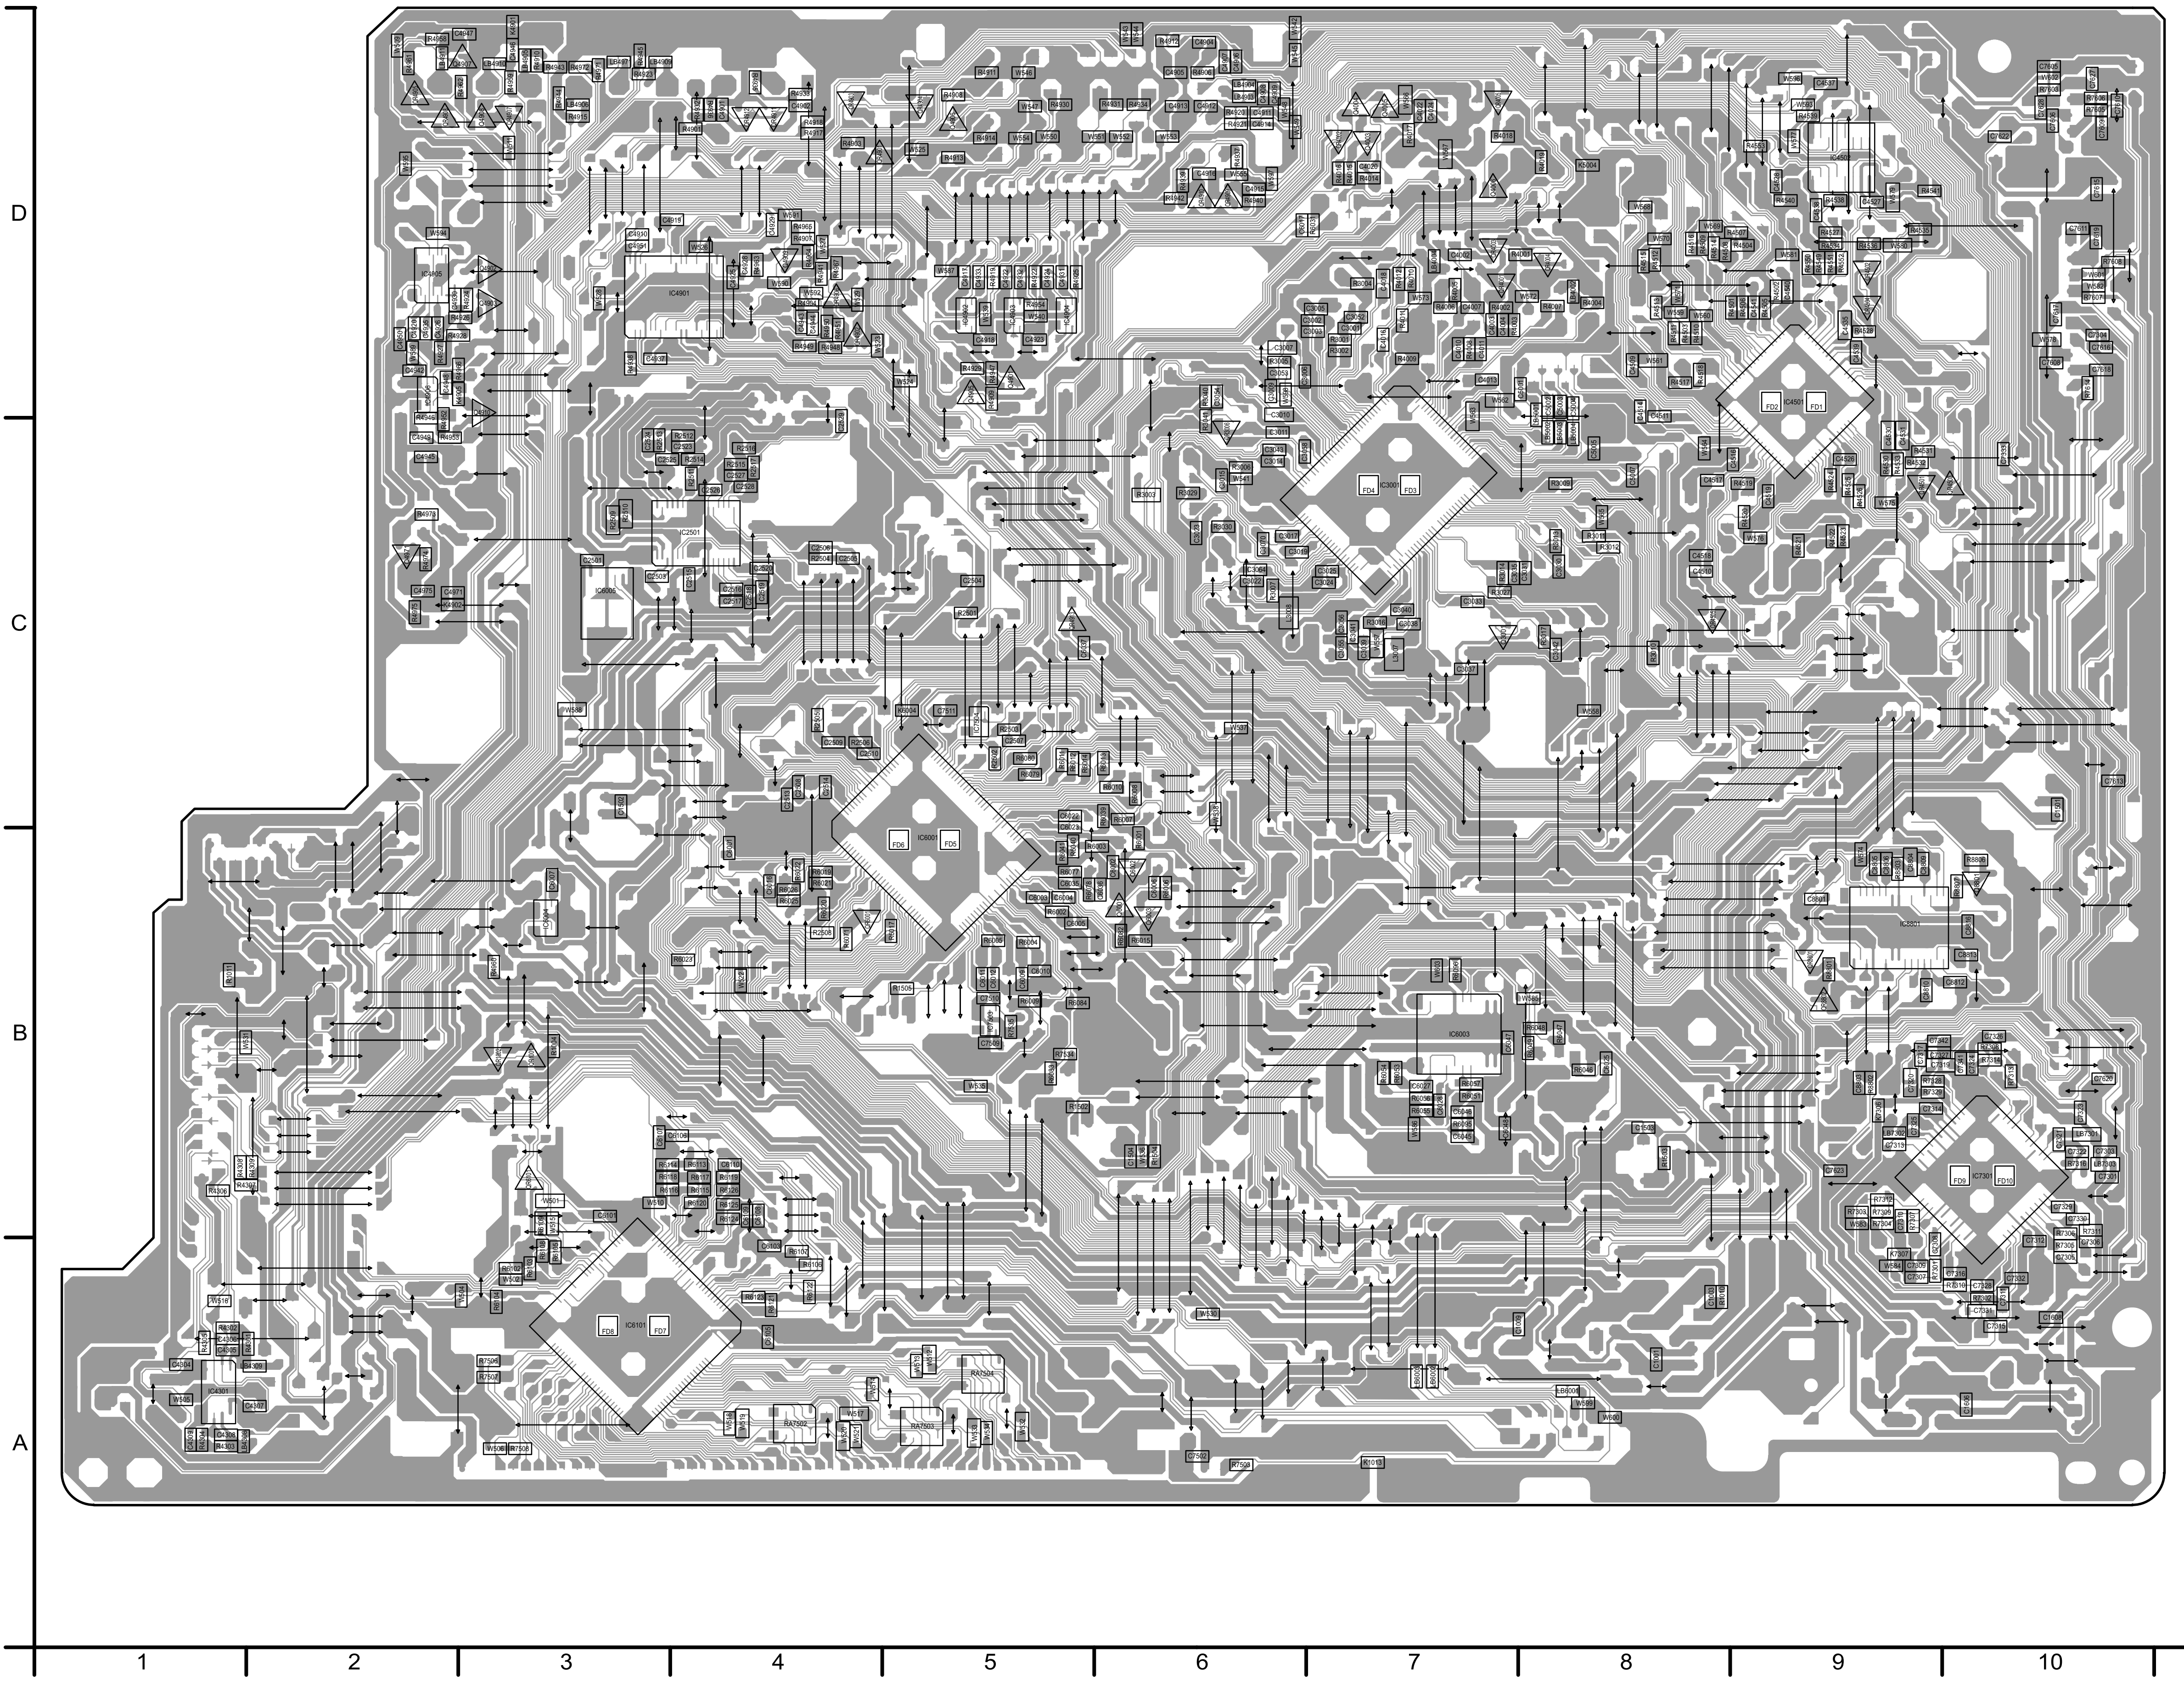

MAIN PCB			
IC 2501	C4	QR 1001	B3
IC 3001	C7	QR 1002	B3
IC 4301	A1	QR 3006	C6
IC 4501	C9	QR 4001	D7
IC 4901	D4	QR 4002	D7
IC 4902	D5	QR 4003	D7
IC 4903	D5	QR 4004	D8
IC 4904	D5	QR 4005	D7
IC 4905	D2	QR 4501	C9
IC 6001	B5	QR 4502	D9
IC 6003	B7	QR 4503	C10
IC 6004	B3	QR 4504	D9
IC 6005	C3	QR 4505	C8
IC 6101	A3	QR 4901	D4
IC 7301	B10	QR 4902	D4
IC 7503	B5	QR 4903	D4
IC 7504	C5	QR 4904	D5
IC 8801	B9	QR 4905	D2
Q 3001	C7	QR 4906	D4
Q 4003	D7	QR 4907	D3
Q 4004	D7	QR 4908	D2
Q 4005	D7	QR 4909	D6
Q 4006	D7	QR 4910	D6
Q 4901	C5	QR 4911	D4
Q 4902	D3	QR 4912	D4
Q 4903	D3	QR 4913	D4
Q 4905	C5	QR 6001	B4
Q 4906	D5	QR 6101	B3
Q 4907	D3	QR 8801	B9
Q 4908	D3	QR 8802	B9
Q 4909	D4	RA 7502	A4
Q 4910	C3	RA 7503	A5
Q 4971	C2	RA 7504	A5
Q 6001	B6		
Q 6002	B6		
Q 6003	B6		
Q 8801	B10		

ADRESS INFORMATION

NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB
SOLDER SIDE

(REPD0010A: NV-VP28EG / NV-VP33EG) (REPD0010B: NV-VP28EC / NV-VP33EC) (REPD0010C: NV-VP33EB) (REPD0010D: NV-VP33EBL) (REPD0010E: NV-VP33EP)
(REPD0010F: NV-VP23EG) (REPD0010G: NV-VP23EC) (REPD0010J: NV-VP23EP)

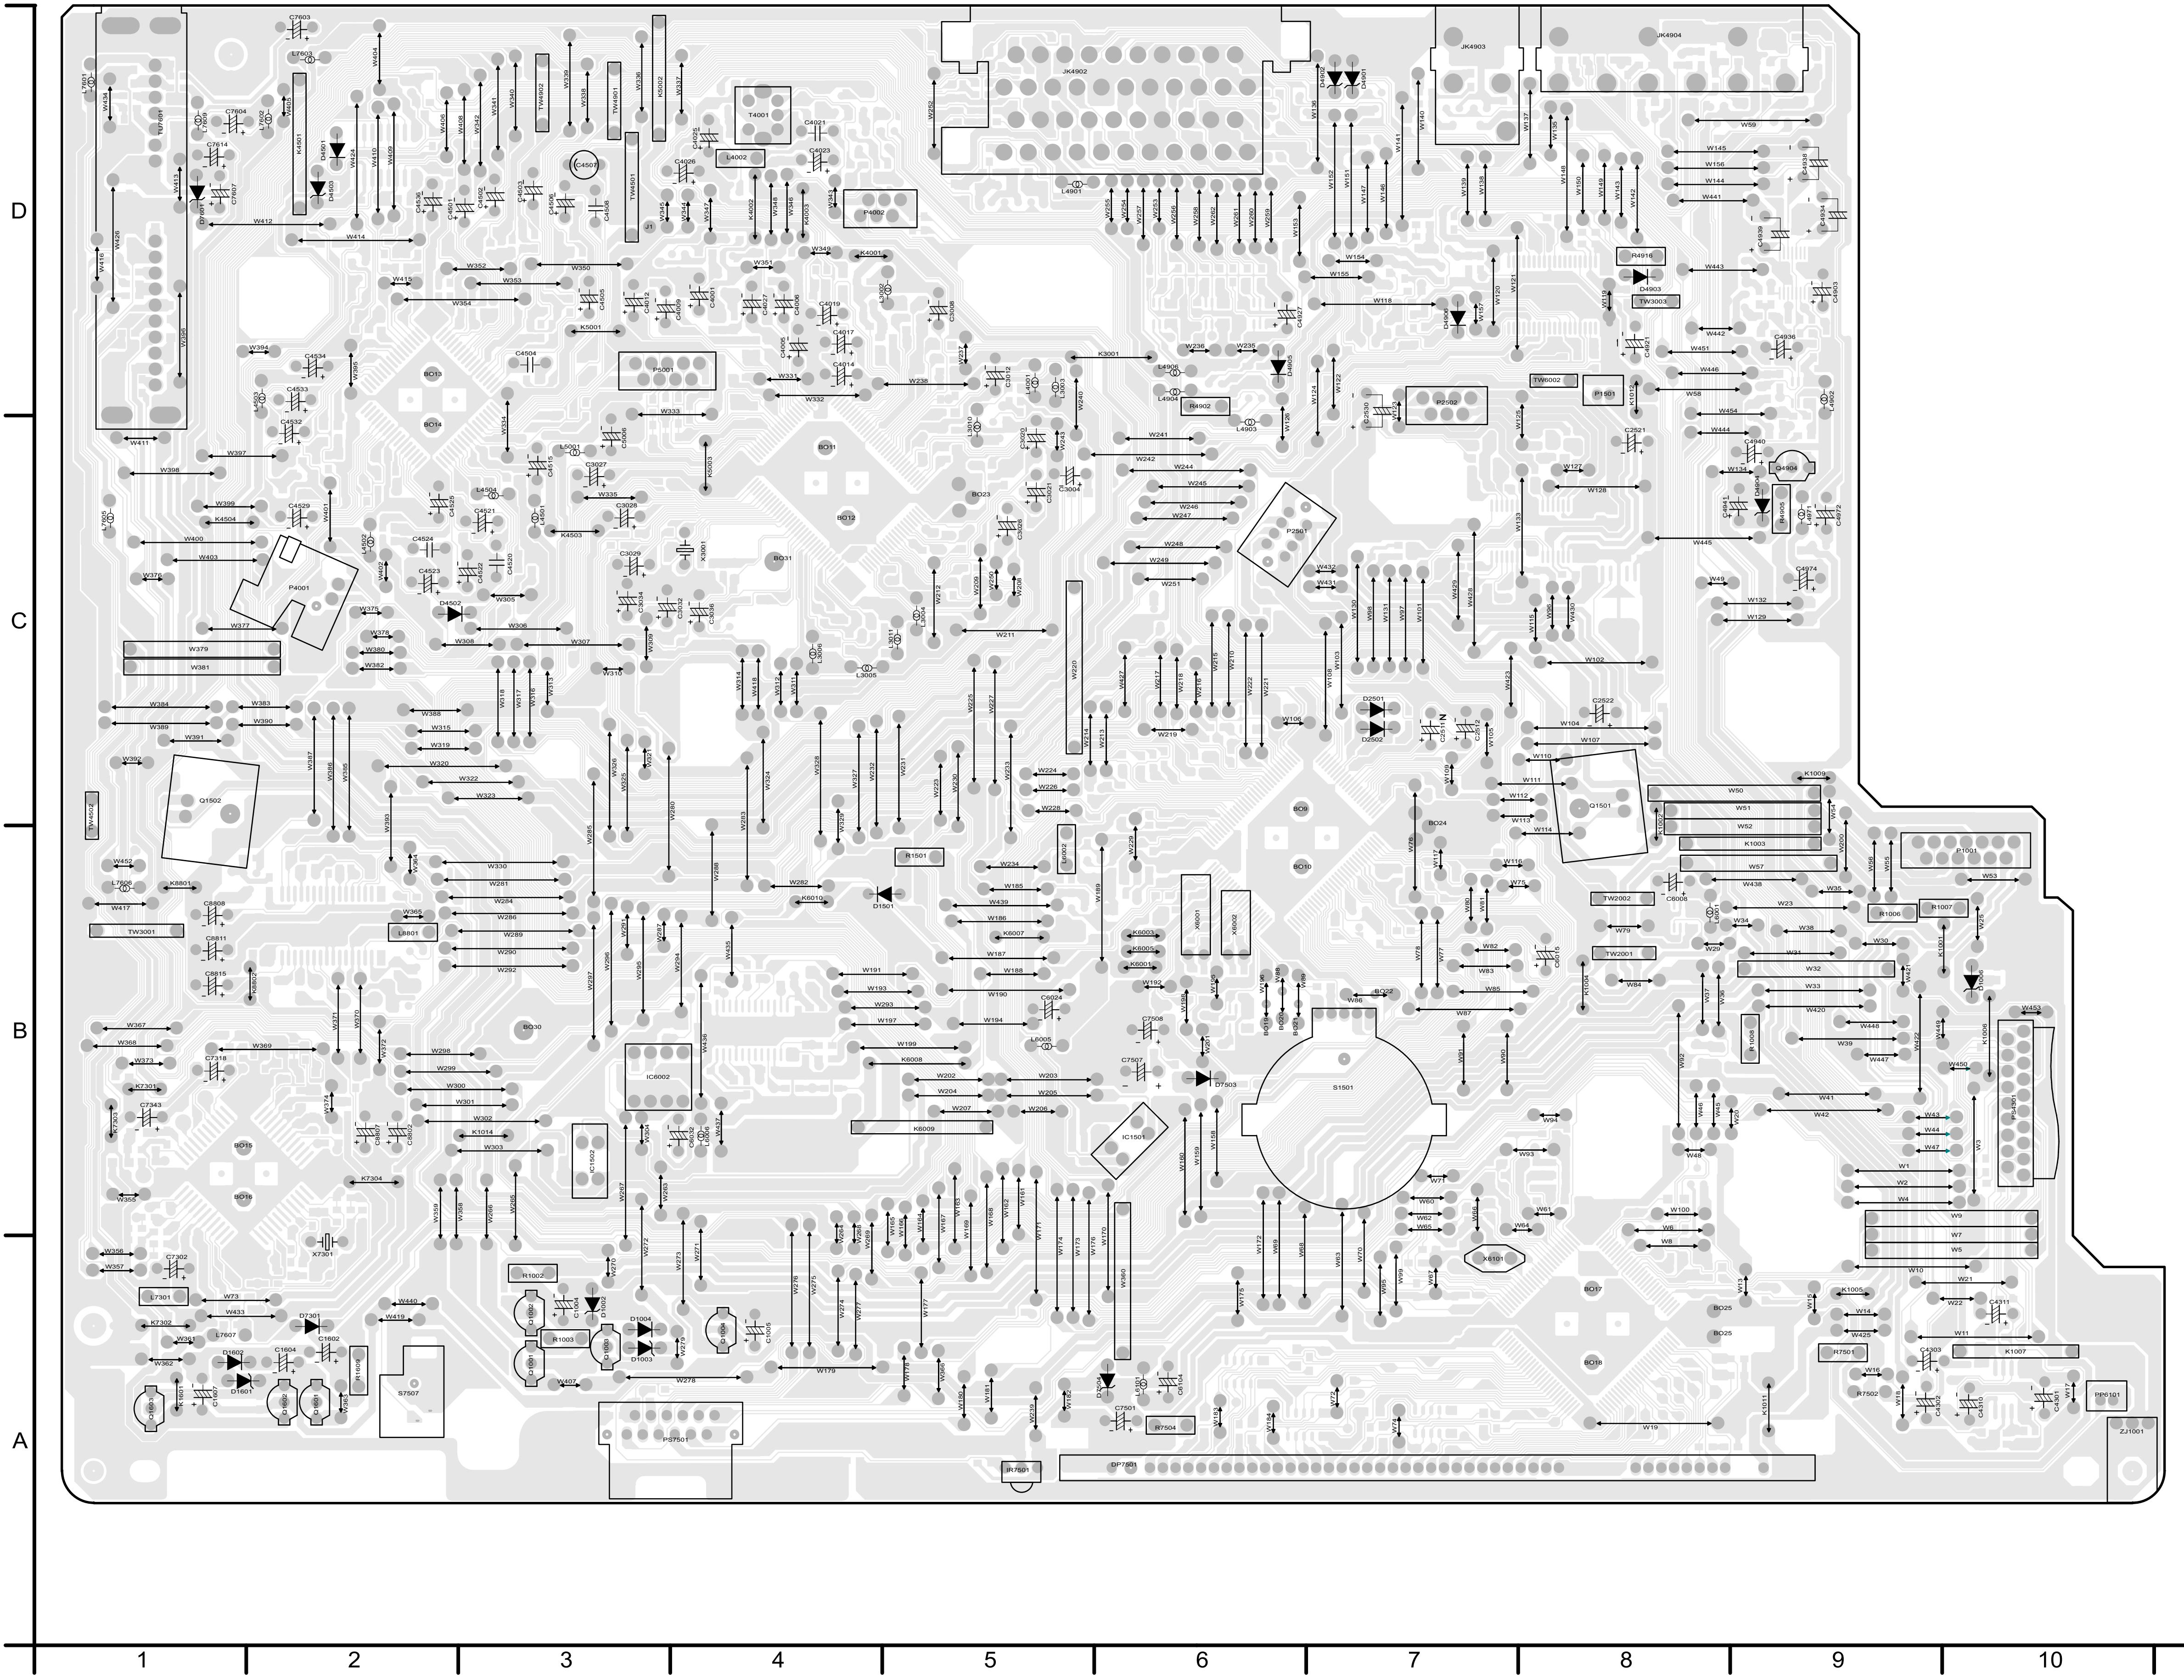

MAIN PCB	
IC1501	B6
IC1502	B3
IC6002	B3
JK4902	D5
JK4903	D7
JK4904	D8
Q1001	A3
Q1002	A3
Q1003	A3
Q1004	A4
Q1501	C8
Q1502	C1
Q1601	A2
Q1602	A2
Q1603	A1
Q4904	C9
P1001	B9
P1501	D8
P2501	C6
P2502	D7
P4001	C2
P4002	D5
P5001	D3
PS4301	B10
PS7501	A3
DP 7501	A6
PP6101	A10
X3001	C4
X6001	B6
X6002	B6
X6101	A7
X7301	A2
S1501	B7
S7507	A2
TW2001	B8
TW2002	B8
TW3001	B1
TW3003	D8
TW4501	D4
TW4501	D3
TW4502	C1
TW4901	D3
TW4902	D3
TW6002	D8
TU7601	D1

ADRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB
COMPONENT SIDE

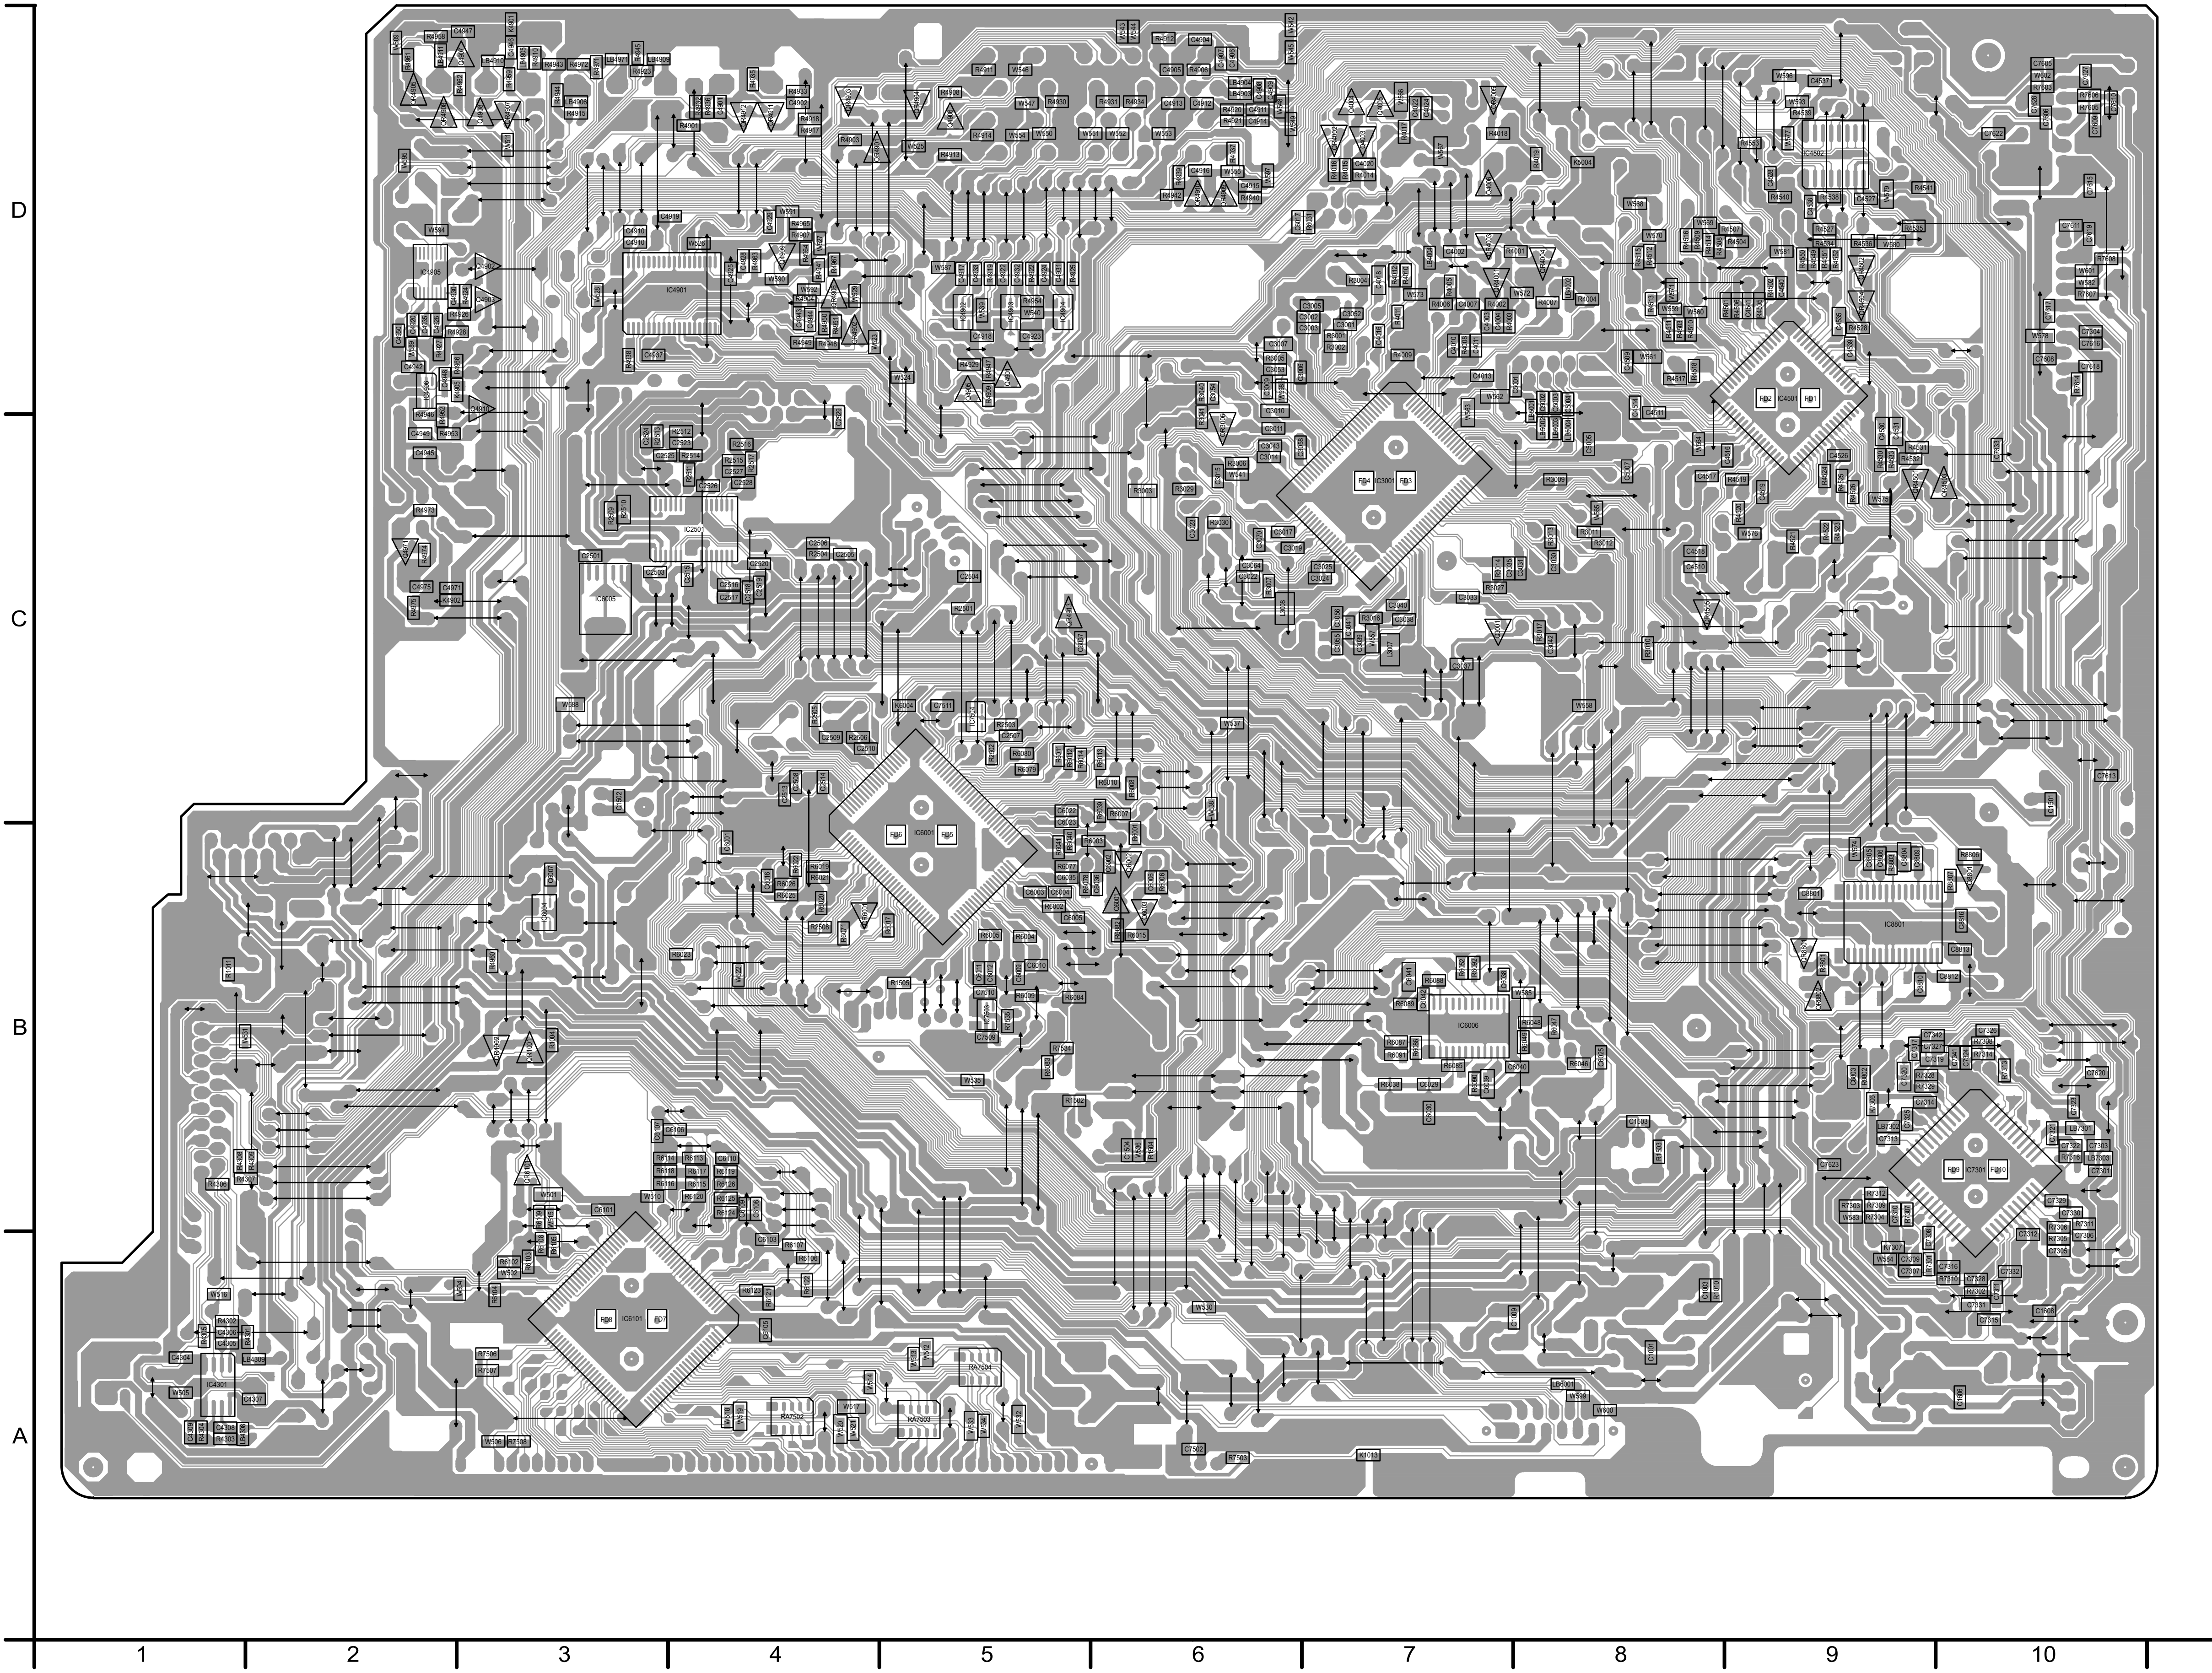
D
C
B
A
1
2
3
4
5
6
7
8
9
10
11
12
IC4901
IC4505
IC2501
IC6005
IC3001
IC4501
IC6001
IC6006
IC8801
IC7301
IC6101
IC4301
RA7502
RA7503
RA7504

MAIN PCB			
IC 2501	C4	QR 1001	B3
IC 3001	C7	QR 1002	B3
IC 4301	A1	QR 3006	C6
IC 4501	C9	QR 4001	D7
IC 4901	D4	QR 4002	D7
IC 4902	D5	QR 4003	D7
IC 4903	D5	QR 4004	D8
IC 4904	D5	QR 4005	D7
IC 4905	D2	QR 4501	C9
IC 6001	B5	QR 4502	D9
IC 6004	B3	QR 4503	C10
IC 6005	C3	QR 4504	D9
IC 6006	B7	QR 4505	C8
IC 6101	A3	QR 4901	D4
IC 7301	B10	QR 4902	D4
IC 7503	B5	QR 4903	D4
IC 7504	C5	QR 4904	D5
IC 8801	B9	QR 4905	D2
Q 3001	C7	QR 4906	D4
Q 4003	D7	QR 4907	D3
Q 4004	D7	QR 4908	D2
Q 4005	D7	QR 4909	D6
Q 4006	D7	QR 4910	D6
Q 4901	C5	QR 4911	D4
Q 4902	D3	QR 4912	D4
Q 4903	D3	QR 4913	D4
Q 4905	C5	QR 6001	B4
Q 4906	D5	QR 6101	B3
Q 4907	D3	QR 8801	B9
Q 4908	D3	QR 8802	B9
Q 4909	D4	RA 7502	A4
Q 4910	C3	RA 7503	A5
Q 4971	C2	RA 7504	A5
Q 6001	B6		
Q 6002	B6		
Q 6003	B6		
Q 8801	B10		

ADRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB
SOLDER SIDE

(REPD0012A)

COMPONENT SIDE

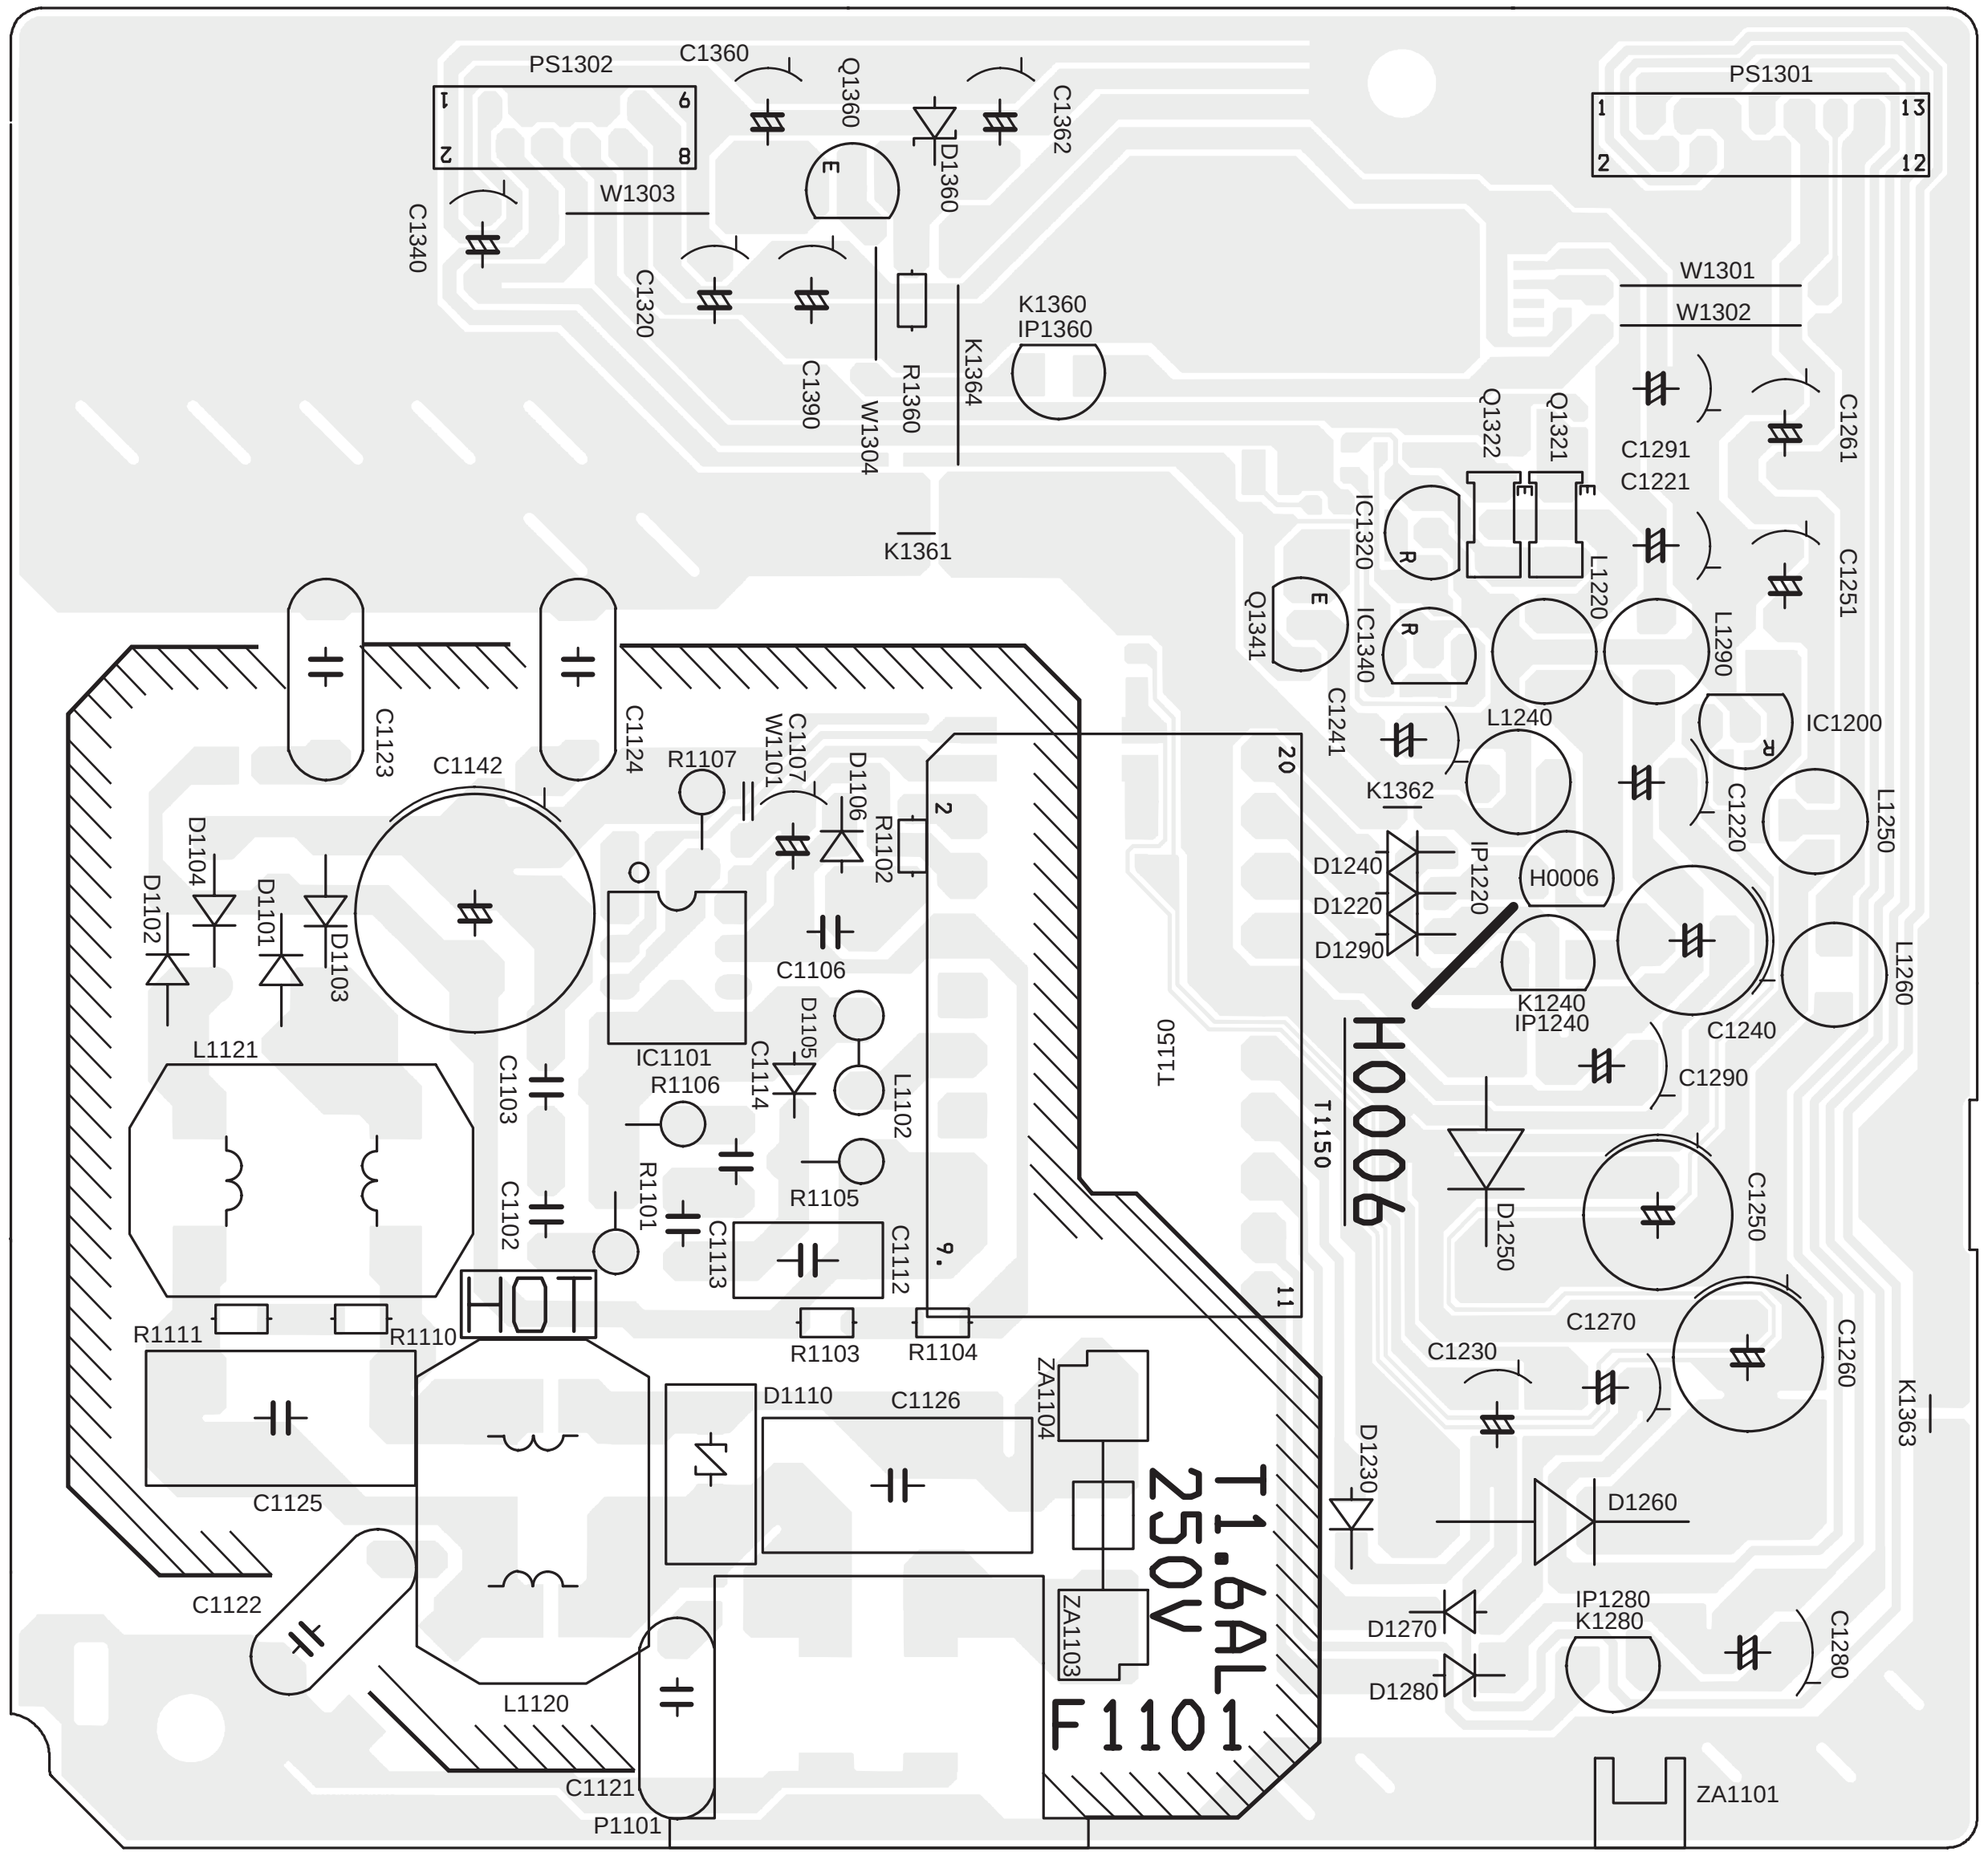

PS1302
C1360
Q1360
D1360
C1362
C1340
W1303
C1320
C1390
R1360
W1304
K1364
K1360
IP1360
K1361
PS1301
W1301
W1302
C1291
C1221
C1261
Q1322
Q1321
IC1320
Q1341
IC1340
L1220
L1290
C1251
IC1200
L1240
C1241
K1362
C1220
L1250
D1240
D1220
D1290
IP1220
H0006
K1240
IP1240
C1240
L1260
C1290
C1250
D1250
T1150
C1123
C1124
C1142
R1107
C1107
W1101
D1106
R1102
D1104
D1102
D1101
D1103
C1106
IC1101
D1105
C1114
R1106
L1102
L1121
C1103
C1102
R1101
C1113
R1105
C1112
HOT
R1111
R1110
R1103
R1104
C1125
D1110
C1126
ZA1104
ZA1103
T1.6AL
250V
F1101
C1122
L1120
C1121
P1101
C1230
C1270
C1260
K1363
D1230
D1260
D1270
D1280
IP1280
K1280
C1280
ZA1101

SOLDER SIDE

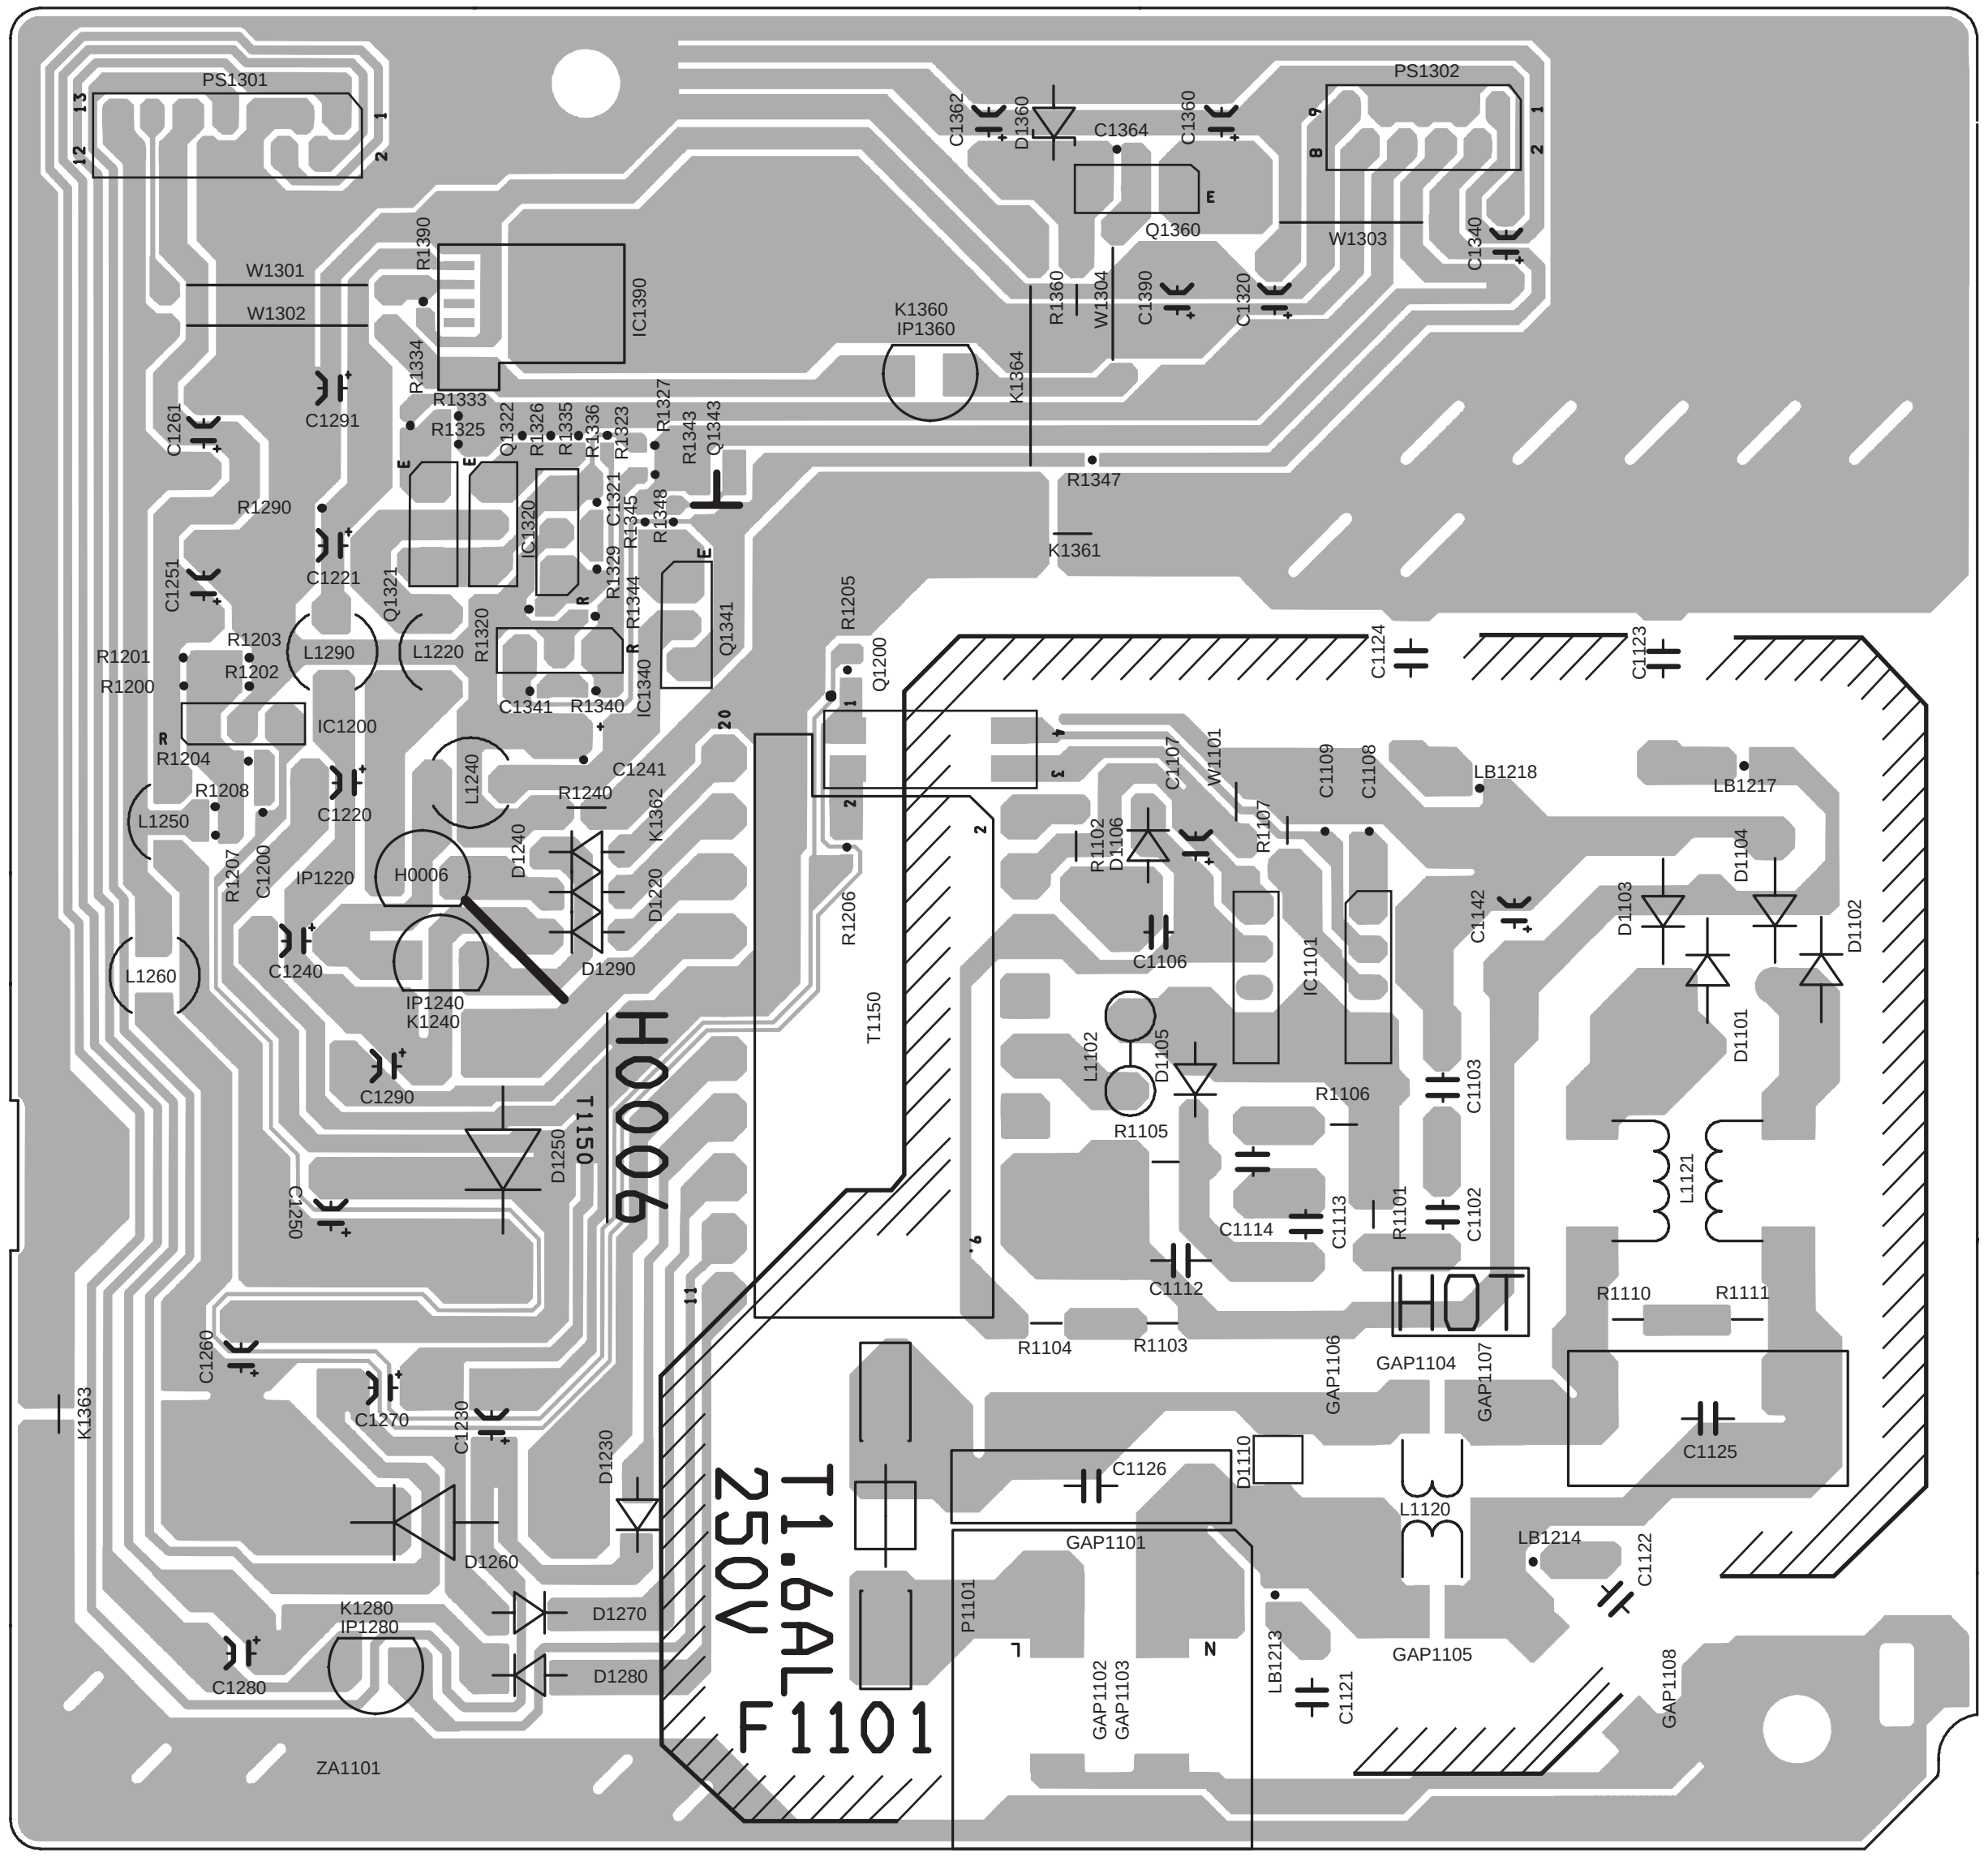

PS1301
W1301
W1302
R1390
IC1390
C1291
R1334
R1333
R1325
Q1322
R1326
R1335
R1336
R1323
R1327
R1343
Q1343
C1261
R1290
C1221
Q1321
IC1320
C1321
R1345
R1329
R1328
R1346
R1341
Q1341
C1251
R1201
R1200
R1203
R1202
L1290
L1220
R1320
C1341
R1340
IC1340
IC1200
R1204
R1208
L1250
C1220
L1240
C1241
R1240
K1362
R1207
C1200
IP1220
H0006
D1240
D1220
D1290
L1260
C1240
IP1240
K1240
C1290
D1250
T1150
C1250
C1260
K1363
C1270
C1230
D1230
D1260
K1280
IP1280
D1270
D1280
C1280
ZA1101
T1.6AL
250V
F1101
C1362
D1360
C1364
C1360
PS1302
Q1360
W1303
C1340
K1360
IP1360
R1360
W1304
C1390
C1320
K1364
R1347
K1361
R1205
Q1200
R1206
C1124
C1123
C1107
W1101
C1109
C1108
LB1218
LB1217
R1102
D1106
R1107
C1106
IC1101
C1142
D1103
D1104
D1102
D1101
L1102
D1105
R1105
R1106
C1103
C1114
C1113
R1101
C1102
L1121
C1112
R1104
R1103
HOT
R1110
R1111
GAP1106
GAP1104
GAP1107
C1125
C1126
D1110
GAP1101
L1120
LB1214
C1122
P1101
GAP1102
GAP1103
LB1213
C1121
GAP1105
GAP1108

POWER PCB							
IC1101	C3	IP1220	C5	Q1200	--	PS1301	D6
IC1200	C6	IP1240	C5	Q1321	C5	PS1302	D2
IC1320	C5	IP1280	B5	Q1322	C5	F1101	B4
IC1340	C5	IP1360	D4	Q1341	C4		
IC1390	--	P1101	B3	Q1343	--		
				Q1360	D3		

ADRESS INFORMATION

POWER PCB							
IC1101	C10	IP1220	C8	Q1200	C9	PS1301	D7
IC1200	C8	IP1240	C8	Q1321	C8	PS1302	D11
IC1320	C8	IP1280	B8	Q1322	C8	F1101	B9
IC1340	C9	IP1360	D9	Q1341	C9		
IC1390	D9	P1101	B10	Q1343	D9		
				Q1360	D10		

ADRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
POWER PCB
COMPONENT SIDE / SOLDER SIDE

(REP3606A-C)

COMPONENT SIDE

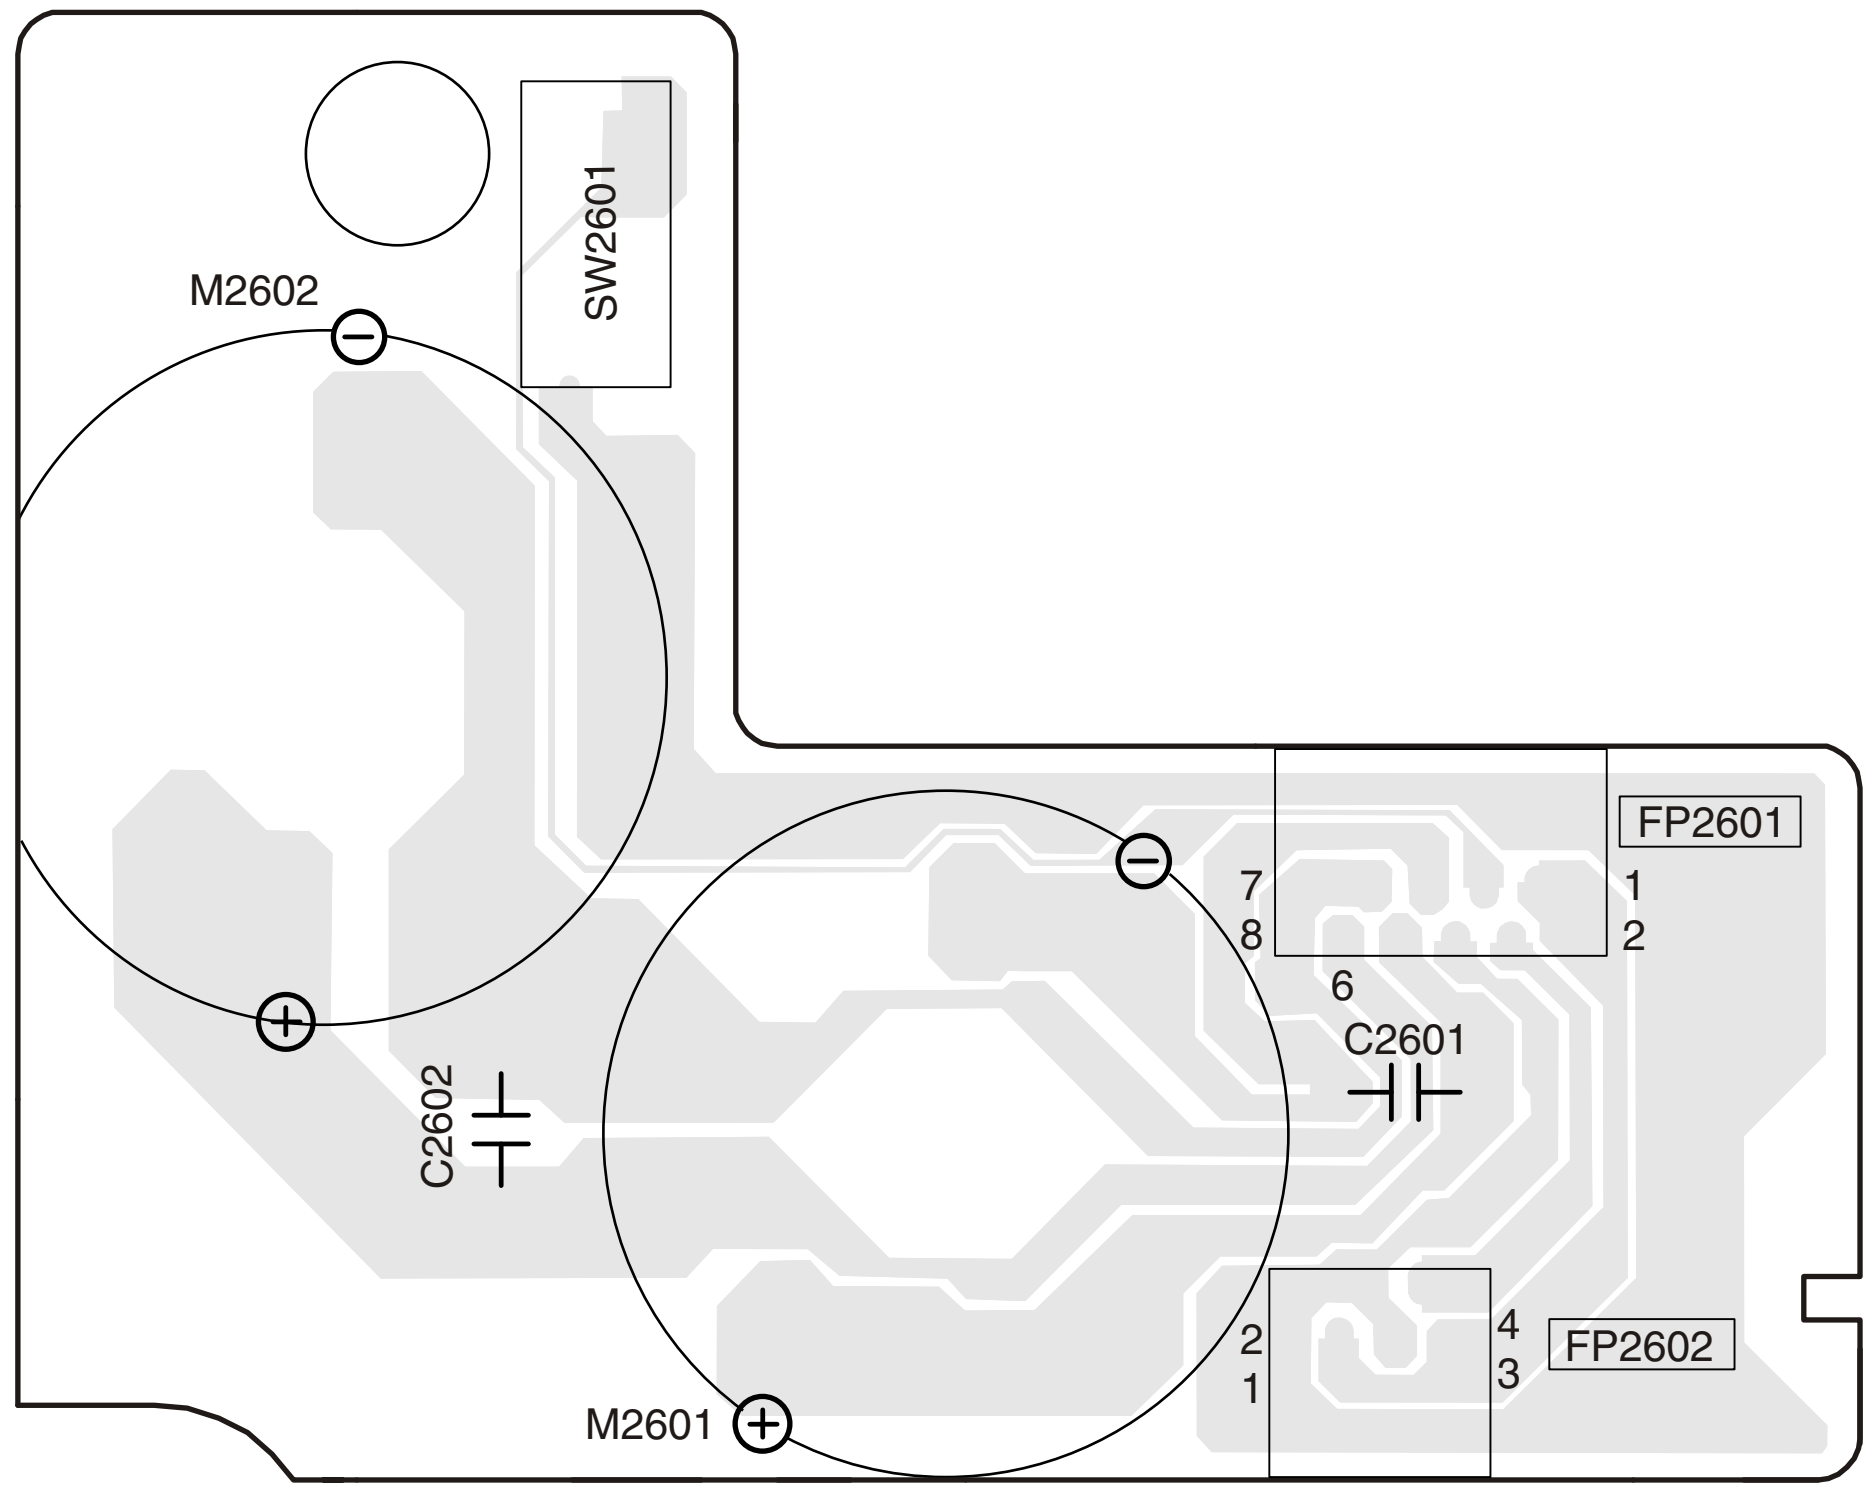
M2602
SW2601
FP2601
7
8
1
2
6
C2601
C2602
4
3
2
1
FP2602
M2601

SOLDER SIDE

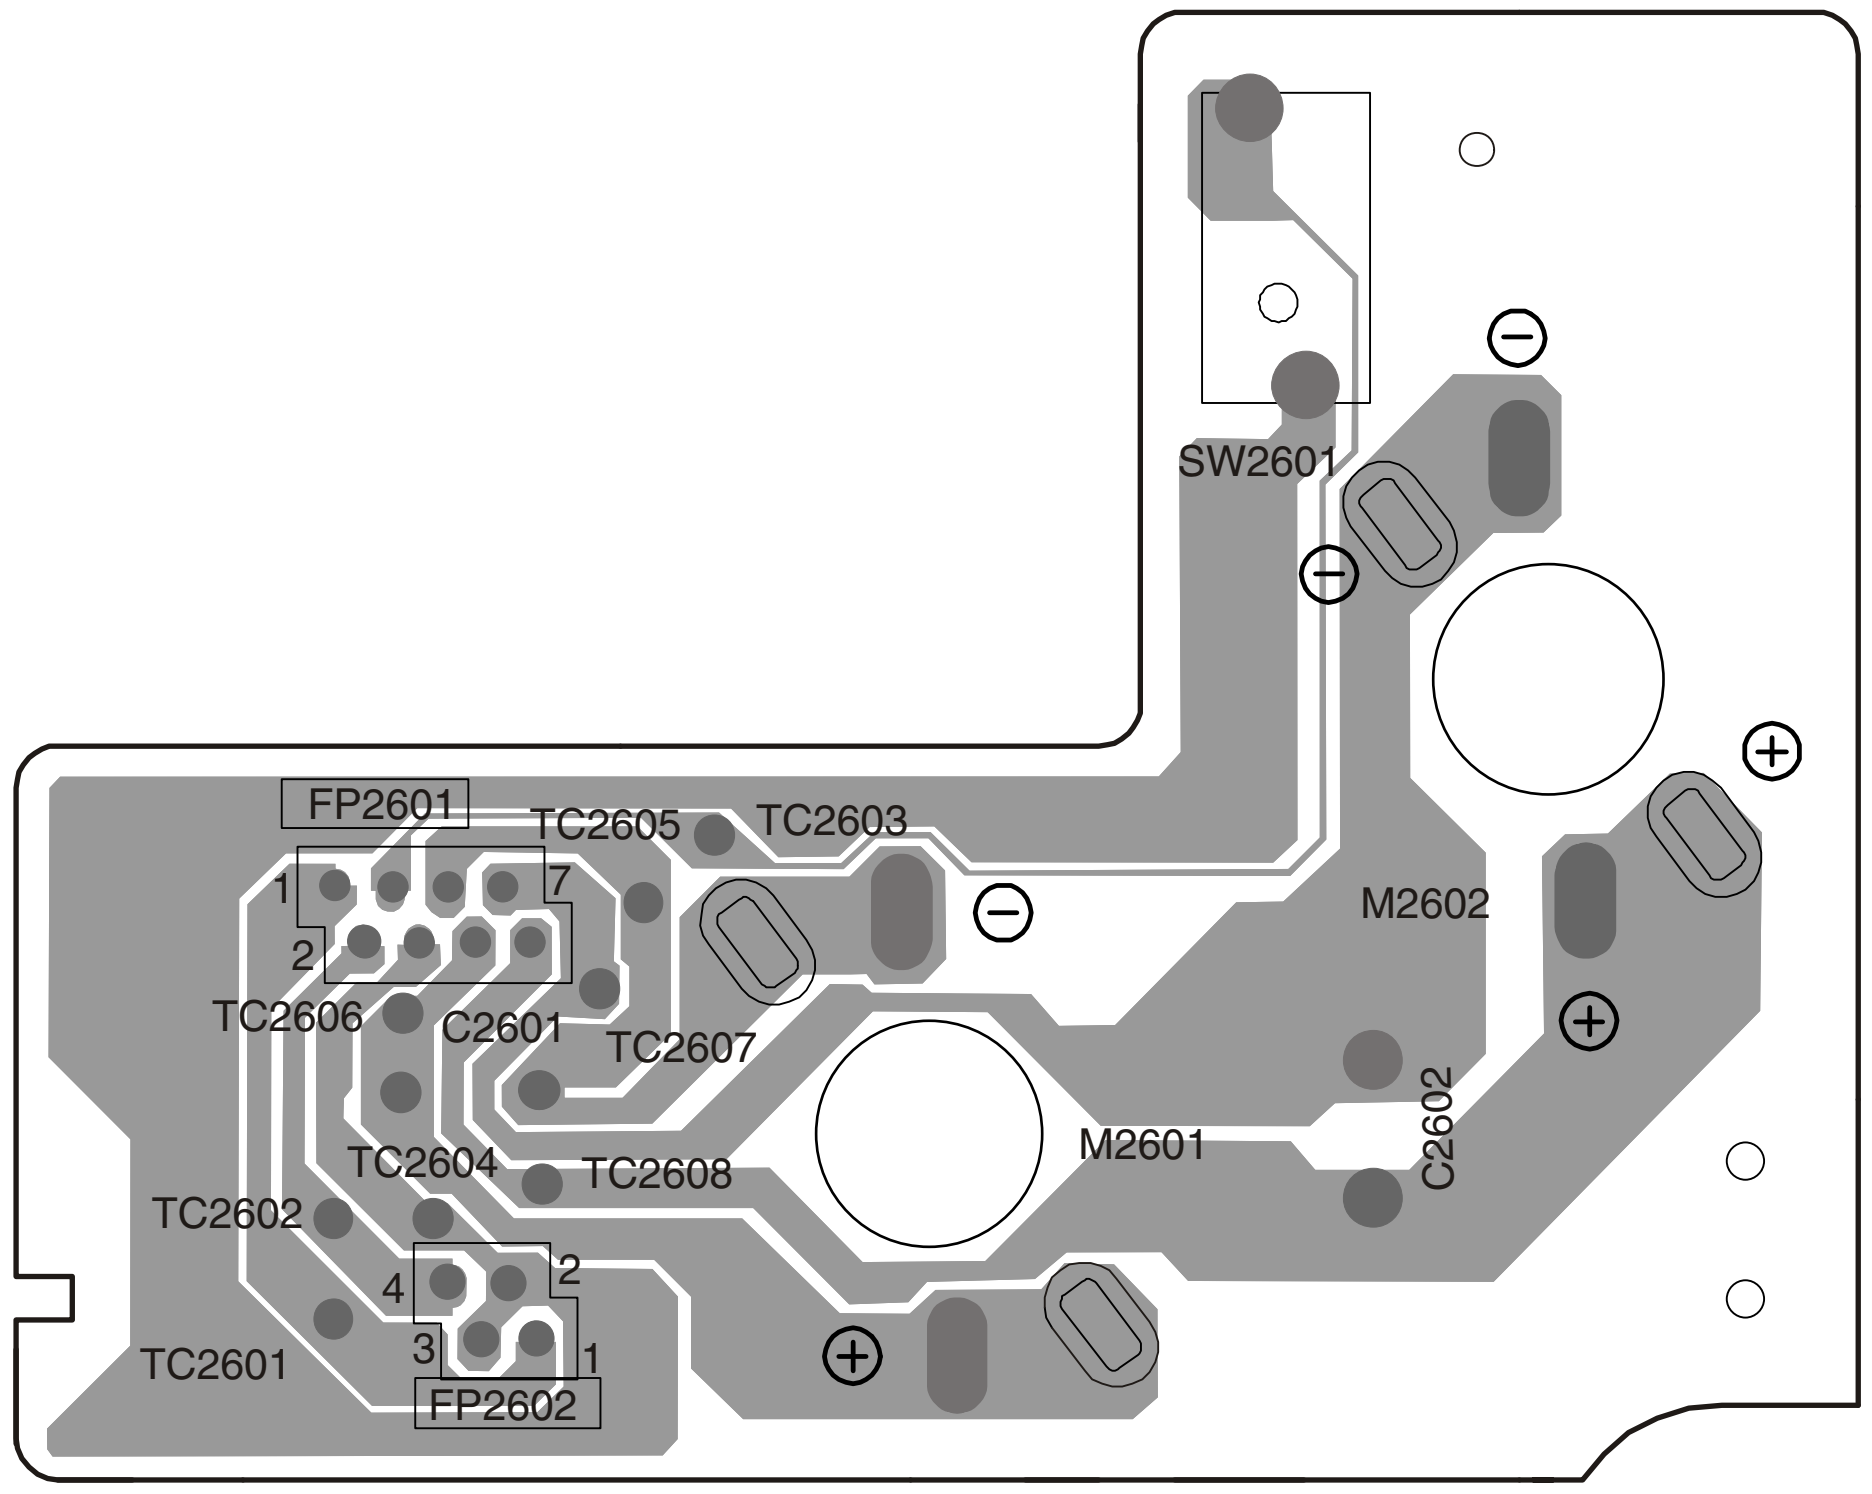
SW2601
FP2601
TC2605
TC2603
1
7
2
TC2606
C2601
TC2607
M2602
M2601
C2602
TC2604
TC2608
TC2602
4
2
3
1
TC2601
FP2602

TERMINAL PCB	
FP2601	C5
FP2602	B5
M2601	B3
M2602	D2
SW2601	D3

ADDRESS INFORMATION

TERMINAL PCB	
FP2601	C8
FP2602	B8
M2601	C9
M2602	C10
SW2601	D10

ADDRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
TERMINAL PCB
COMPONENT SIDE / SOLDER SIDE

16 INTERCONNECTION DIAGRAM

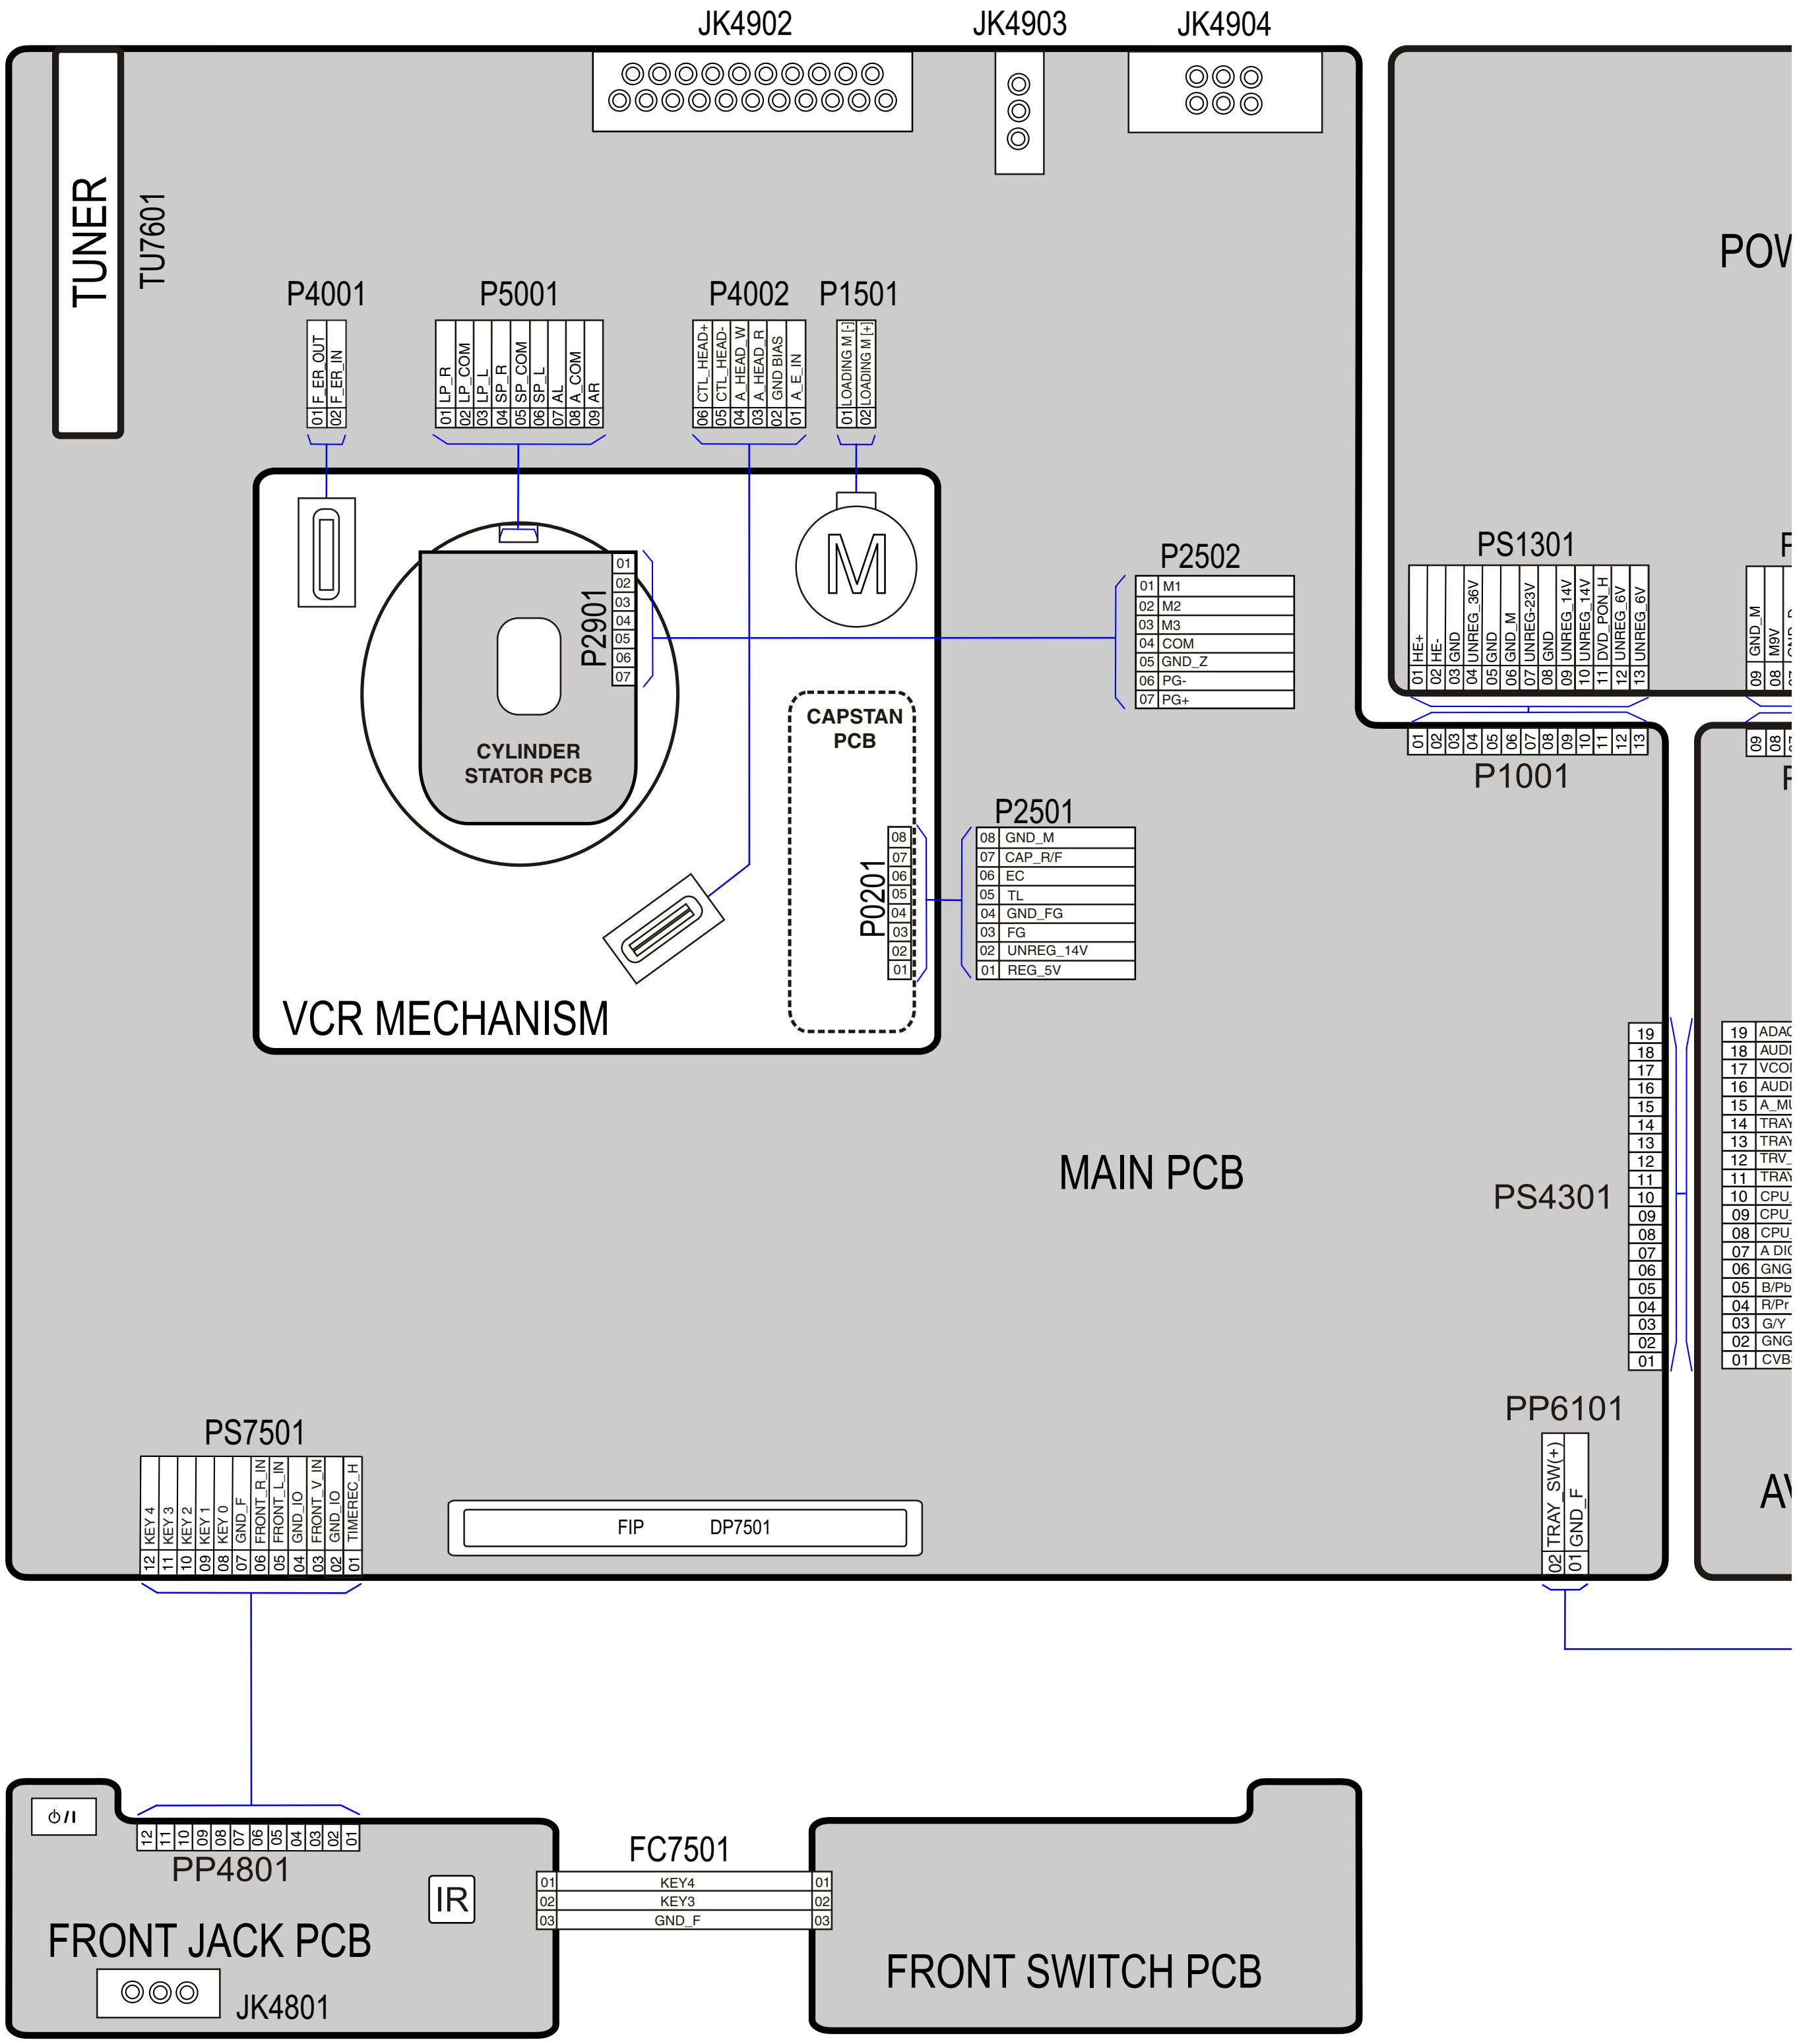

JK4902
JK4903
JK4904
TUNER
TU7601
P4001
01 F_ER_OUT
02 F_ER_IN
P5001
01 LP_R
02 LP_COM
03 LP_L
04 SP_R
05 SP_COM
06 SP_L
07 AL
08 A_COM
09 AR
P4002
06 CTL_HEAD+
05 CTL_HEAD-
04 A_HEAD_W
03 A_HEAD_R
02 GND BIAS
01 A_E_IN
P1501
01 LOADING M [-]
02 LOADING M [+]
M
P2901
01
02
03
04
05
06
07
CYLINDER
STATOR PCB
P2502
01 M1
02 M2
03 M3
04 COM
05 GND_Z
06 PG-
07 PG+
CAPSTAN
PCB
P0201
08
07
06
05
04
03
02
01
P2501
08 GND_M
07 CAP_R/F
06 EC
05 TL
04 GND_FG
03 FG
02 UNREG_14V
01 REG_5V
VCR MECHANISM
POW
PS1301
01 HE+
02 HE-
03 GND
04 UNREG_36V
05 GND
06 GND_M
07 UNREG-23V
08 GND
09 UNREG_14V
10 UNREG_14V
11 DVD_PON_H
12 UNREG_6V
13 UNREG_6V
P1001
01
02
03
04
05
06
07
08
09
10
11
12
13
09 GND_M
08 M9V
09
08
MAIN PCB
PS4301
19
18
17
16
15
14
13
12
11
10
09
08
07
06
05
04
03
02
01
19 ADAC
18 AUDI
17 VCOI
16 AUDI
15 A_MU
14 TRAY
13 TRAY
12 TRV_
11 TRAY
10 CPU_
09 CPU_
08 CPU_
07 A DIC
06 GNG
05 B/Pb
04 R/Pr
03 G/Y
02 GNG
01 CVB
PP6101
02 TRAY_SW(+)
01 GND_F
AV
PS7501
12 KEY 4
11 KEY 3
10 KEY 2
09 KEY 1
08 KEY 0
07 GND_F
06 FRONT_R_IN
05 FRONT_L_IN
04 GND_IO
03 FRONT_V_IN
02 GND_IO
01 TIMEREC_H
FIP
DP7501
⏻/I
12
11
10
09
08
07
06
05
04
03
02
01
PP4801
IR
FRONT JACK PCB
JK4801
FC7501
01 KEY4 01
02 KEY3 02
03 GND_F 03
FRONT SWITCH PCB

NAVIGATION

- POWER PCB
- MAIN PCB - AUDIO / VIDEO
- MAIN PCB - I/O
- MAIN PCB - SYSCON & SERVO
- AV DECODER PCB
- FRONT PANEL PCB
- TERMINAL PCB

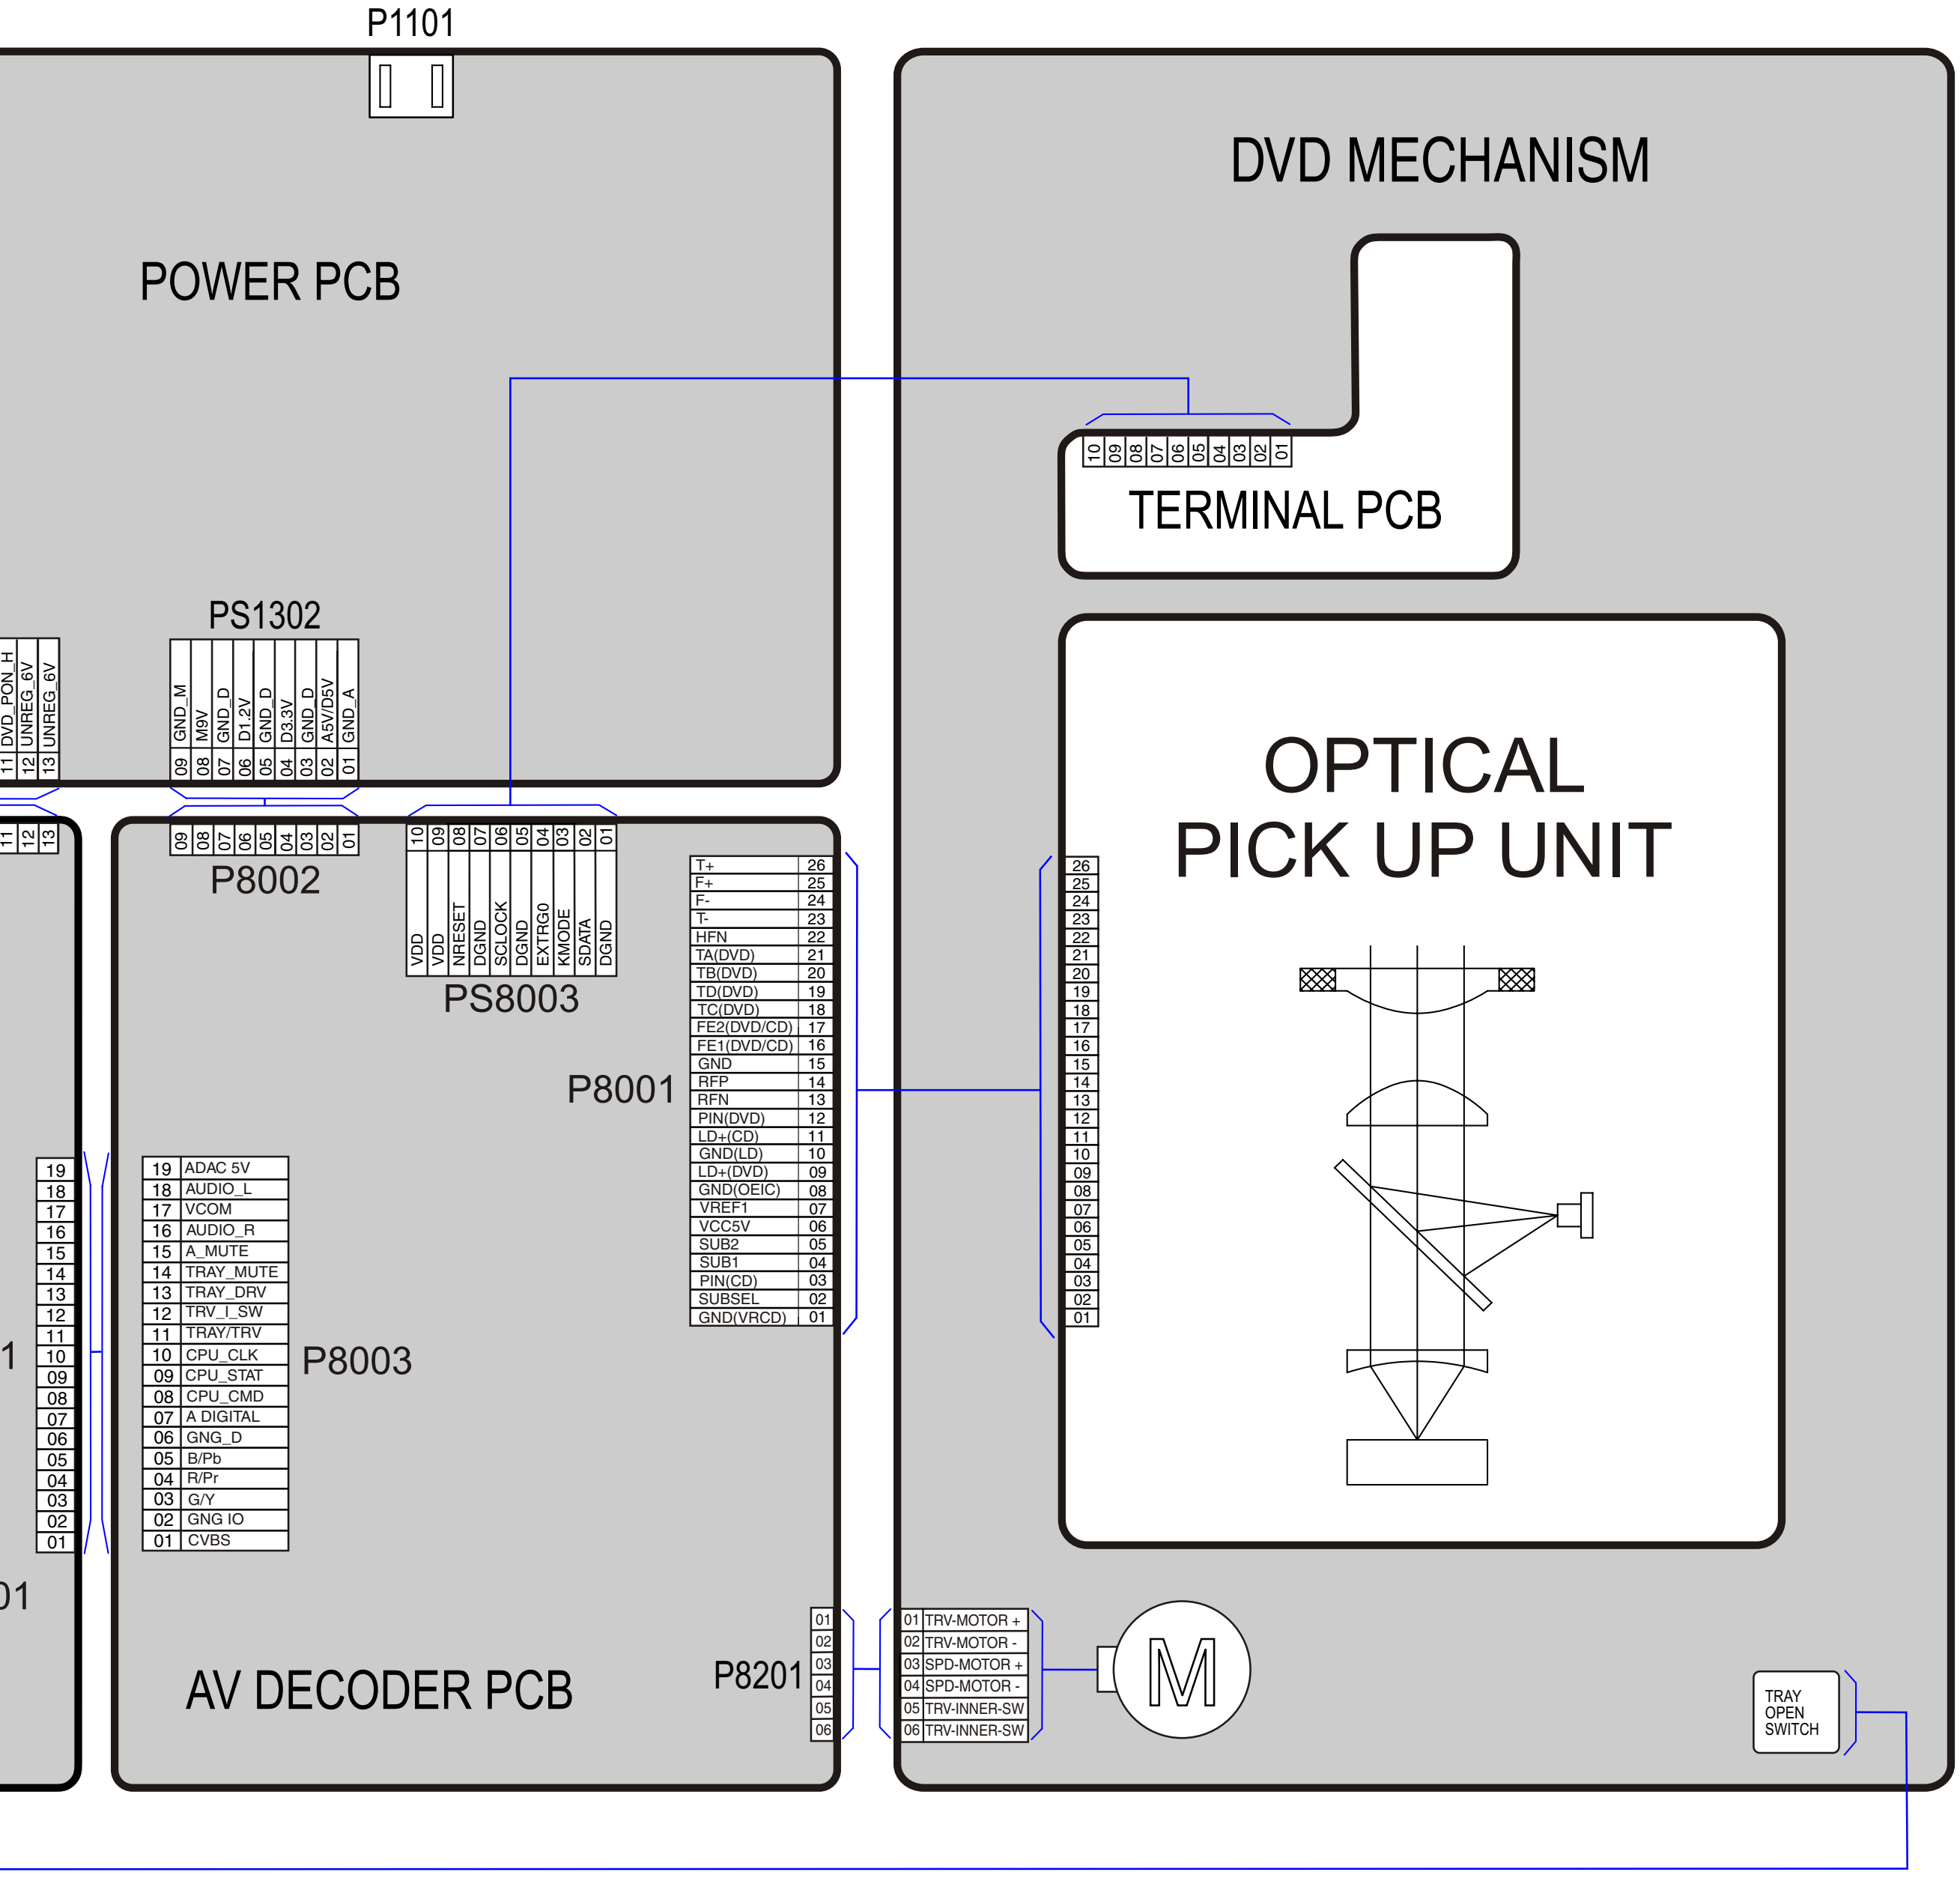
P1101
POWER PCB
PS1302
09 GND_M
08 M9V
07 GND_D
06 D1.2V
05 GND_D
04 D3.3V
03 GND_D
02 A5V/D5V
01 GND_A
11 DVD_PON_H
12 UNREG_6V
13 UNREG_6V
11
12
13
09 08 07 06 05 04 03 02 01
P8002
10 VDD
09 VDD
08 NRESET
07 DGND
06 SCLOCK
05 DGND
04 EXTRG0
03 KMODE
02 SDATA
01 DGND
PS8003
P8001
T+ 26
F+ 25
F- 24
T- 23
HFN 22
TA(DVD) 21
TB(DVD) 20
TD(DVD) 19
TC(DVD) 18
FE2(DVD/CD) 17
FE1(DVD/CD) 16
GND 15
RFP 14
RFN 13
PIN(DVD) 12
LD+(CD) 11
GND(LD) 10
LD+(DVD) 09
GND(OEIC) 08
VREF1 07
VCC5V 06
SUB2 05
SUB1 04
PIN(CD) 03
SUBSEL 02
GND(VRCD) 01
19 ADAC 5V
18 AUDIO_L
17 VCOM
16 AUDIO_R
15 A_MUTE
14 TRAY_MUTE
13 TRAY_DRV
12 TRV_I_SW
11 TRAY/TRV
10 CPU_CLK
09 CPU_STAT
08 CPU_CMD
07 A DIGITAL
06 GNG_D
05 B/Pb
04 R/Pr
03 G/Y
02 GNG IO
01 CVBS
P8003
19 18 17 16 15 14 13 12 11 10 09 08 07 06 05 04 03 02 01
1
01
AV DECODER PCB
P8201
01 02 03 04 05 06
DVD MECHANISM
10 09 08 07 06 05 04 03 02 01
TERMINAL PCB
OPTICAL PICK UP UNIT
26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 09 08 07 06 05 04 03 02 01
01 TRV-MOTOR +
02 TRV-MOTOR -
03 SPD-MOTOR +
04 SPD-MOTOR -
05 TRV-INNER-SW
06 TRV-INNER-SW
M
TRAY OPEN SWITCH

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
INTERCONNECTION DIAGRAM

17 BLOCK DIAGRAM

17.1. POWER SUPPLY BLOCK DIAGRAM

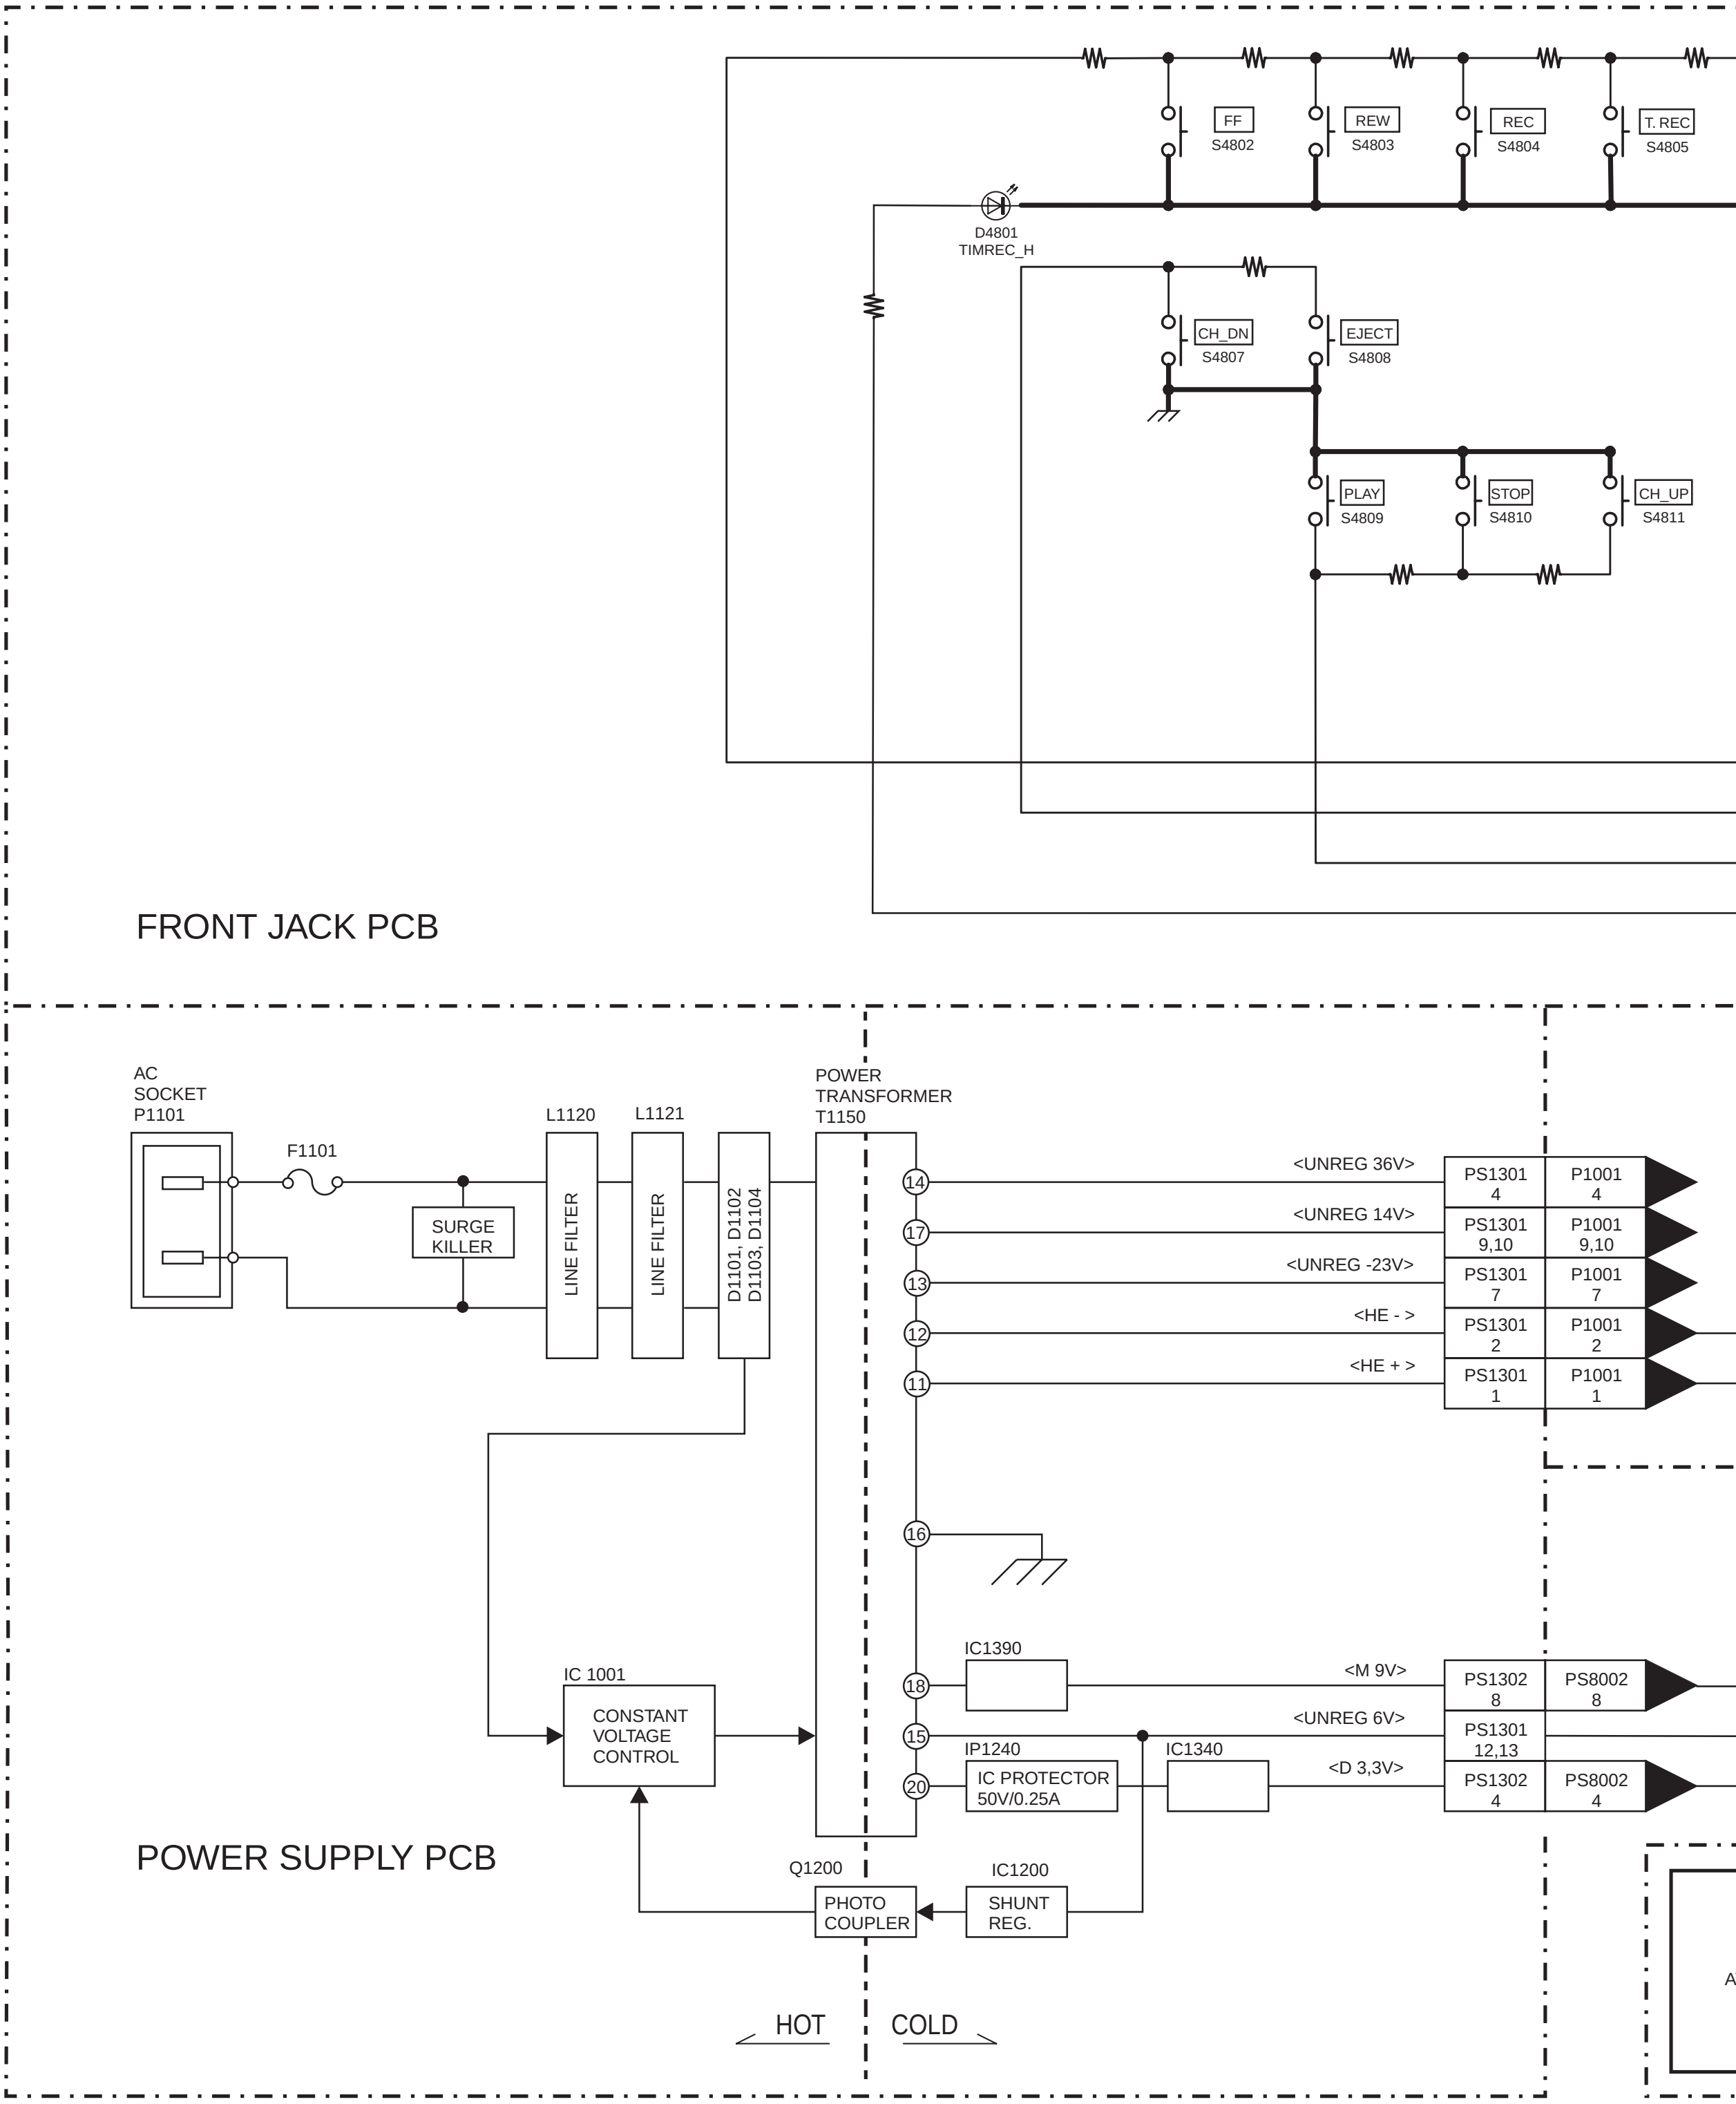
FF
S4802
REW
S4803
REC
S4804
T. REC
S4805
D4801
TIMREC_H
CH_DN
S4807
EJECT
S4808
PLAY
S4809
STOP
S4810
CH_UP
S4811
FRONT JACK PCB
AC
SOCKET
P1101
F1101
SURGE
KILLER
L1120
L1121
LINE FILTER
LINE FILTER
D1101, D1102
D1103, D1104
POWER
TRANSFORMER
T1150
14
17
13
12
11
16
18
15
20
<UNREG 36V>
<UNREG 14V>
<UNREG -23V>
<HE - >
<HE + >
PS1301
4
P1001
4
PS1301
9,10
P1001
9,10
PS1301
7
P1001
7
PS1301
2
P1001
2
PS1301
1
P1001
1
IC1390
<M 9V>
PS1302
8
PS8002
8
<UNREG 6V>
PS1301
12,13
IP1240
IC PROTECTOR
50V/0.25A
IC1340
<D 3,3V>
PS1302
4
PS8002
4
IC 1001
CONSTANT
VOLTAGE
CONTROL
Q1200
PHOTO
COUPLER
IC1200
SHUNT
REG.
POWER SUPPLY PCB
HOT
COLD
A

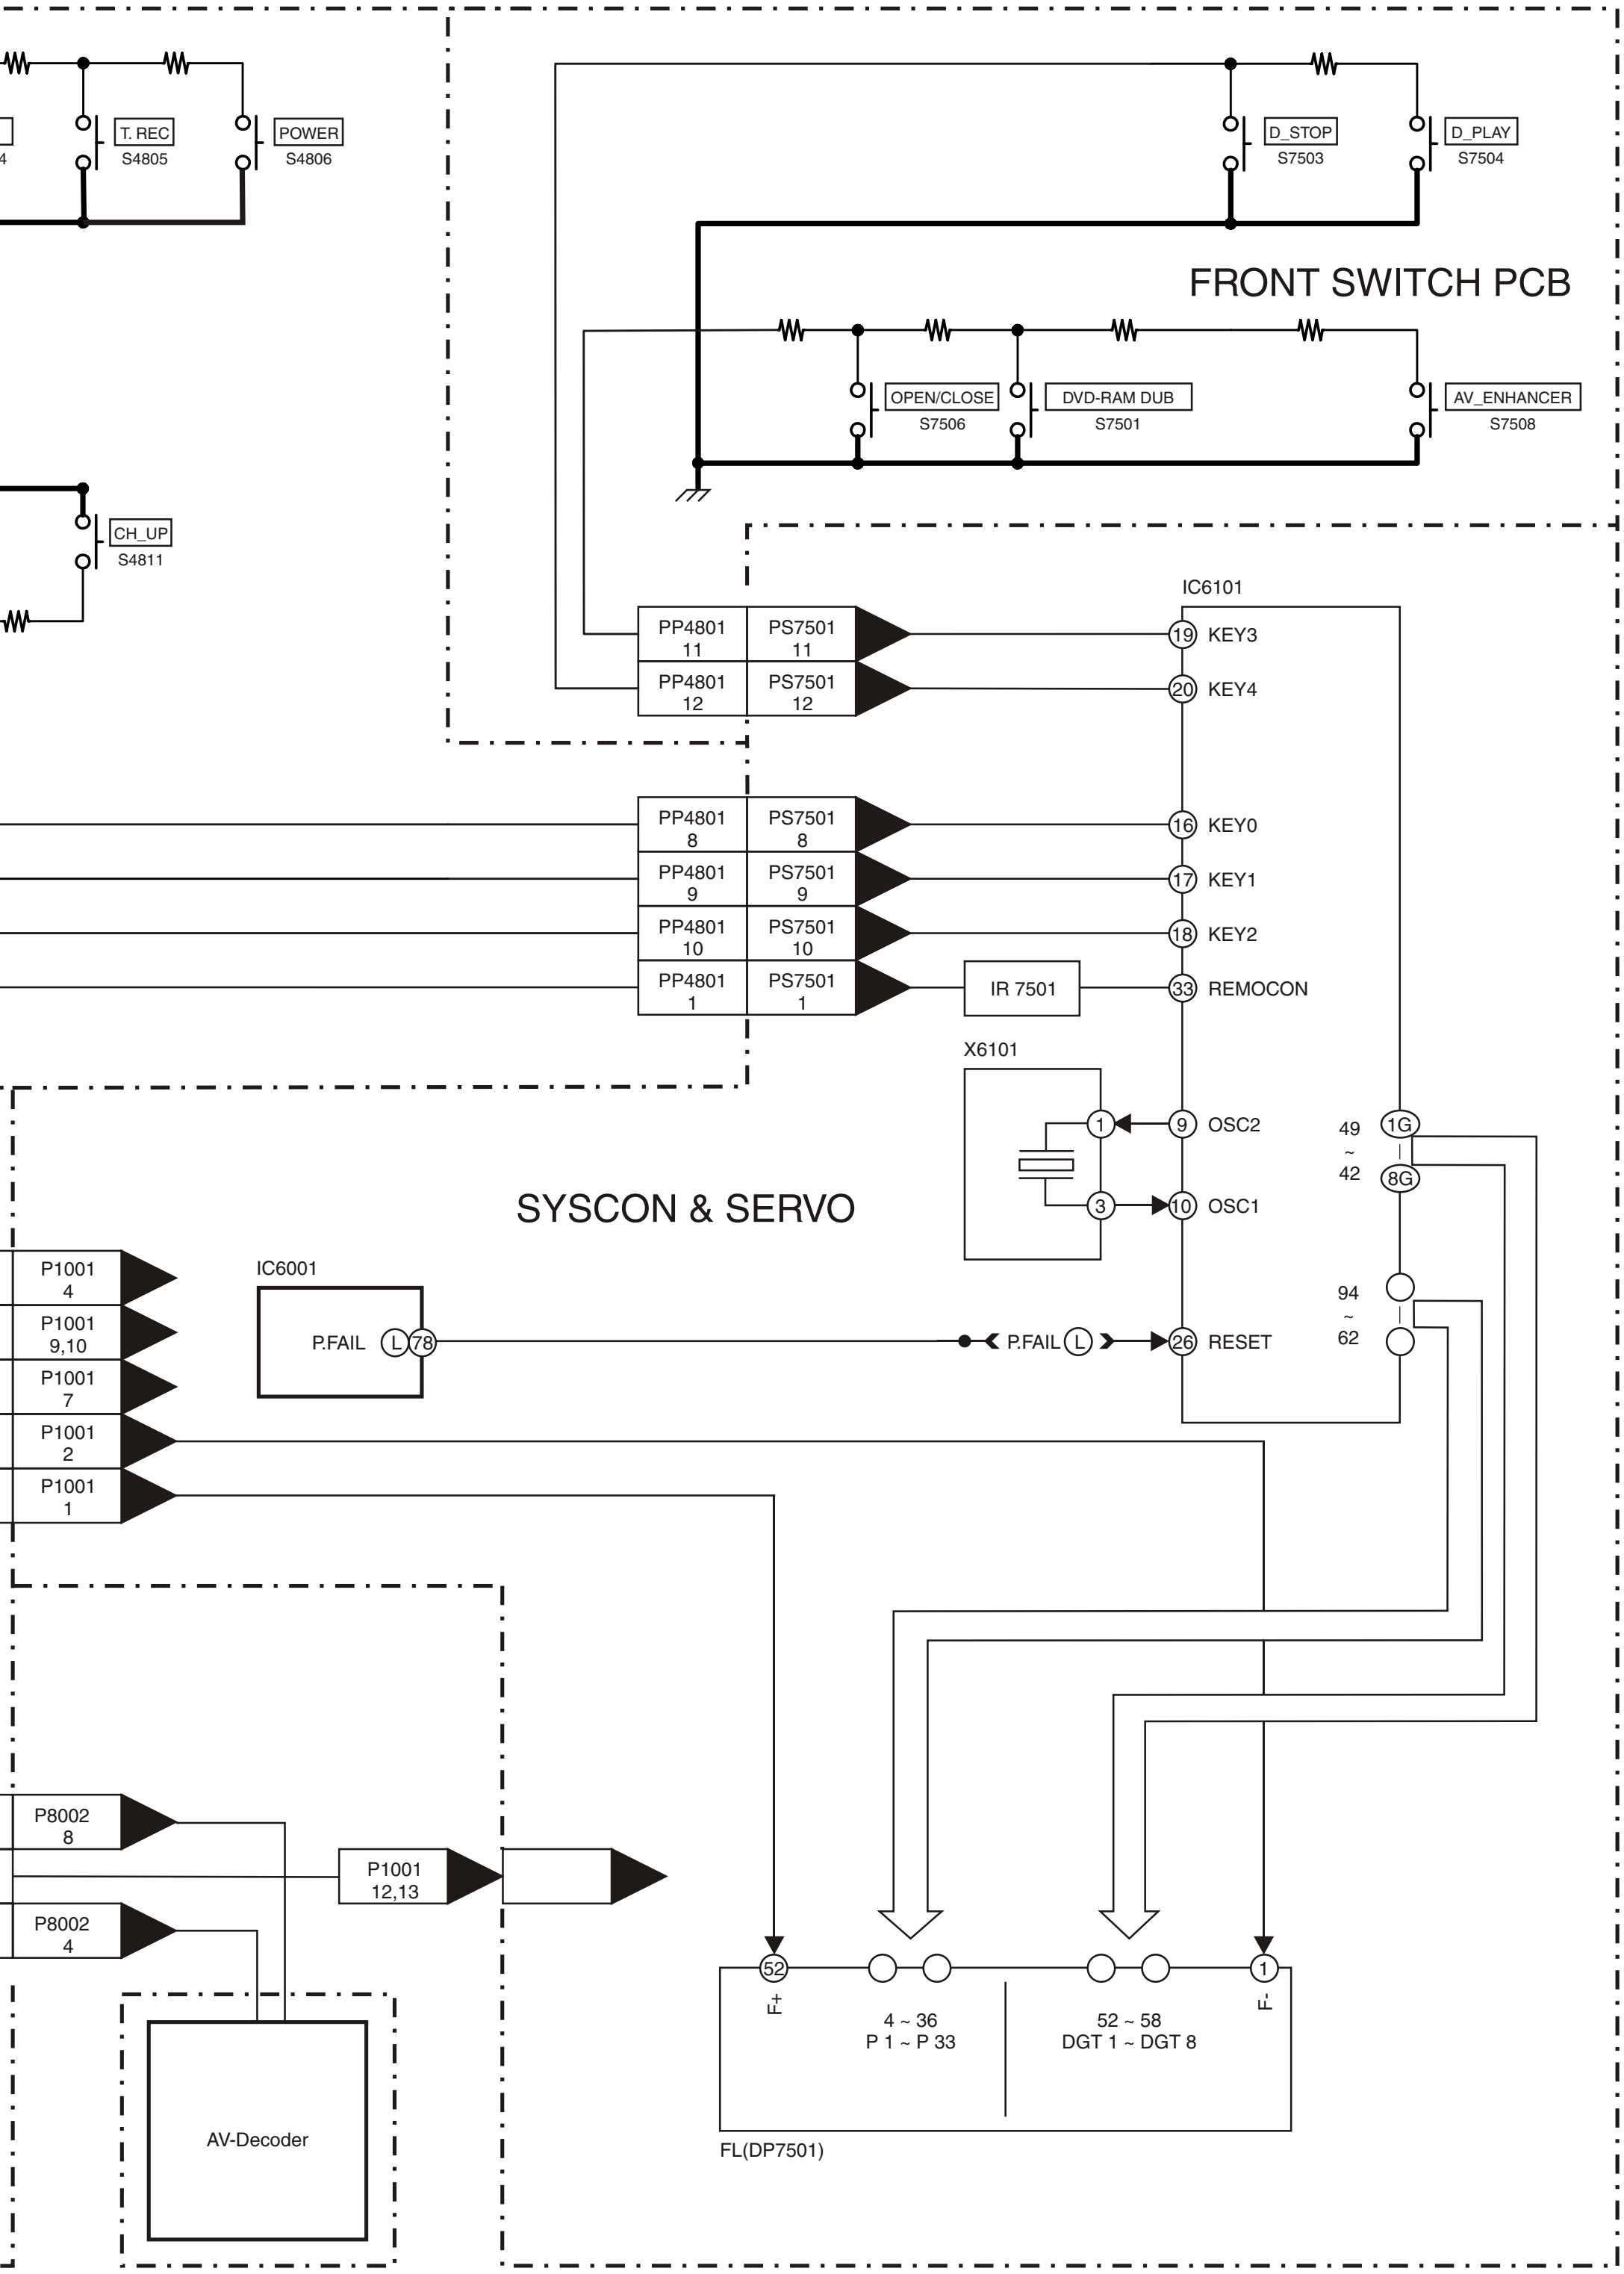
T. REC
S4805
POWER
S4806
D_STOP
S7503
D_PLAY
S7504
FRONT SWITCH PCB
OPEN/CLOSE
S7506
DVD-RAM DUB
S7501
AV_ENHANCER
S7508
CH_UP
S4811
IC6101
PP4801 11
PS7501 11
PP4801 12
PS7501 12
19 KEY3
20 KEY4
PP4801 8
PS7501 8
PP4801 9
PS7501 9
PP4801 10
PS7501 10
PP4801 1
PS7501 1
16 KEY0
17 KEY1
18 KEY2
IR 7501
33 REMOCON
X6101
1
3
9 OSC2
10 OSC1
49 ~ 42
1G
8G
94 ~ 62
SYSCON & SERVO
P1001 4
P1001 9,10
P1001 7
P1001 2
P1001 1
IC6001
P.FAIL L 78
P.FAIL L
26 RESET
P8002 8
P1001 12,13
P8002 4
52
F+
4 ~ 36
P 1 ~ P 33
52 ~ 58
DGT 1 ~ DGT 8
1
F-
FL(DP7501)
AV-Decoder

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
POWER PCB
BLOCK DIAGRAM

17.2. VCR LUMINANCE & CHROMINANCE BLOCK DIAGRAM

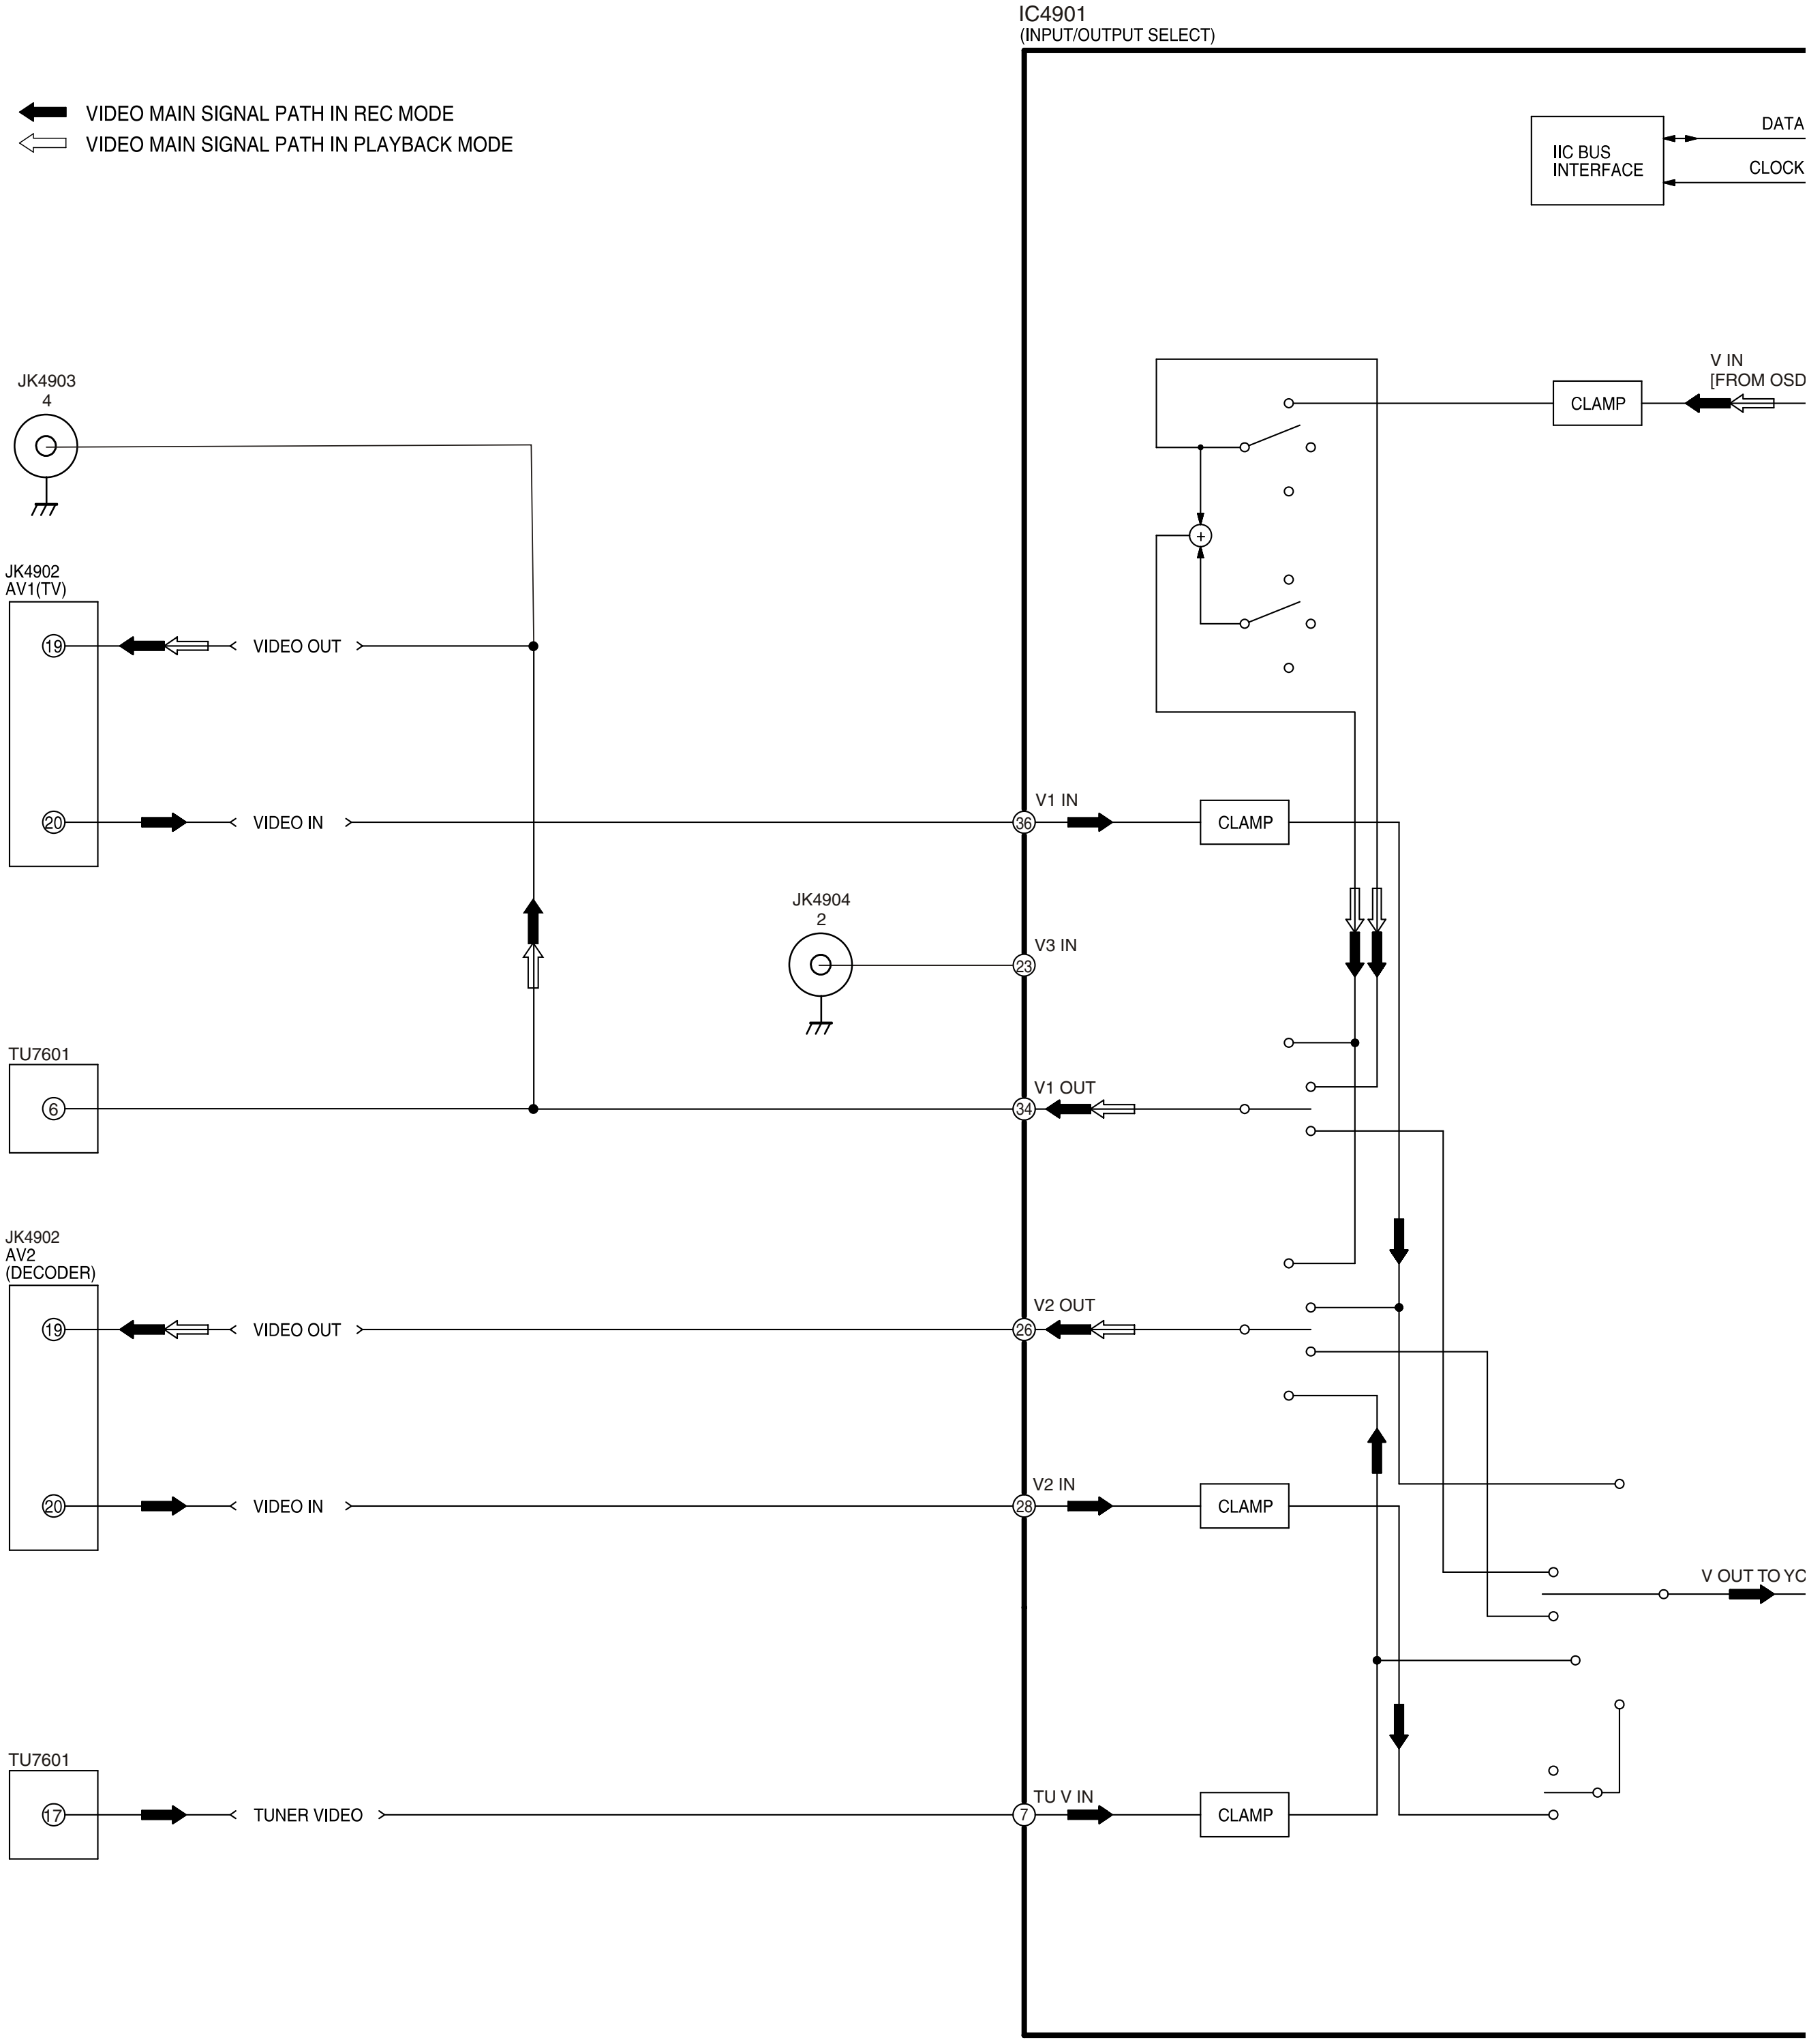
VIDEO MAIN SIGNAL PATH IN REC MODE
VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE
IC4901
(INPUT/OUTPUT SELECT)
IIC BUS INTERFACE
DATA
CLOCK
V IN
[FROM OSD
CLAMP
JK4903
4
JK4902
AV1(TV)
19
VIDEO OUT
20
VIDEO IN
V1 IN
36
CLAMP
JK4904
2
V3 IN
23
TU7601
6
V1 OUT
34
JK4902
AV2
(DECODER)
19
VIDEO OUT
V2 OUT
26
20
VIDEO IN
V2 IN
28
CLAMP
V OUT TO YC
TU7601
17
TUNER VIDEO
TU V IN
7
CLAMP

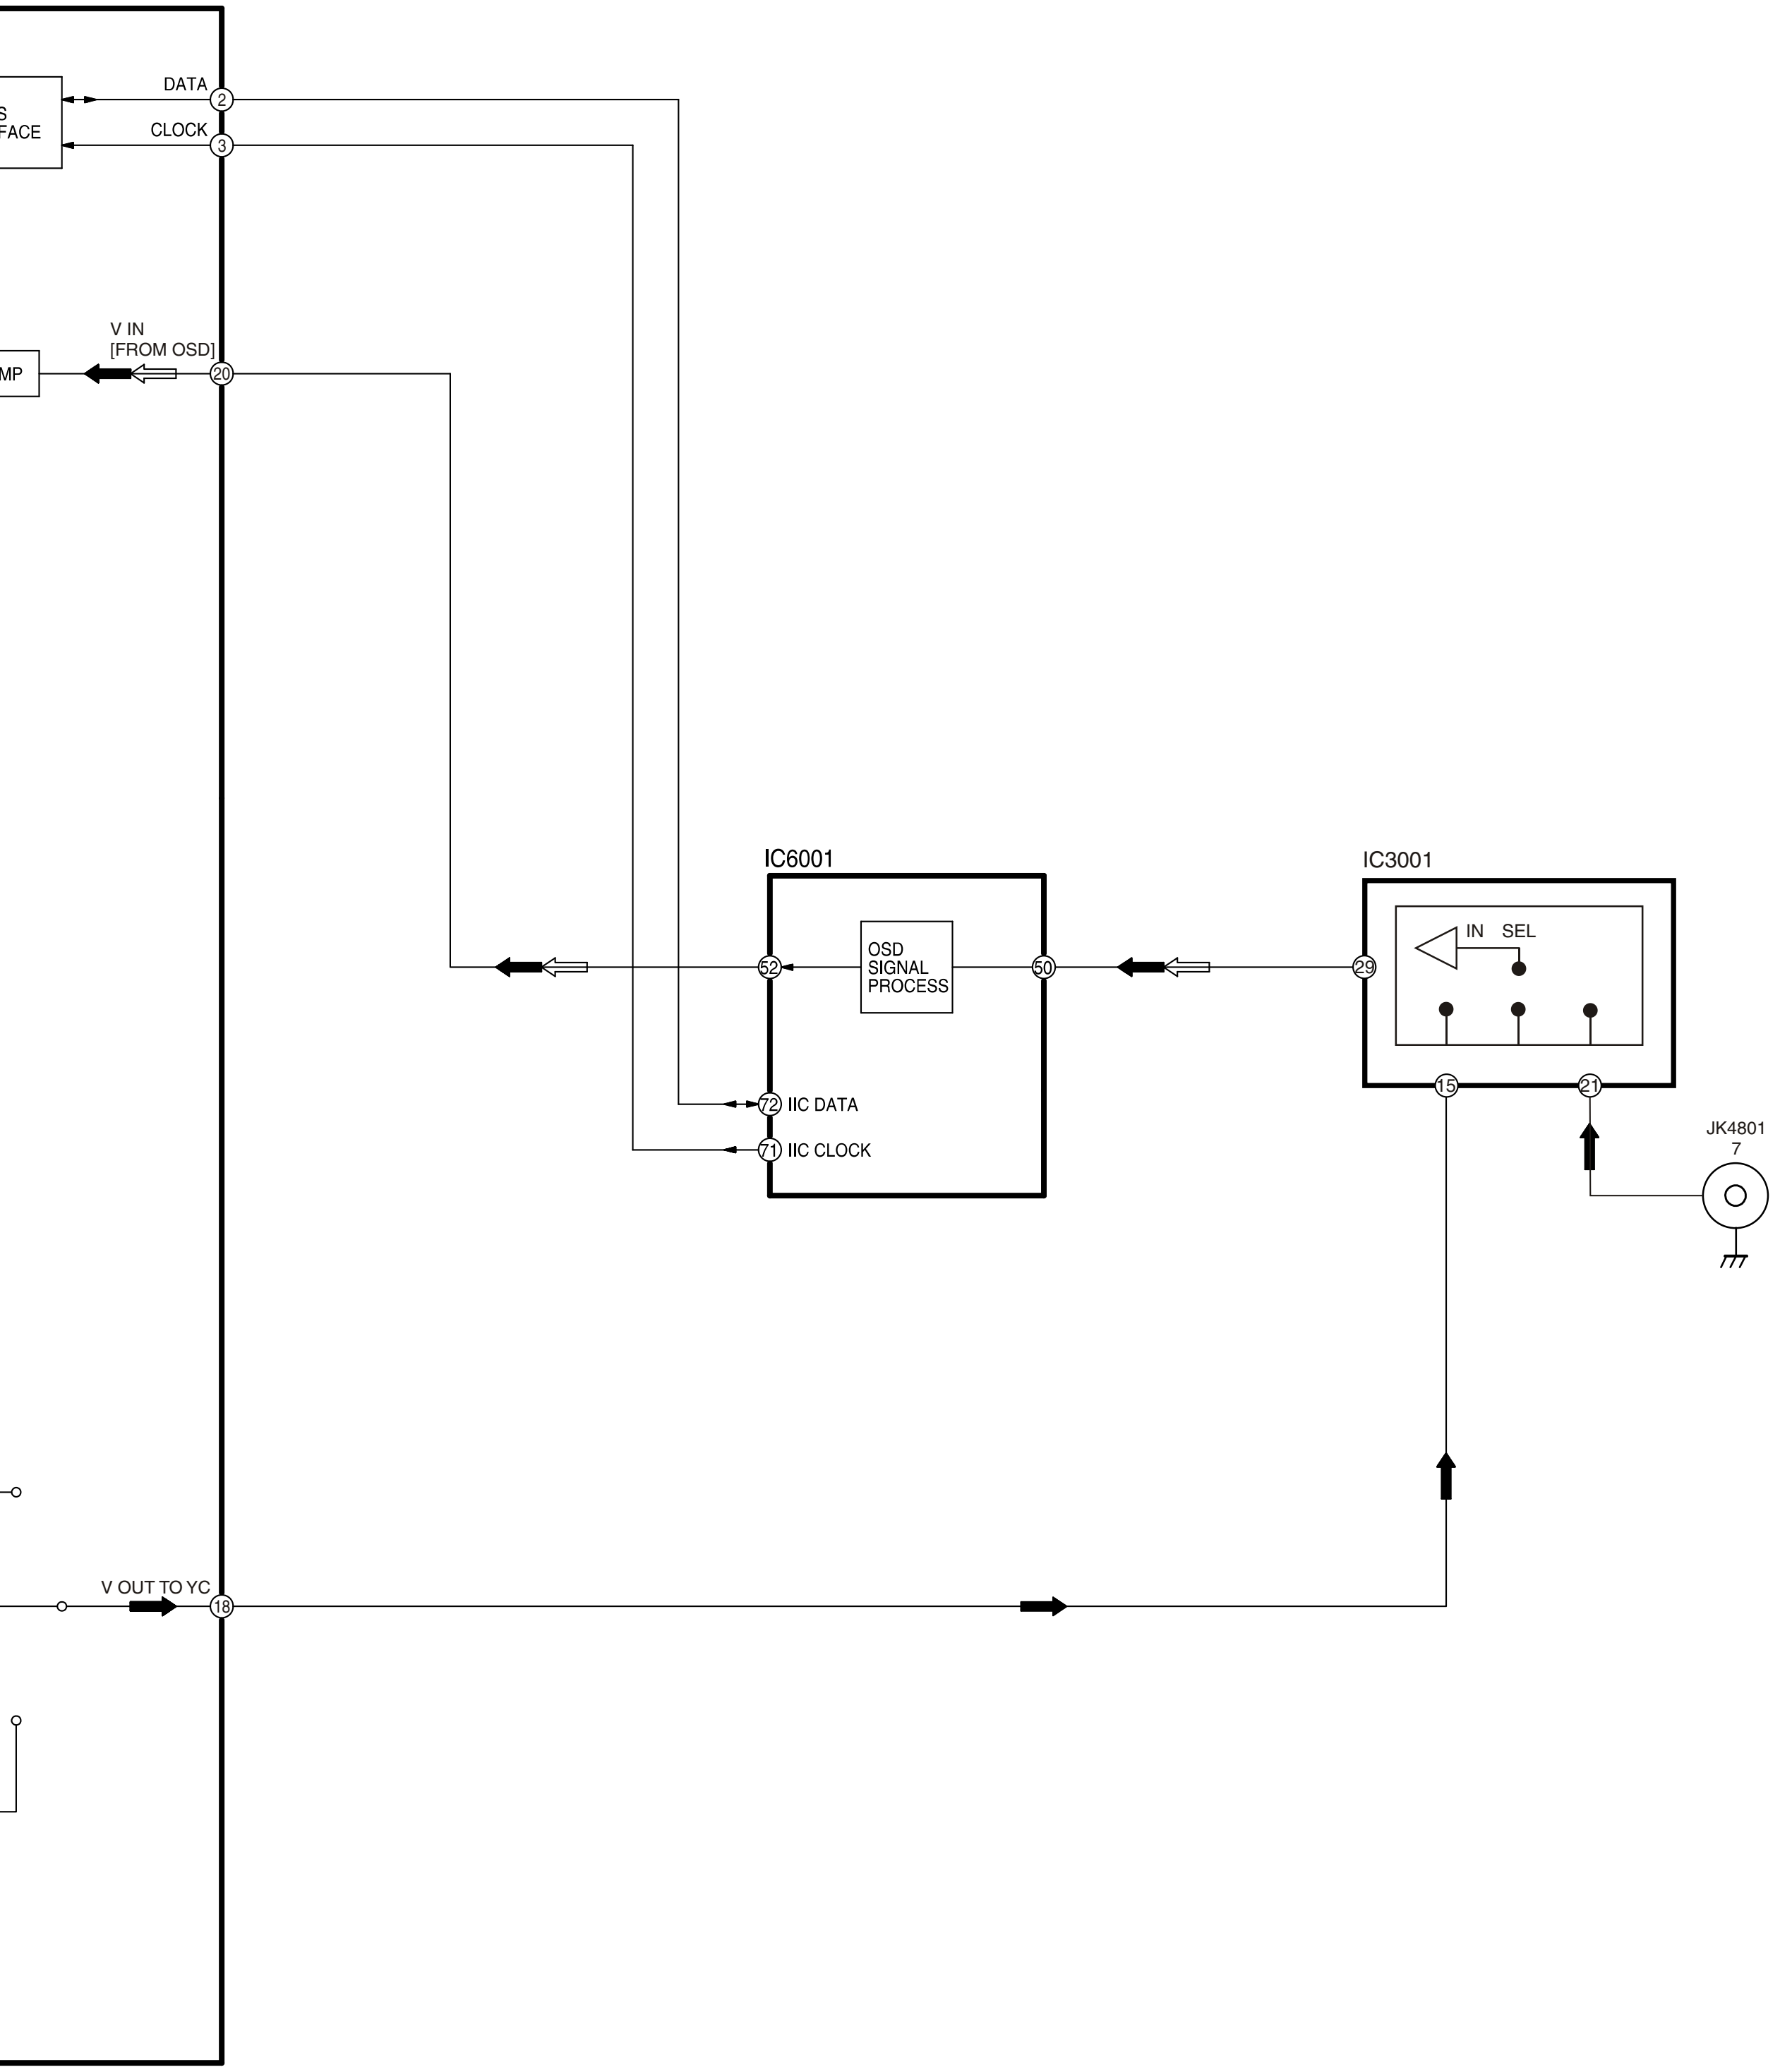
S
FACE
DATA
CLOCK
2
3
MP
V IN
[FROM OSD]
20
V OUT TO YC
18
IC6001
OSD
SIGNAL
PROCESS
52
50
72
IIC DATA
71
IIC CLOCK
IC3001
IN
SEL
29
15
21
JK4801
7

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL
VCR LUMINANCE & CHROMINANCE 1/2
BLOCK DIAGRAM

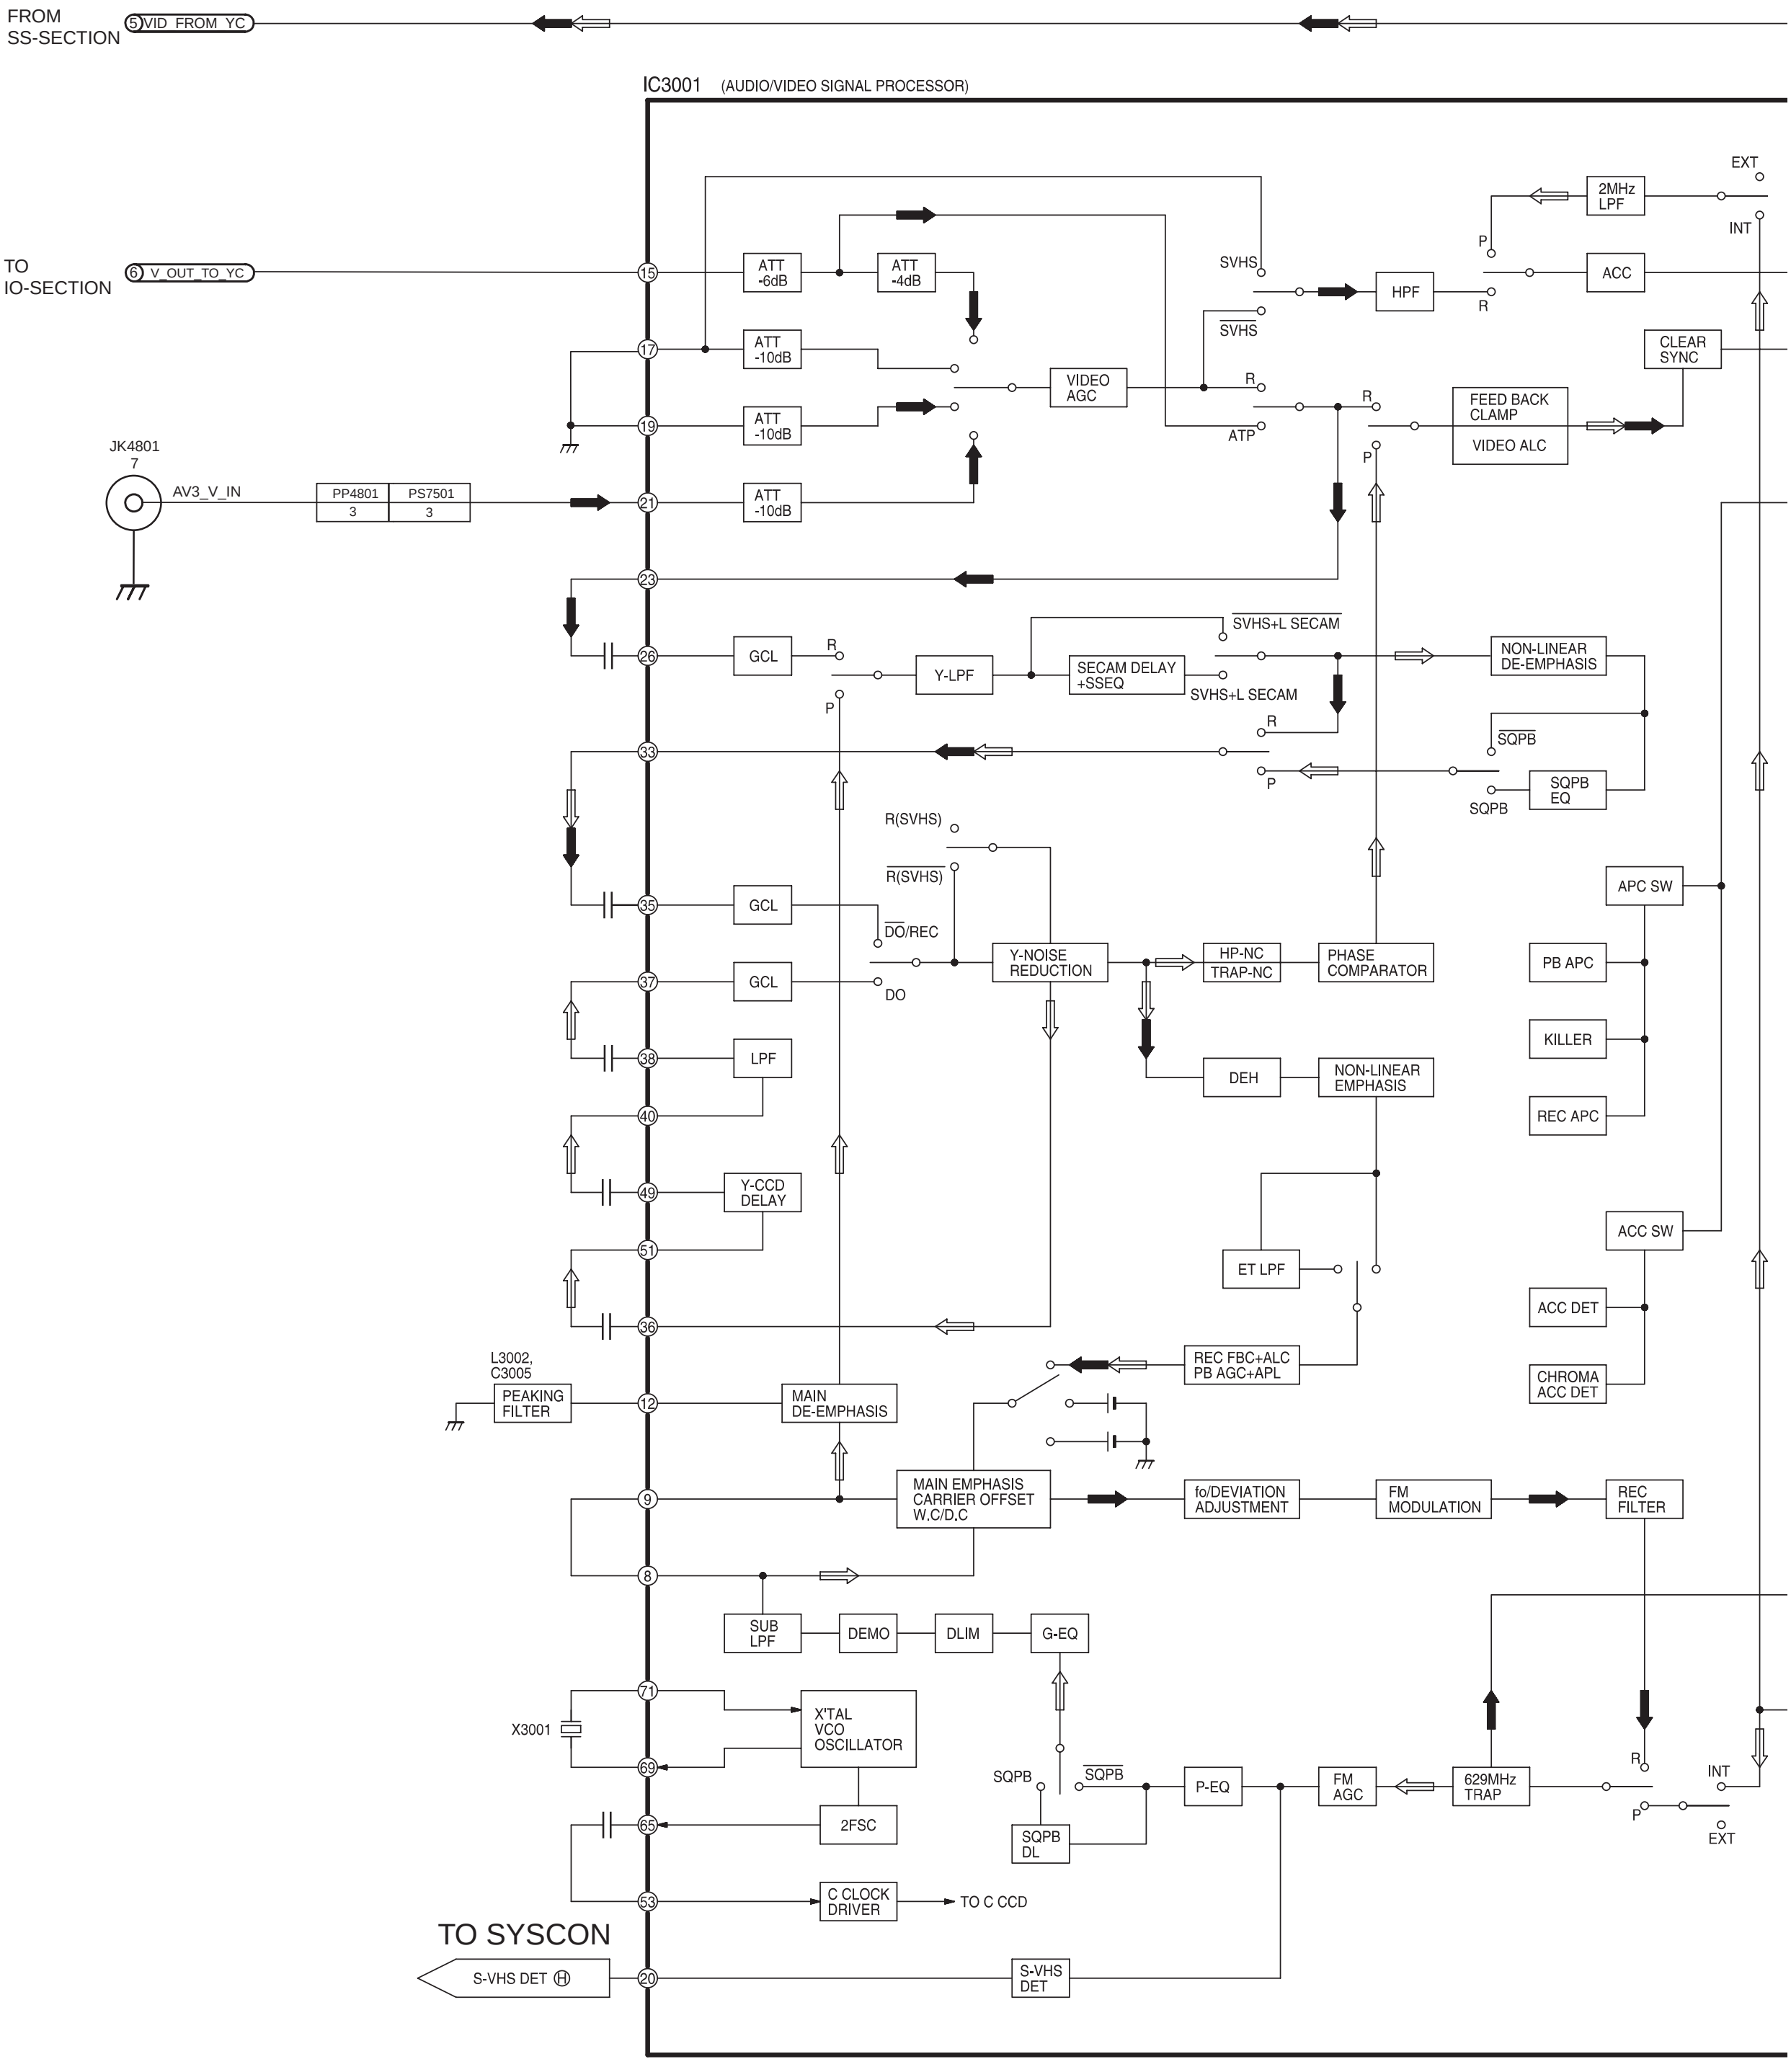
FROM
SS-SECTION
6 VID_FROM_YC
IC3001 (AUDIO/VIDEO SIGNAL PROCESSOR)
TO
IO-SECTION
6 V_OUT_TO_YC
JK4801
7
AV3_V_IN
PP4801
3
PS7501
3
15
17
19
21
23
26
33
35
37
38
40
49
51
36
12
9
8
71
69
65
53
20
ATT -6dB
ATT -4dB
ATT -10dB
ATT -10dB
ATT -10dB
VIDEO AGC
SVHS
SVHS
R
ATP
R
P
HPF
P
R
2MHz LPF
ACC
EXT
INT
CLEAR SYNC
FEED BACK CLAMP
VIDEO ALC
GCL
R
P
Y-LPF
SECAM DELAY +SSEQ
SVHS+L SECAM
SVHS+L SECAM
R
P
NON-LINEAR DE-EMPHASIS
SQPB
SQPB
SQPB EQ
R(SVHS)
R(SVHS)
DO/REC
DO
GCL
GCL
Y-NOISE REDUCTION
HP-NC
TRAP-NC
PHASE COMPARATOR
APC SW
PB APC
KILLER
REC APC
LPF
DEH
NON-LINEAR EMPHASIS
Y-CCD DELAY
ET LPF
ACC SW
ACC DET
CHROMA ACC DET
REC FBC+ALC
PB AGC+APL
L3002,
C3005
PEAKING FILTER
MAIN DE-EMPHASIS
MAIN EMPHASIS CARRIER OFFSET W.C/D.C
fo/DEVIATION ADJUSTMENT
FM MODULATION
REC FILTER
SUB LPF
DEMO
DLIM
G-EQ
X3001
X'TAL VCO OSCILLATOR
2FSC
SQPB
SQPB
SQPB DL
P-EQ
FM AGC
629MHz TRAP
R
INT
P
EXT
C CLOCK DRIVER
TO C CCD
TO SYSCON
S-VHS DET Ⓗ
S-VHS DET

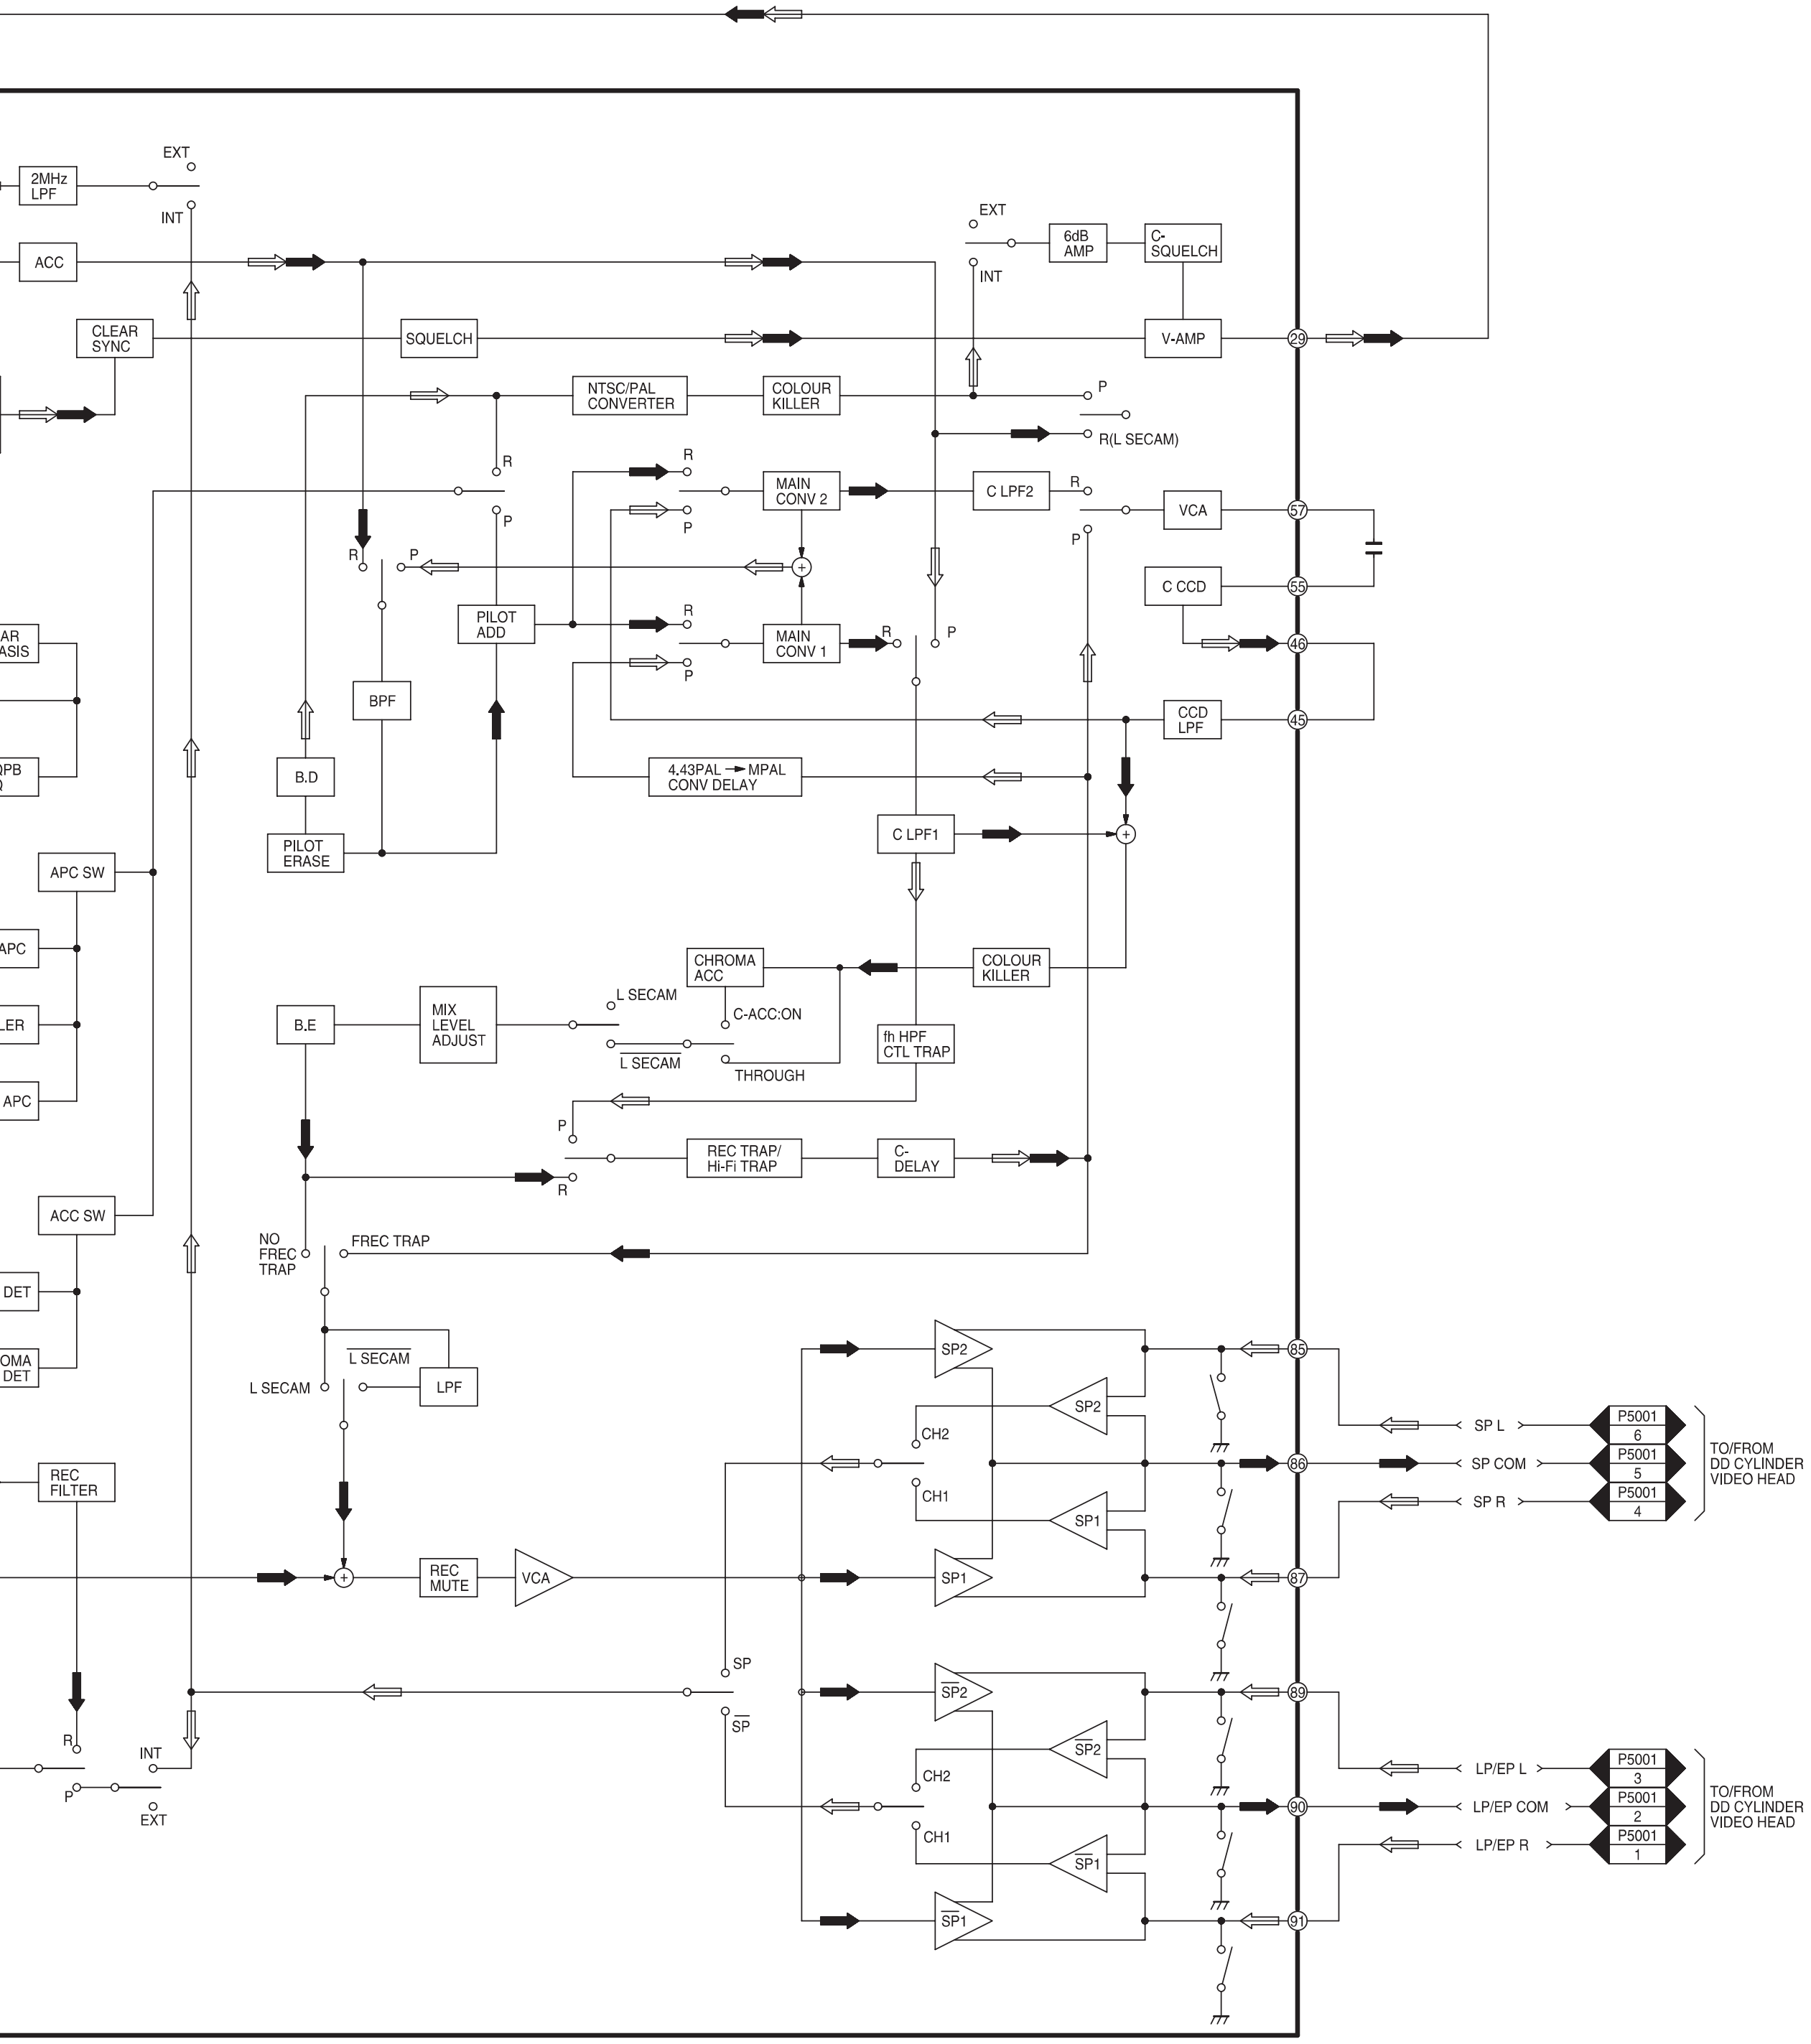
2MHz LPF
EXT
INT
ACC
EXT
INT
6dB AMP
C-SQUELCH
CLEAR SYNC
SQUELCH
V-AMP
29
NTSC/PAL CONVERTER
COLOUR KILLER
P
R(L SECAM)
R
P
R
P
MAIN CONV 2
C LPF2
R
P
VCA
57
R
P
C CCD
55
PILOT ADD
R
P
MAIN CONV 1
R
P
46
BPF
CCD LPF
45
B.D
4,43PAL ➔ MPAL CONV DELAY
PILOT ERASE
C LPF1
APC SW
CHROMA ACC
COLOUR KILLER
L SECAM
C-ACC:ON
B.E
MIX LEVEL ADJUST
L SECAM
THROUGH
fh HPF CTL TRAP
P
REC TRAP/ Hi-Fi TRAP
C-DELAY
R
ACC SW
NO FREC TRAP
FREC TRAP
DET
L SECAM
L SECAM
LPF
SP2
85
SP2
CH2
CH1
86
SP L
SP COM
SP R
P5001 6
P5001 5
P5001 4
TO/FROM DD CYLINDER VIDEO HEAD
SP1
REC FILTER
REC MUTE
VCA
SP1
87
SP
SP
SP2
89
SP2
R
INT
P
EXT
CH2
CH1
90
LP/EP L
LP/EP COM
LP/EP R
P5001 3
P5001 2
P5001 1
TO/FROM DD CYLINDER VIDEO HEAD
SP1
SP1
91

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
VCR LUMINANCE & CHROMINANCE 2/2
BLOCK DIAGRAM

17.3. VCR AUDIO BLOCK DIAGRAM

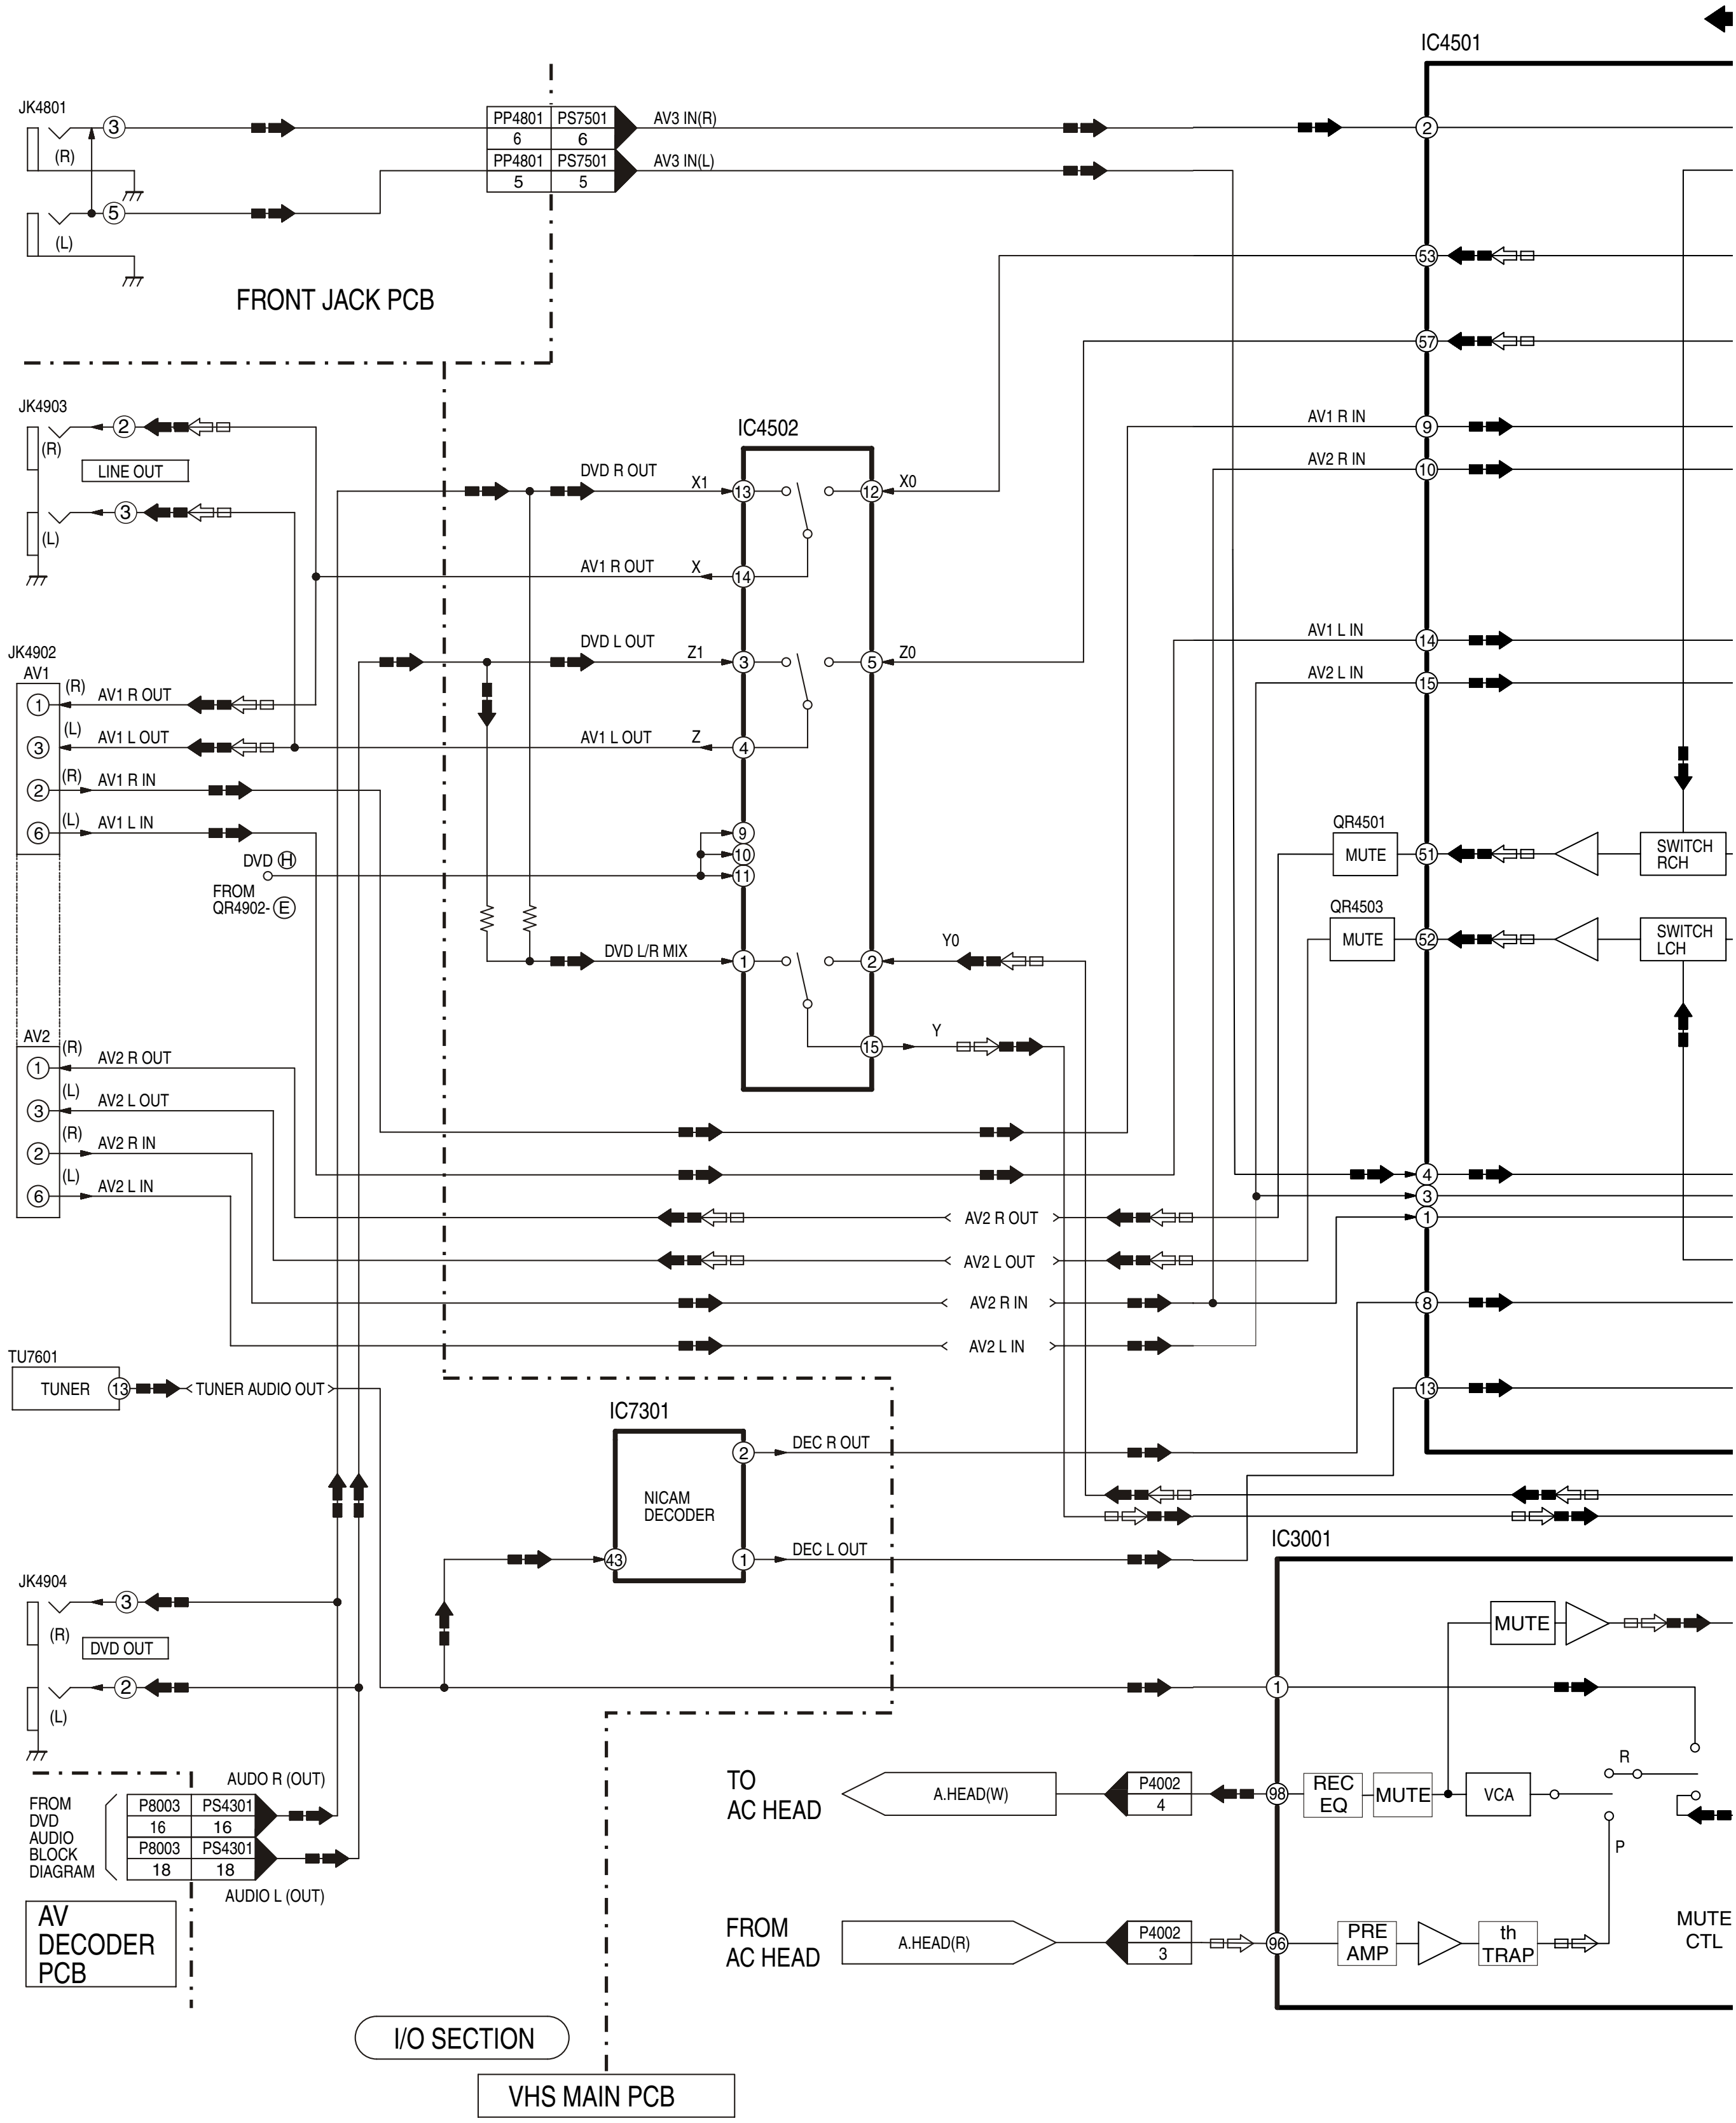

IC4501
JK4801
(R)
(L)
PP4801
PS7501
6
6
5
5
AV3 IN(R)
AV3 IN(L)
FRONT JACK PCB
JK4903
(R)
(L)
LINE OUT
IC4502
DVD R OUT
X1
X0
AV1 R OUT
X
DVD L OUT
Z1
Z0
AV1 L OUT
Z
JK4902
AV1
AV1 R OUT
AV1 L OUT
AV1 R IN
AV1 L IN
DVD Ⓗ
FROM QR4902-Ⓔ
DVD L/R MIX
Y0
Y
AV1 R IN
AV2 R IN
AV1 L IN
AV2 L IN
QR4501
MUTE
SWITCH RCH
QR4503
MUTE
SWITCH LCH
AV2
AV2 R OUT
AV2 L OUT
AV2 R IN
AV2 L IN
AV2 R OUT
AV2 L OUT
AV2 R IN
AV2 L IN
TU7601
TUNER
TUNER AUDIO OUT
IC7301
NICAM DECODER
DEC R OUT
DEC L OUT
IC3001
JK4904
(R)
(L)
DVD OUT
MUTE
R
TO AC HEAD
A.HEAD(W)
P4002
4
REC EQ
MUTE
VCA
P
FROM AC HEAD
A.HEAD(R)
P4002
3
PRE AMP
th TRAP
MUTE CTL
FROM DVD AUDIO BLOCK DIAGRAM
AUDO R (OUT)
P8003
PS4301
16
16
P8003
PS4301
18
18
AUDIO L (OUT)
AV DECODER PCB
I/O SECTION
VHS MAIN PCB

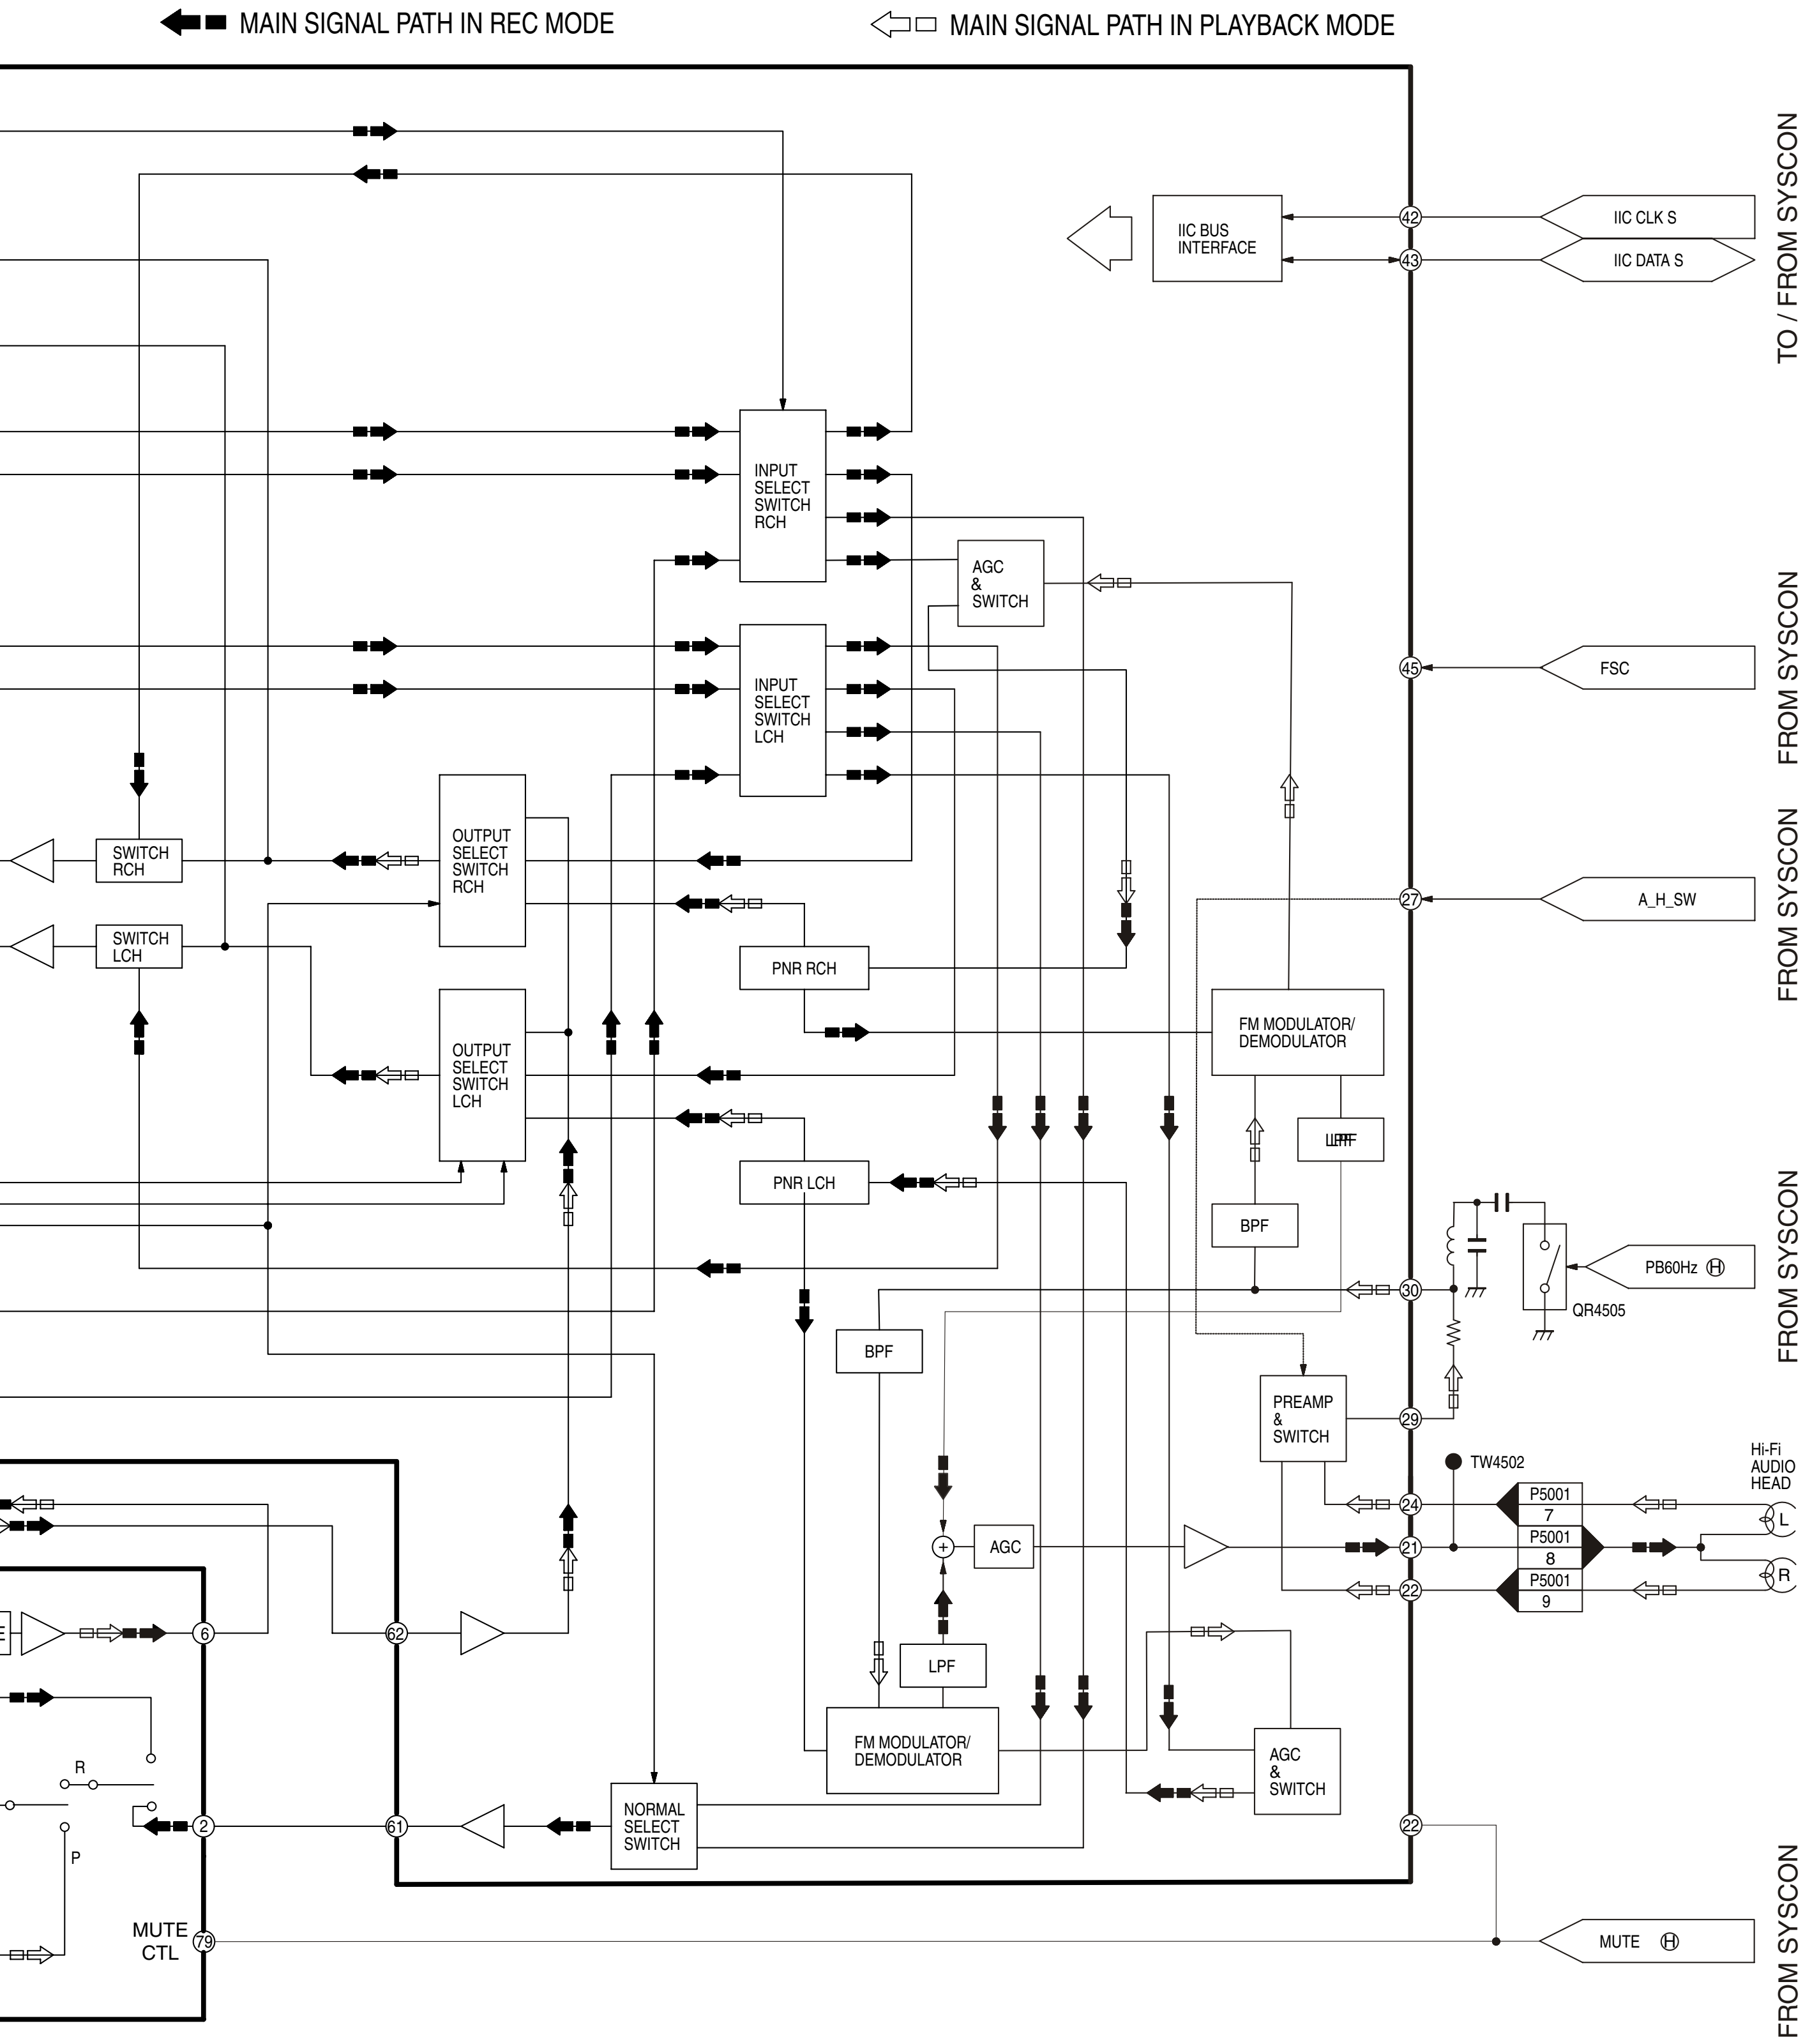
MAIN SIGNAL PATH IN REC MODE
MAIN SIGNAL PATH IN PLAYBACK MODE
IIC BUS INTERFACE
42
43
IIC CLK S
IIC DATA S
TO / FROM SYSCON
INPUT SELECT SWITCH RCH
AGC & SWITCH
INPUT SELECT SWITCH LCH
45
FSC
FROM SYSCON
SWITCH RCH
OUTPUT SELECT SWITCH RCH
SWITCH LCH
27
A_H_SW
FROM SYSCON
PNR RCH
FM MODULATOR/ DEMODULATOR
OUTPUT SELECT SWITCH LCH
LPF
PNR LCH
BPF
30
PB60Hz Ⓗ
QR4505
FROM SYSCON
BPF
PREAMP & SWITCH
29
TW4502
Hi-Fi AUDIO HEAD
P5001 7
24
L
AGC
21
P5001 8
P5001 9
22
R
6
62
LPF
R
FM MODULATOR/ DEMODULATOR
AGC & SWITCH
2
61
NORMAL SELECT SWITCH
P
22
MUTE CTL
79
MUTE Ⓗ
FROM SYSCON

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB AUDIO
BLOCK DIAGRAM

17.4. SYSCON & SERVO BLOCK DIAGRAM

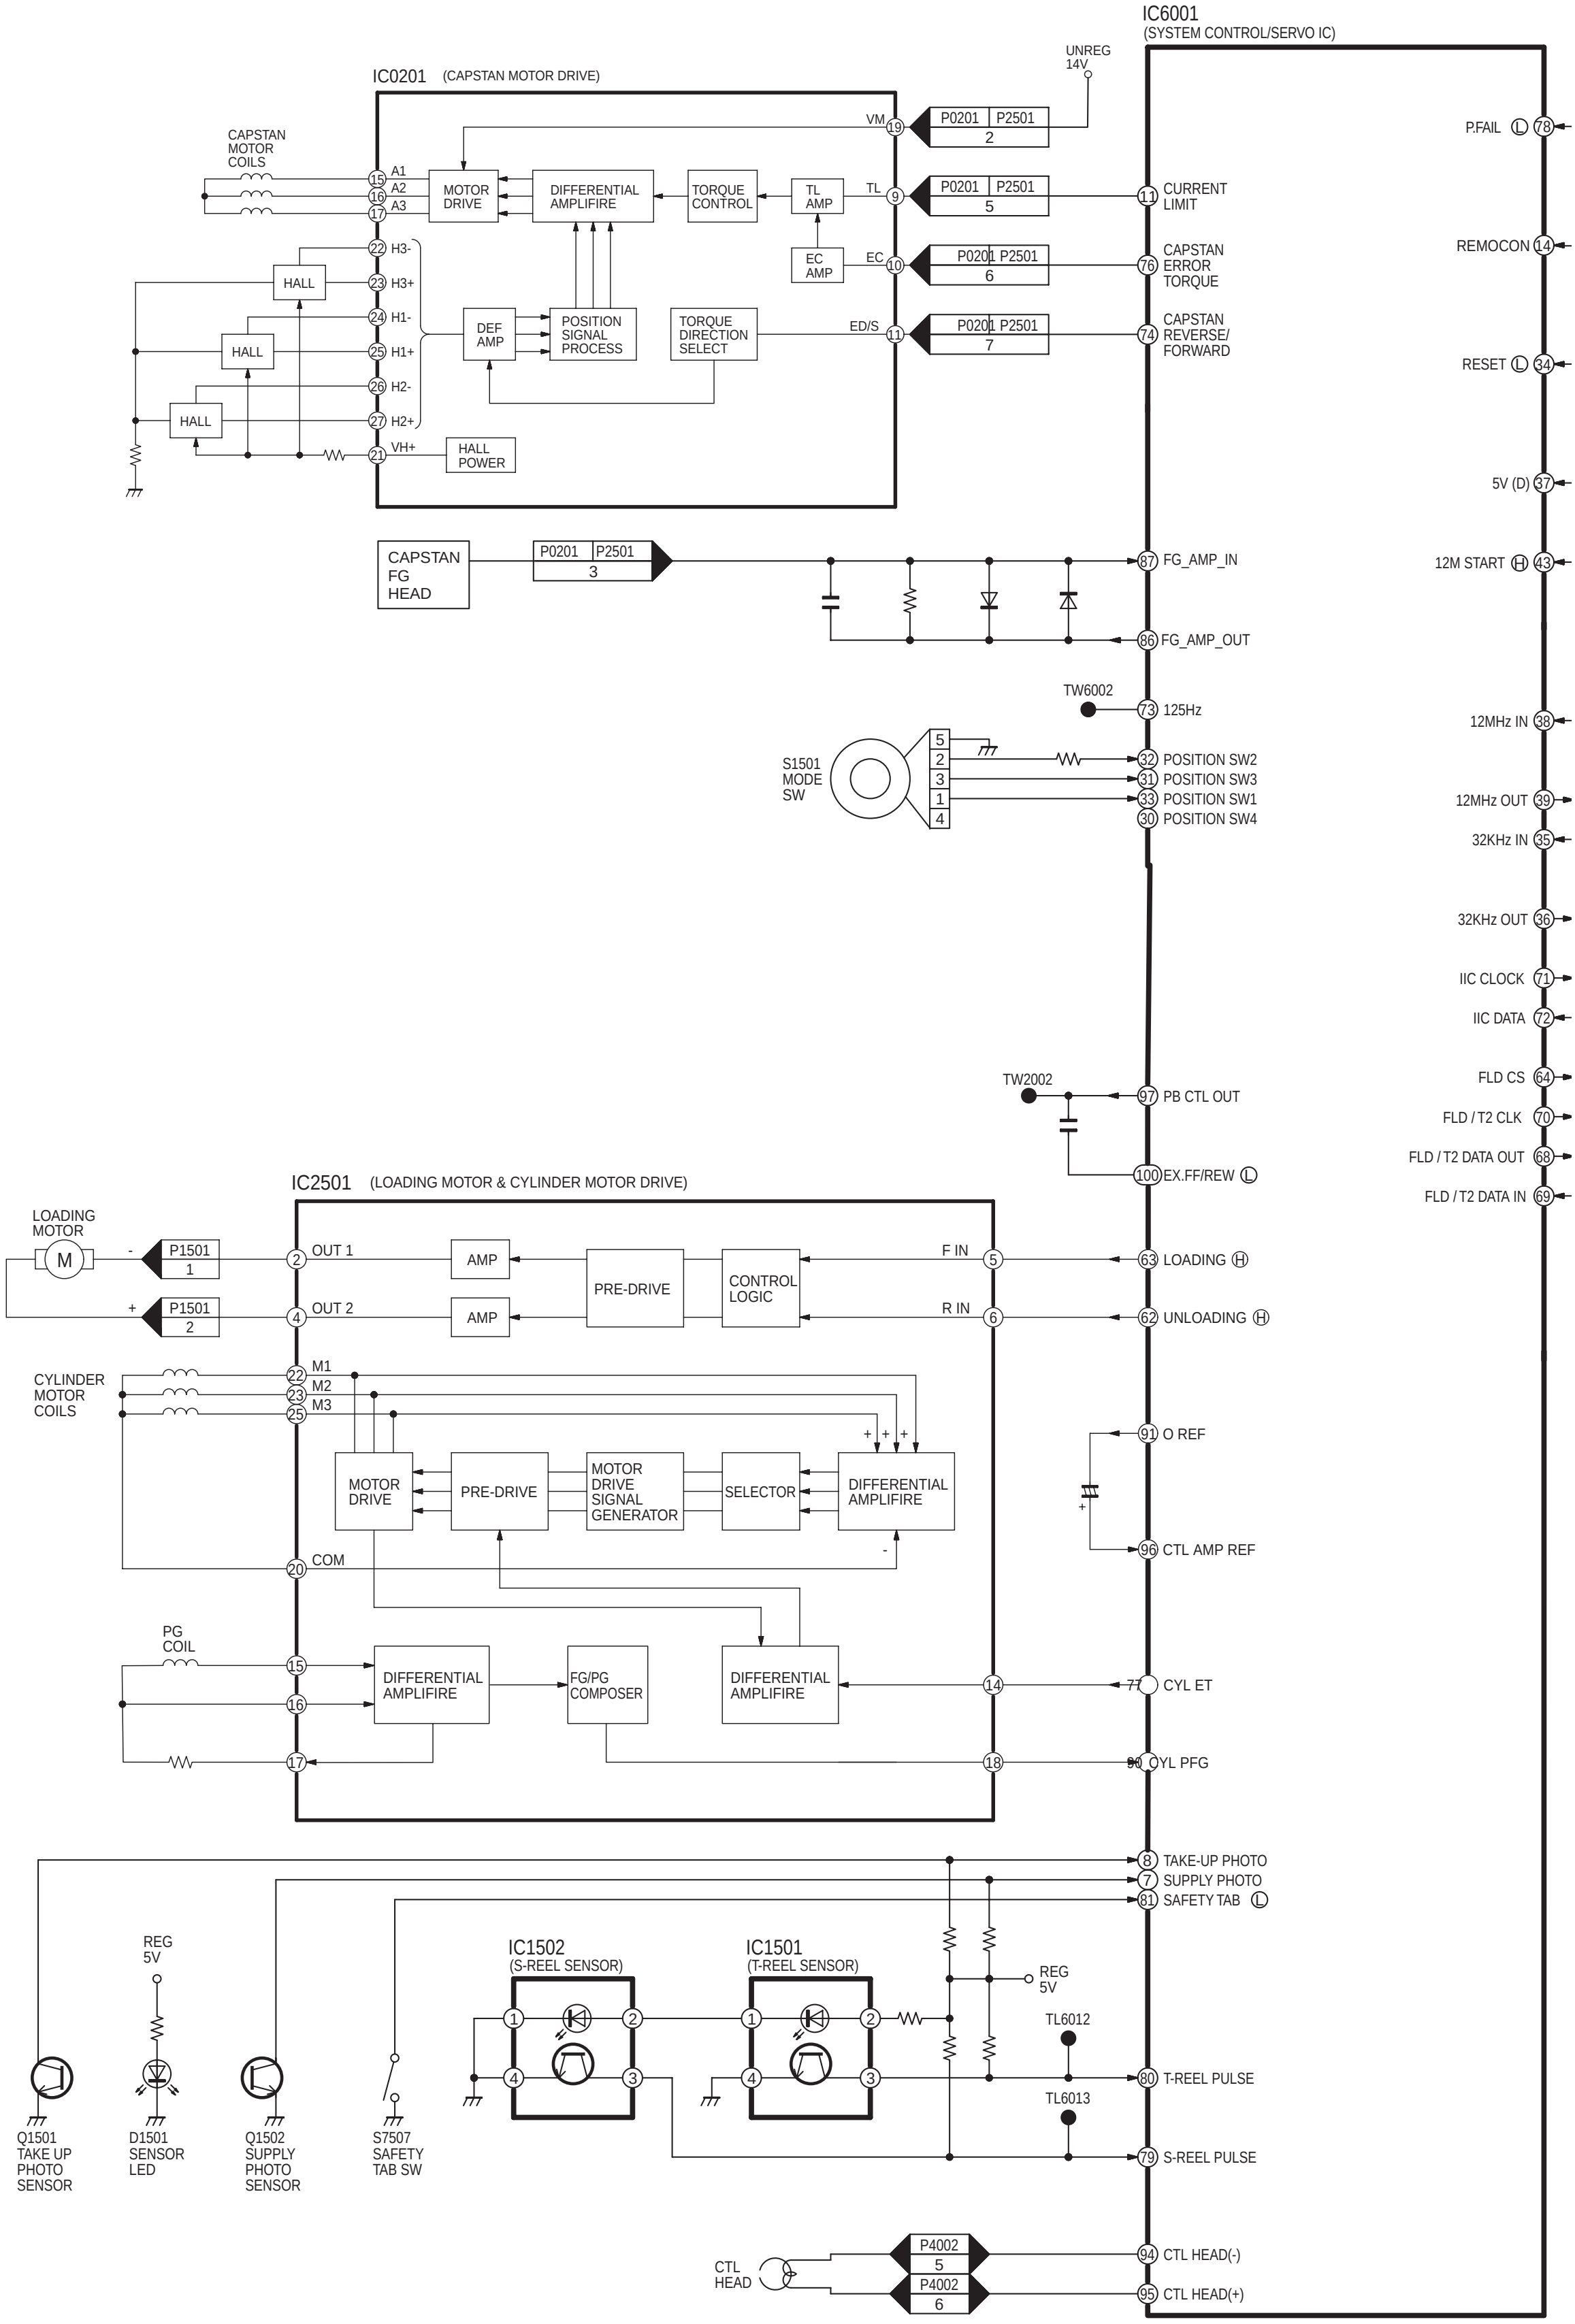

IC6001
(SYSTEM CONTROL/SERVO IC)
UNREG
14V
IC0201 (CAPSTAN MOTOR DRIVE)
CAPSTAN
MOTOR
COILS
A1
A2
A3
H3-
H3+
H1-
H1+
H2-
H2+
VH+
HALL
HALL
HALL
MOTOR
DRIVE
DIFFERENTIAL
AMPLIFIRE
TORQUE
CONTROL
TL
AMP
EC
AMP
DEF
AMP
POSITION
SIGNAL
PROCESS
TORQUE
DIRECTION
SELECT
HALL
POWER
VM
TL
EC
ED/S
P0201 P2501
2
5
6
7
CURRENT
LIMIT
CAPSTAN
ERROR
TORQUE
CAPSTAN
REVERSE/
FORWARD
P.FAIL Ⓛ 78
REMOCON 14
RESET Ⓛ 34
5V (D) 37
12M START Ⓗ 43
CAPSTAN
FG
HEAD
P0201 P2501
3
87 FG_AMP_IN
86 FG_AMP_OUT
TW6002
73 125Hz
12MHz IN 38
S1501
MODE
SW
5
2
3
1
4
32 POSITION SW2
31 POSITION SW3
33 POSITION SW1
30 POSITION SW4
12MHz OUT 39
32KHz IN 35
32KHz OUT 36
IIC CLOCK 71
IIC DATA 72
FLD CS 64
FLD / T2 CLK 70
FLD / T2 DATA OUT 68
FLD / T2 DATA IN 69
TW2002
97 PB CTL OUT
100 EX.FF/REW Ⓛ
IC2501 (LOADING MOTOR & CYLINDER MOTOR DRIVE)
LOADING
MOTOR
M
P1501
1
2
OUT 1
OUT 2
AMP
AMP
PRE-DRIVE
CONTROL
LOGIC
F IN
R IN
63 LOADING Ⓗ
62 UNLOADING Ⓗ
CYLINDER
MOTOR
COILS
M1
M2
M3
MOTOR
DRIVE
PRE-DRIVE
MOTOR
DRIVE
SIGNAL
GENERATOR
SELECTOR
DIFFERENTIAL
AMPLIFIRE
COM
91 O REF
96 CTL AMP REF
PG
COIL
DIFFERENTIAL
AMPLIFIRE
FG/PG
COMPOSER
DIFFERENTIAL
AMPLIFIRE
77 CYL ET
90 CYL PFG
8 TAKE-UP PHOTO
7 SUPPLY PHOTO
81 SAFETY TAB Ⓛ
REG
5V
IC1502
(S-REEL SENSOR)
IC1501
(T-REEL SENSOR)
REG
5V
TL6012
TL6013
80 T-REEL PULSE
79 S-REEL PULSE
Q1501
TAKE UP
PHOTO
SENSOR
D1501
SENSOR
LED
Q1502
SUPPLY
PHOTO
SENSOR
S7507
SAFETY
TAB SW
CTL
HEAD
P4002
5
6
94 CTL HEAD(-)
95 CTL HEAD(+)

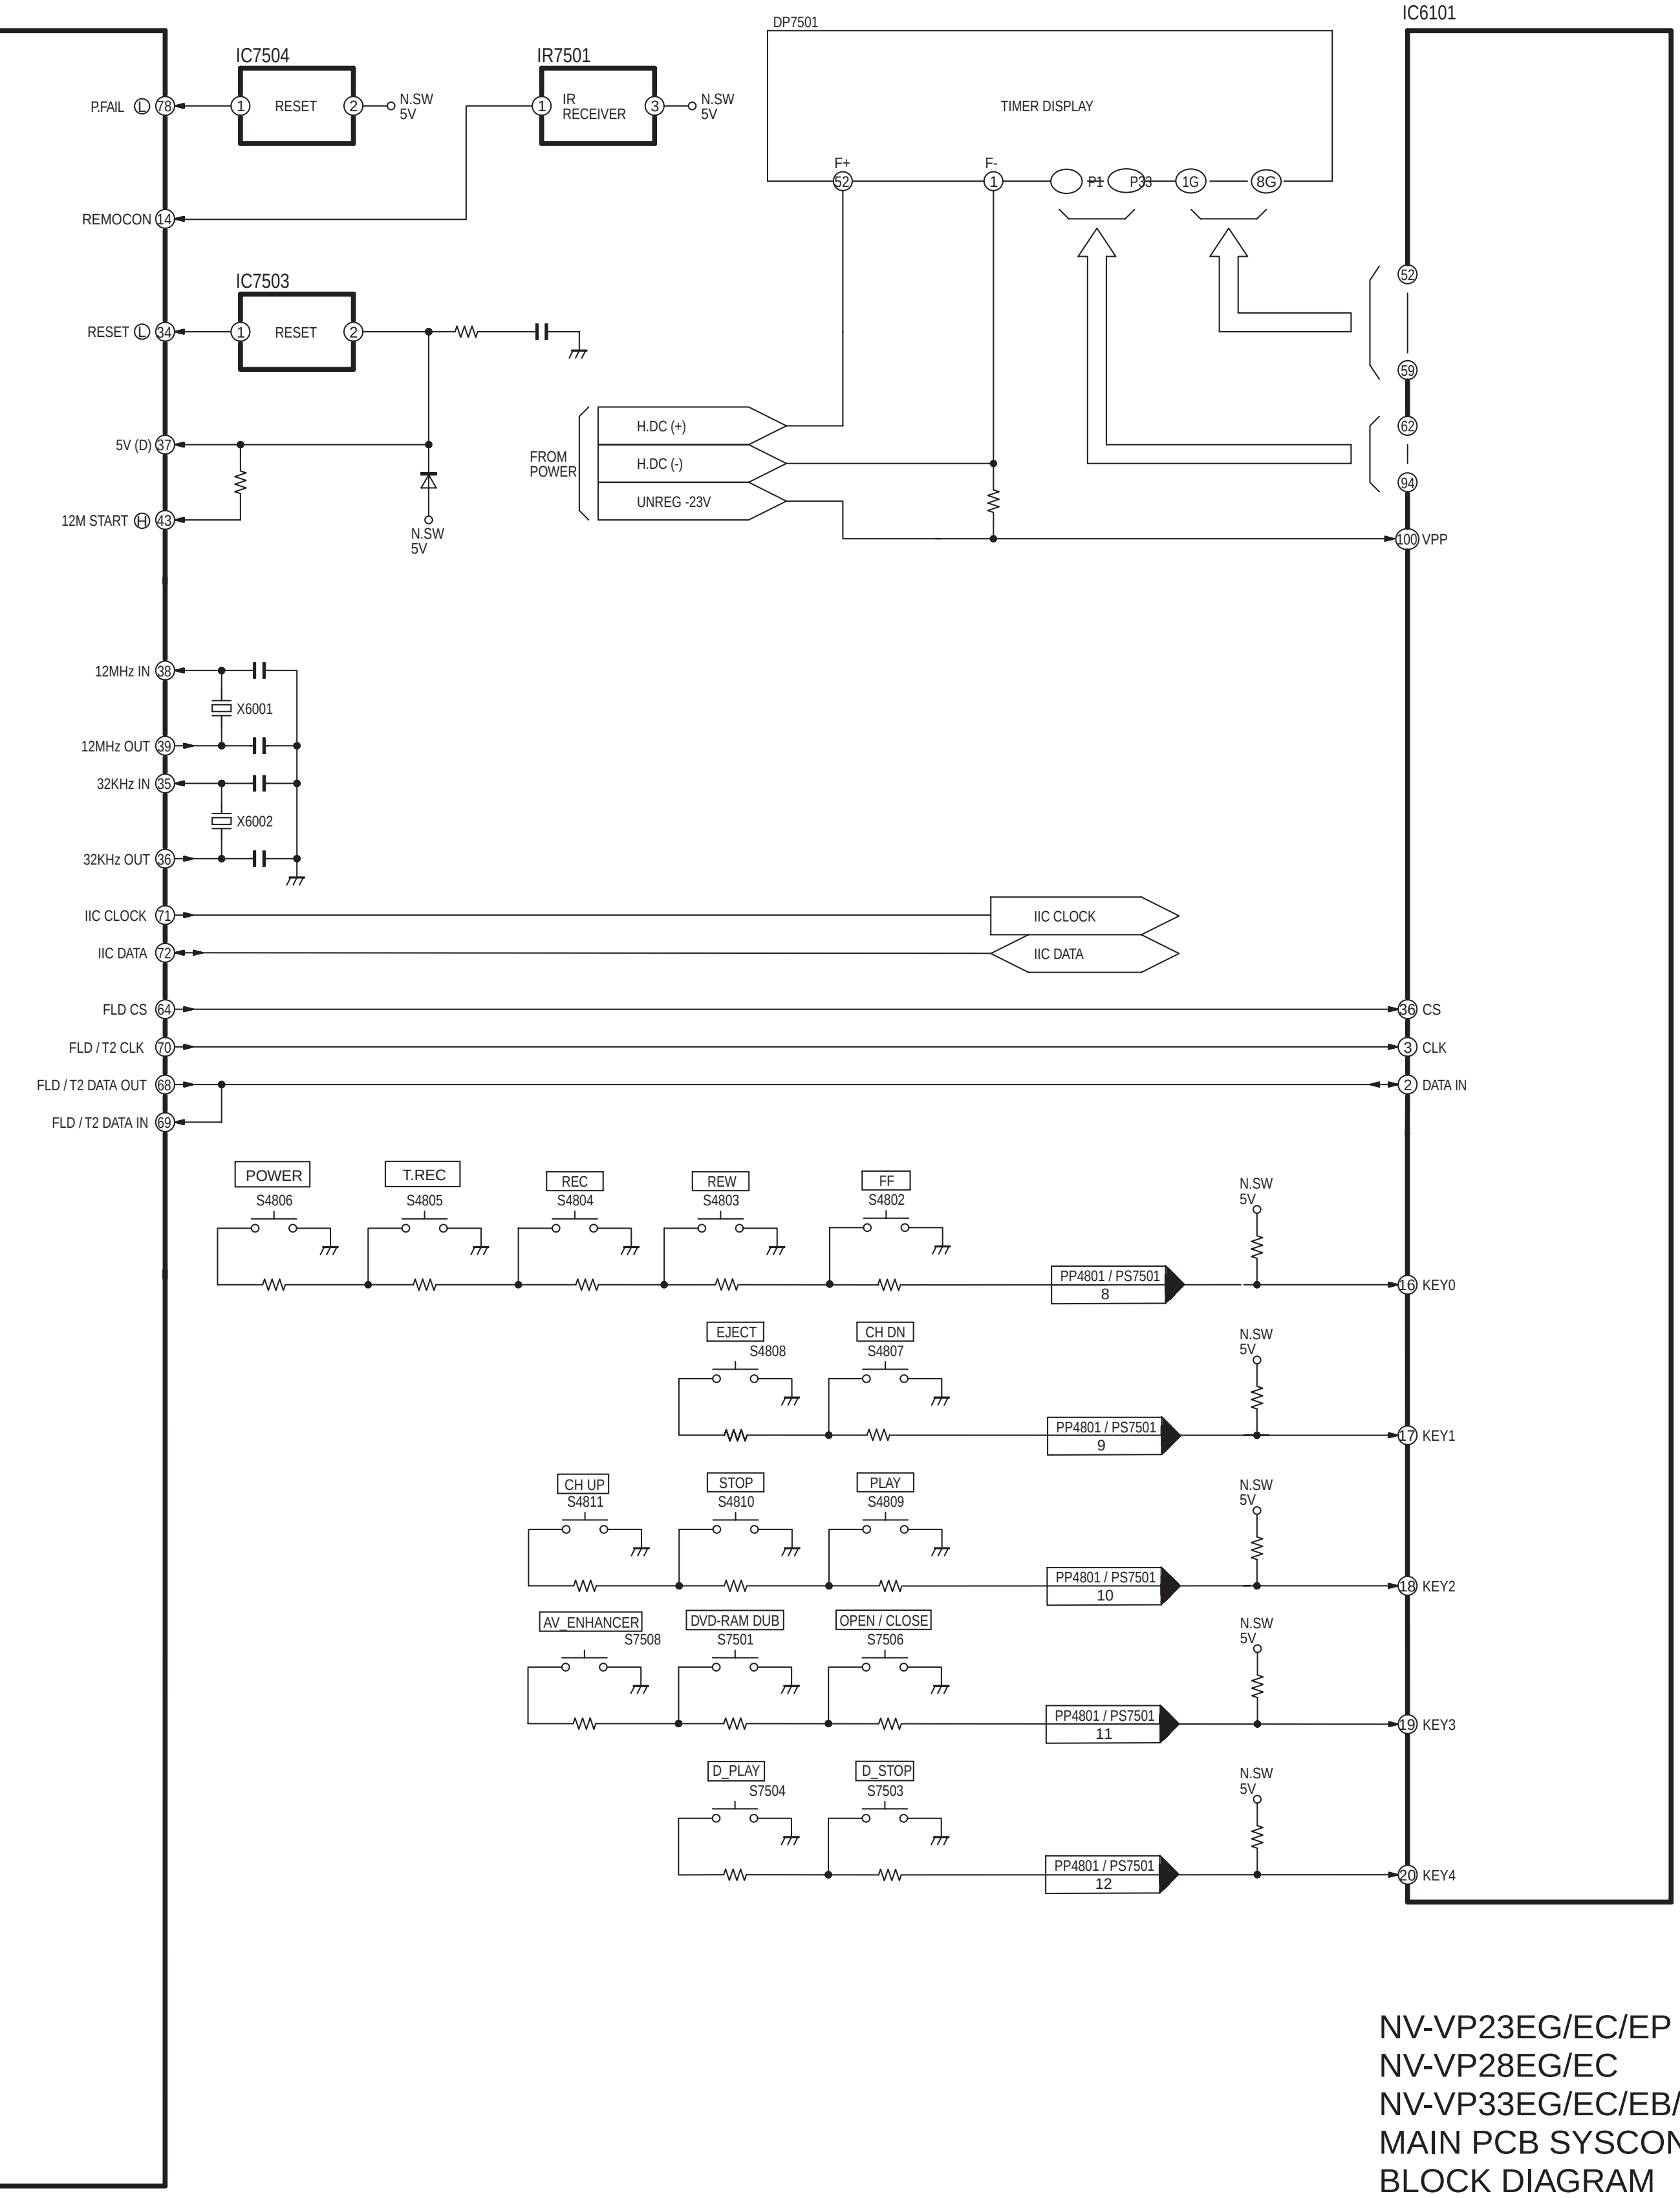
IC7504
RESET
N.SW 5V
IR7501
IR RECEIVER
N.SW 5V
DP7501
TIMER DISPLAY
F+
52
F-
1
P1
P33
1G
8G
IC6101
P.FAIL Ⓛ 78
REMOCON 14
IC7503
RESET
RESET Ⓛ 34
5V (D) 37
12M START Ⓗ 43
N.SW 5V
FROM POWER
H.DC (+)
H.DC (-)
UNREG -23V
52
59
62
94
100 VPP
12MHz IN 38
X6001
12MHz OUT 39
32KHz IN 35
X6002
32KHz OUT 36
IIC CLOCK 71
IIC DATA 72
IIC CLOCK
IIC DATA
FLD CS 64
FLD / T2 CLK 70
FLD / T2 DATA OUT 68
FLD / T2 DATA IN 69
36 CS
3 CLK
2 DATA IN
POWER
S4806
T.REC
S4805
REC
S4804
REW
S4803
FF
S4802
N.SW 5V
PP4801 / PS7501
8
16 KEY0
EJECT
S4808
CH DN
S4807
N.SW 5V
PP4801 / PS7501
9
17 KEY1
CH UP
S4811
STOP
S4810
PLAY
S4809
N.SW 5V
PP4801 / PS7501
10
18 KEY2
AV_ENHANCER
S7508
DVD-RAM DUB
S7501
OPEN / CLOSE
S7506
N.SW 5V
PP4801 / PS7501
11
19 KEY3
D_PLAY
S7504
D_STOP
S7503
N.SW 5V
PP4801 / PS7501
12
20 KEY4

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB SYSCON & SERVO
BLOCK DIAGRAM
]

17.5. DVD VIDEO BLOCK DIAGRAM

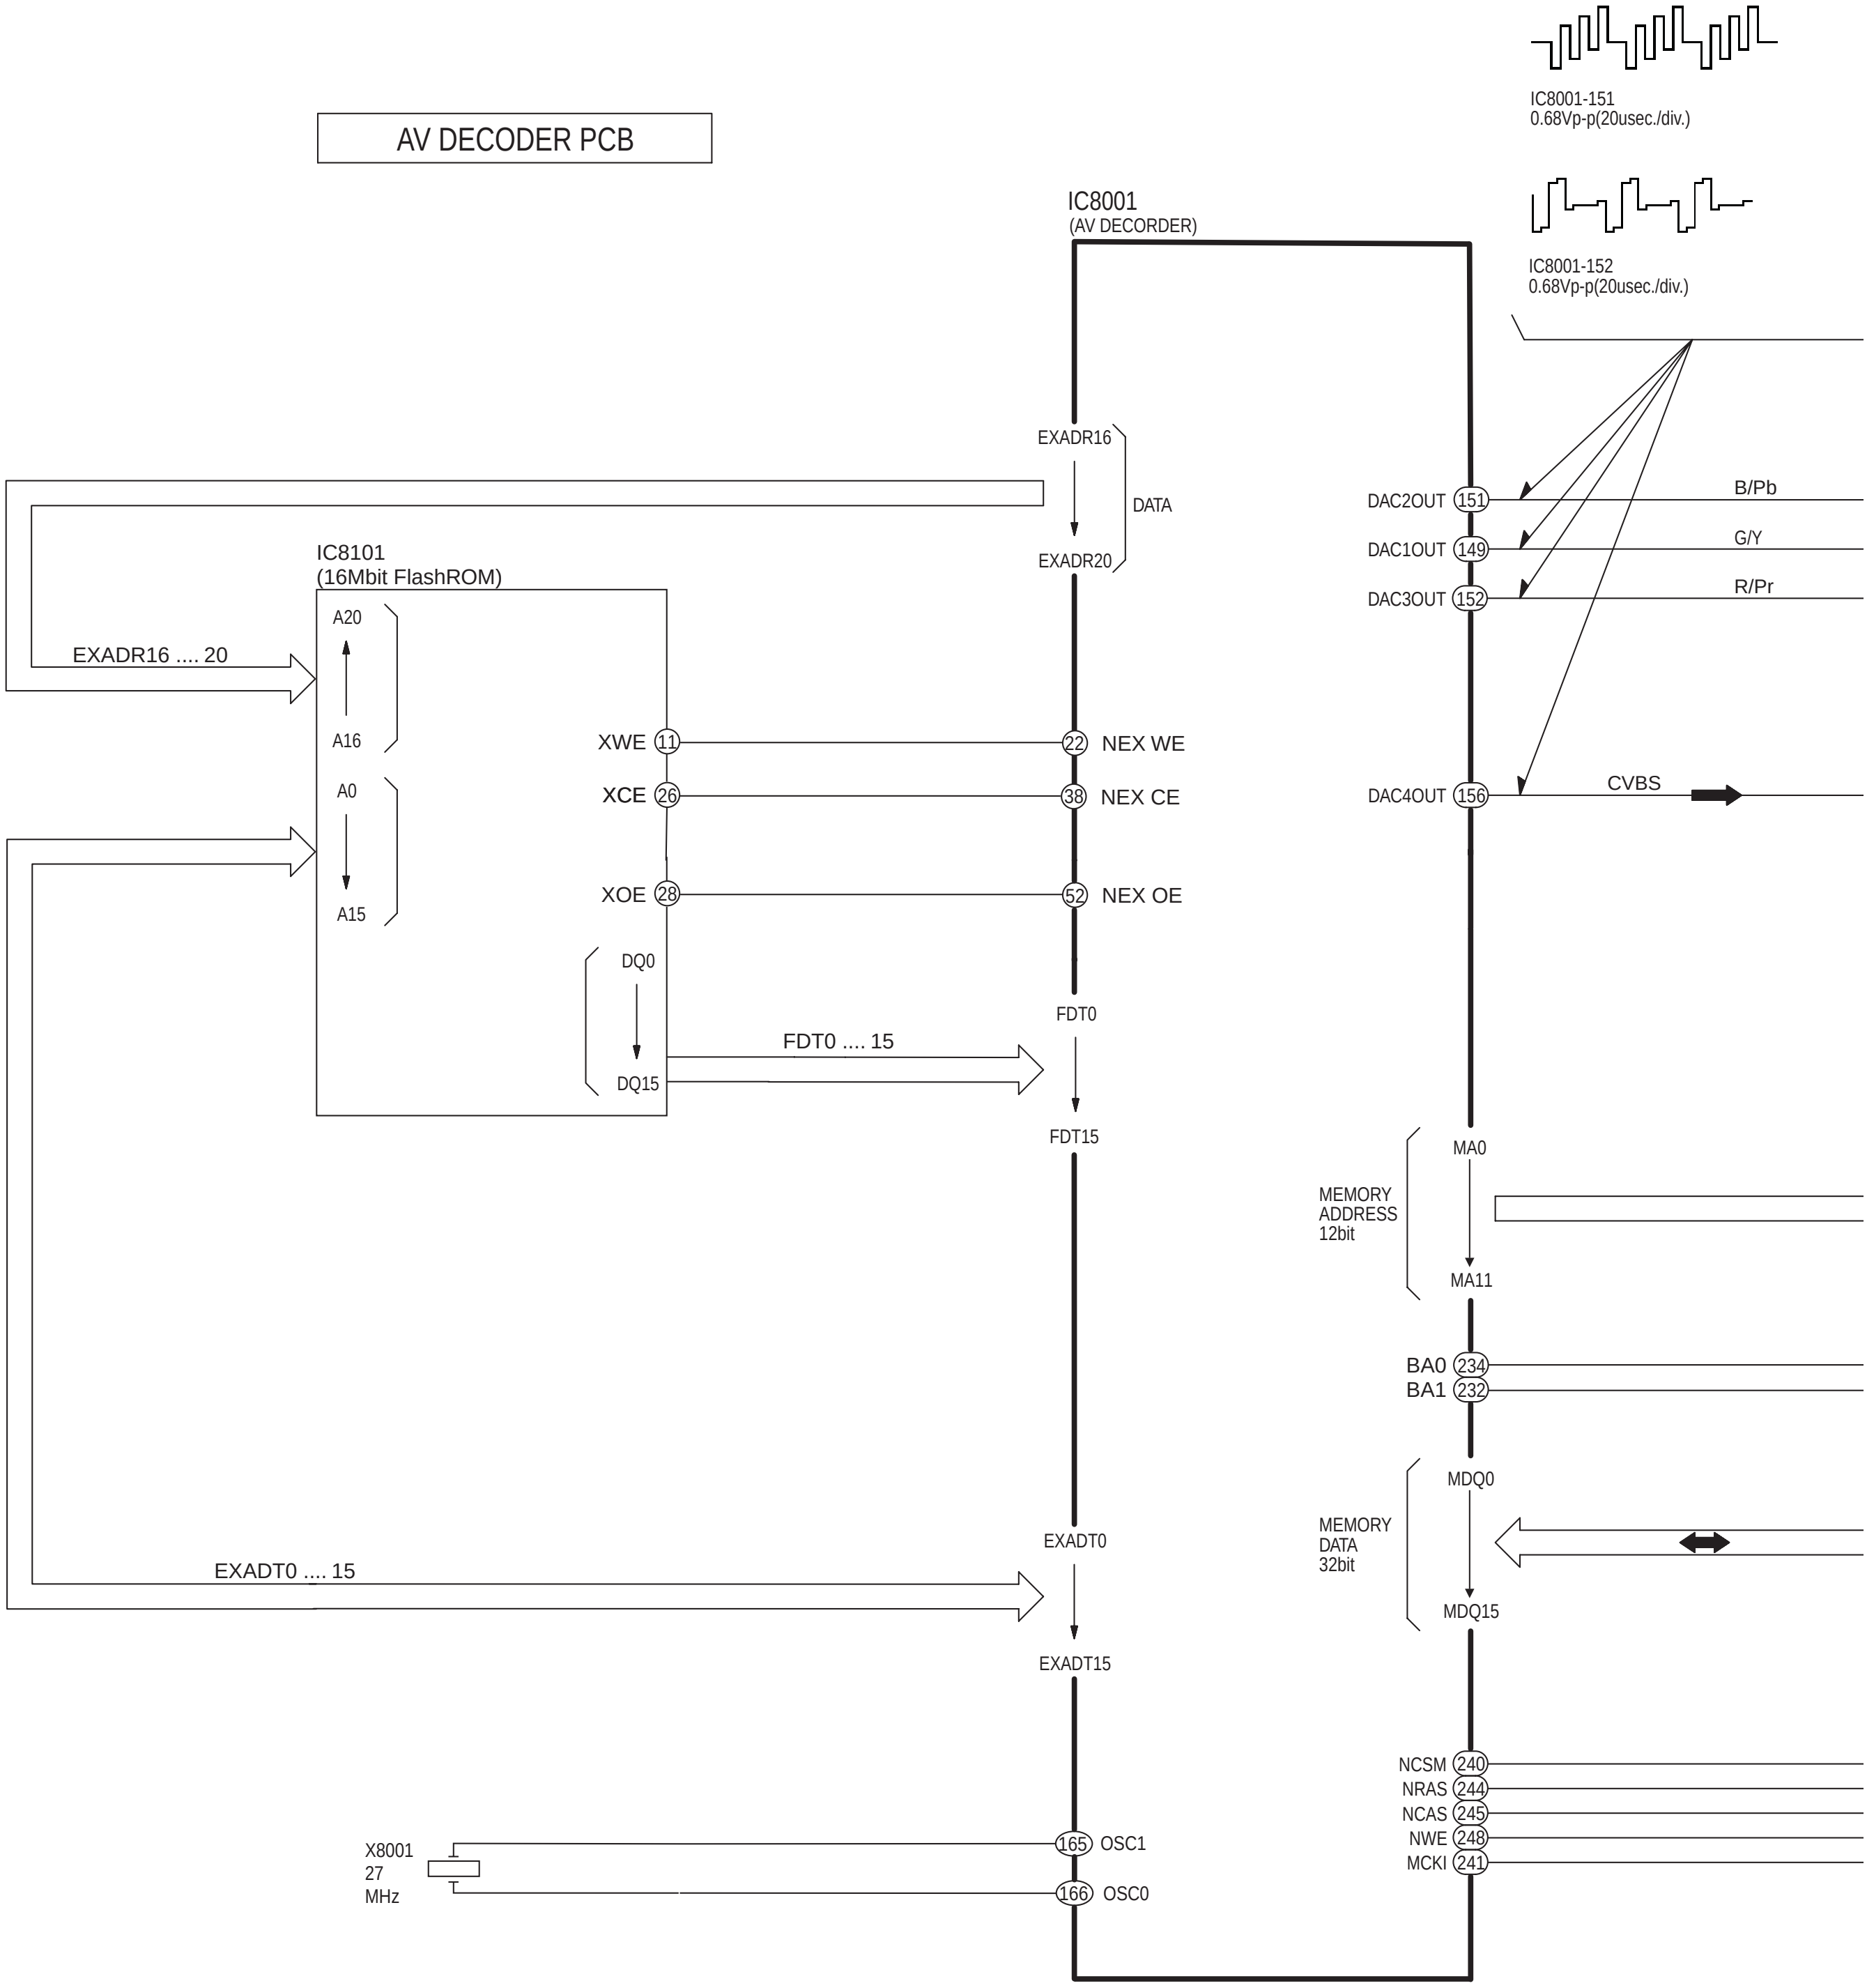
IC8001-151
0.68Vp-p(20usec./div.)
IC8001-152
0.68Vp-p(20usec./div.)
AV DECODER PCB
IC8001
(AV DECORDER)
EXADR16
DATA
EXADR20
IC8101
(16Mbit FlashROM)
A20
A16
A0
A15
EXADR16 20
XWE 11
XCE 26
XOE 28
DQ0
DQ15
FDT0 15
22 NEX WE
38 NEX CE
52 NEX OE
FDT0
FDT15
DAC2OUT 151
DAC1OUT 149
DAC3OUT 152
DAC4OUT 156
B/Pb
G/Y
R/Pr
CVBS
MA0
MEMORY
ADDRESS
12bit
MA11
BA0 234
BA1 232
MDQ0
MEMORY
DATA
32bit
MDQ15
EXADT0
EXADT0 15
EXADT15
NCSM 240
NRAS 244
NCAS 245
NWE 248
MCKI 241
X8001
27
MHz
165 OSC1
166 OSC0

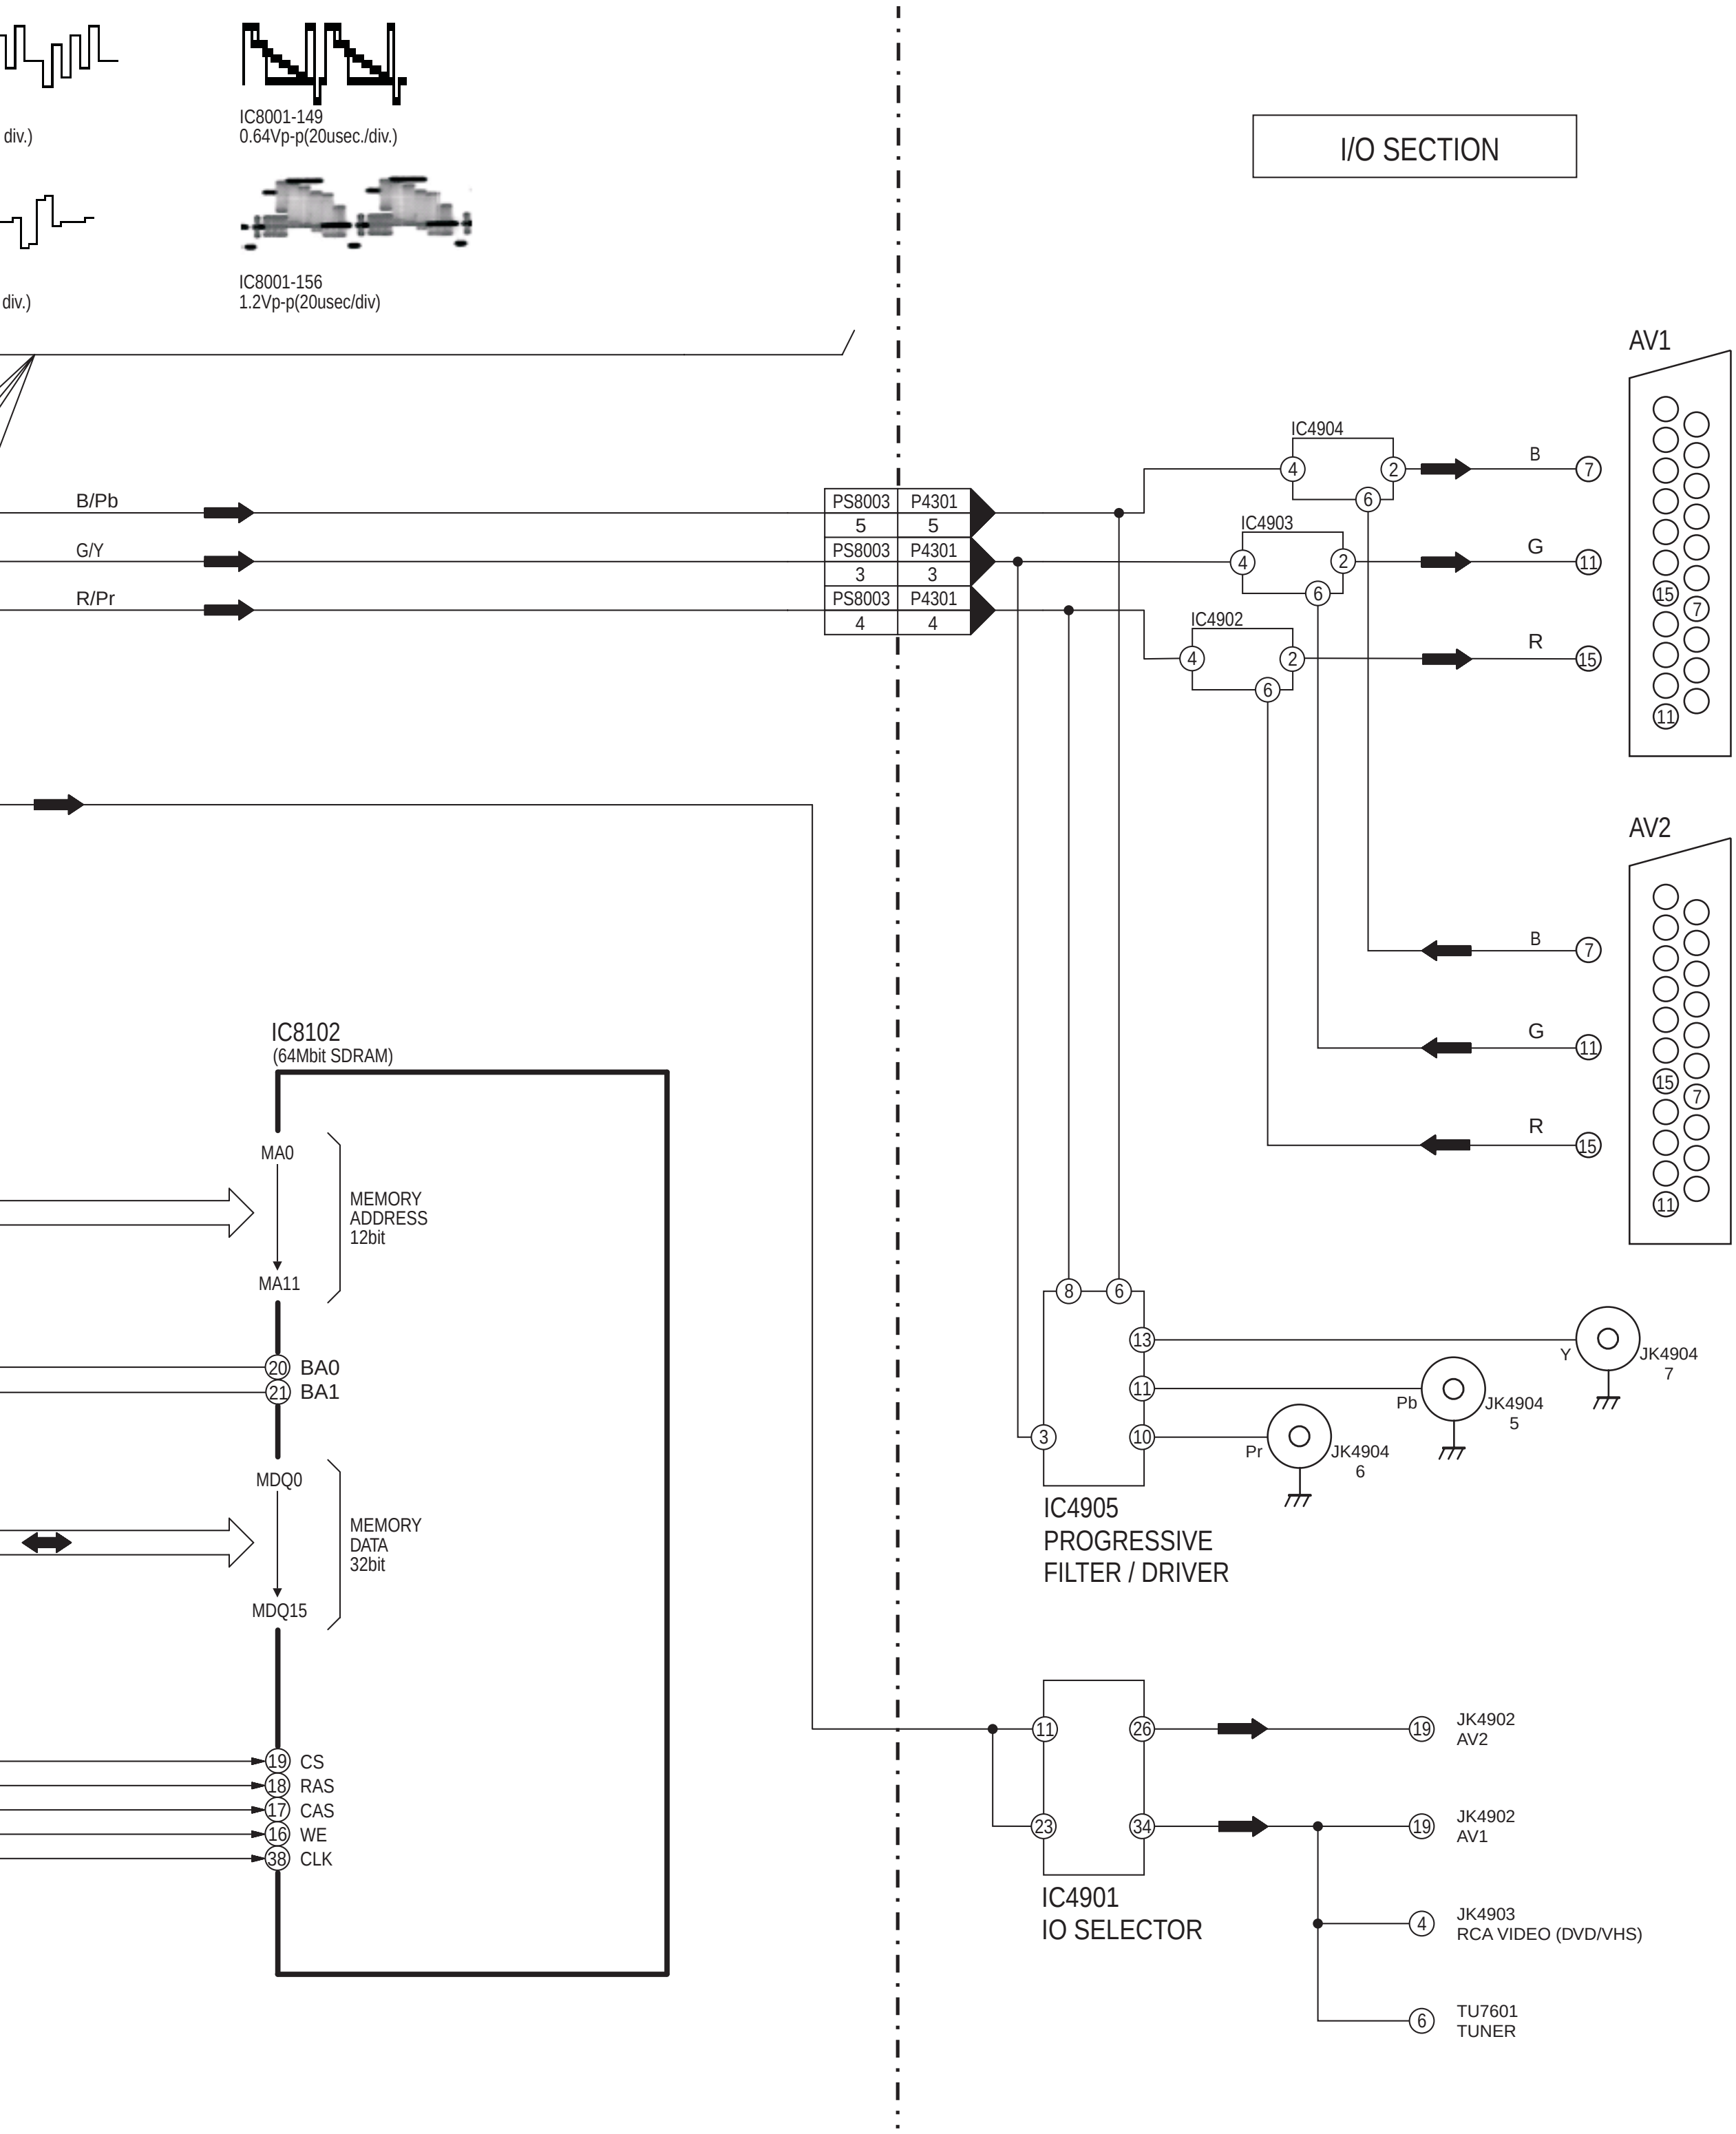
div.)
IC8001-149
0.64Vp-p(20usec./div.)
div.)
IC8001-156
1.2Vp-p(20usec/div)
I/O SECTION
AV1
AV2
B/Pb
G/Y
R/Pr
PS8003 5
P4301 5
PS8003 3
P4301 3
PS8003 4
P4301 4
IC4904
IC4903
IC4902
B
G
R
IC8102
(64Mbit SDRAM)
MA0
MA11
MEMORY ADDRESS 12bit
BA0
BA1
MDQ0
MDQ15
MEMORY DATA 32bit
CS
RAS
CAS
WE
CLK
Y
JK4904 7
Pb
JK4904 5
Pr
JK4904 6
IC4905
PROGRESSIVE FILTER / DRIVER
IC4901
IO SELECTOR
JK4902 AV2
JK4902 AV1
JK4903 RCA VIDEO (DVD/VHS)
TU7601 TUNER

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL
DVD VIDEO
BLOCK DIAGRAM

17.6. DVD OVERALL BLOCK DIAGRAM

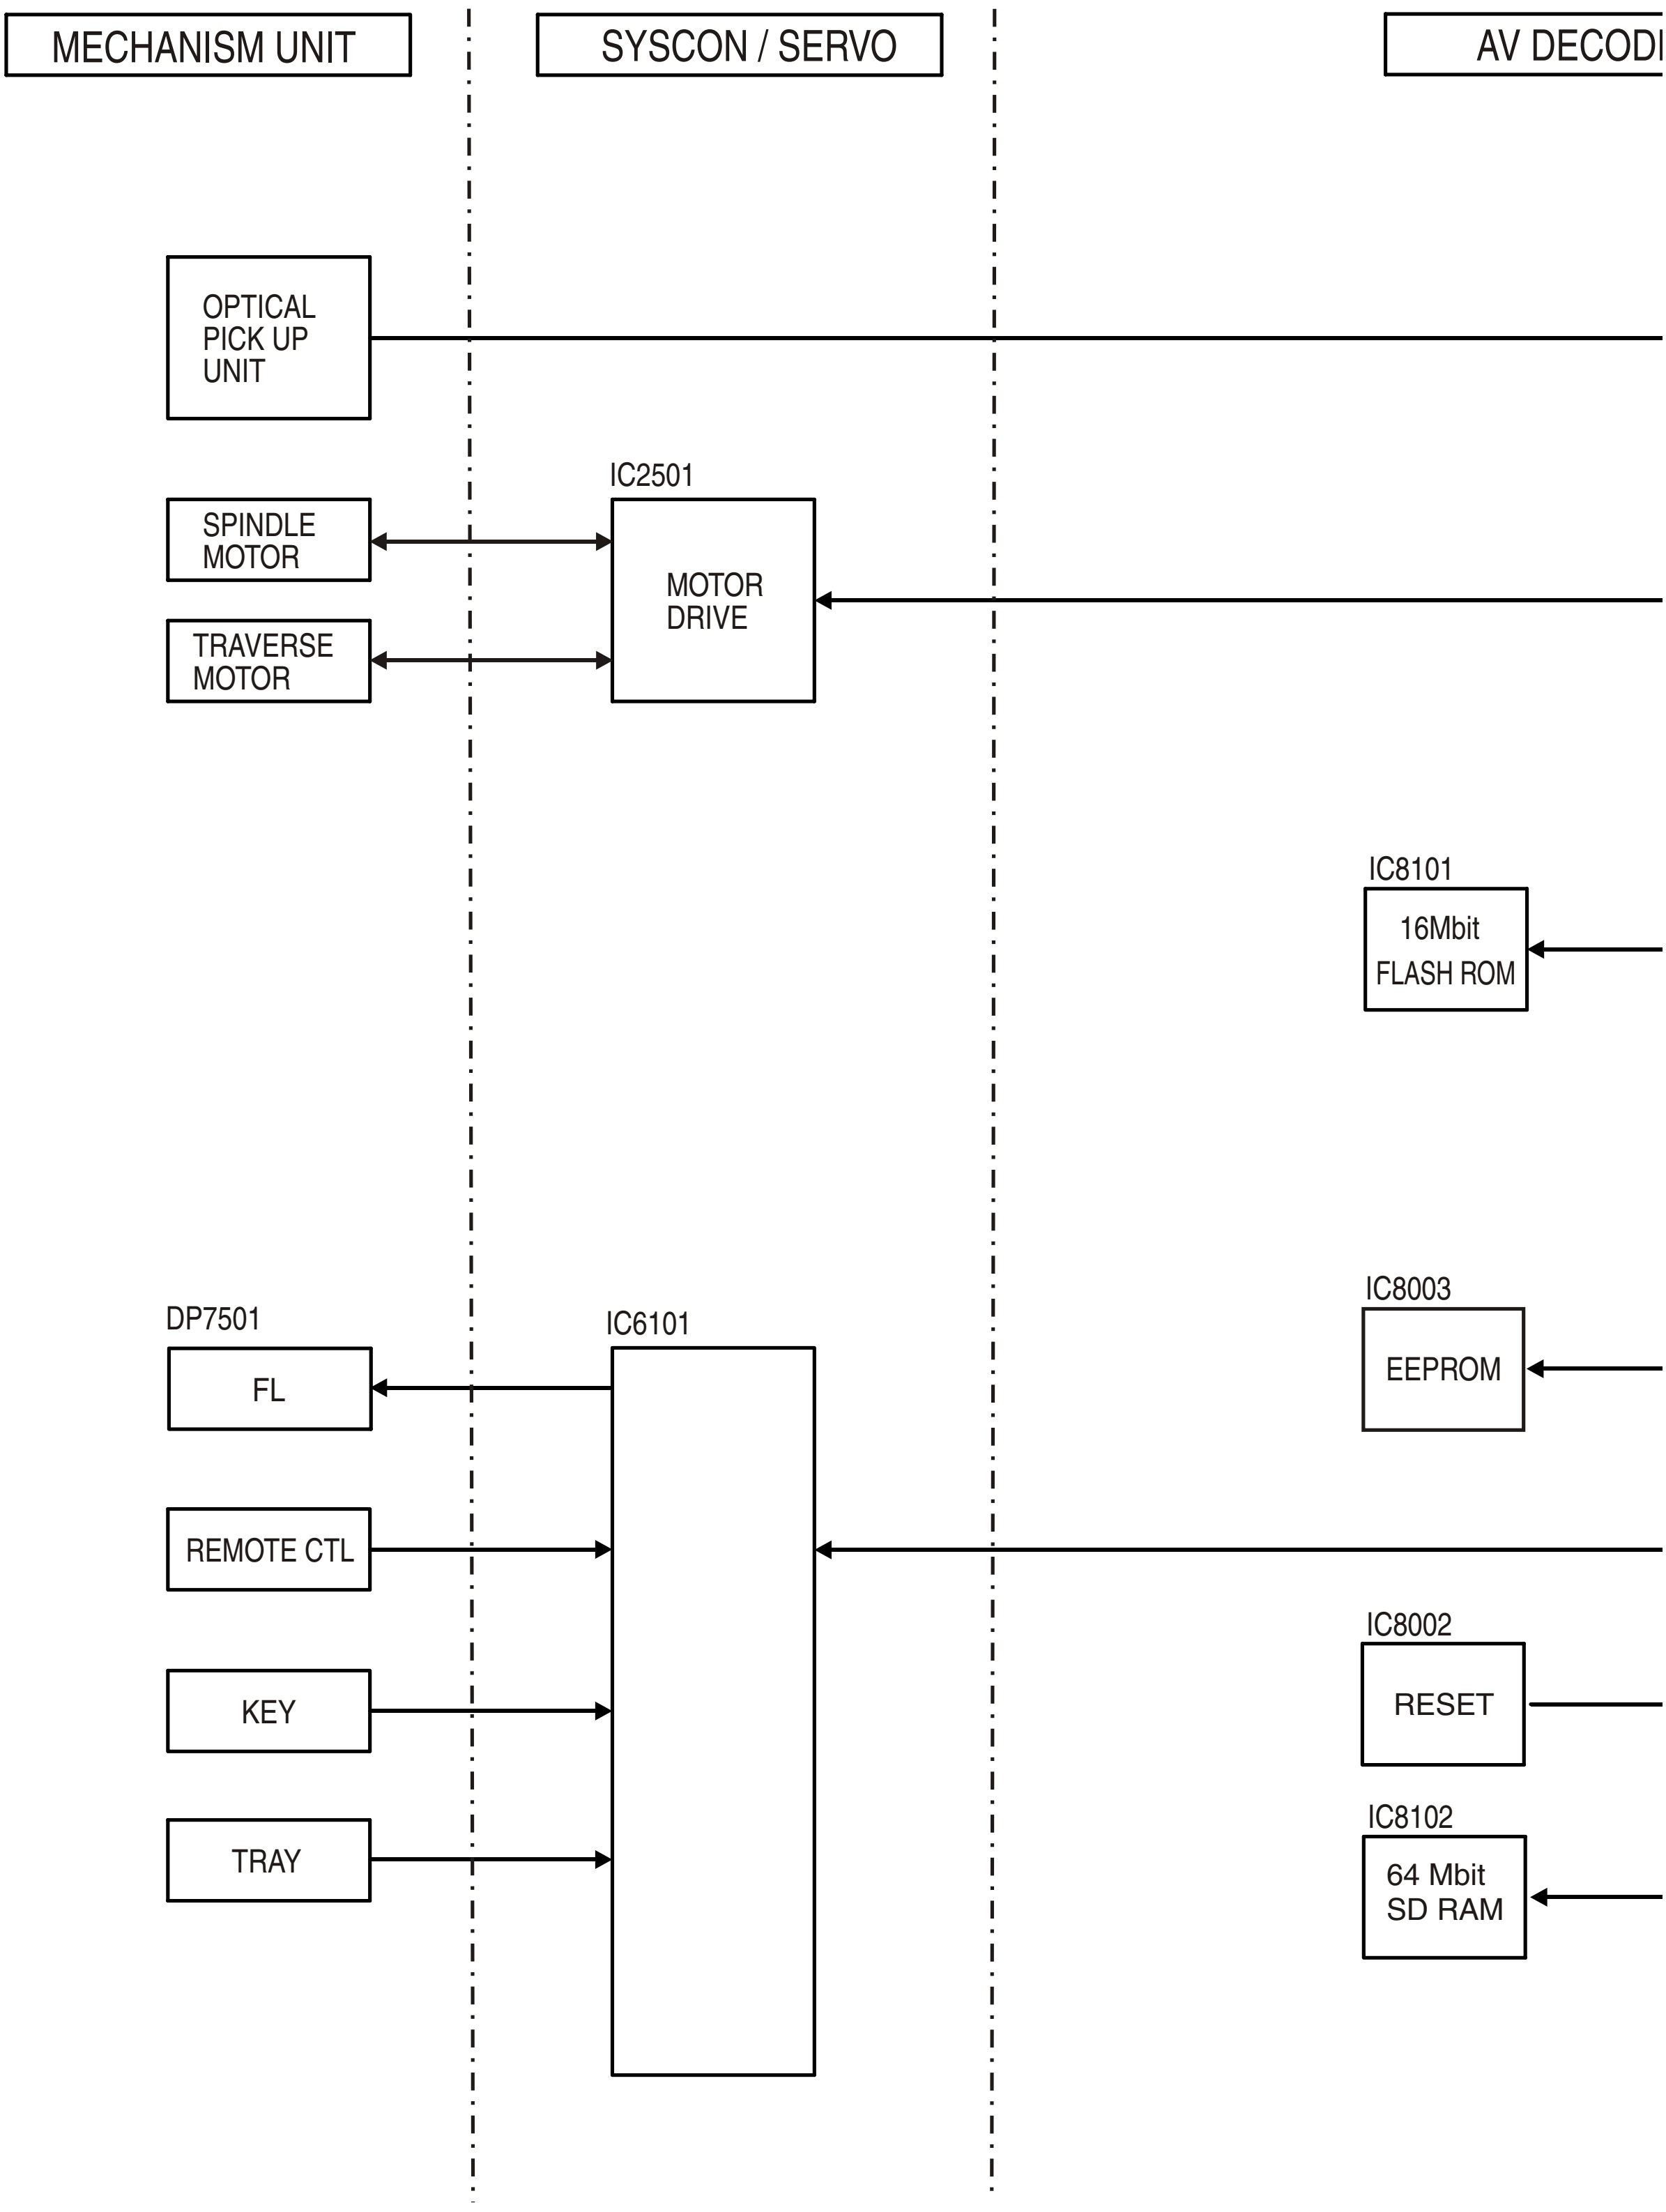
MECHANISM UNIT
SYSCON / SERVO
AV DECODI
OPTICAL PICK UP UNIT
IC2501
SPINDLE MOTOR
TRAVERSE MOTOR
MOTOR DRIVE
IC8101
16Mbit FLASH ROM
IC8003
EEPROM
DP7501
FL
IC6101
REMOTE CTL
KEY
TRAY
IC8002
RESET
IC8102
64 Mbit SD RAM

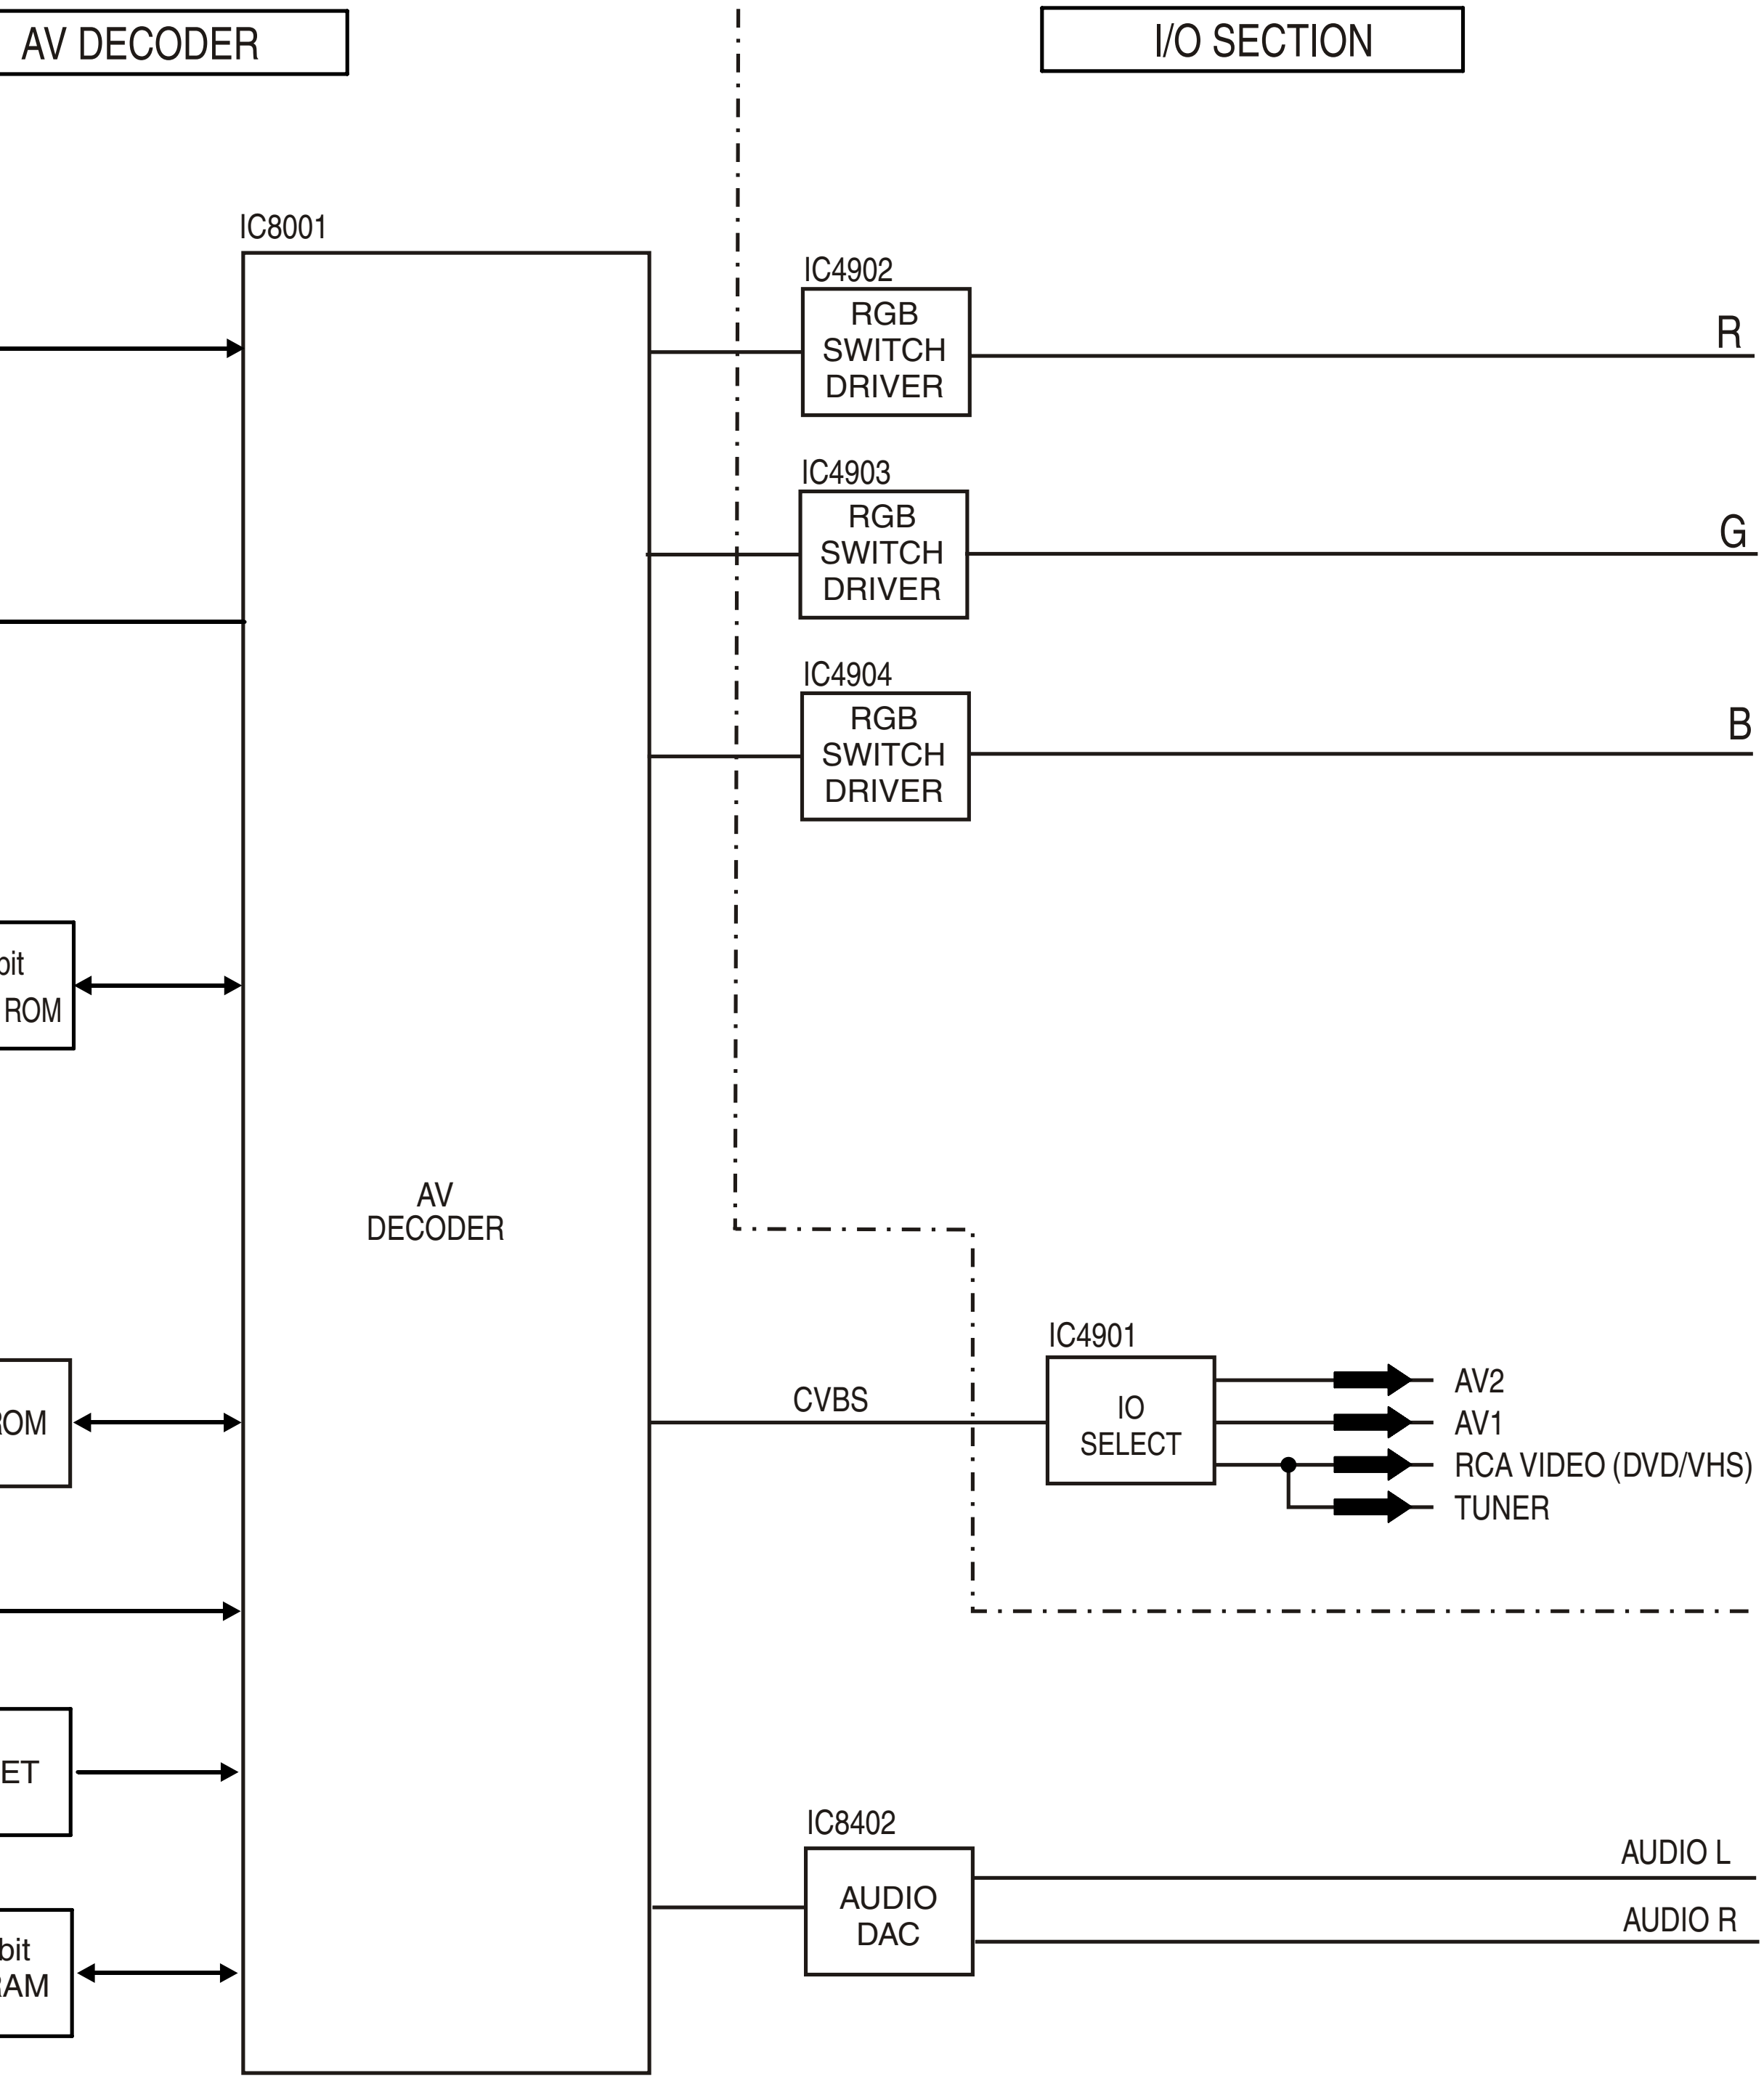
AV DECODER
I/O SECTION
IC8001
AV
DECODER
IC4902
RGB
SWITCH
DRIVER
R
IC4903
RGB
SWITCH
DRIVER
G
IC4904
RGB
SWITCH
DRIVER
B
bit
ROM
ROM
CVBS
IC4901
IO
SELECT
AV2
AV1
RCA VIDEO (DVD/VHS)
TUNER
ET
bit
AM
IC8402
AUDIO
DAC
AUDIO L
AUDIO R

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL
DVD OVERALL
BLOCK DIAGRAM

17.7. DVD SERVO BLOCK DIAGRAM

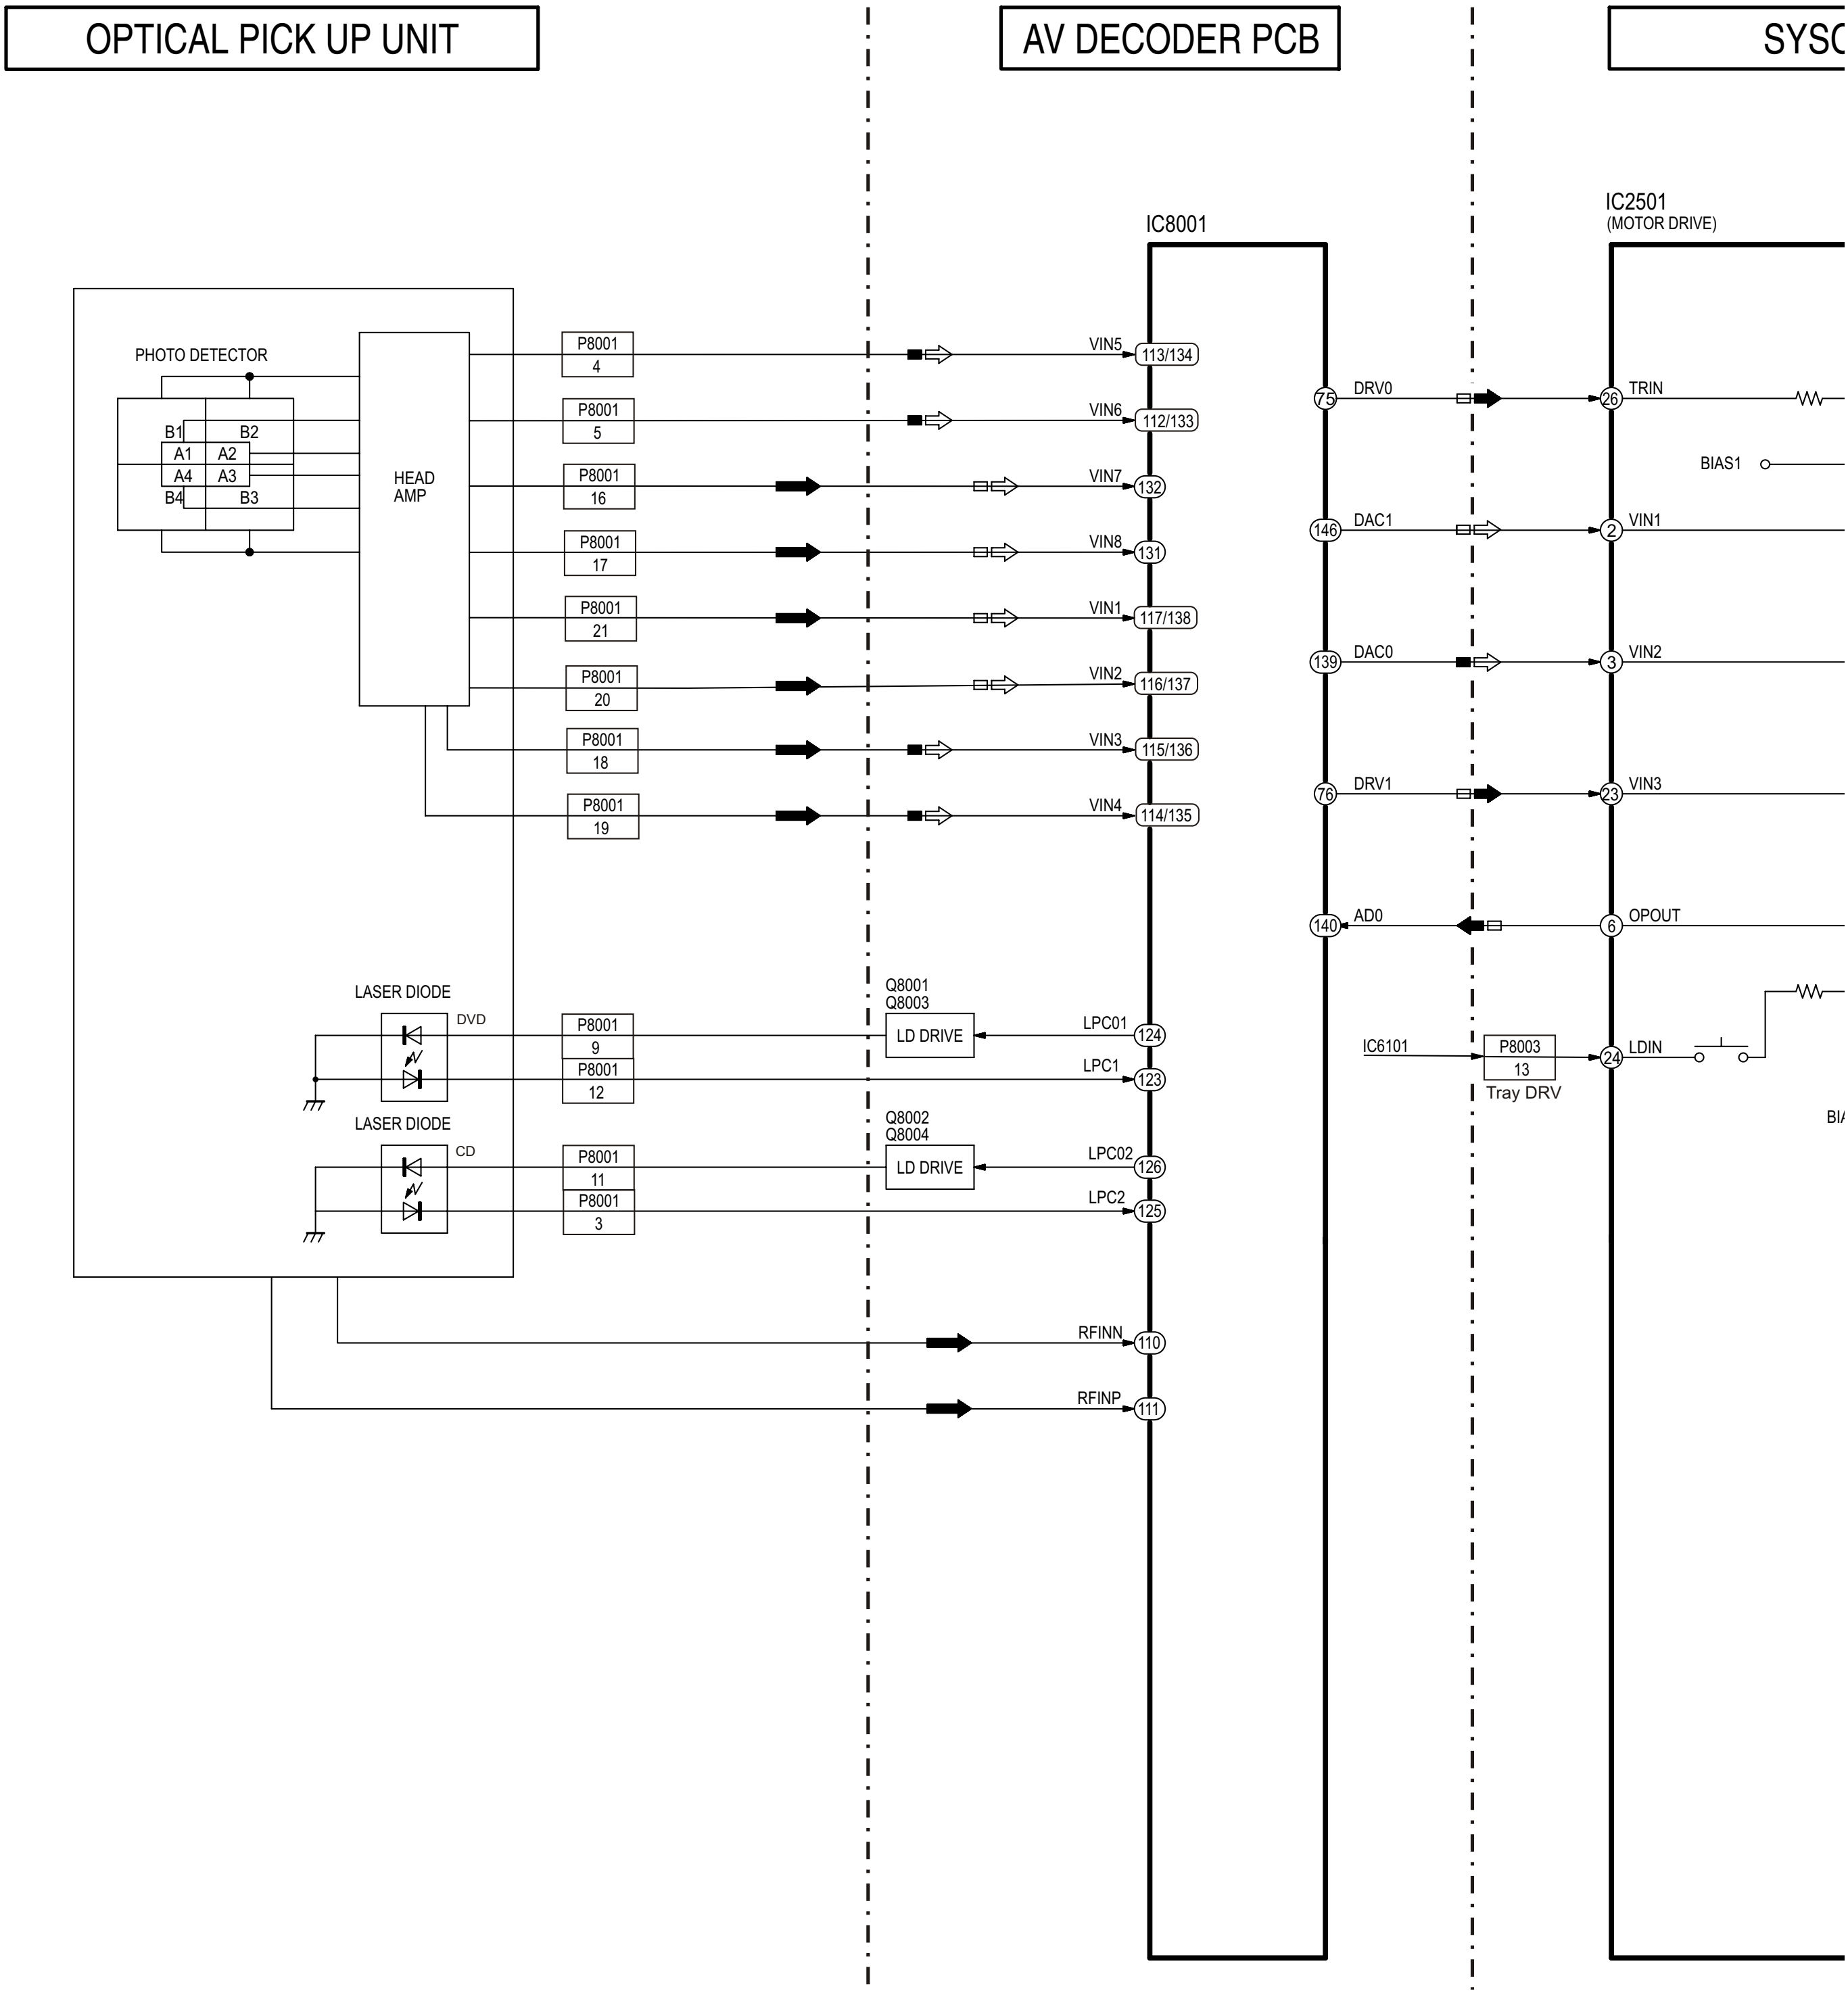
OPTICAL PICK UP UNIT
AV DECODER PCB
SYSC
IC8001
IC2501
(MOTOR DRIVE)
PHOTO DETECTOR
B1
B2
A1
A2
A4
A3
B4
B3
HEAD AMP
P8001 4
P8001 5
P8001 16
P8001 17
P8001 21
P8001 20
P8001 18
P8001 19
VIN5 113/134
VIN6 112/133
VIN7 132
VIN8 131
VIN1 117/138
VIN2 116/137
VIN3 115/136
VIN4 114/135
75 DRV0
146 DAC1
139 DAC0
76 DRV1
140 AD0
26 TRIN
BIAS1
2 VIN1
3 VIN2
23 VIN3
6 OPOUT
LASER DIODE
DVD
P8001 9
P8001 12
Q8001
Q8003
LD DRIVE
LPC01 124
LPC1 123
LASER DIODE
CD
P8001 11
P8001 3
Q8002
Q8004
LD DRIVE
LPC02 126
LPC2 125
IC6101
P8003 13
Tray DRV
24 LDIN
BI
RFINN 110
RFINP 111

SYSCON / SERVO

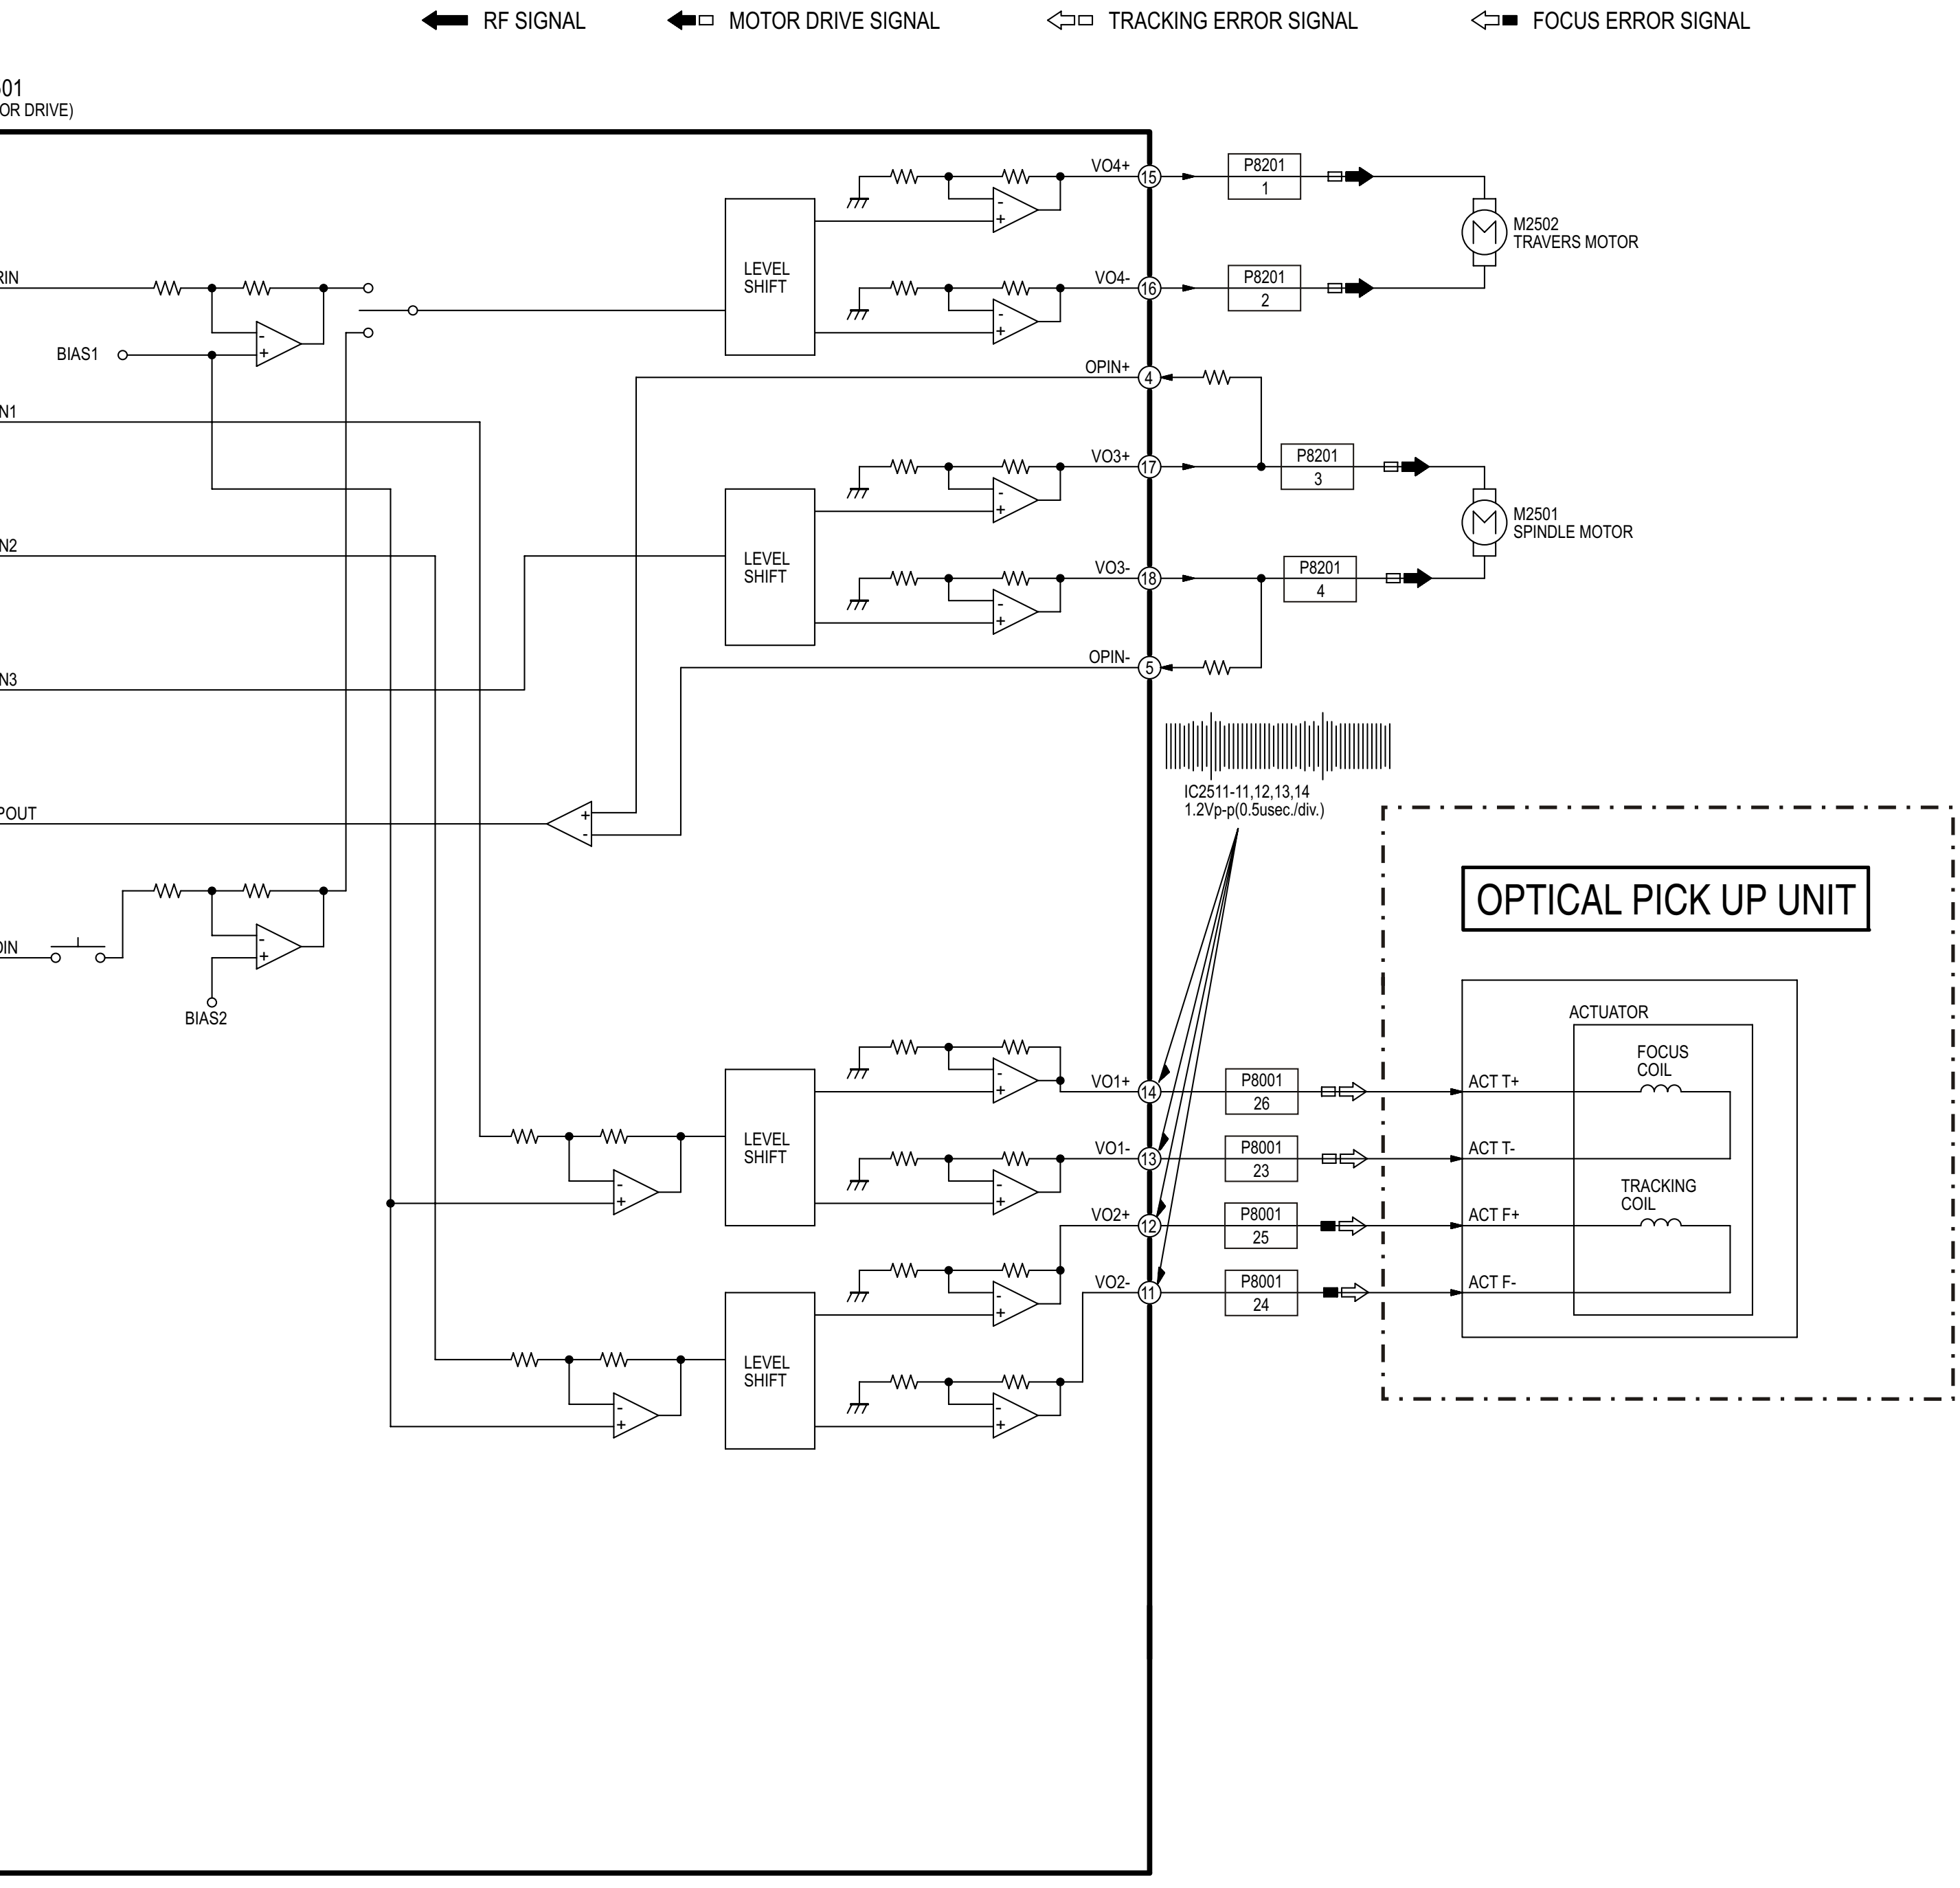
RF SIGNAL
MOTOR DRIVE SIGNAL
TRACKING ERROR SIGNAL
FOCUS ERROR SIGNAL
01
OR DRIVE)
RIN
BIAS1
N1
N2
N3
POUT
DIN
BIAS2
LEVEL SHIFT
LEVEL SHIFT
LEVEL SHIFT
LEVEL SHIFT
VO4+
15
VO4-
16
OPIN+
4
VO3+
17
VO3-
18
OPIN-
5
VO1+
14
VO1-
13
VO2+
12
VO2-
11
P8201 1
P8201 2
P8201 3
P8201 4
M2502
TRAVERS MOTOR
M2501
SPINDLE MOTOR
IC2511-11,12,13,14
1.2Vp-p(0.5usec./div.)
OPTICAL PICK UP UNIT
ACTUATOR
FOCUS COIL
TRACKING COIL
P8001 26
P8001 23
P8001 25
P8001 24
ACT T+
ACT T-
ACT F+
ACT F-

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
DVD SERVO SECTION
BLOCK DIAGRAM

17.8. DVD AUDIO BLOCK DIAGRAM

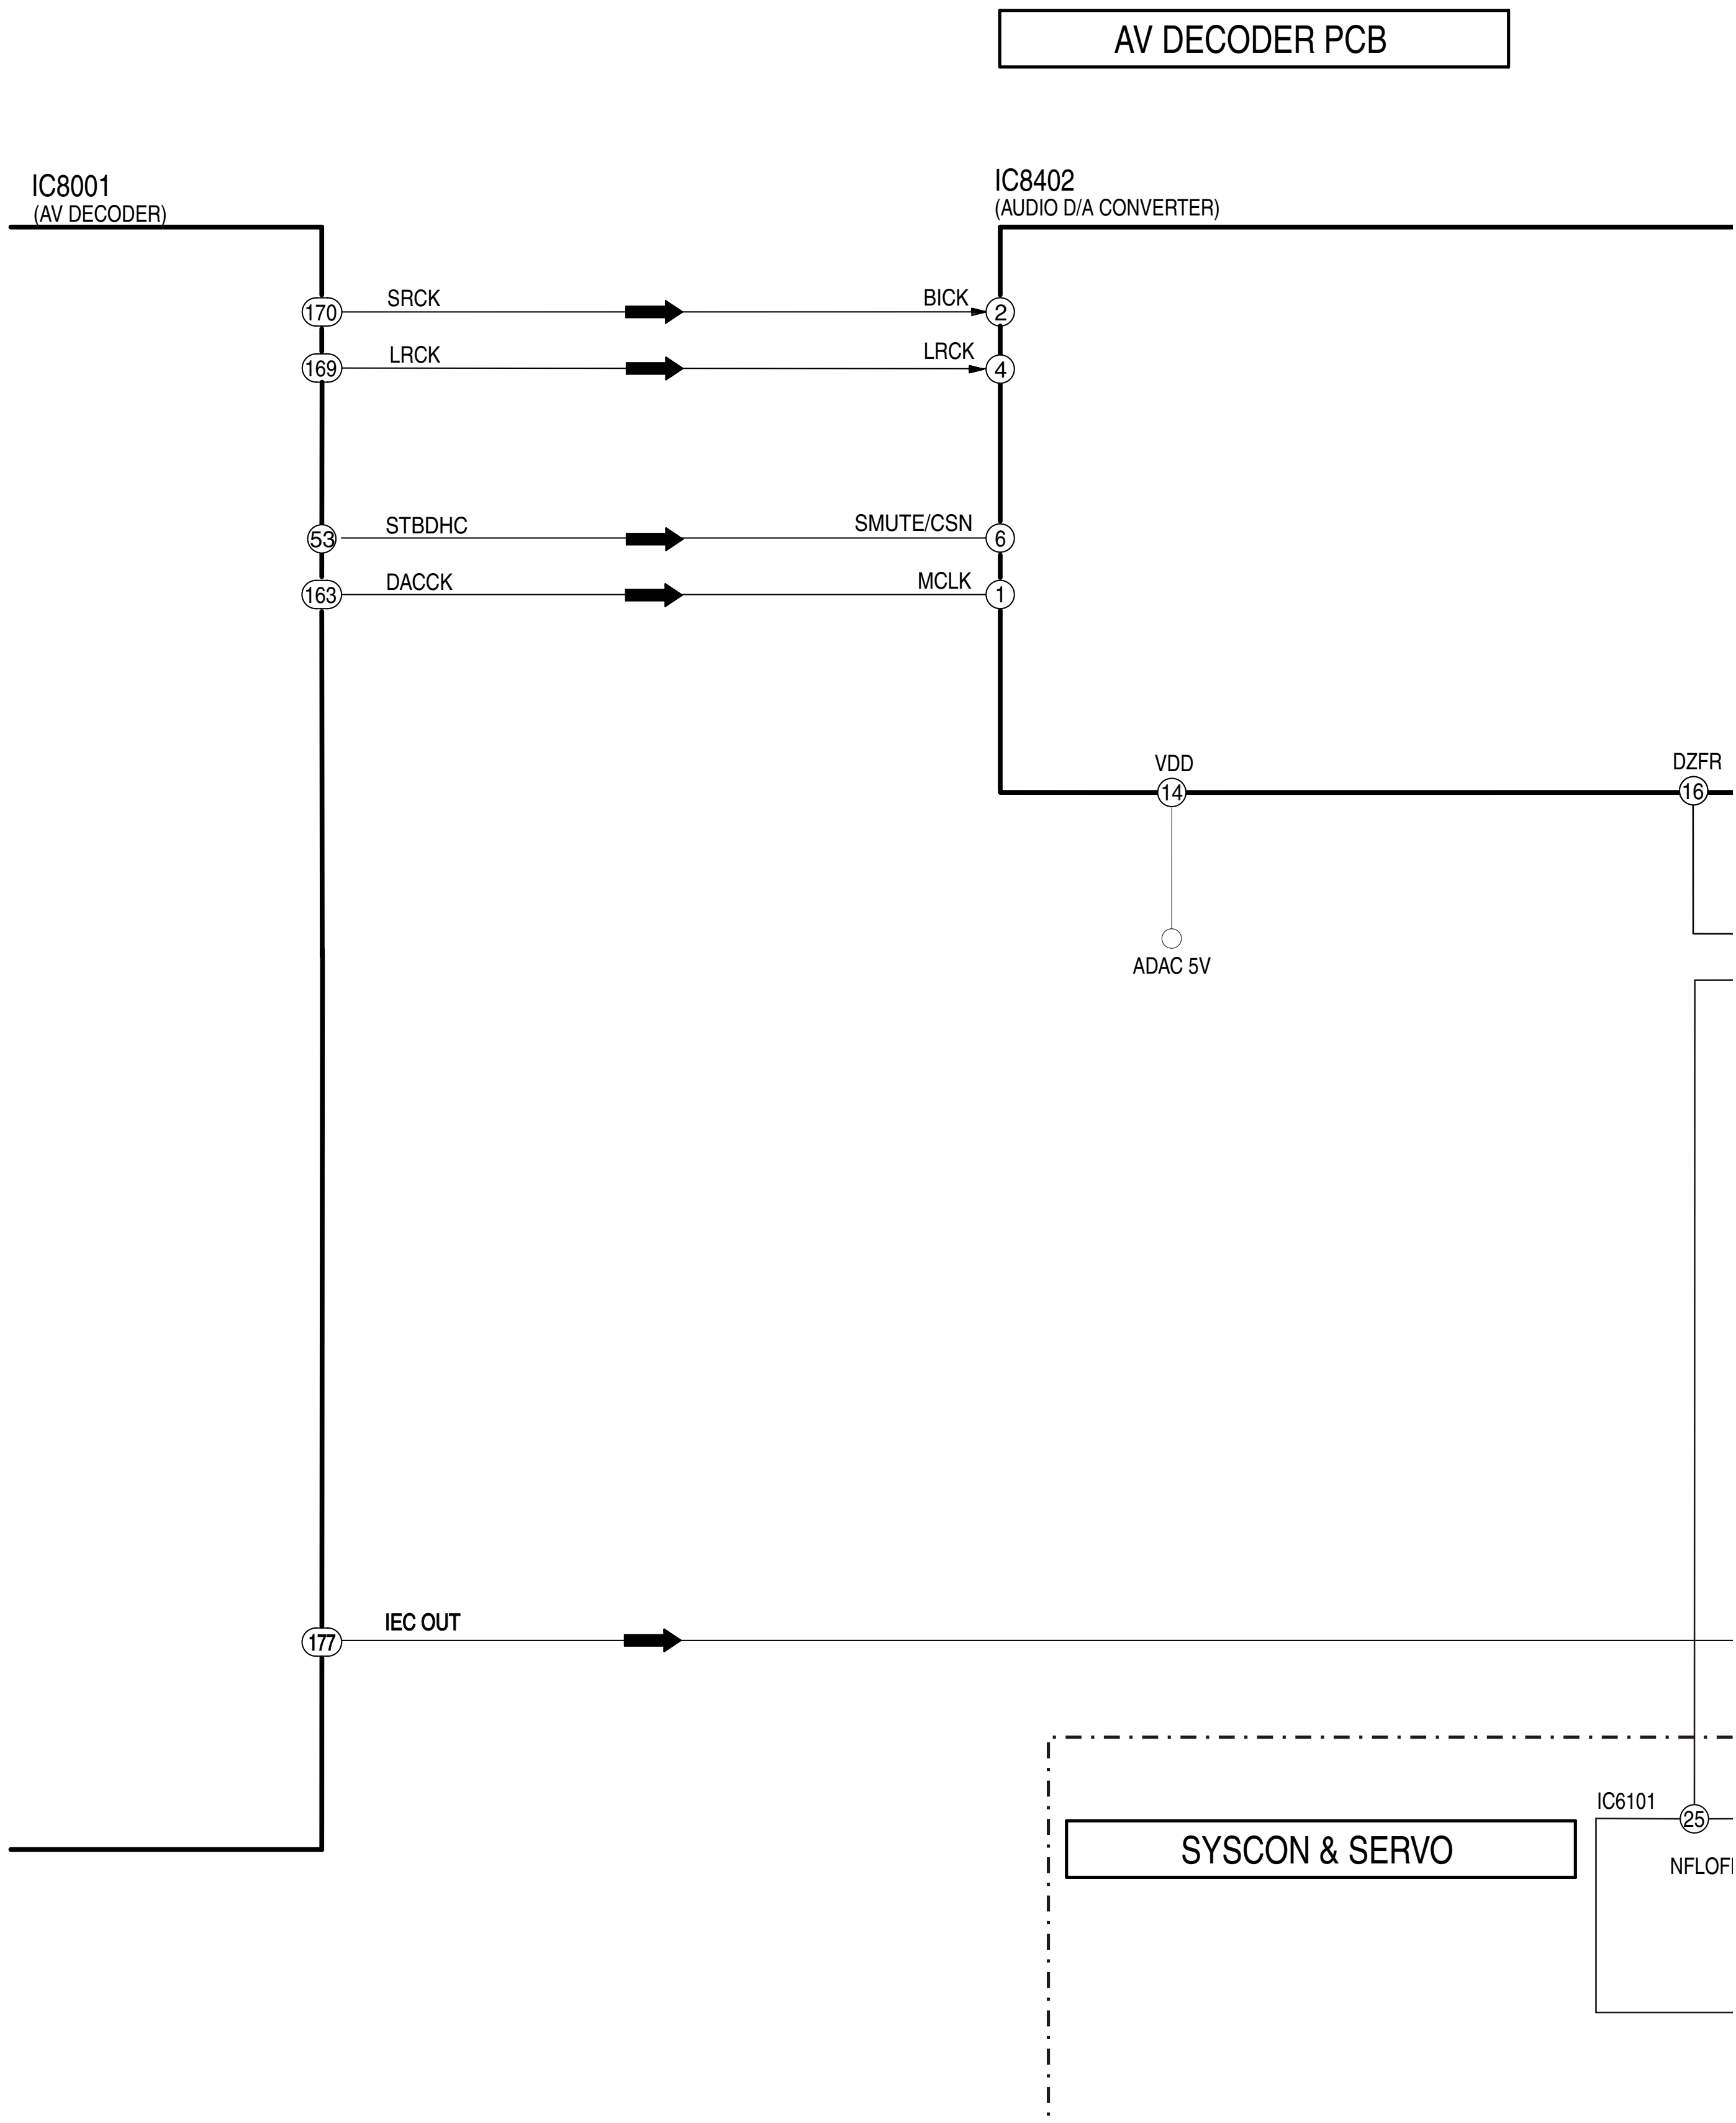
AV DECODER PCB
IC8001
(AV DECODER)
IC8402
(AUDIO D/A CONVERTER)
170
SRCK
BICK
2
169
LRCK
LRCK
4
53
STBDHC
SMUTE/CSN
6
163
DACCK
MCLK
1
VDD
14
ADAC 5V
DZFR
16
177
IEC OUT
SYSCON & SERVO
IC6101
25
NFLOF

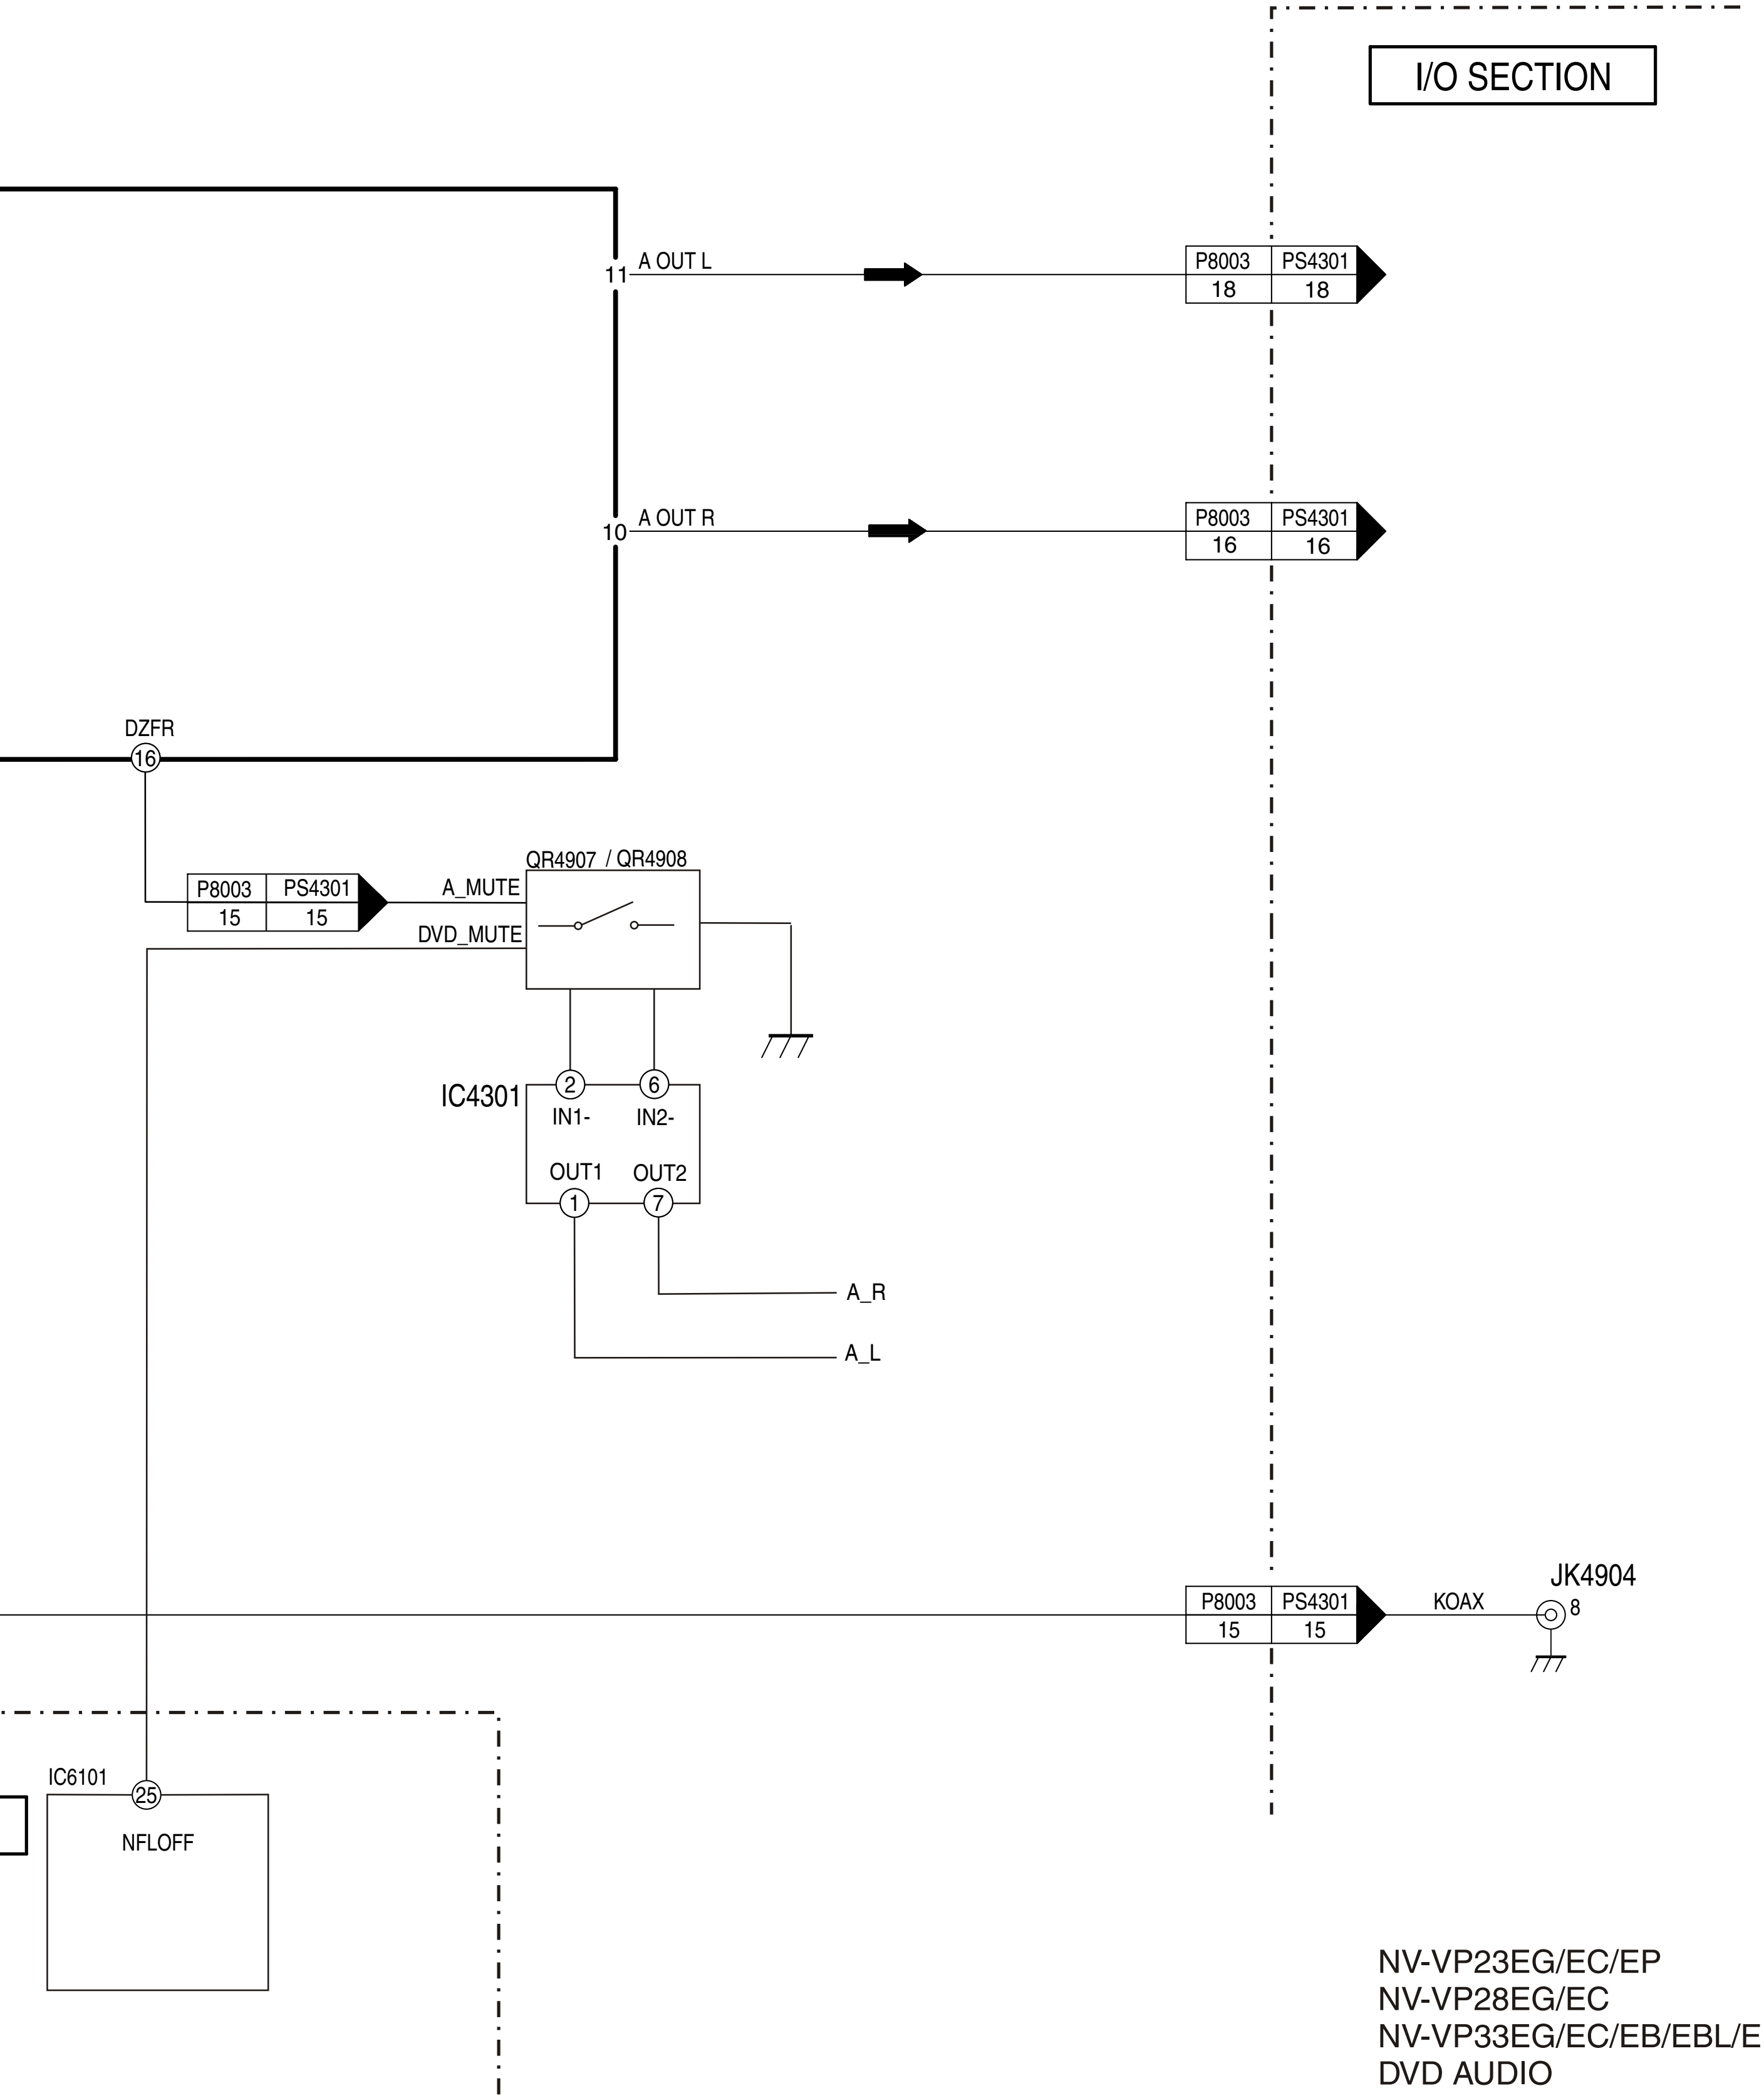
I/O SECTION
11
A OUT L
P8003
18
PS4301
18
10
A OUT R
P8003
16
PS4301
16
DZFR
16
P8003
15
PS4301
15
A_MUTE
DVD_MUTE
QR4907 / QR4908
IC4301
2
IN1-
6
IN2-
OUT1
1
OUT2
7
A_R
A_L
P8003
15
PS4301
15
KOAX
JK4904
8
IC6101
25
NFLOFF

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
DVD AUDIO
BLOCK DIAGRAM

19.5. DECODER PCB (COMPONENT SIDE)

(REPD0011A)

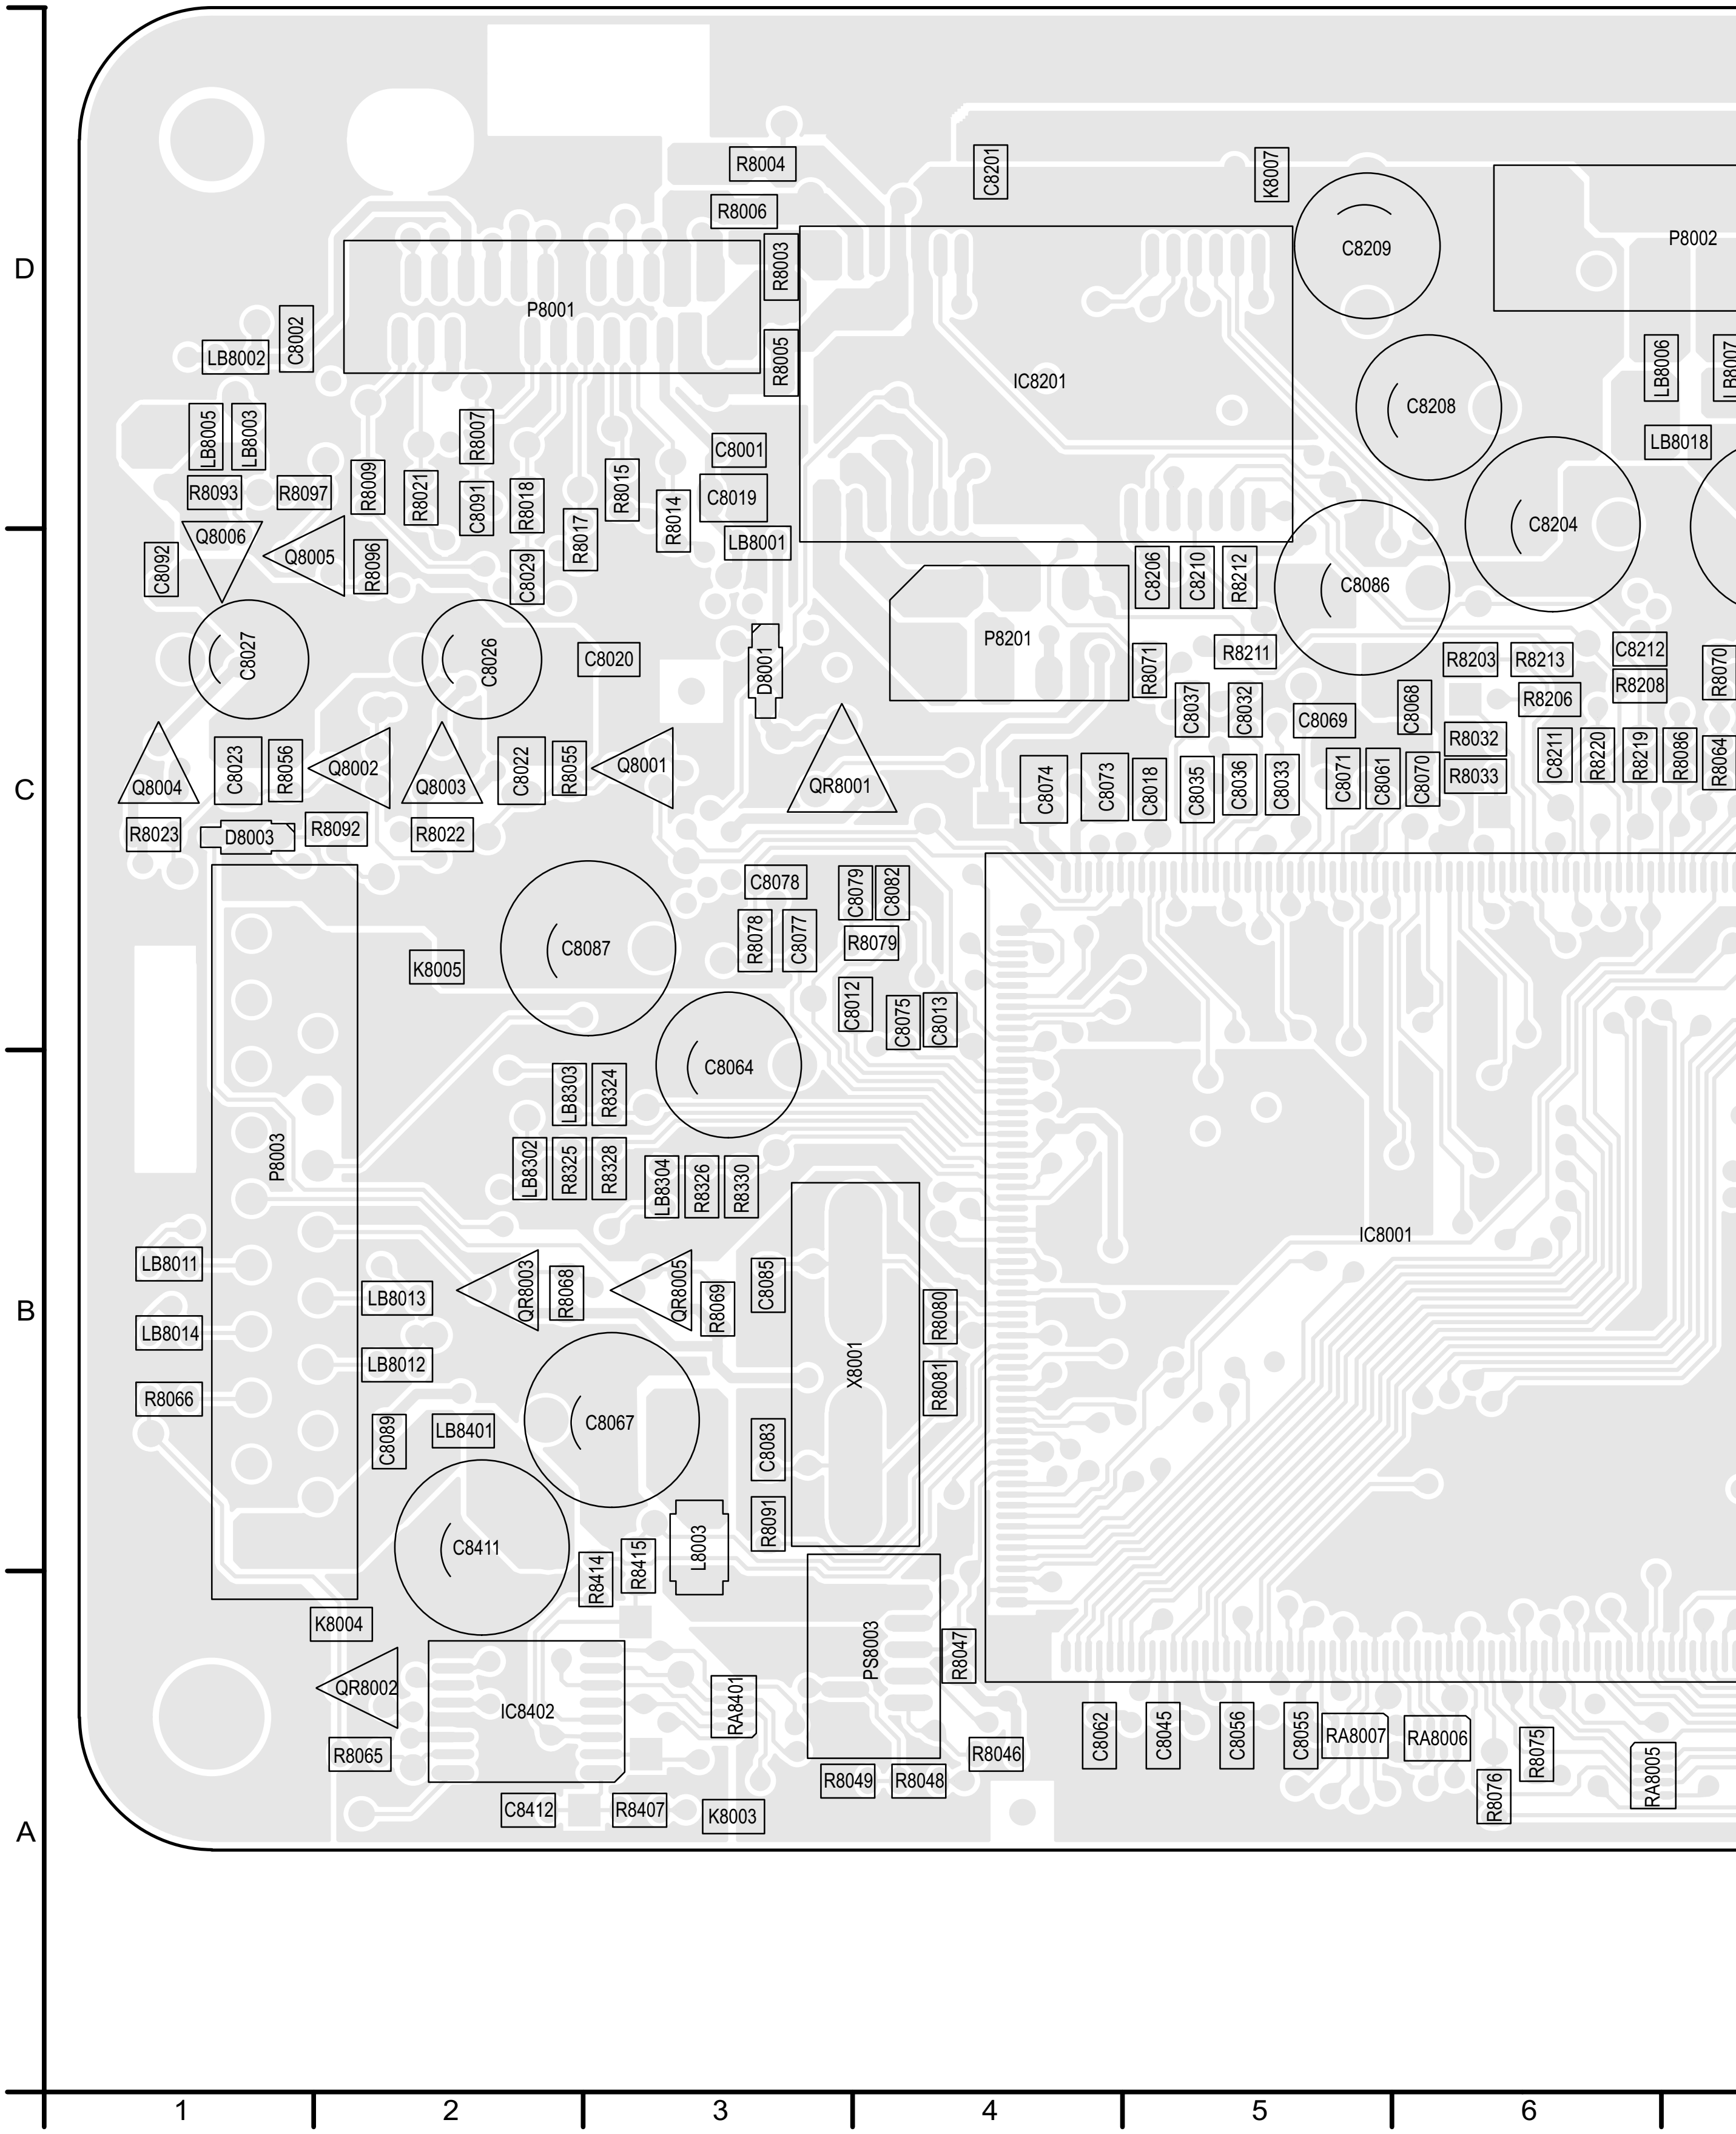
R8004
C8201
K8007
R8006
C8209
P8002
R8003
P8001
IC8201
LB8002
C8002
R8005
LB8006
LB8007
C8208
LB8005
LB8003
R8007
LB8018
C8001
R8093
R8097
R8009
R8021
C8091
R8018
R8015
C8019
R8014
C8204
R8017
LB8001
Q8006
Q8005
R8096
C8092
C8029
C8206
C8210
R8212
C8086
P8201
C8027
C8026
C8020
D8001
R8211
R8071
R8203
R8213
C8212
R8208
R8070
R8206
C8037
C8032
C8069
C8068
R8032
C8211
R8220
R8219
R8086
R8064
Q8004
C8023
R8056
Q8002
Q8003
C8022
R8055
Q8001
QR8001
C8074
C8073
C8018
C8035
C8036
C8033
C8071
C8061
C8070
R8033
R8023
D8003
R8092
R8022
C8078
C8079
C8082
C8087
R8078
C8077
R8079
K8005
C8012
C8075
C8013
C8064
LB8303
R8324
P8003
LB8302
R8325
R8328
LB8304
R8326
R8330
IC8001
LB8011
LB8013
QR8003
R8068
QR8005
R8069
C8085
R8080
LB8014
LB8012
X8001
R8081
R8066
C8067
C8089
LB8401
C8083
C8411
L8003
R8091
R8414
R8415
K8004
PS8003
R8047
QR8002
IC8402
RA8401
C8062
C8045
C8056
C8055
RA8007
RA8006
R8075
RA8005
R8065
R8046
R8049
R8048
R8076
C8412
R8407
K8003
D
C
B
A
1
2
3
4
5
6

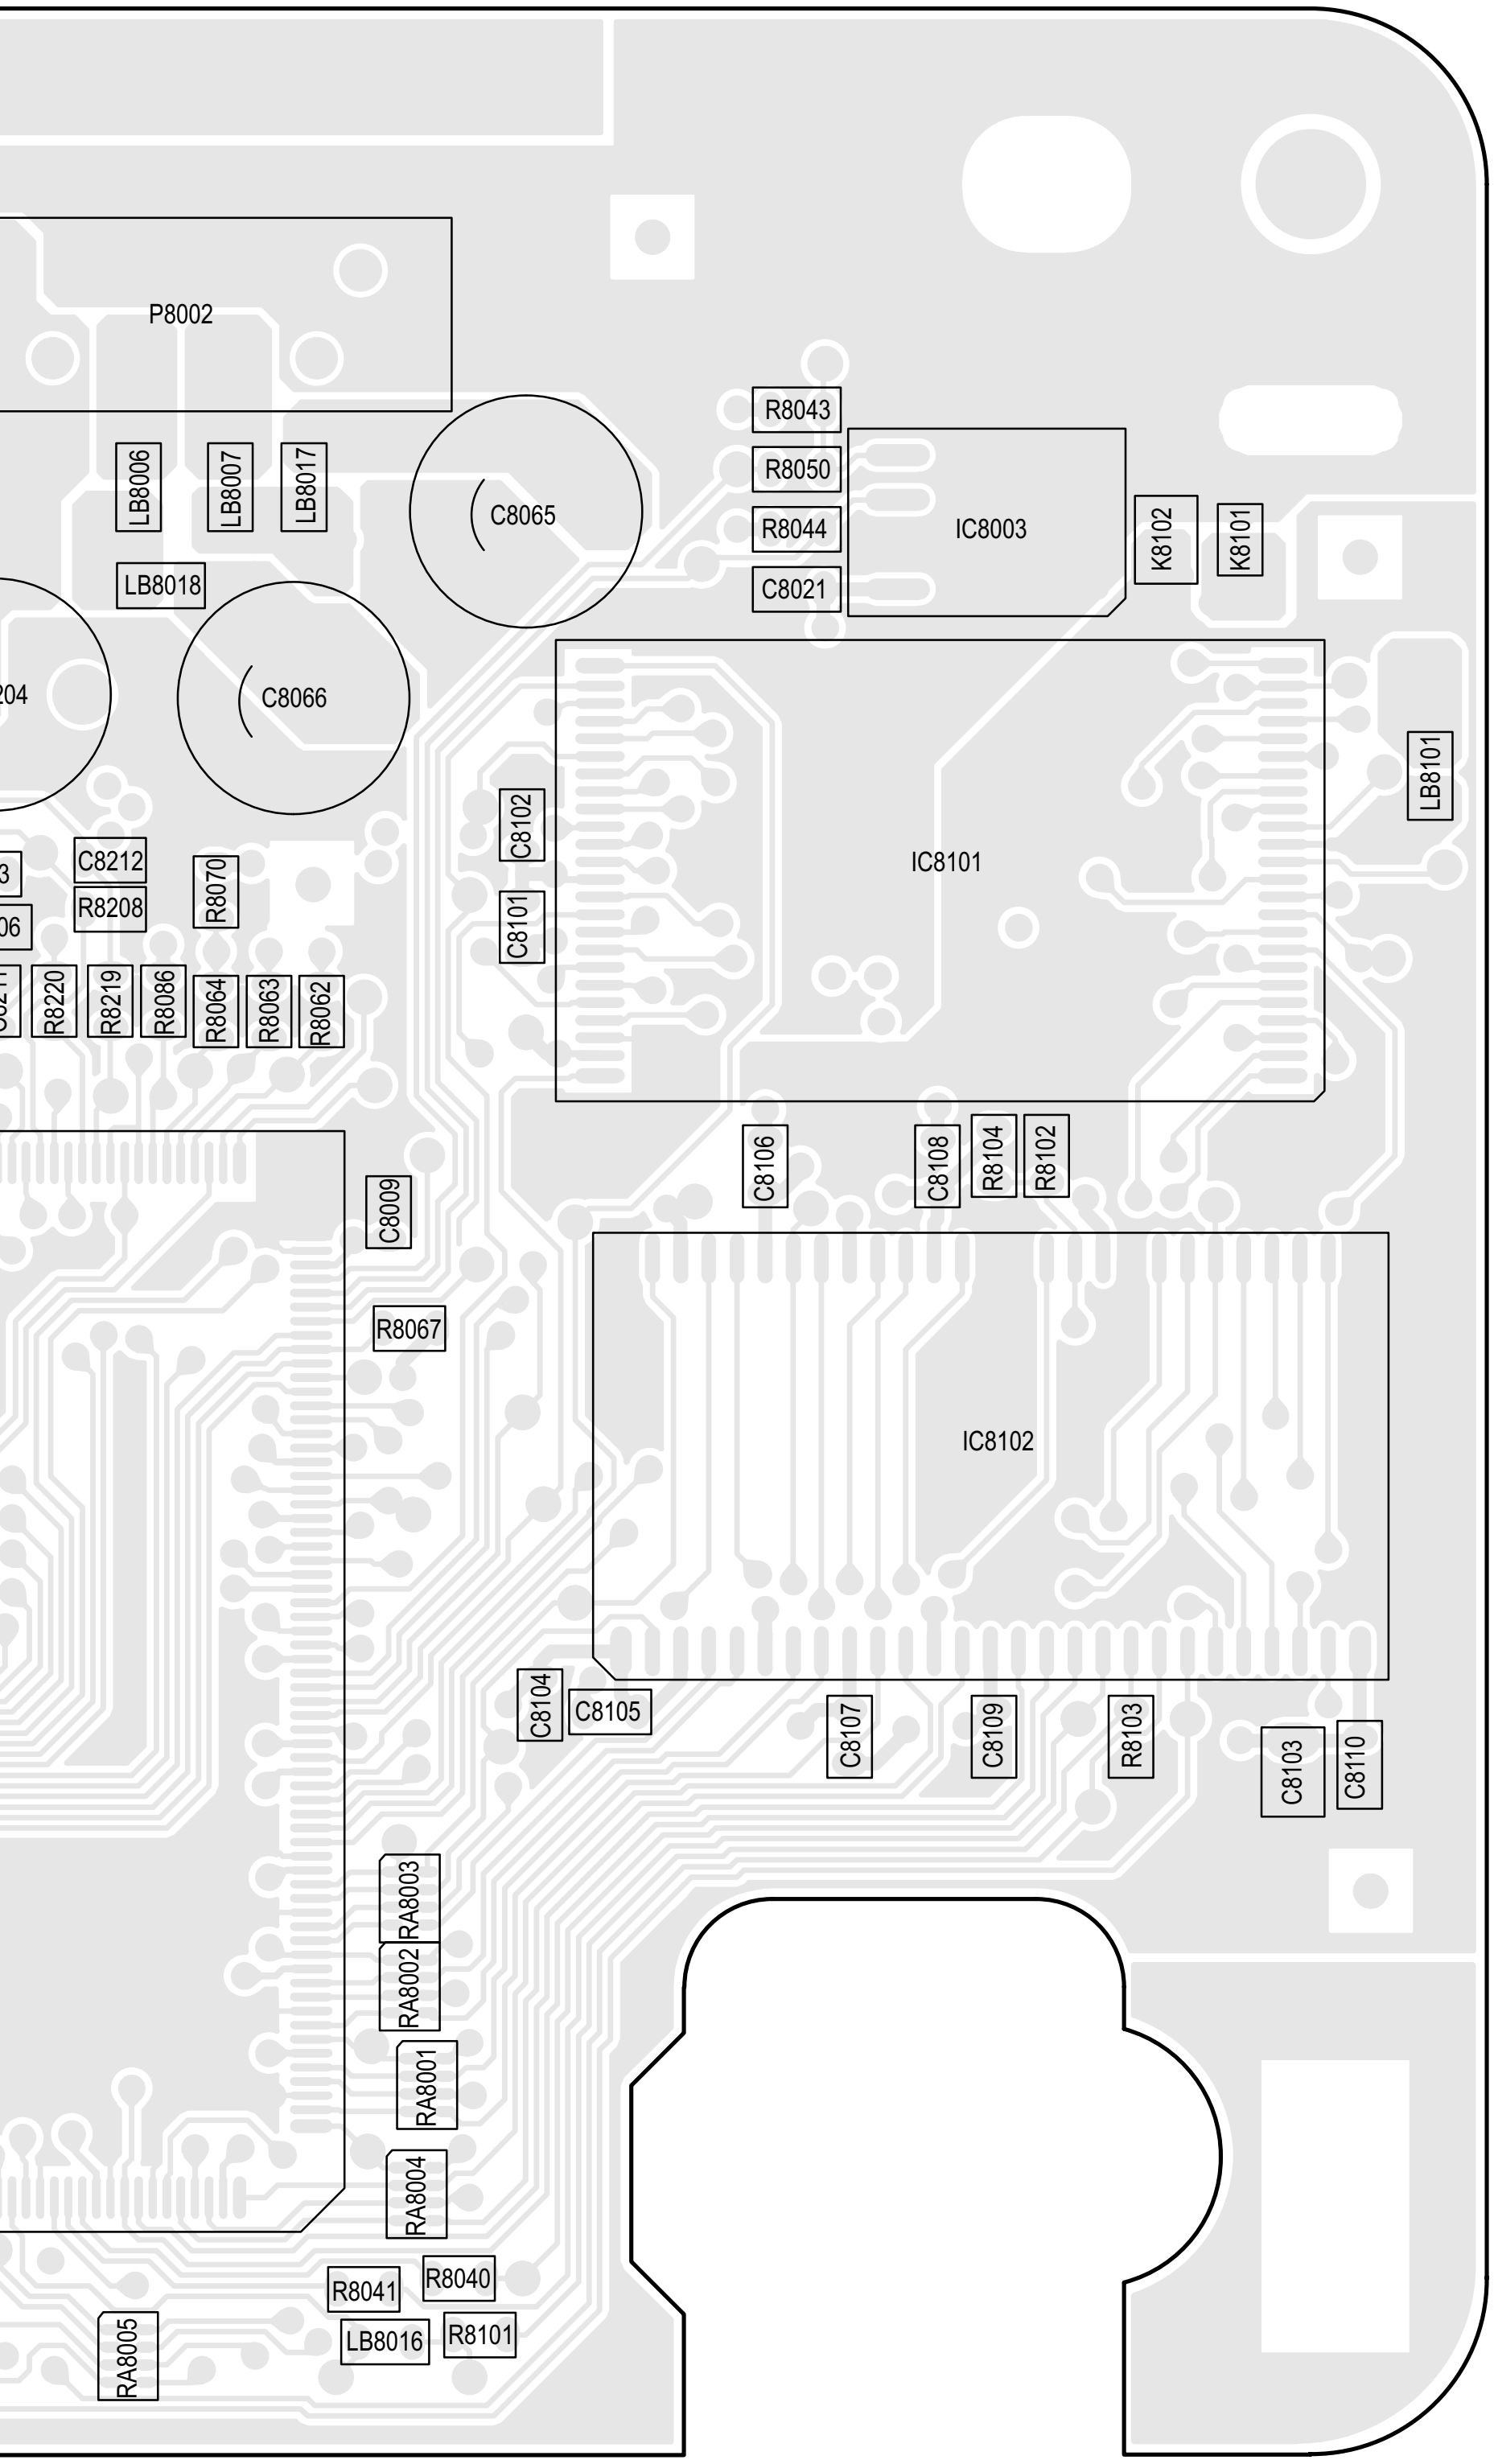
P8002
R8043
R8050
R8044
C8021
IC8003
K8102
K8101
LB8006
LB8007
LB8017
C8065
LB8018
C8066
204
LB8101
IC8101
C8102
C8101
C8212
R8208
R8070
R8220
R8219
R8086
R8064
R8063
R8062
C8106
C8108
R8104
R8102
C8009
R8067
IC8102
C8104
C8105
C8107
C8109
R8103
C8103
C8110
RA8003
RA8002
RA8001
RA8004
R8041
R8040
LB8016
R8101
RA8005
7
8
9
10
11
12

DECODER PCB

IC8001	B5
IC8003	D9
IC8101	C9
IC8102	B9
IC8201	D5
IC8402	A2
Q8001	C3
Q8002	C2
Q8003	C2
Q8004	C1
Q8005	C1
Q8006	C1
QR8001	C3
QR8002	A2
QR8003	B2
QR8005	B3
P8001	D2
P8002	D7
P8003	B1
P8201	C4
PS8003	A4
X8001	B3

ADDRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
DECODER PCB
COMPONENT SIDE

19.6. DECODER PCB (SOLDER SIDE)

(REPD0011A)

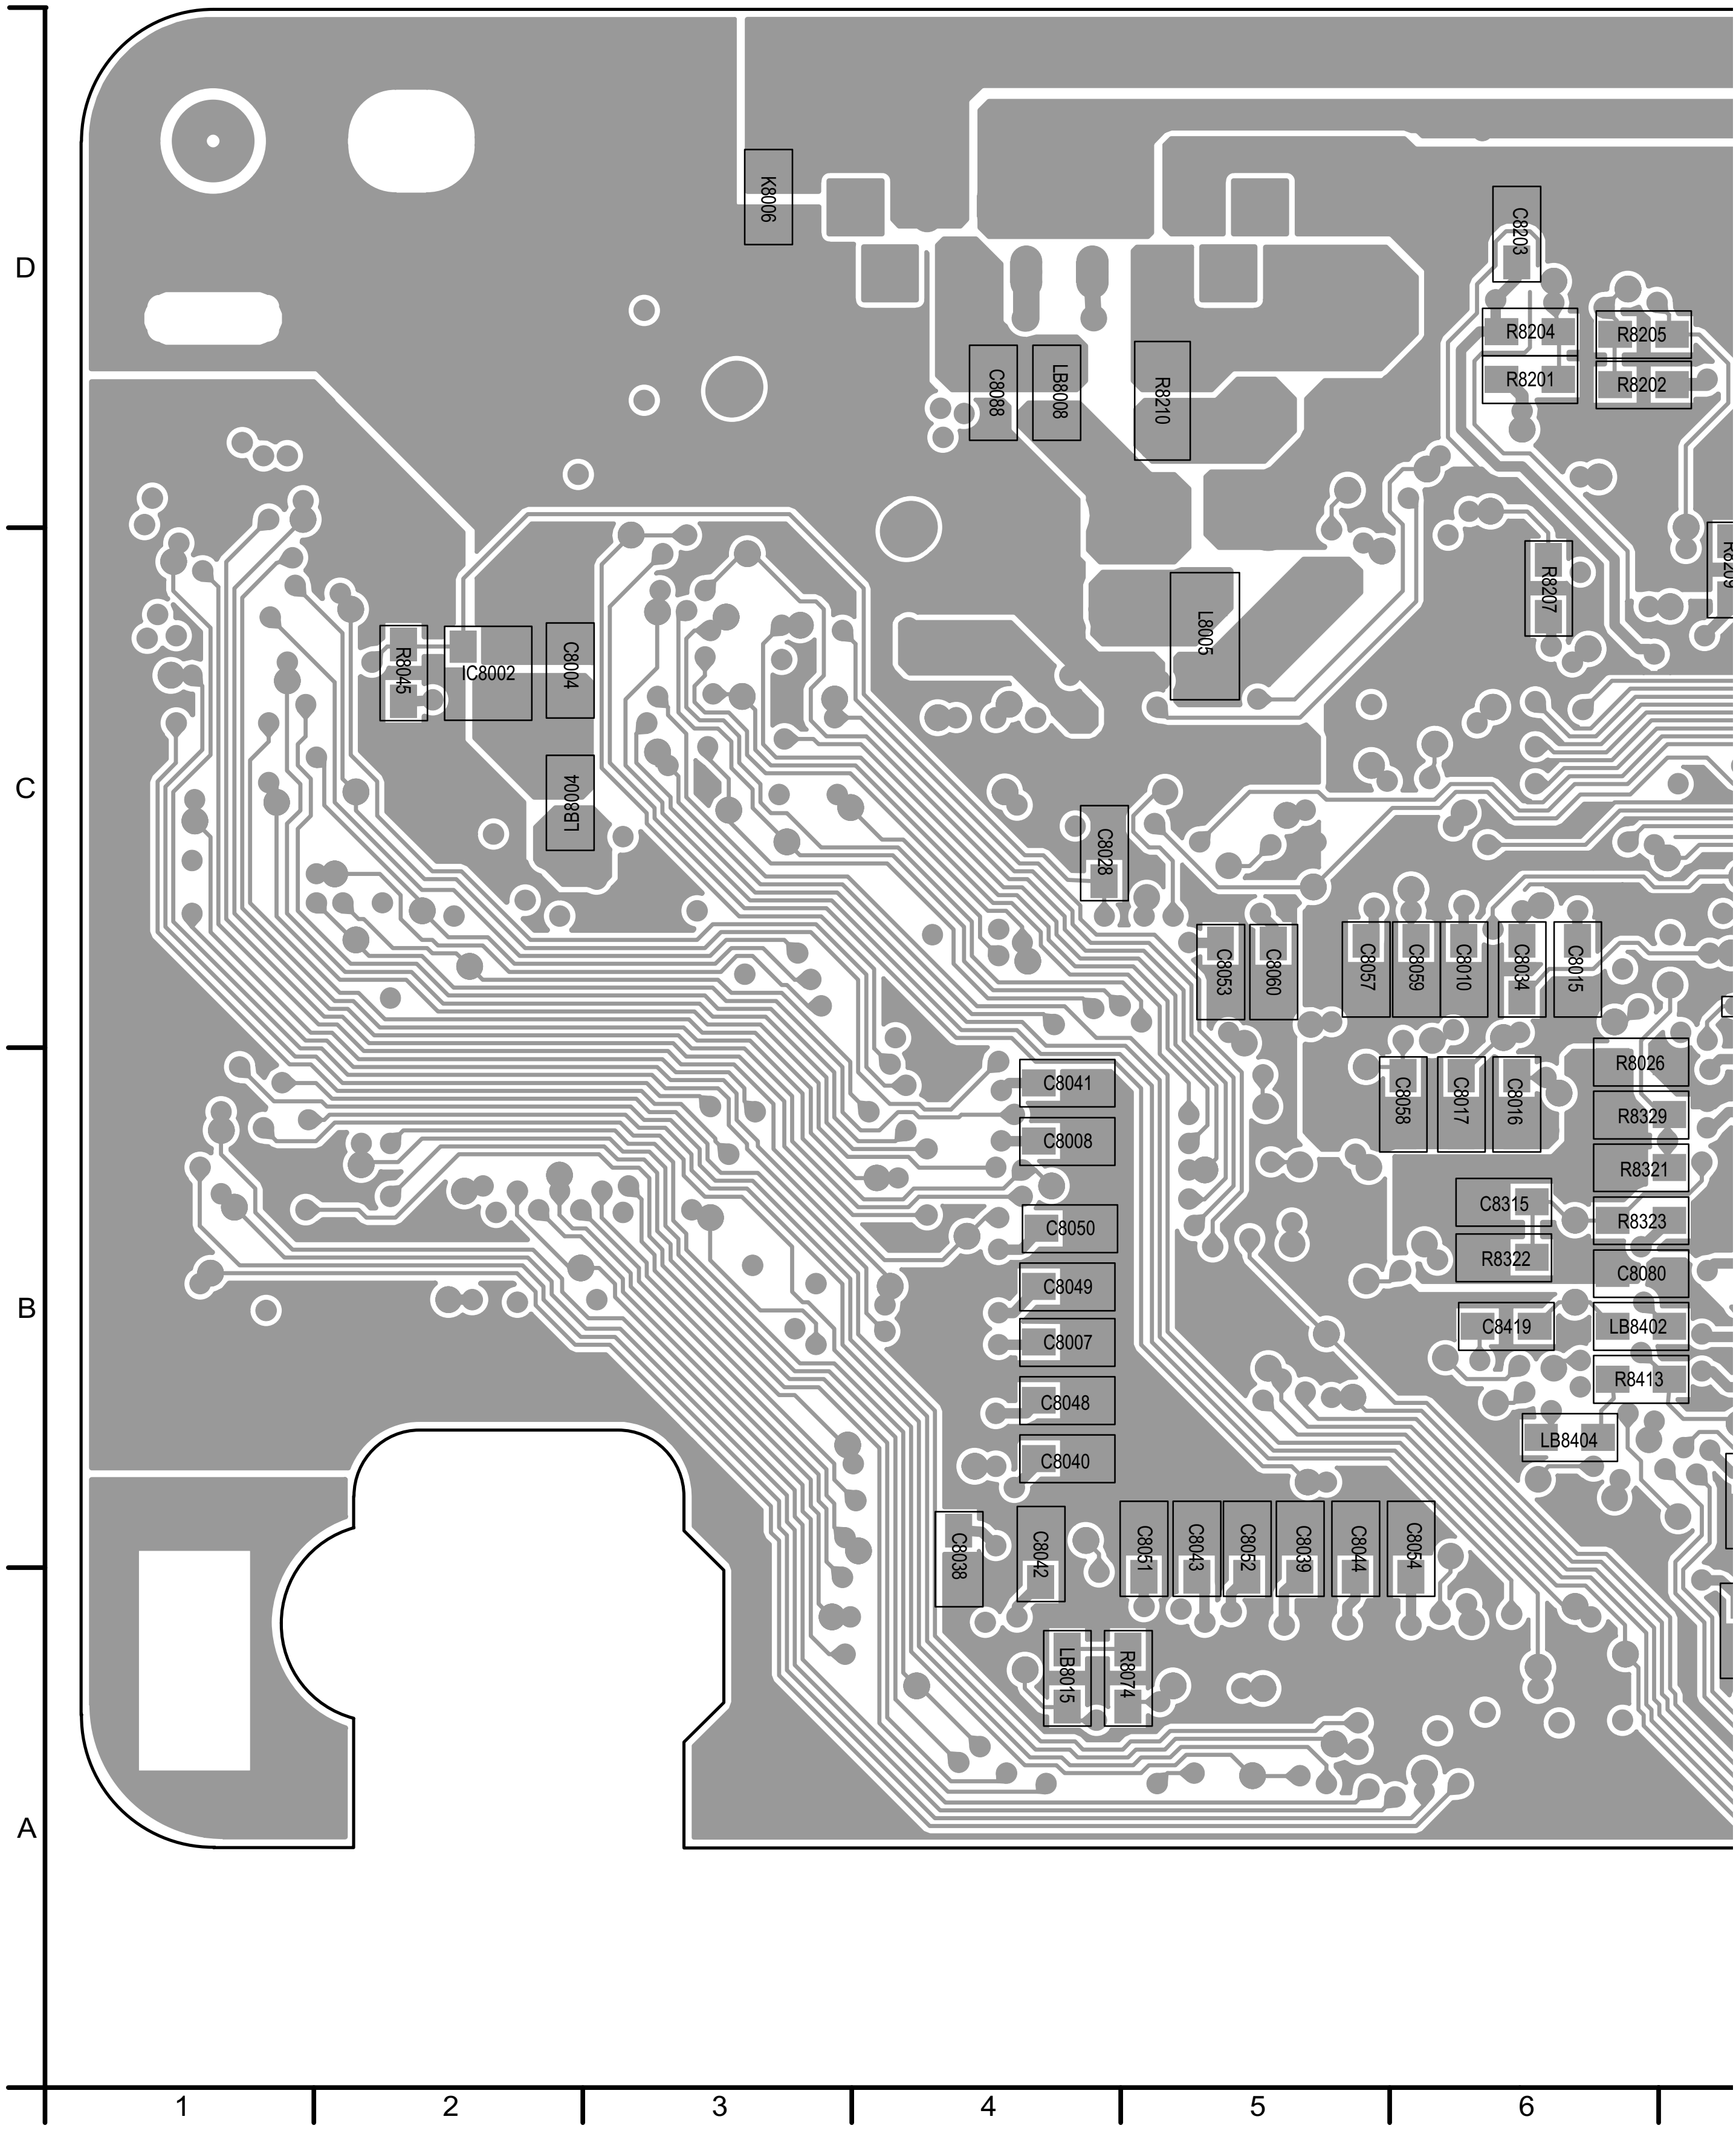
D
C
B
A
1
2
3
4
5
6
K8006
C8203
R8204
R8205
R8201
R8202
C8088
LB8008
R8210
R8207
L8005
R8045
IC8002
C8004
LB8004
C8028
C8053
C8060
C8057
C8059
C8010
C8034
C8015
R8026
R8329
R8321
R8323
C8080
LB8402
R8413
C8058
C8017
C8016
C8315
R8322
C8419
LB8404
C8041
C8008
C8050
C8049
C8007
C8048
C8040
C8038
C8042
C8051
C8043
C8052
C8039
C8044
C8054
LB8015
R8074

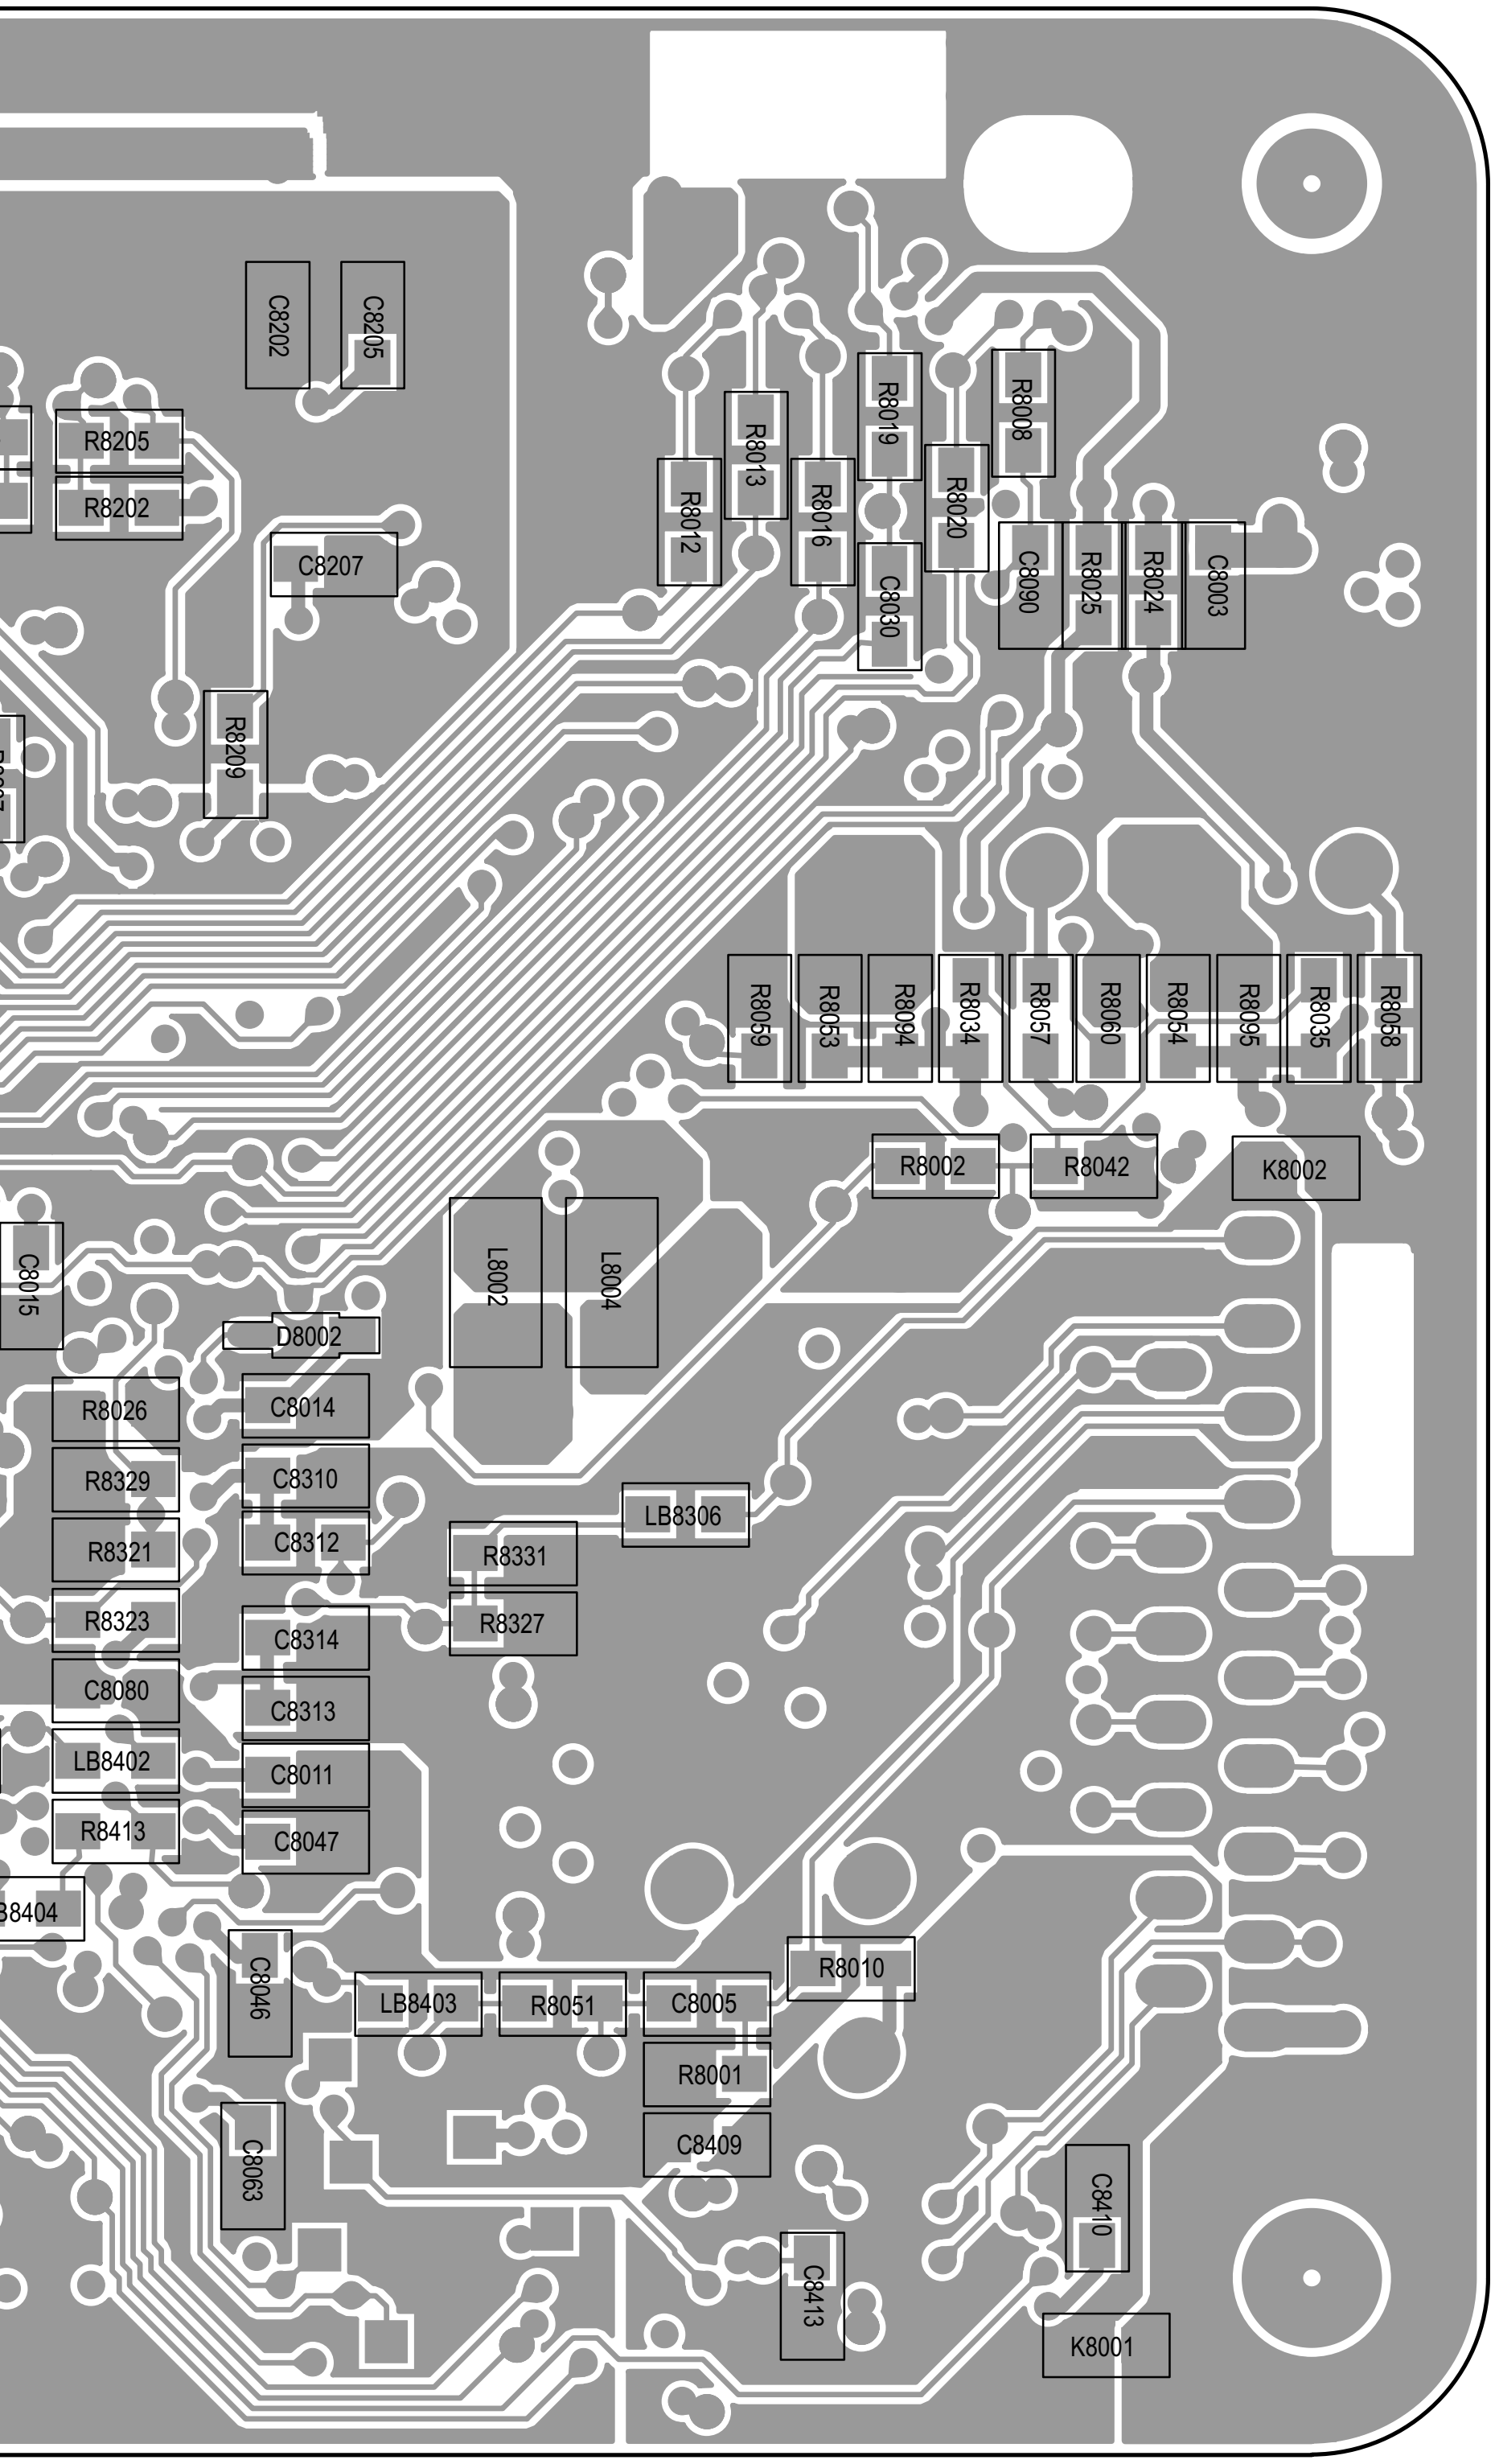
C8202
C8205
R8205
R8202
C8207
R8209
R8012
R8013
R8016
R8019
C8030
R8020
R8008
C8090
R8025
R8024
C8003
R8059
R8053
R8094
R8034
R8057
R8060
R8054
R8095
R8035
R8058
R8002
R8042
K8002
C8015
L8002
L8004
D8002
R8026
C8014
R8329
C8310
R8321
C8312
LB8306
R8331
R8327
R8323
C8314
C8080
C8313
LB8402
C8011
R8413
C8047
B8404
R8010
C8046
LB8403
R8051
C8005
R8001
C8409
C8063
C8410
C8413
K8001

DECODER PCB	
IC8002	C2

ADDRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
DECODER PCB
SOLDER SIDE



19.8. FRONT PCB

FRONT JACK COMPONENT SIDE (REPD0014A)

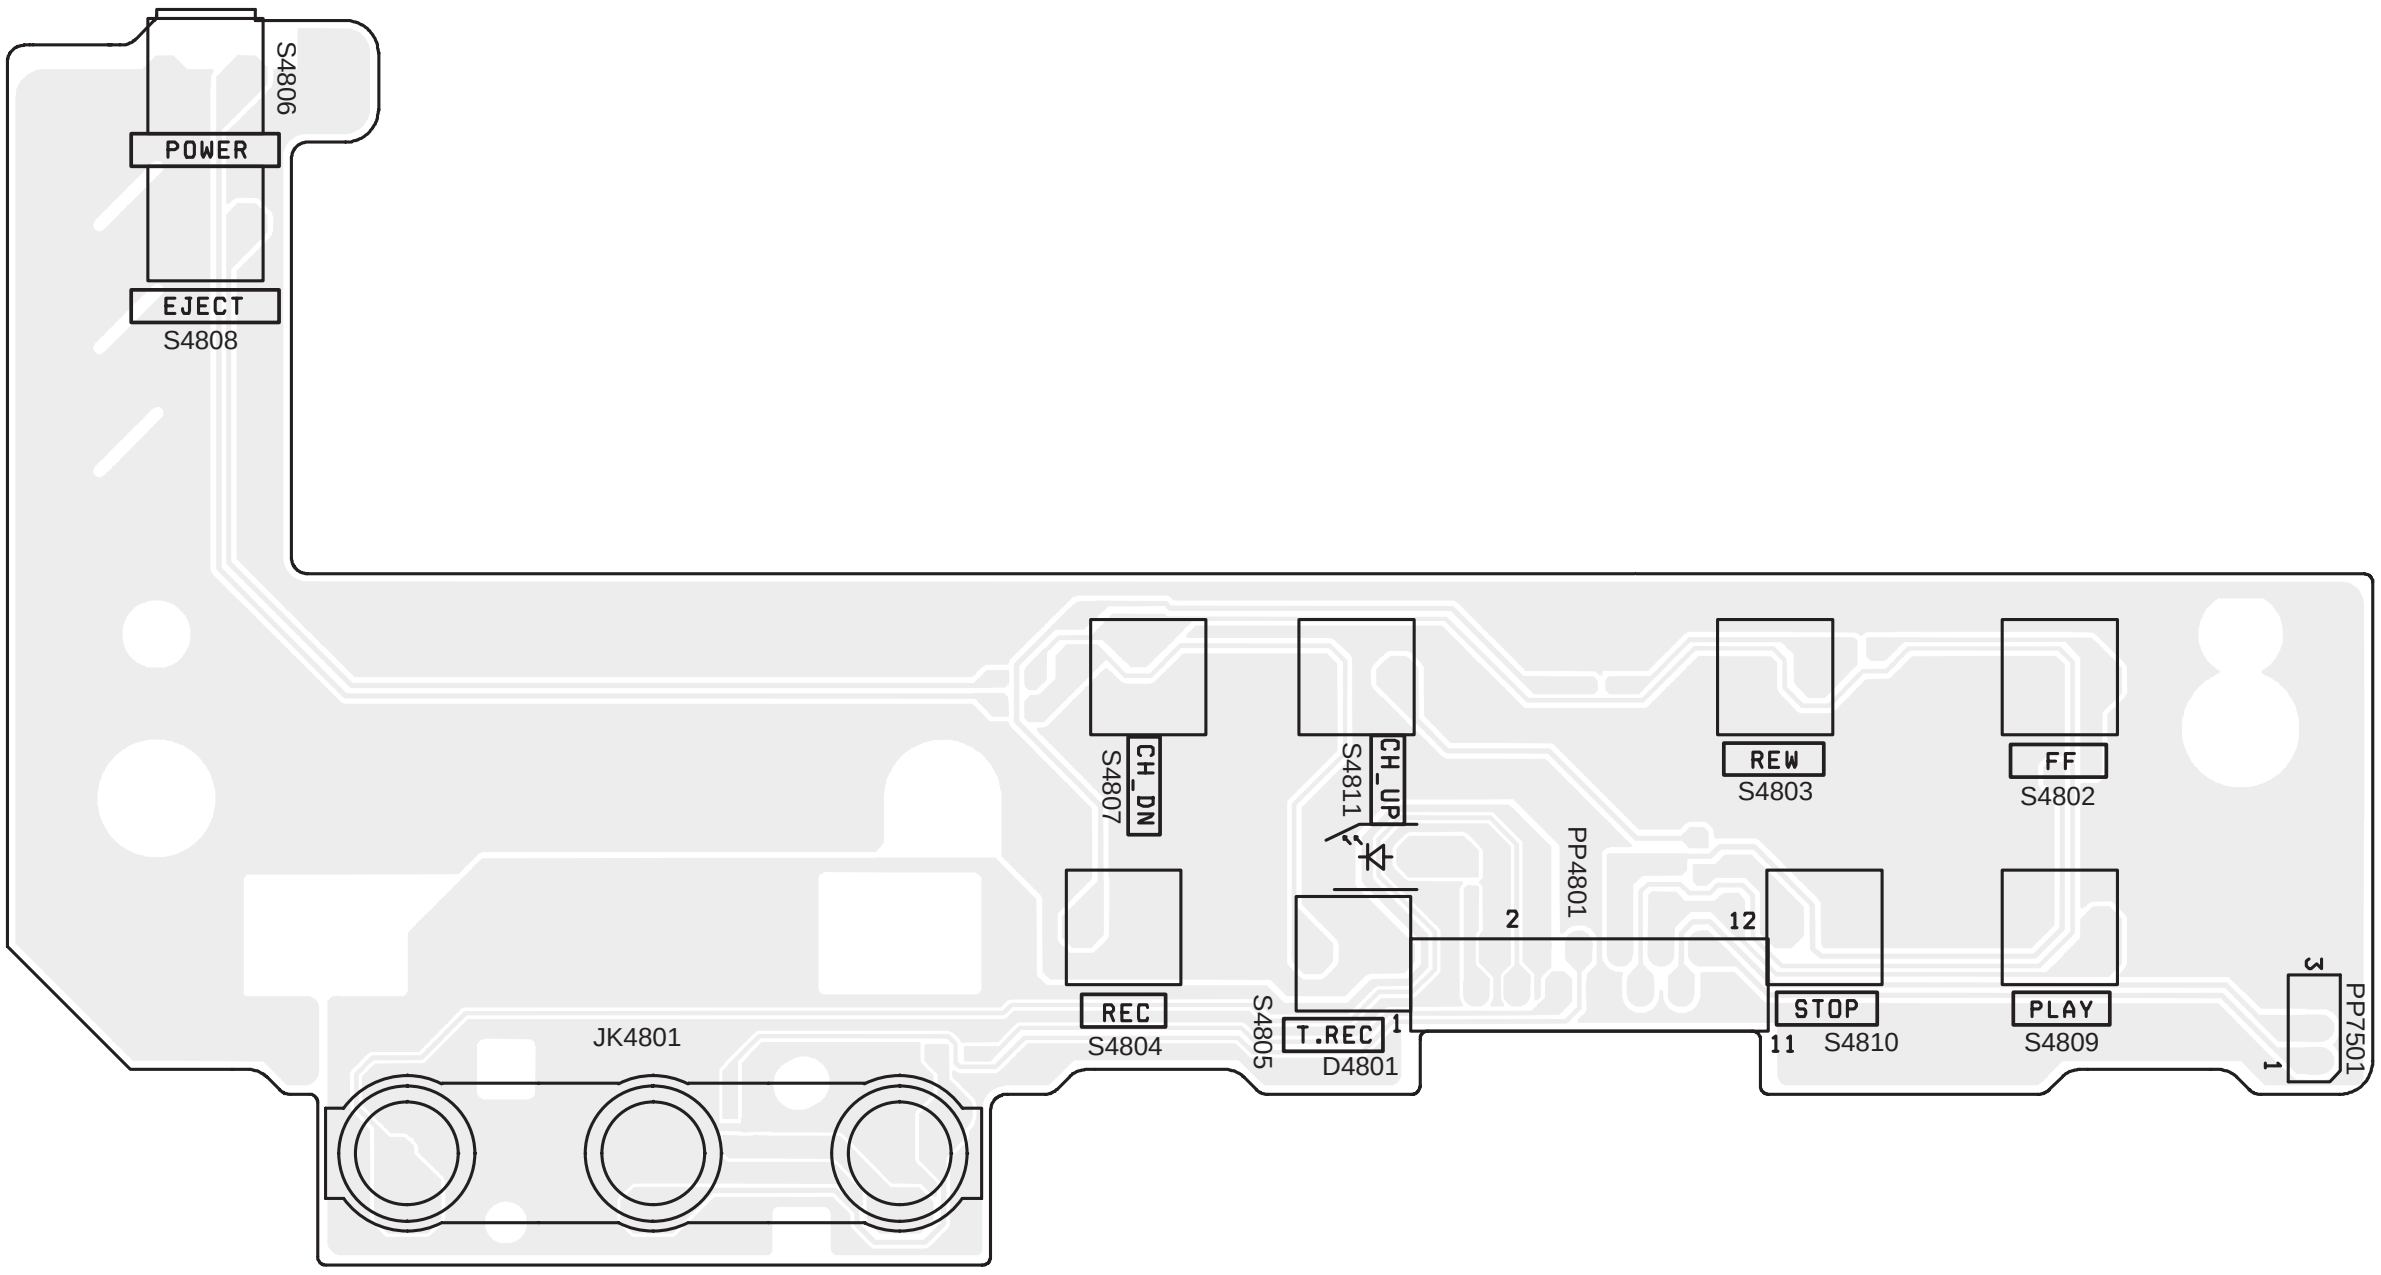
S4806
POWER
EJECT
S4808
CH_DN
S4807
CH_UP
S4811
REW
S4803
FF
S4802
PP4801
2
12
REC
S4804
S4805
T.REC
D4801
1
11
STOP
S4810
PLAY
S4809
3
PP7501
1
JK4801

FRONT JACK SOLDER SIDE

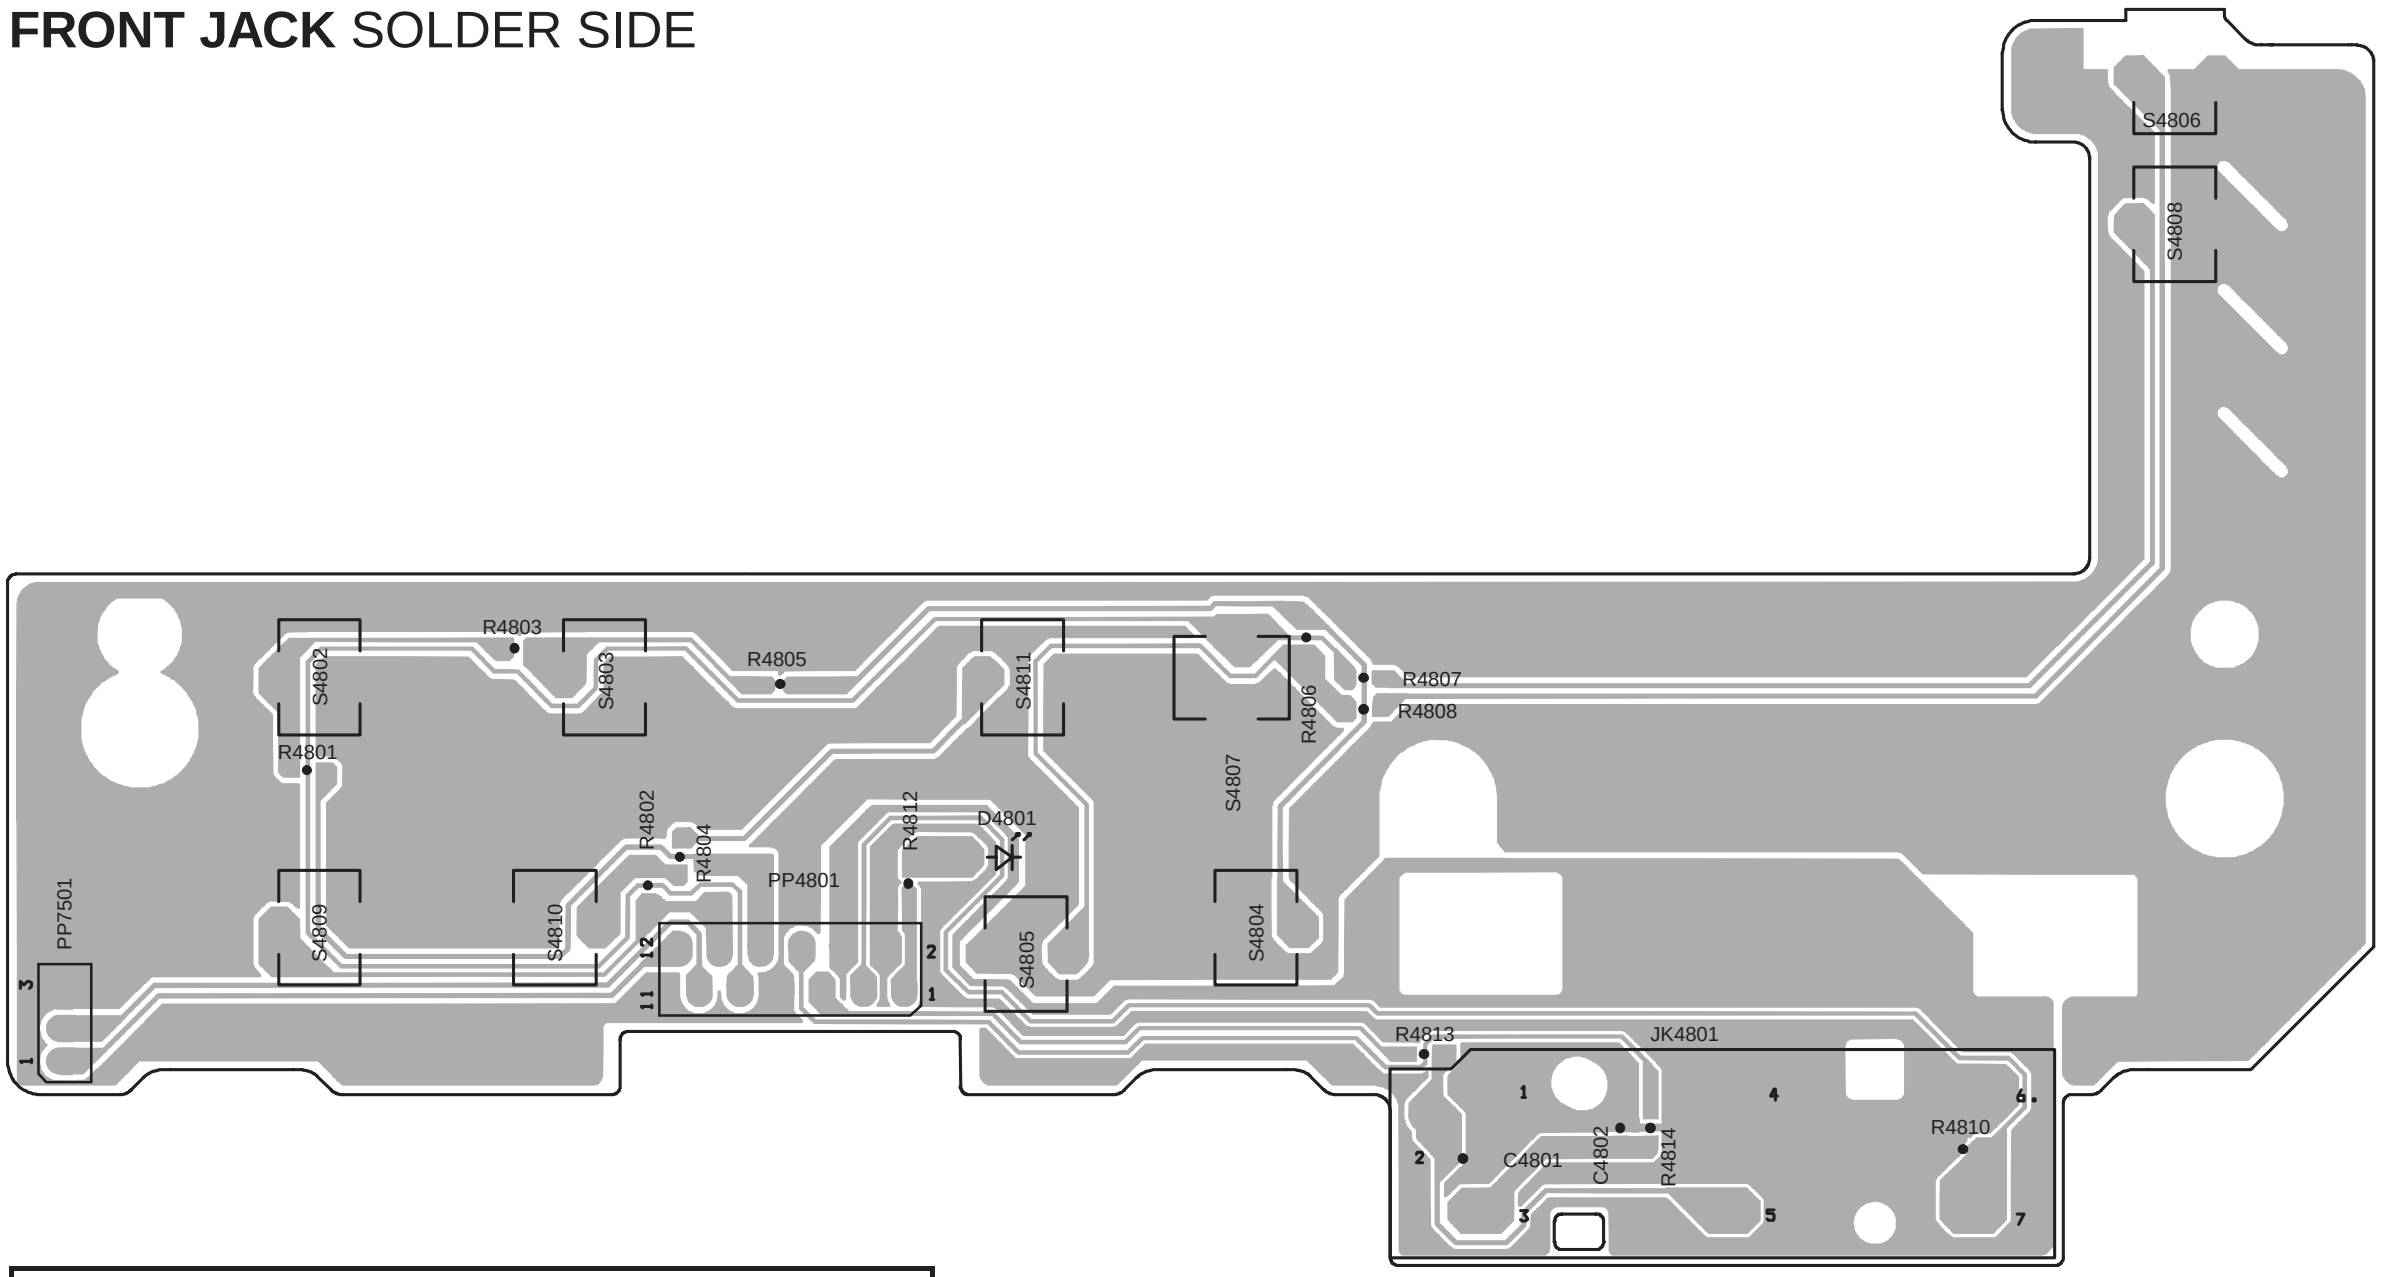
S4806
S4808
R4803
S4802
S4803
R4805
S4811
R4807
R4808
R4806
R4801
S4807
R4802
R4804
R4812
D4801
PP4801
PP7501
3
1
S4809
S4810
12
11
2
1
S4805
S4804
R4813
JK4801
1
4
6
R4810
2
C4801
C4802
R4814
3
5
7

FRONT JACK PCB

	Component	Solder		Component	Solder
JK4801	B2	B1	S4806	D1	C6
PP4801	C4	B3	S4807	C4	B4
PP7501	C6	B1	S4808	D1	B6
S4802	C6	B2	S4809	C6	B1
S4803	C5	B2	S4810	C5	B2
S4804	C4	B4	S4811	C4	B3
S4805	C4	B3			

ADRESS INFORMATION

FRONT SWITCH COMPONENT SIDE (REPD0013A)

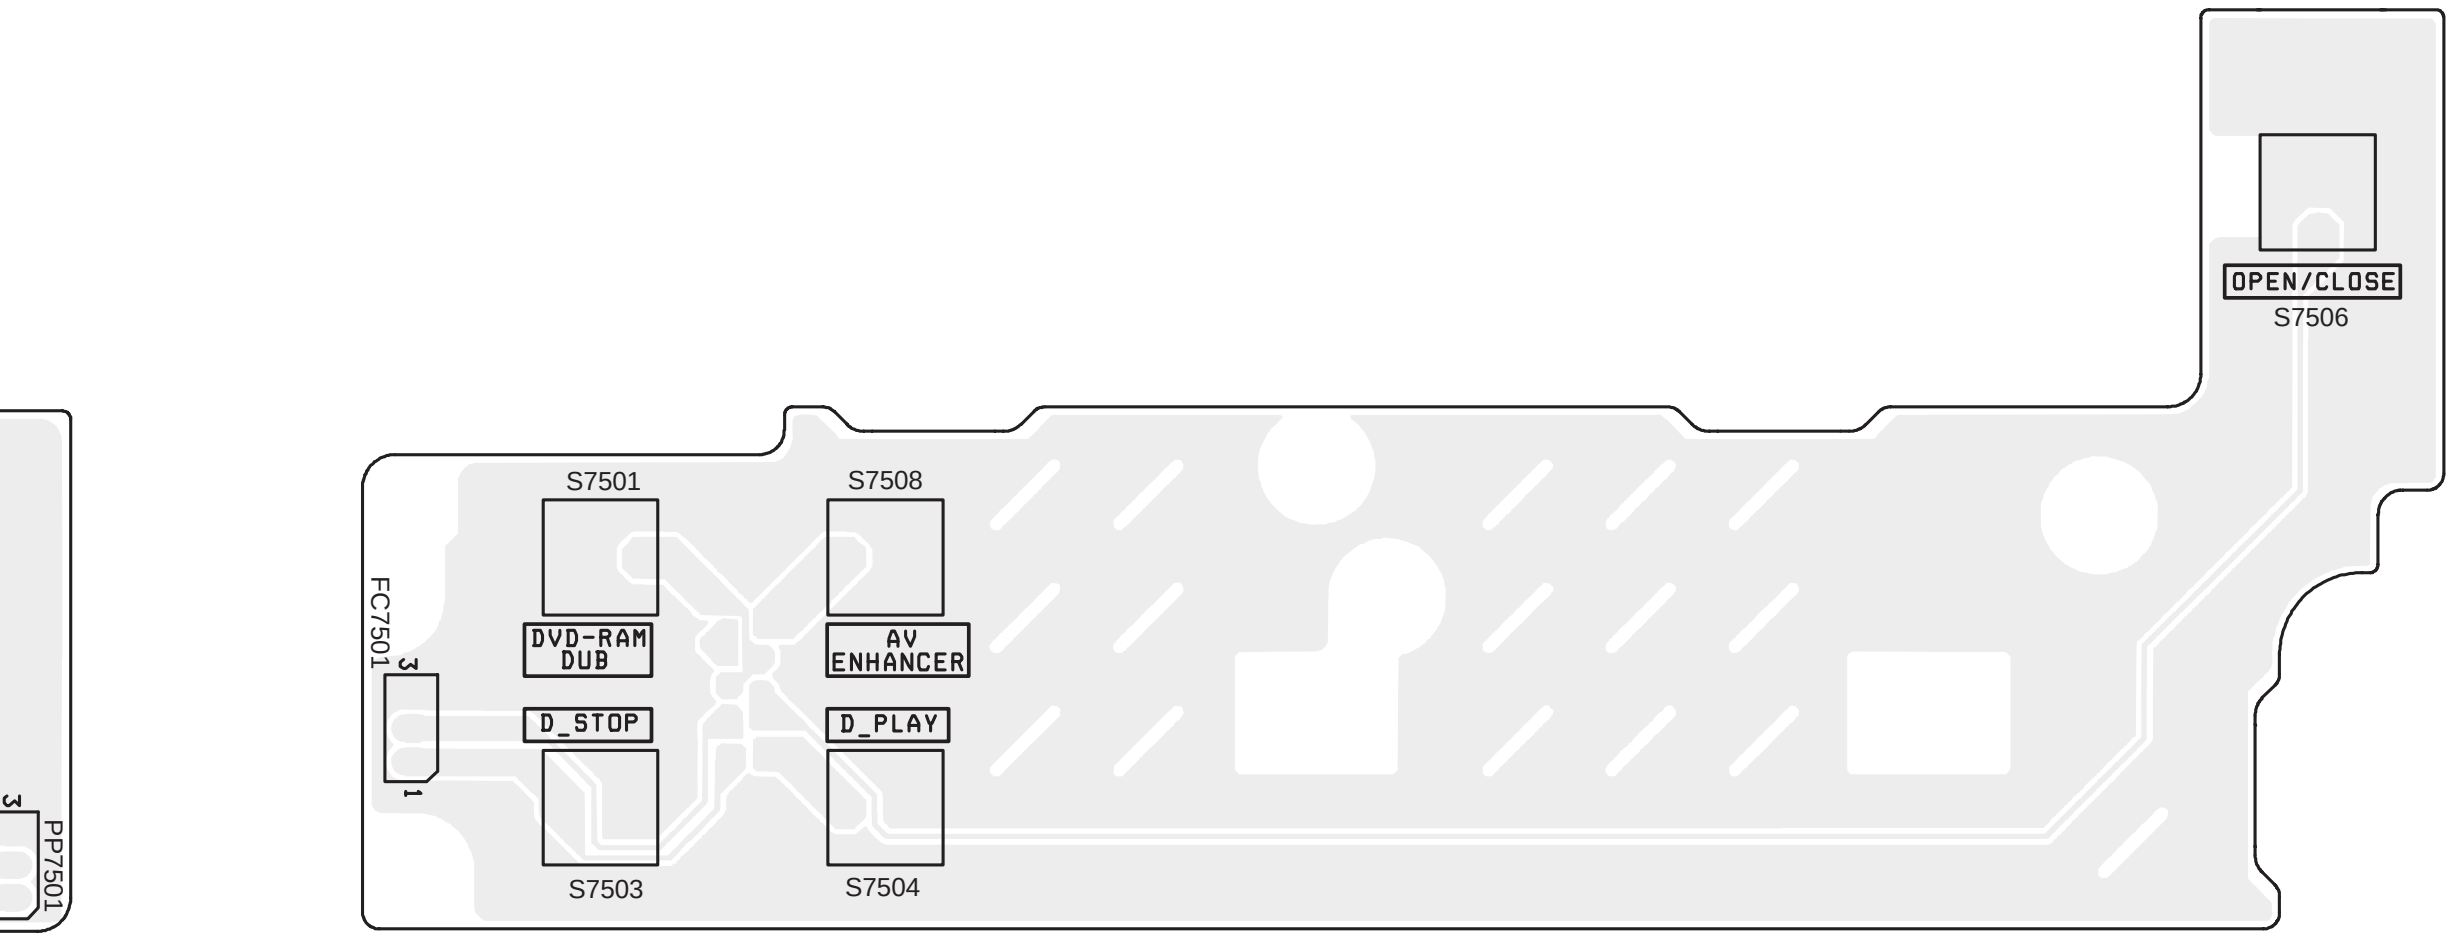
OPEN/CLOSE
S7506
S7501
S7508
FC7501
3
1
DVD-RAM DUB
AV ENHANCER
D_STOP
D_PLAY
S7503
S7504
PP7501
3

FRONT SWITCH SOLDER SIDE

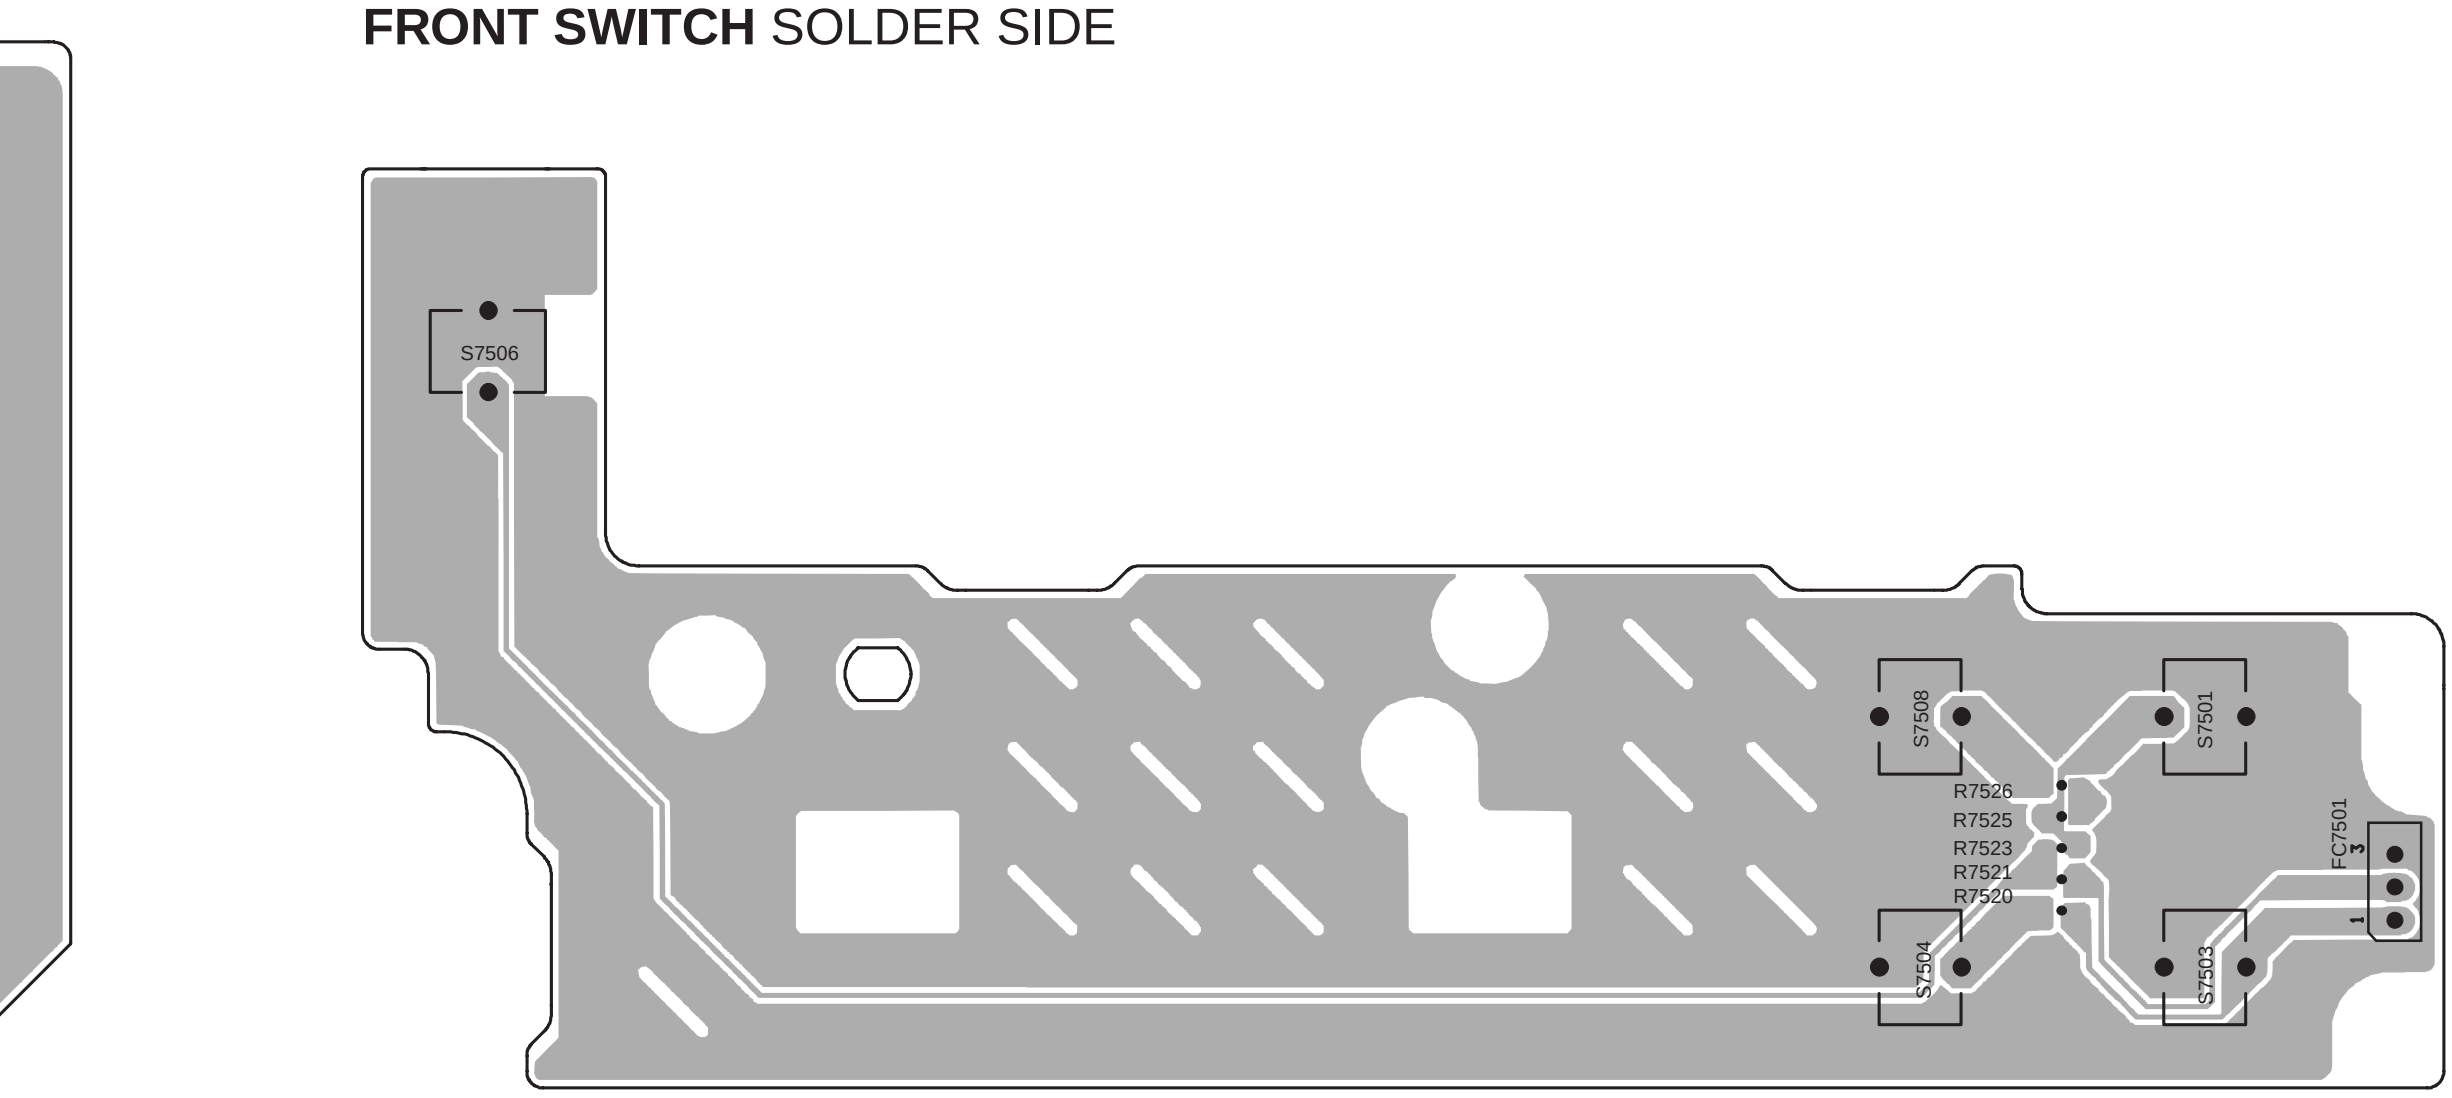
S7506
S7508
S7501
R7526
R7525
R7523
R7521
R7520
FC7501
3
1
S7504
S7503

FRONT SWITCH PCB		
	Component	Solder
FC7501	C7	B11
S7501	C7	B11
S7503	C7	B11
S7504	C8	B10
S7506	D11	B7
S7508	C8	B10

ADRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
FRONT JACK PCB / FRONT SWITCH PCB
COMPONENT SIDE / SOLDER SIDE

7 8 9 10 11 12

19 PRINTED CIRCUIT BOARD

19.1. MAIN PCB (COMPONENT SIDE)

(REPD0010A: NV-VP28EG / NV-VP33EG) (REPD0010B: NV-VP28EC / NV-VP33EC) (REPD0010C: NV-
(REPD0010F: NV-VP23EG) (REPD0010G: NV-VP23EC) (REPD0010J: NV-VP23EP)

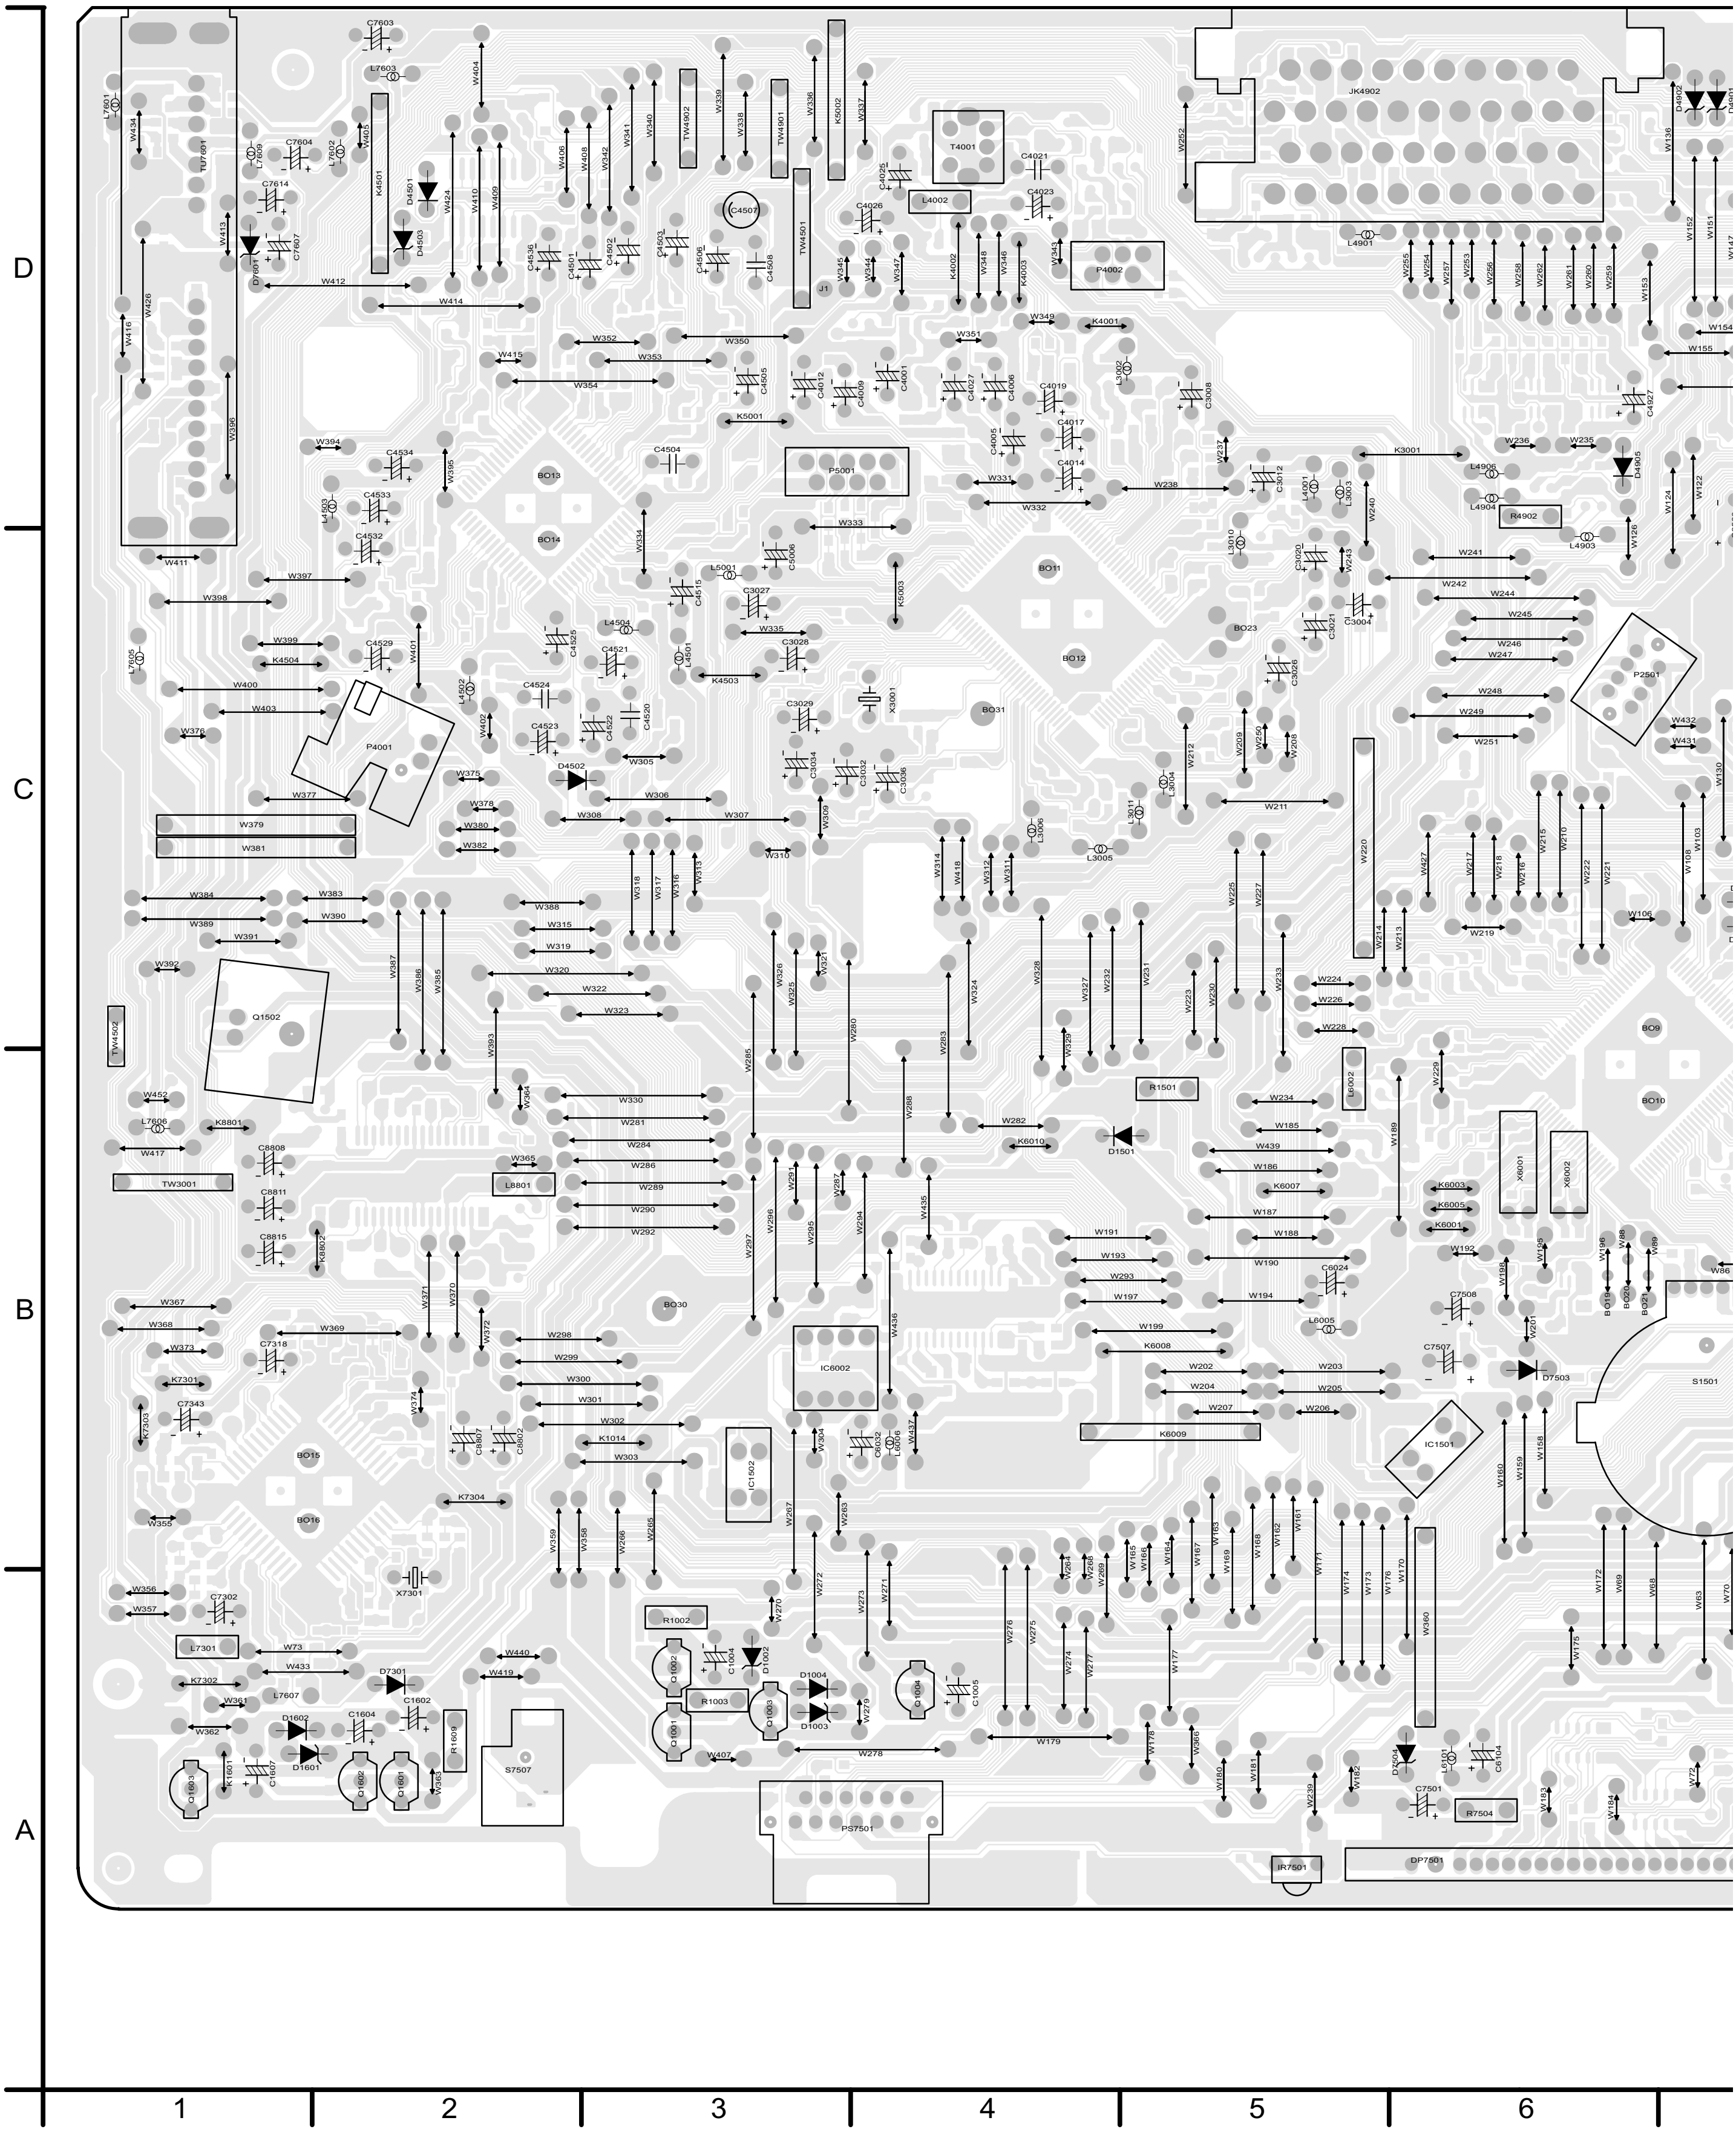
D
C
B
A
1
2
3
4
5
6
JK4902
T4001
P4002
P5001
P4001
P2501
Q1502
IC6002
IC1502
IC1501
S1501
S7507
PS7501
IR7501
DP7501
X3001
X7301
TW4501
TW4502
TW4901
TW4902
TW3001
BO11
BO12
BO13
BO14
BO15
BO16
BO23
BO30
BO31
BO9
BO10

0010C: NV-VP33EB) (REPD0010D: NV-VP33EBL) (REPD0010E: NV-VP33EP)

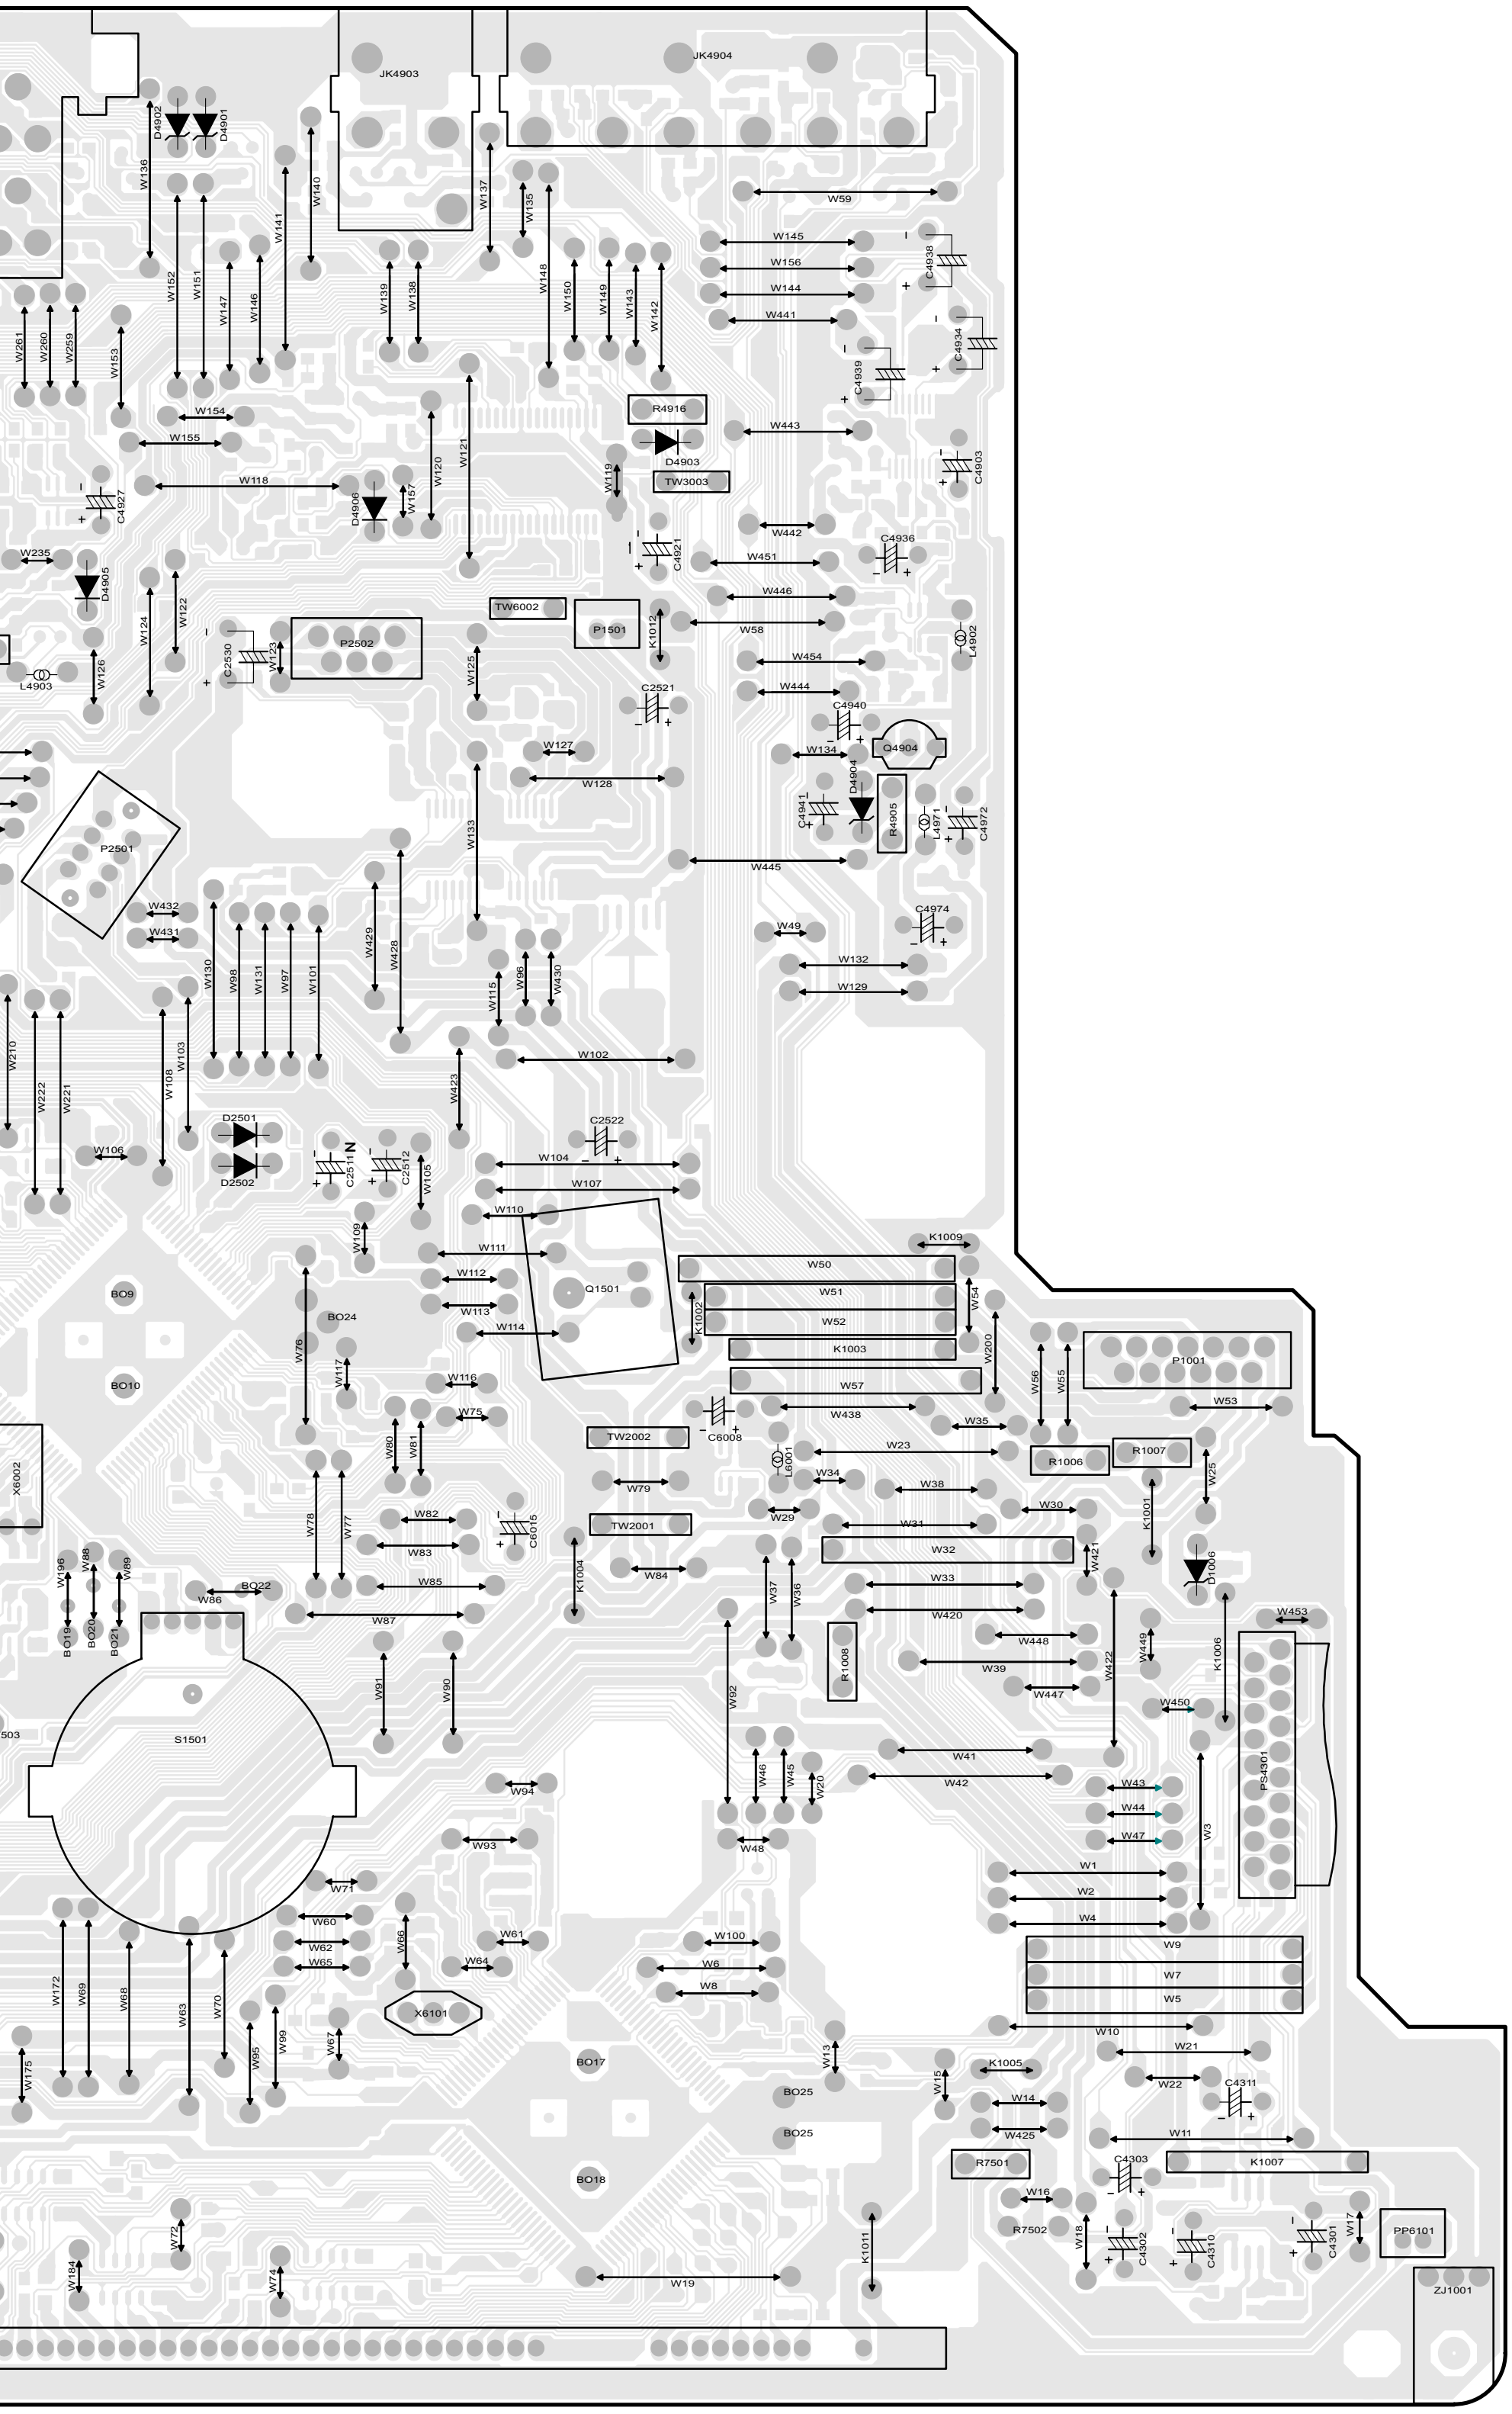

MAIN PCB	
IC1501	B6
IC1502	B3
IC6002	B3
JK4902	D5
JK4903	D7
JK4904	D8
Q1001	A3
Q1002	A3
Q1003	A3
Q1004	A4
Q1501	C8
Q1502	C1
Q1601	A2
Q1602	A2
Q1603	A1
Q4904	C9
P1001	B9
P1501	D8
P2501	C6
P2502	D7
P4001	C2
P4002	D5
P5001	D3
PS4301	B10
PS7501	A3
DP 7501	A6
PP6101	A10
X3001	C4
X6001	B6
X6002	B6
X6101	A7
X7301	A2
S1501	B7
S7507	A2
TW2001	B8
TW2002	B8
TW3001	B1
TW3003	D8
TW4501	D4
TW4501	D3
TW4502	C1
TW4901	D3
TW4902	D3
TW6002	D8
TU7601	D1

ADRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB
COMPONENT SIDE

7 8 9 10 11 12

19.3. MAIN PCB (COMPONENT SIDE - ONLY REPD0024x)

(REPD0024A: NV-VP28EG / NV-VP33EG) (REPD0024B: NV-VP28EC / NV-VP33EC) (REPD0024C: NV-

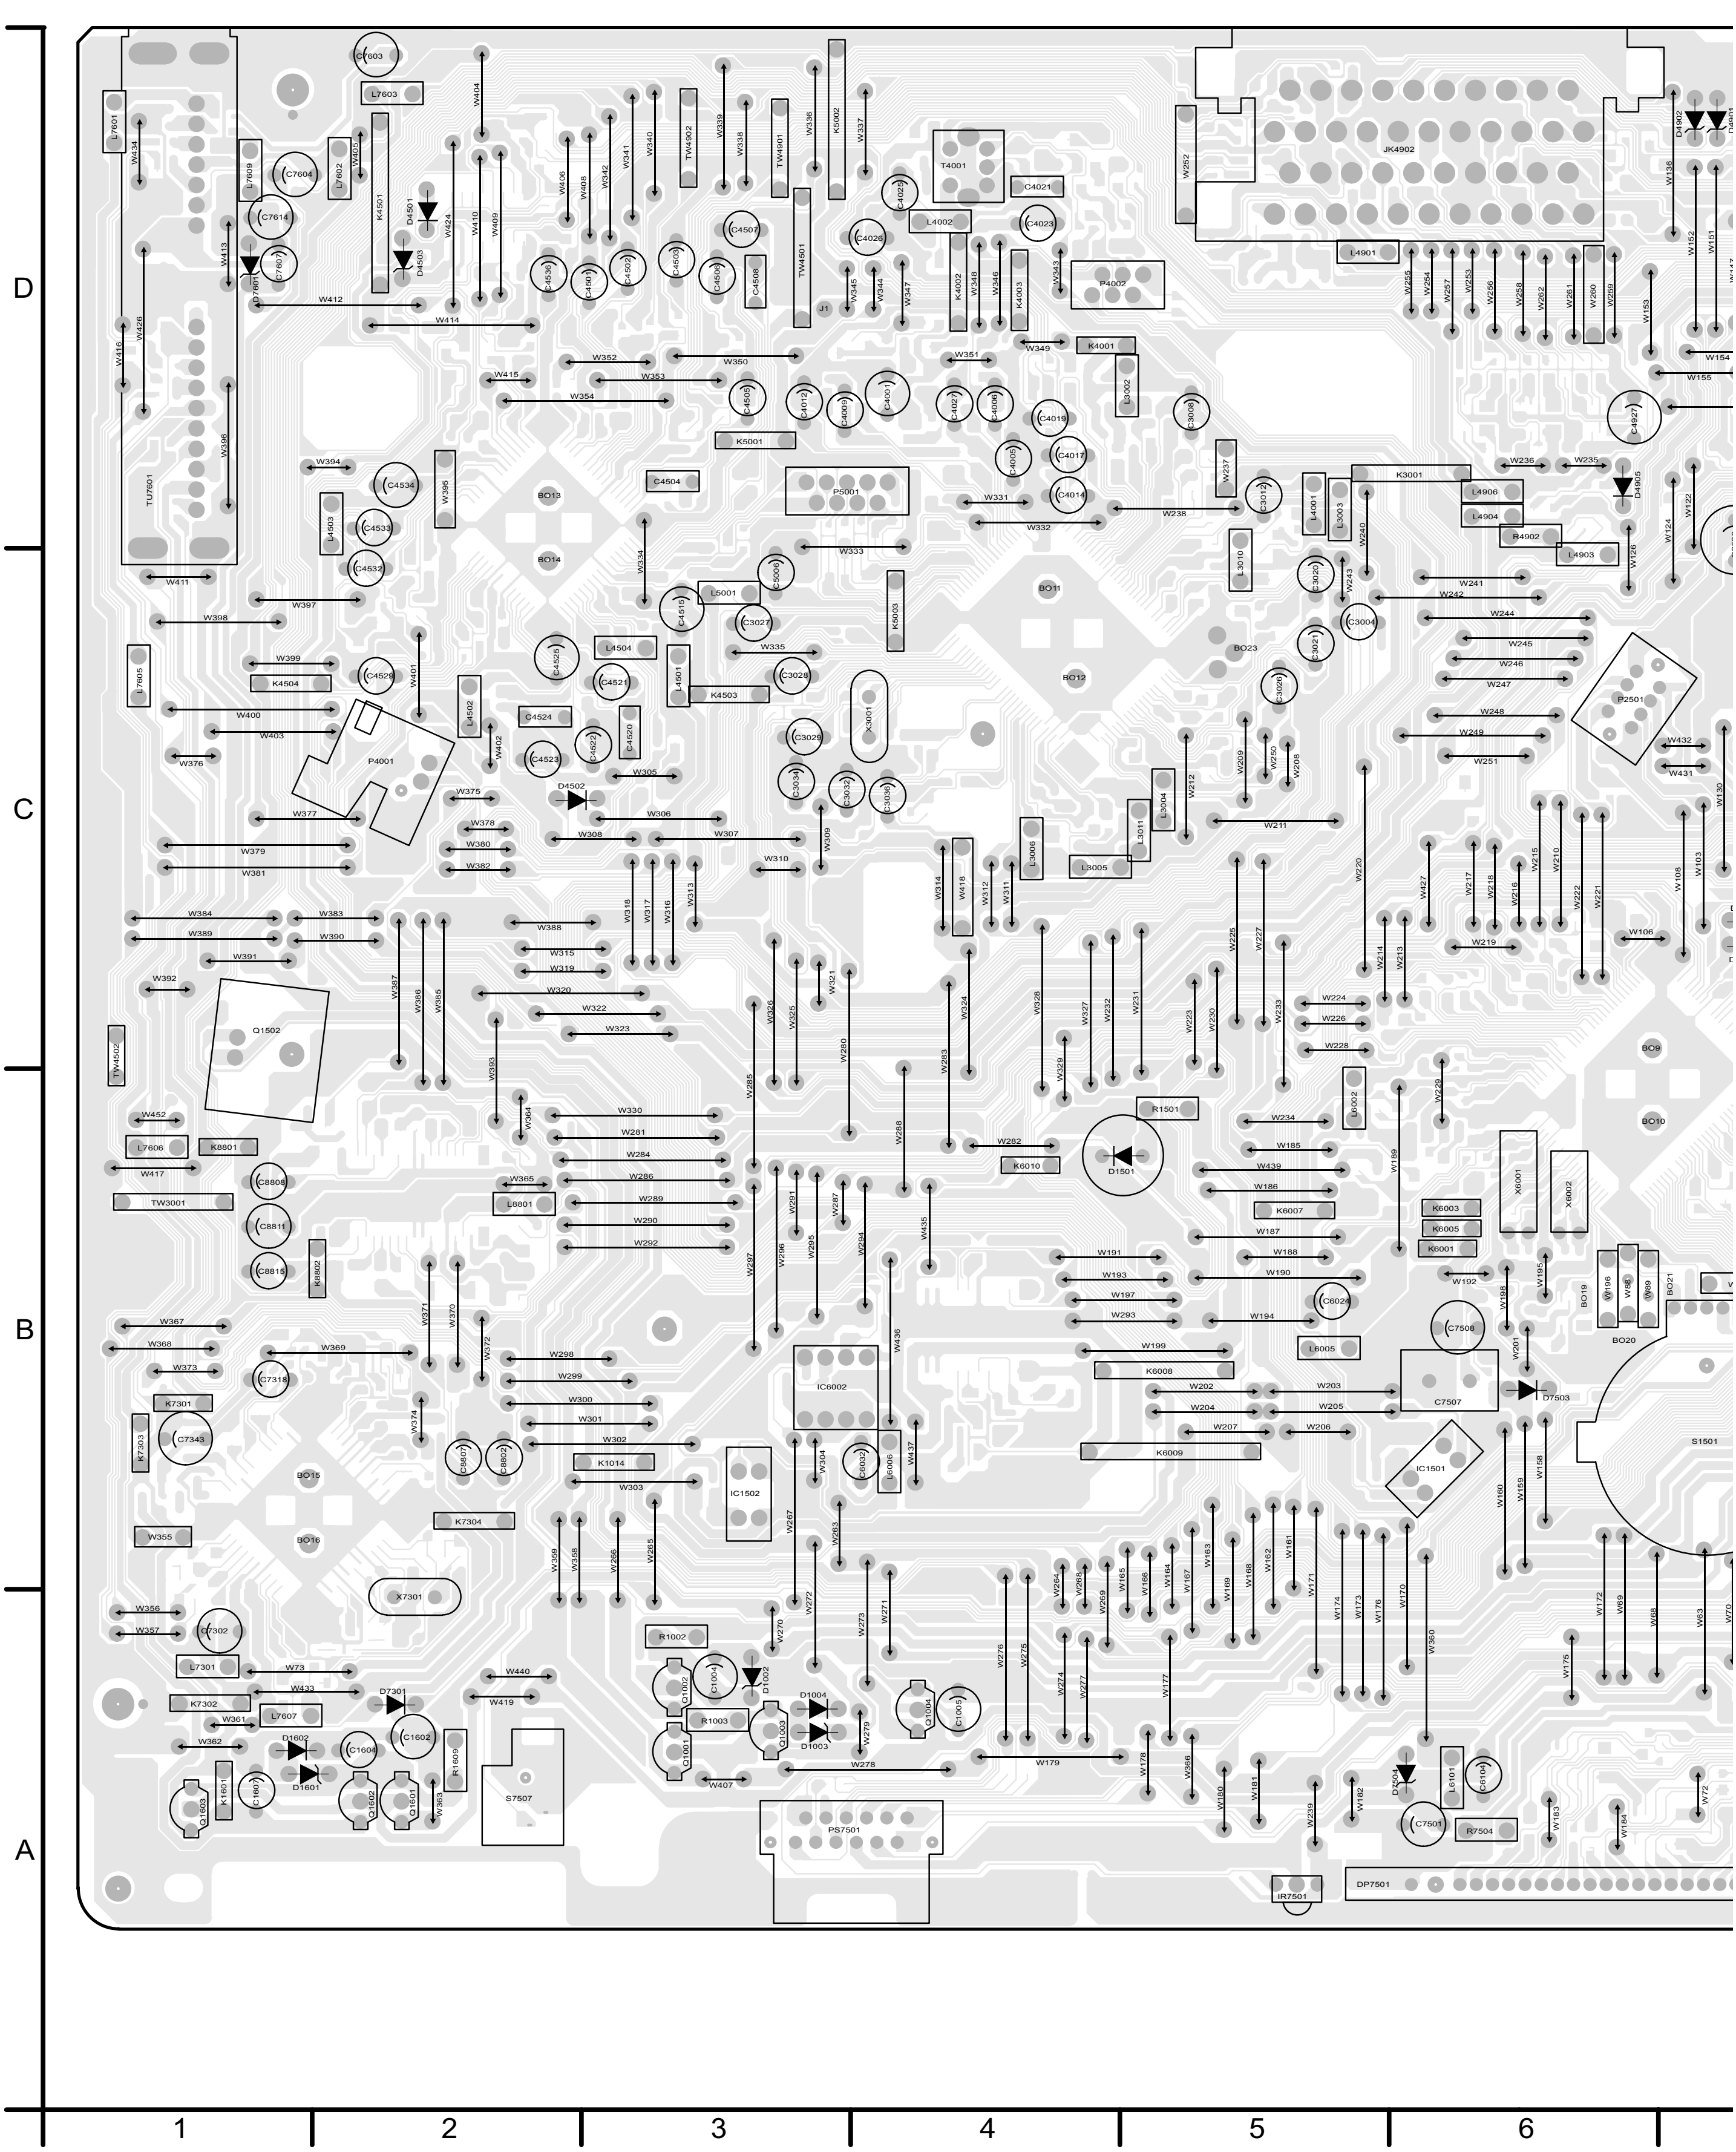

D
C
B
A
1
2
3
4
5
6
JK4902
TU7601
T4001
P4001
P4002
P5001
P2501
K3001
Q1502
IC6002
IC1502
IC1501
S1501
S7507
PS7501
DP7501
IR7501
X7301
X3001
X6001
X6002
D1501
C7507
C7508
R1501
BO9
BO10
BO11
BO12
BO13
BO14
BO15
BO16
BO19
BO20
BO21
BO23

0024C: NV-VP33EB) (REPD0024D: NV-VP33EBL) (REPD0024E: NV-VP33EP)

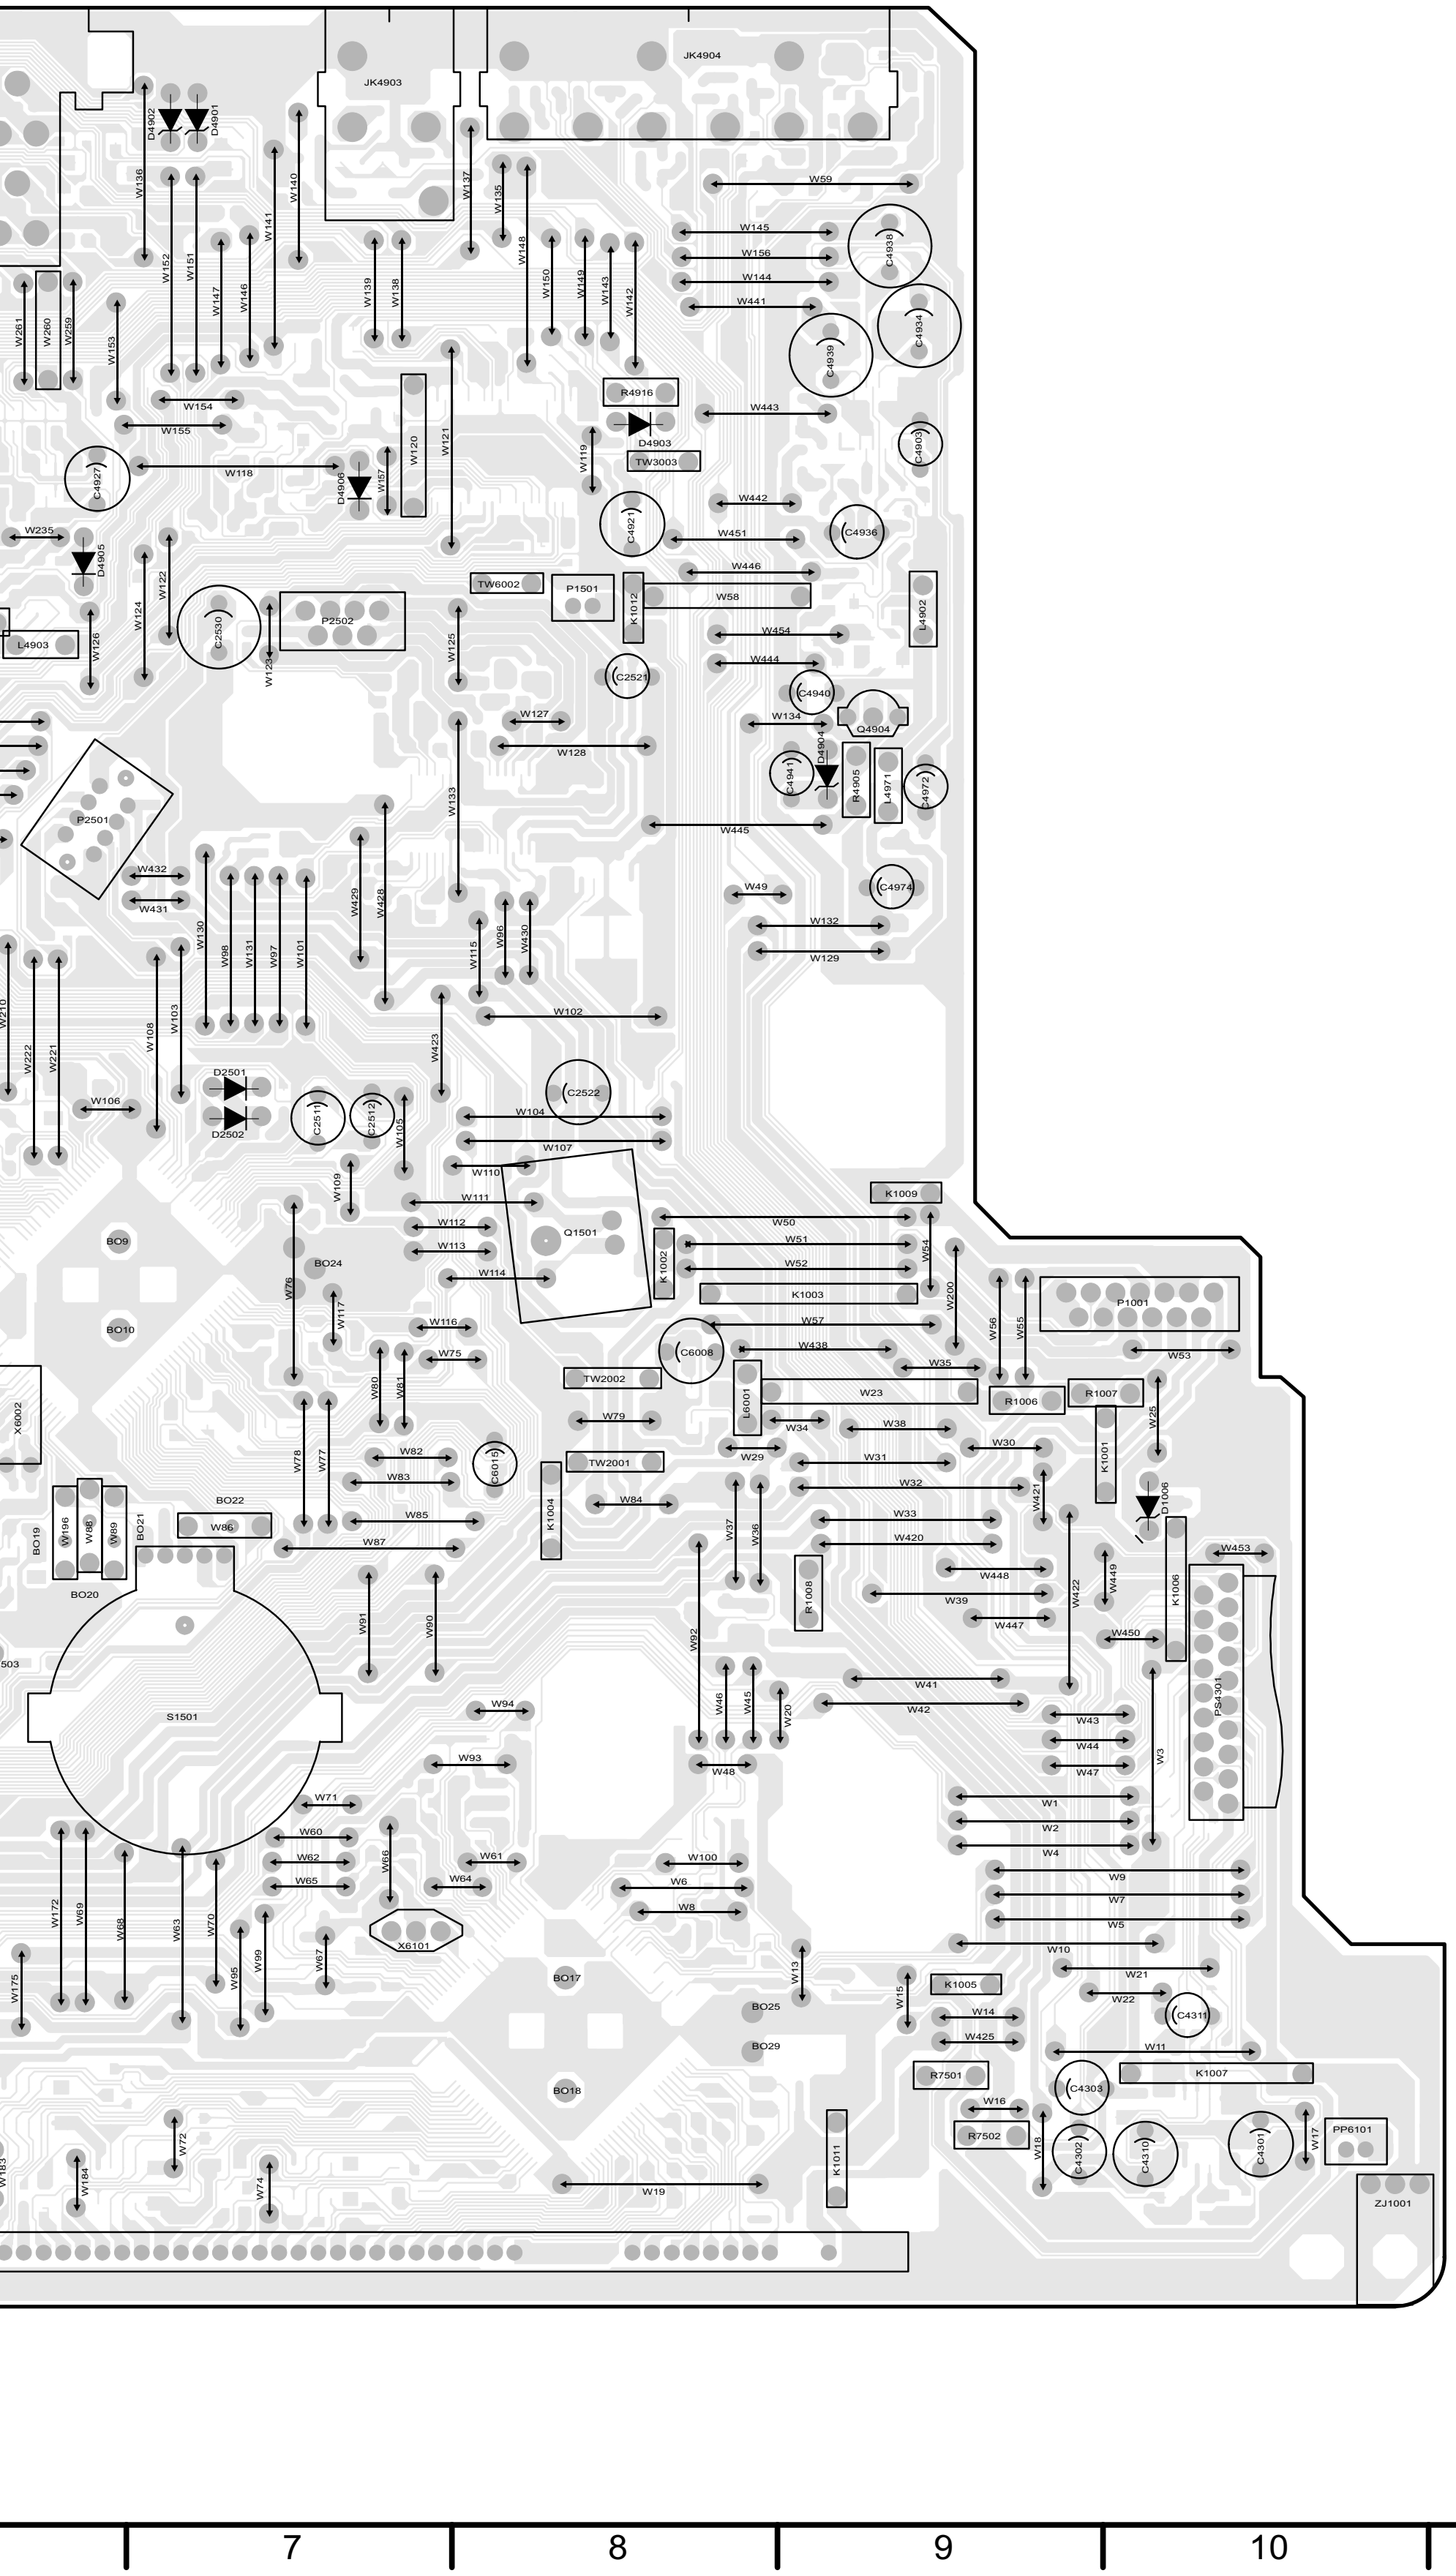
JK4903
JK4904
D4902
D4901
C4938
C4939
C4934
R4916
D4903
TW3003
C4903
C4927
D4906
C4921
C4936
D4905
TW6002
P1501
K1012
L4902
C2530
P2502
L4903
C2521
C4940
Q4904
D4904
C4941
R4905
L4971
C4972
P2501
C4974
D2501
D2502
C2511
C2512
C2522
K1009
Q1501
K1002
K1003
P1001
C6008
TW2002
L6001
R1006
R1007
X6002
C6013
TW2001
K1001
D1006
K1004
BO22
BO19
BO20
BO21
BO9
BO10
BO24
K1006
PS4301
S1501
X6101
BO17
BO18
BO25
BO29
K1005
C4311
K1007
R7501
R7502
C4303
C4302
C4310
C4301
PP6101
K1011
ZJ1001
7
8
9
10
11
12

MAIN PCB	
IC1501	B6
IC1502	B3
IC6002	B3
JK4902	D5
JK4903	D7
JK4904	D8
Q1001	A3
Q1002	A3
Q1003	A3
Q1004	A4
Q1501	C8
Q1502	C1
Q1601	A2
Q1602	A2
Q1603	A1
Q4904	C9
P1001	B9
P1501	D8
P2501	C6
P2502	D7
P4001	C2
P4002	D5
P5001	D3
PS4301	B10
PS7501	A3
DP 7501	A6
PP6101	A10
X3001	C4
X6001	B6
X6002	B6
X6101	A7
X7301	A2
S1501	B7
S7507	A2
TW2001	B8
TW2002	B8
TW3001	B1
TW3003	D8
TW4501	D4
TW4501	D3
TW4502	C1
TW4901	D3
TW4902	D3
TW6002	D8
TU7601	D1

ADRESS INFORMATION

NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB
COMPONENT SIDE

19.4. MAIN PCB (SOLDER SIDE - ONLY REPD0024x)

(REPD0024A: NV-VP28EG / NV-VP33EG) (REPD0024B: NV-VP28EC / NV-VP33EC) (REPD0024C: NV-

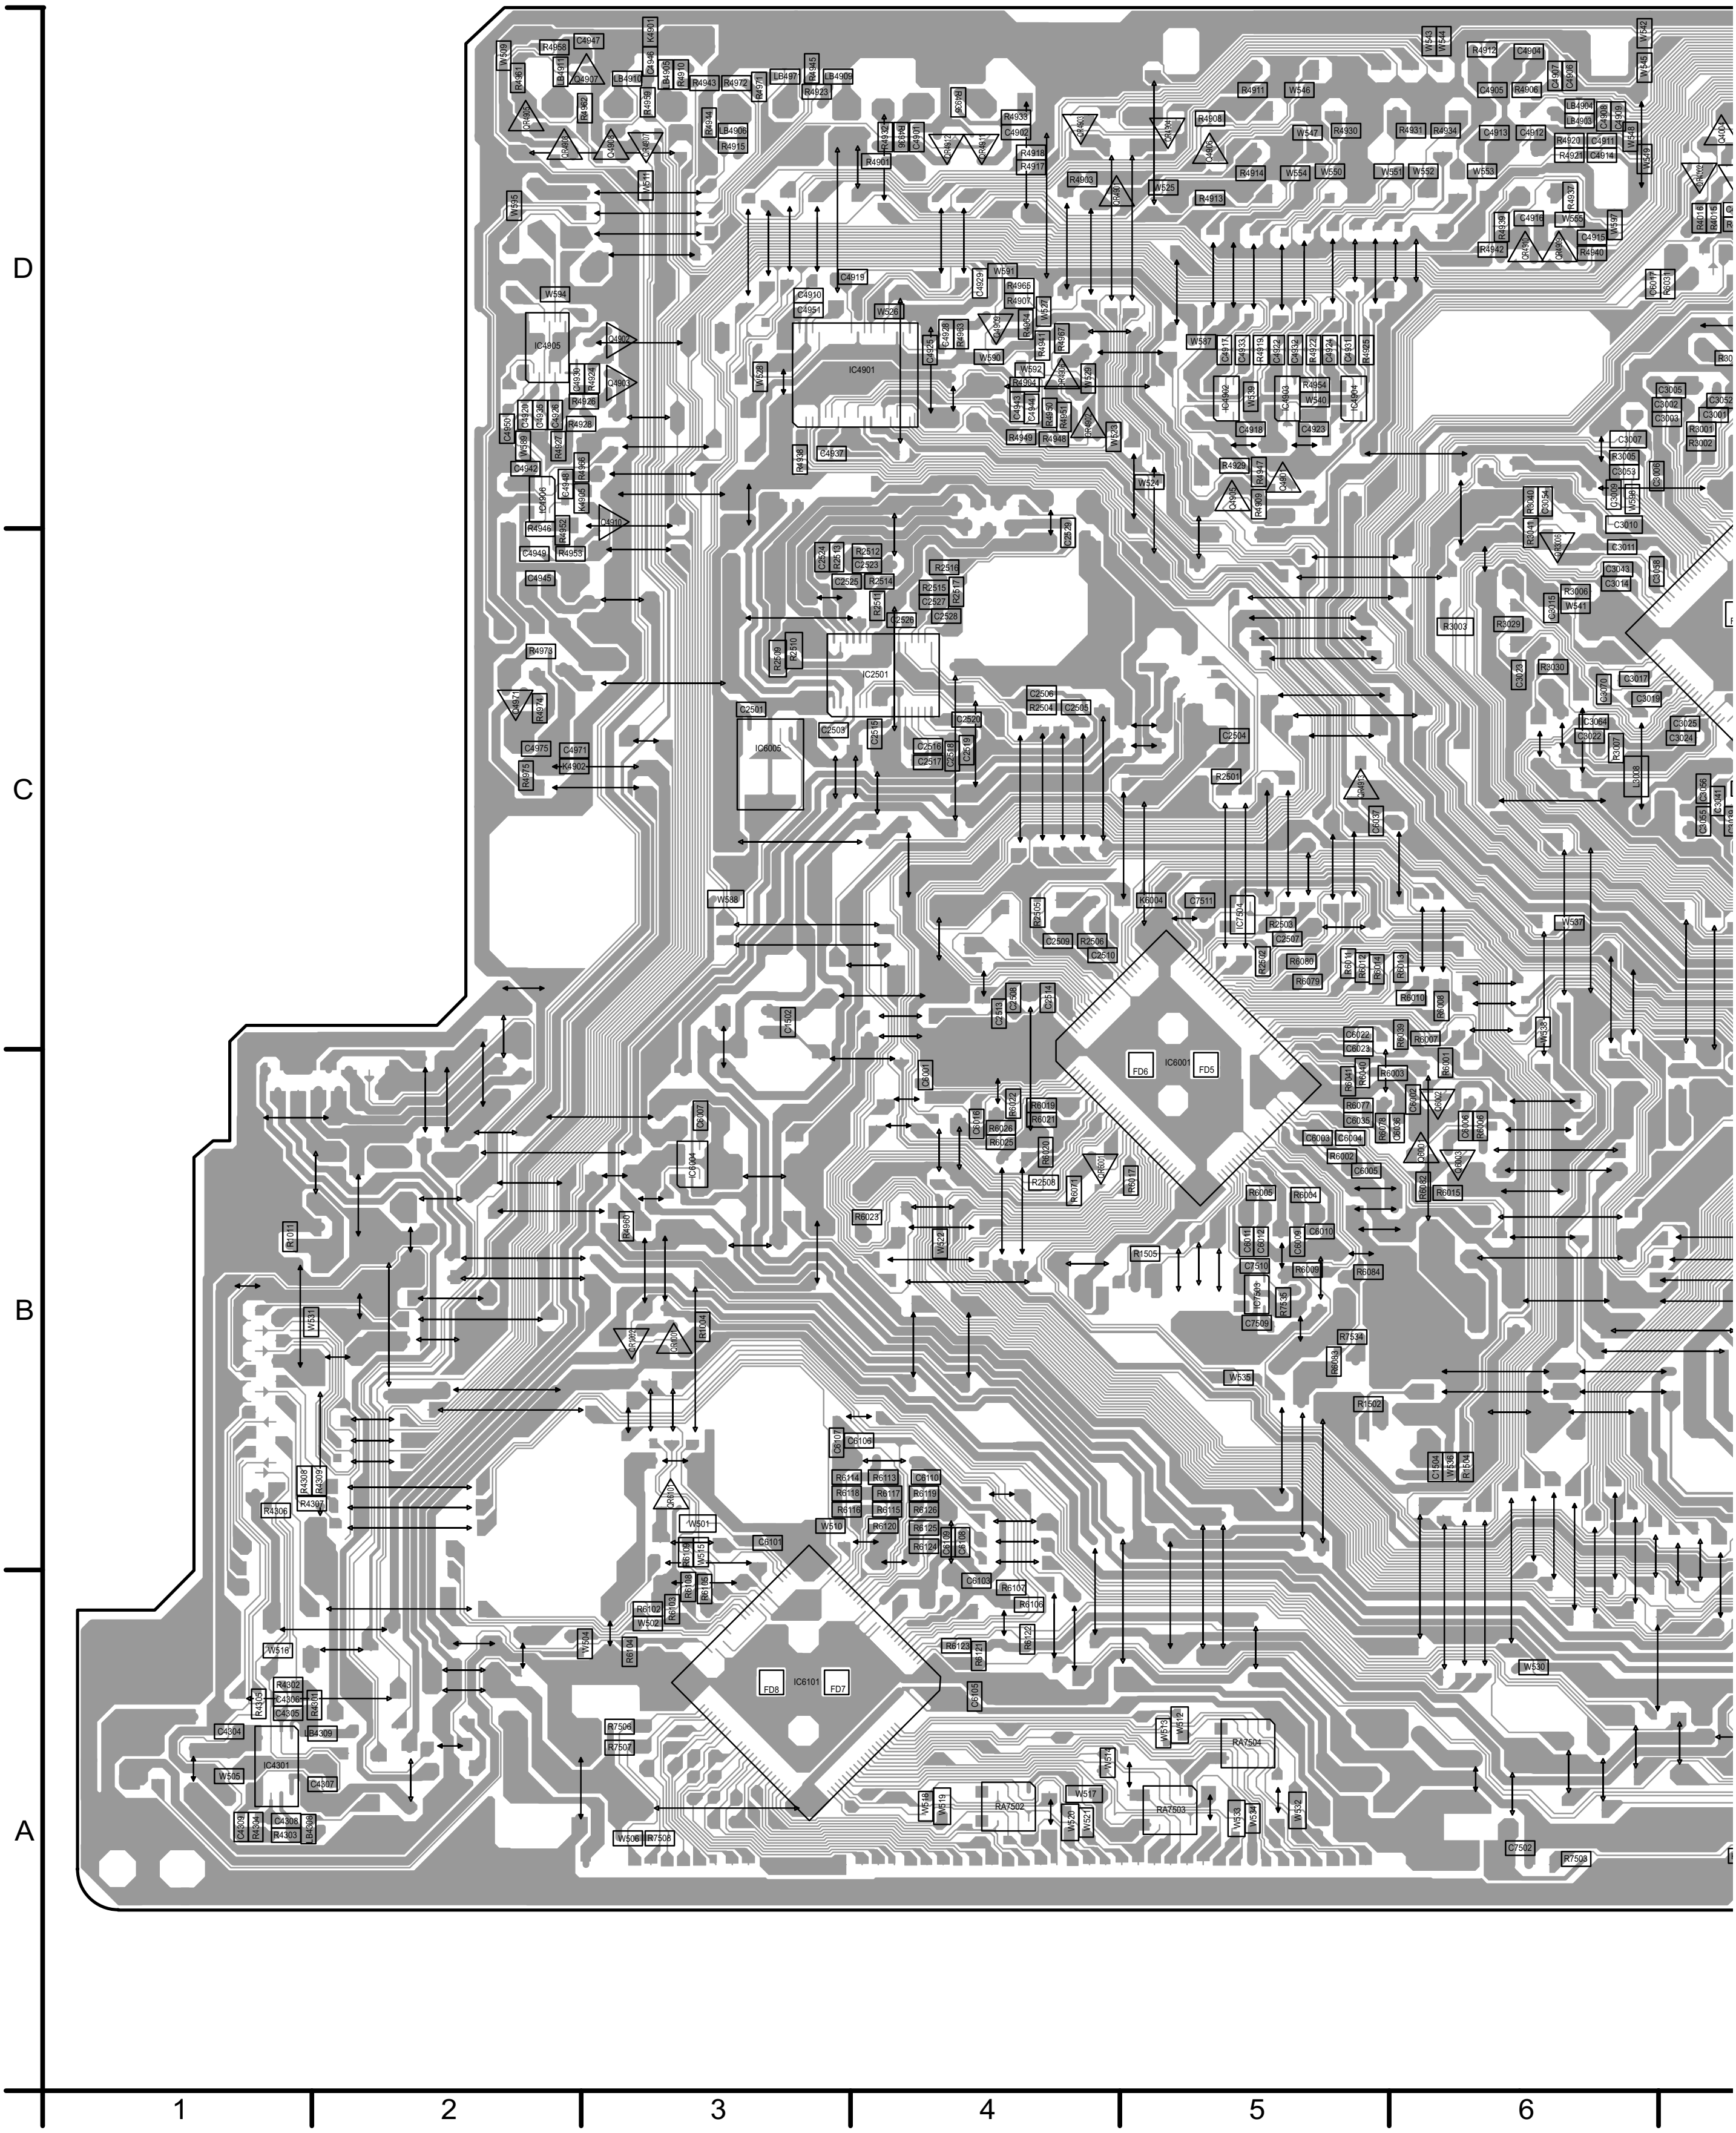
D
C
B
A
1
2
3
4
5
6
IC4905
IC4901
IC2501
IC6005
IC6001
IC6101
IC4301
FD5
FD6
FD7
FD8

0024C: NV-VP33EB) (REPD0024D: NV-VP33EBL) (REPD0024E: NV-VP33EP)

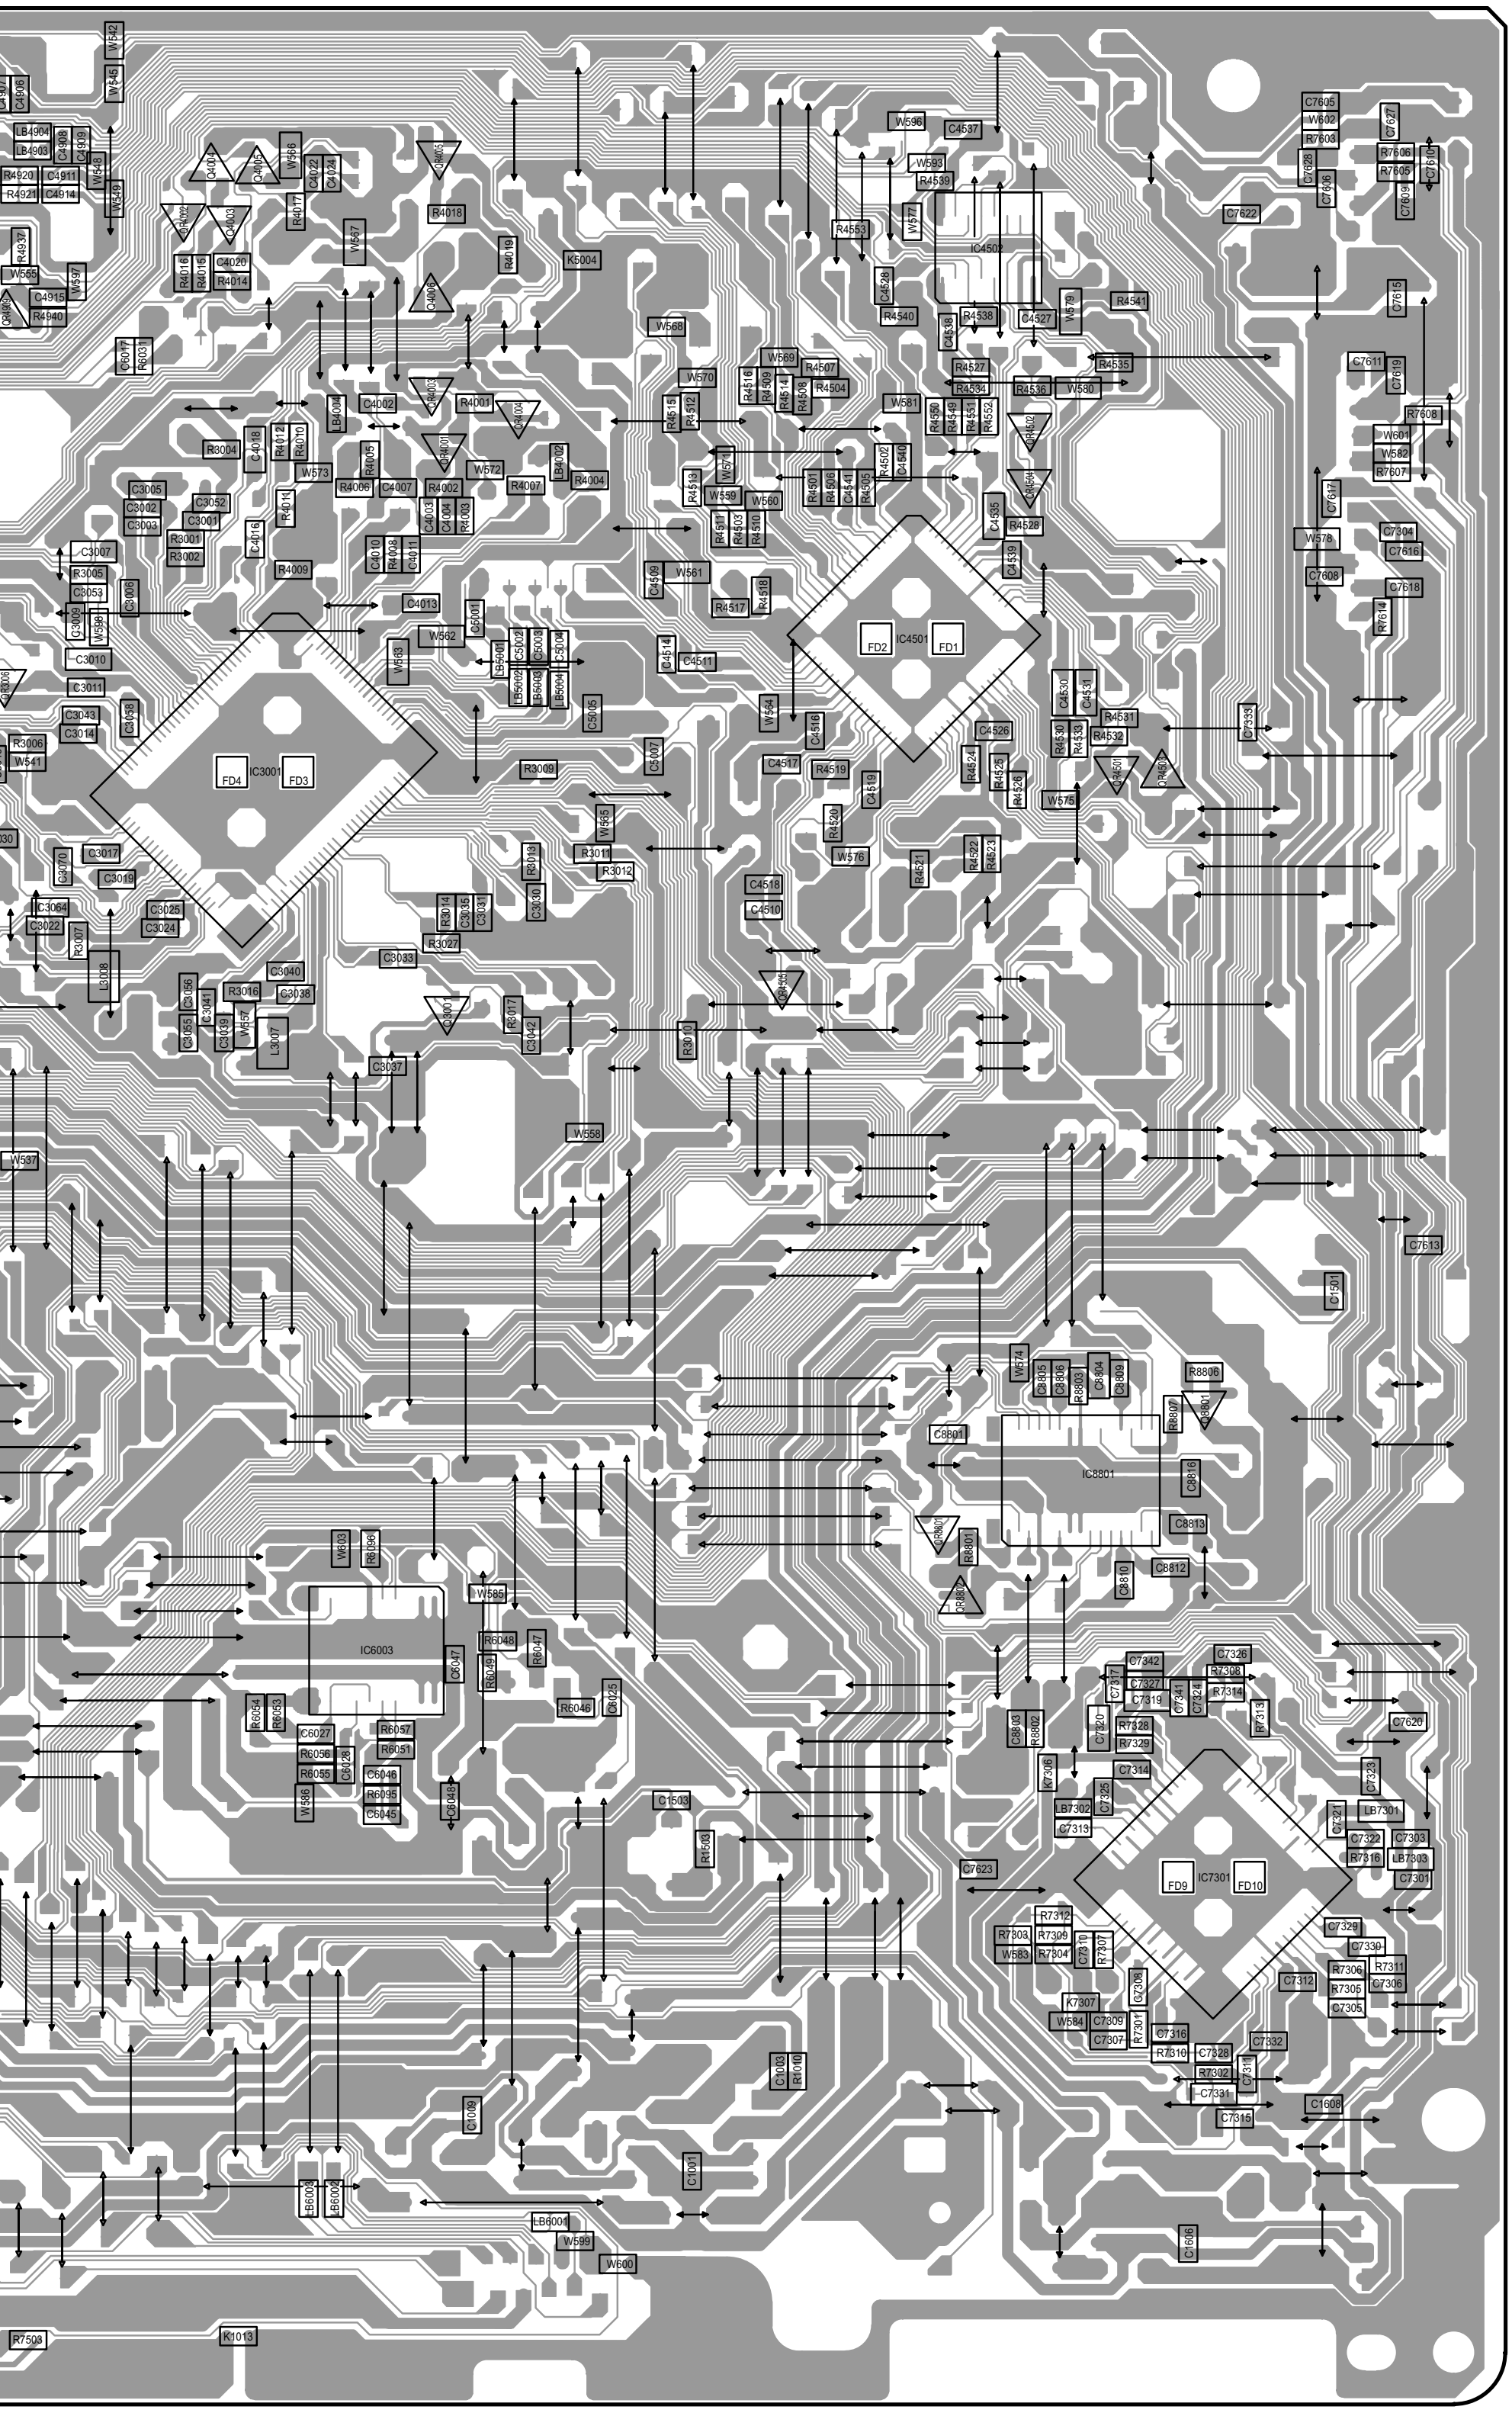

MAIN PCB			
IC 2501	C4	QR 1001	B3
IC 3001	C7	QR 1002	B3
IC 4301	A1	QR 3006	C6
IC 4501	C9	QR 4001	D7
IC 4901	D4	QR 4002	D7
IC 4902	D5	QR 4003	D7
IC 4903	D5	QR 4004	D8
IC 4904	D5	QR 4005	D7
IC 4905	D2	QR 4501	C9
IC 6001	B5	QR 4502	D9
IC 6003	B7	QR 4503	C10
IC 6004	B3	QR 4504	D9
IC 6005	C3	QR 4505	C8
IC 6101	A3	QR 4901	D4
IC 7301	B10	QR 4902	D4
IC 7503	B5	QR 4903	D4
IC 7504	C5	QR 4904	D5
IC 8801	B9	QR 4905	D2
Q 3001	C7	QR 4906	D4
Q 4003	D7	QR 4907	D3
Q 4004	D7	QR 4908	D2
Q 4005	D7	QR 4909	D6
Q 4006	D7	QR 4910	D6
Q 4901	C5	QR 4911	D4
Q 4902	D3	QR 4912	D4
Q 4903	D3	QR 4913	D4
Q 4905	C5	QR 6001	B4
Q 4906	D5	QR 6101	B3
Q 4907	D3	QR 8801	B9
Q 4908	D3	QR 8802	B9
Q 4909	D4	RA 7502	A4
Q 4910	C3	RA 7503	A5
Q 4971	C2	RA 7504	A5
Q 6001	B6		
Q 6002	B6		
Q 6003	B6		
Q 8801	B10		

ADRESS INFORMATION

NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB
SOLDER SIDE

7 8 9 10 11 12

19.2. MAIN PCB (SOLDER SIDE)

(REPD0010A: NV-VP28EG / NV-VP33EG) (REPD0010B: NV-VP28EC / NV-VP33EC) (REPD0010C: NV-
(REPD0010F: NV-VP23EG) (REPD0010G: NV-VP23EC) (REPD0010J: NV-VP23EP)

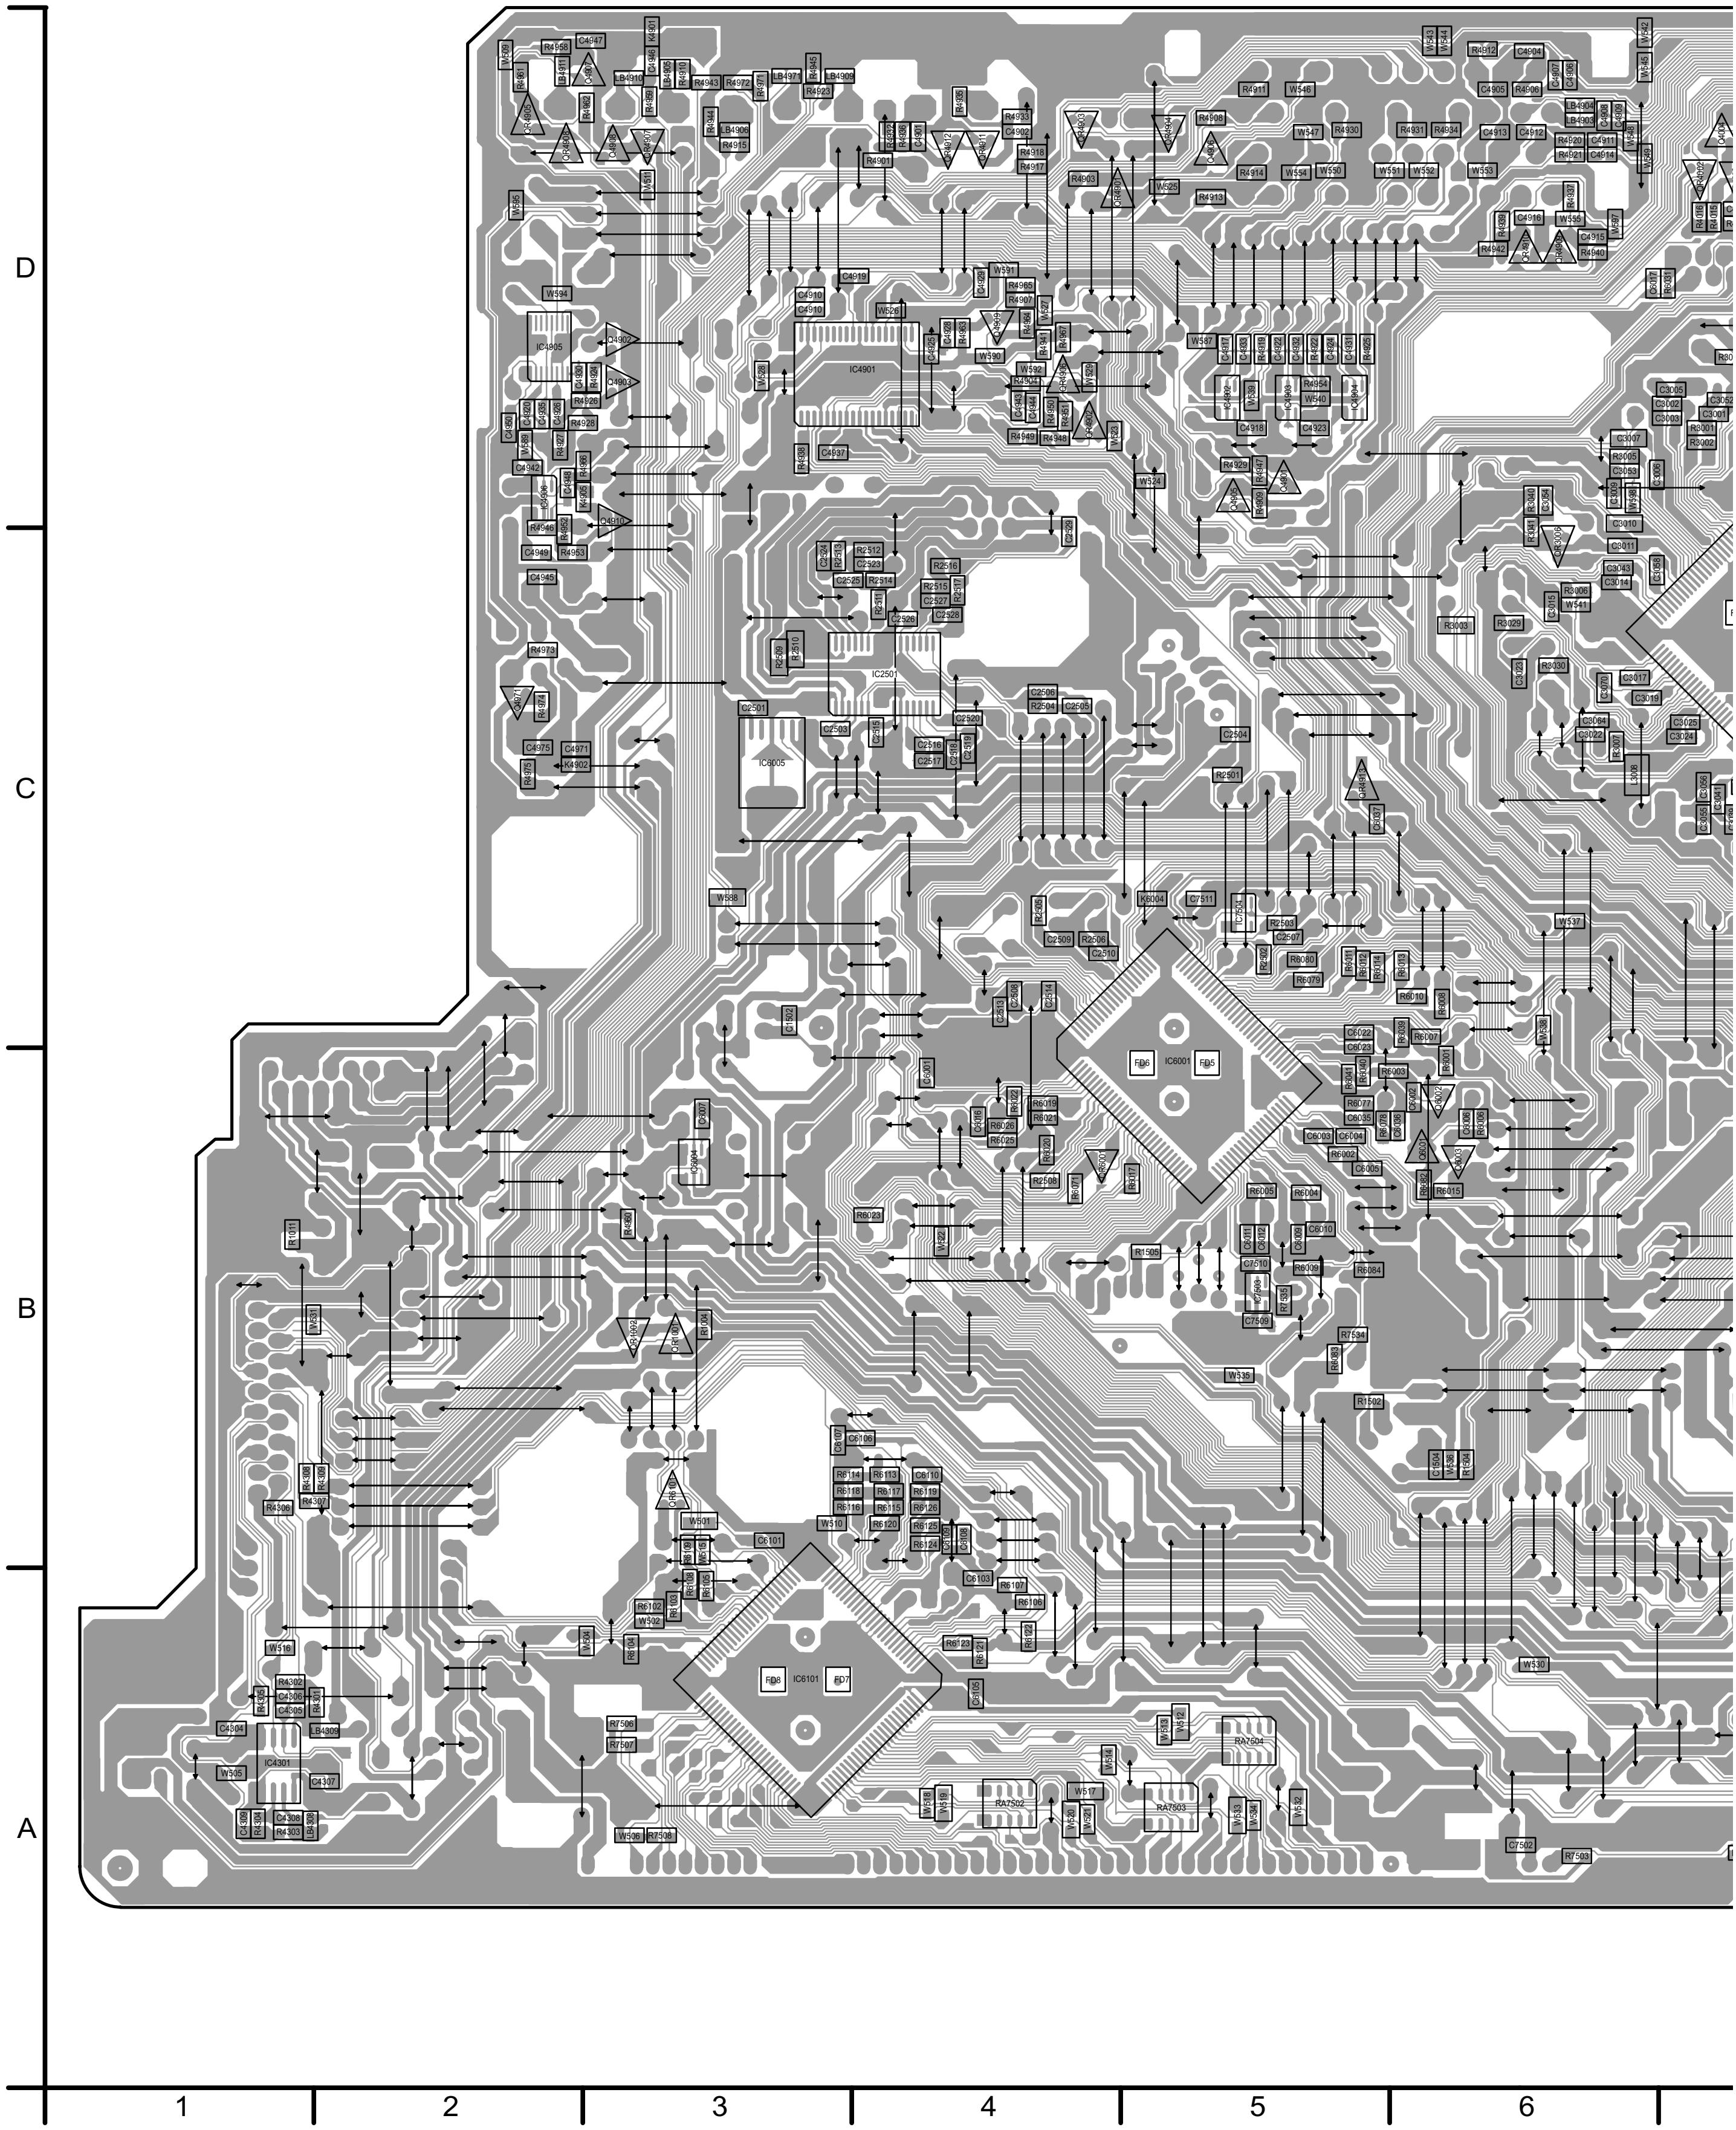
D
C
B
A
1
2
3
4
5
6
IC4901
IC4905
IC2501
IC6005
IC6001
IC6101
IC4301
RA7502
RA7503
RA7504

0010C: NV-VP33EB) (REPD0010D: NV-VP33EBL) (REPD0010E: NV-VP33EP)

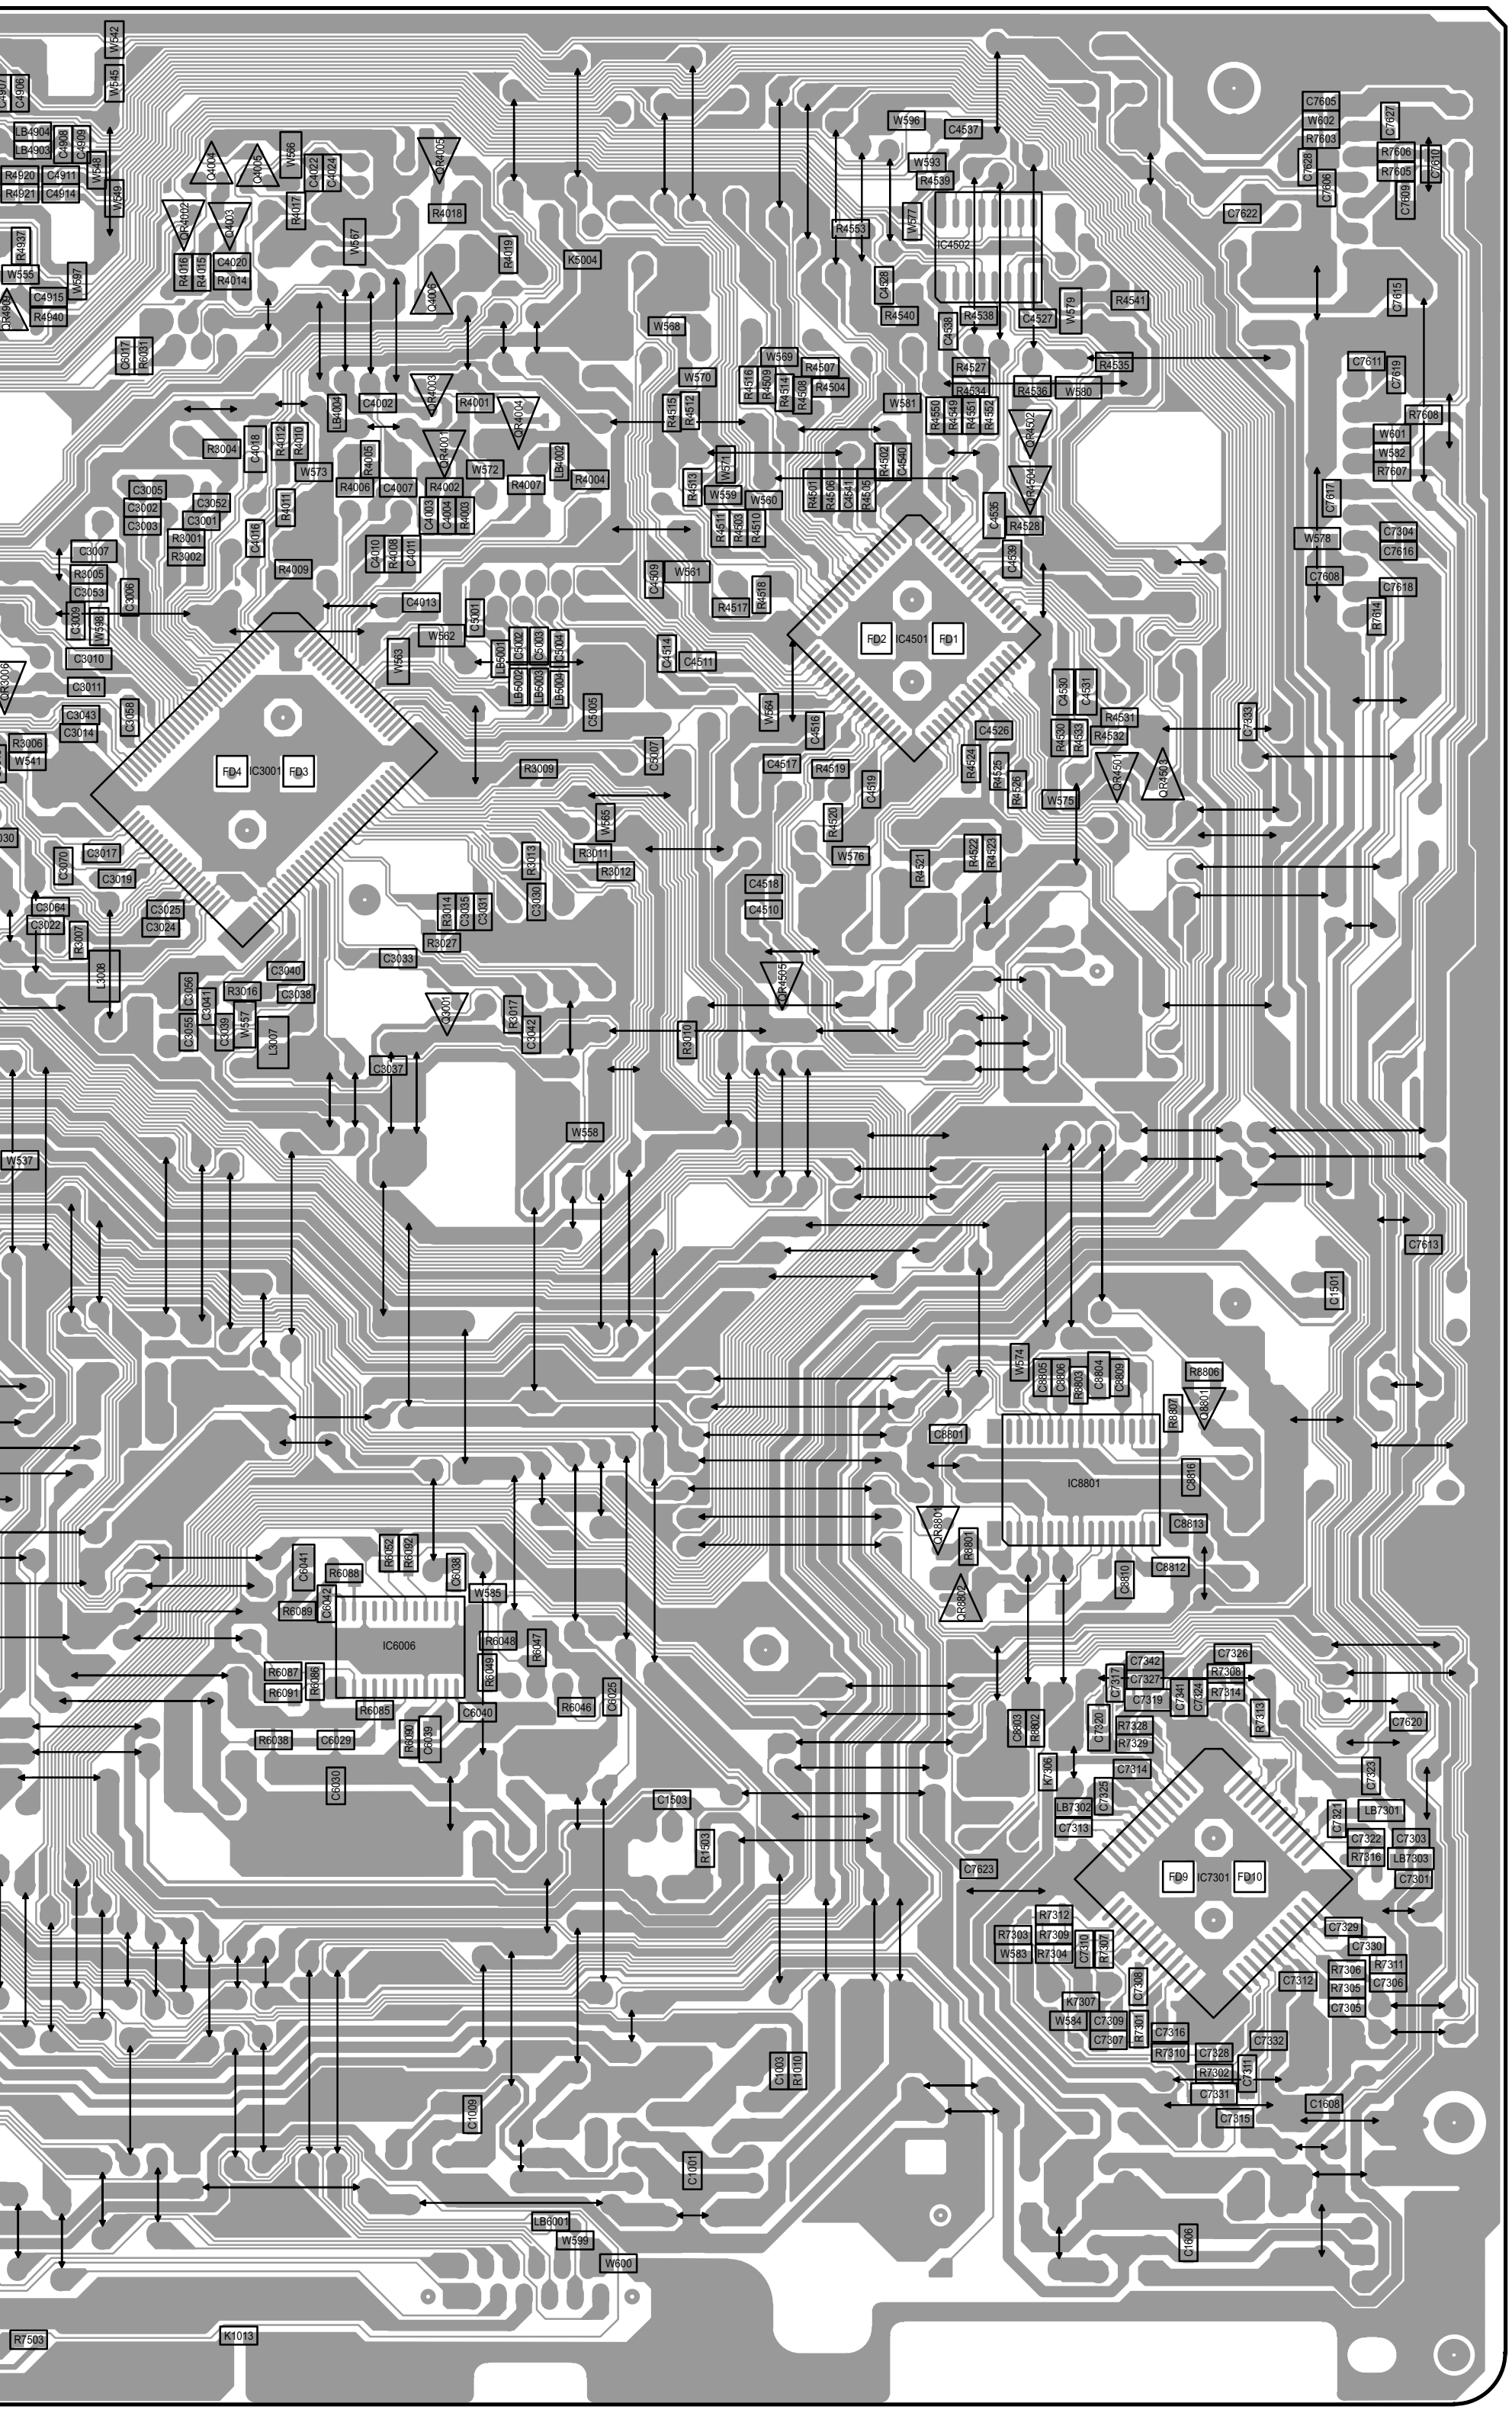

MAIN PCB			
IC 2501	C4	QR 1001	B3
IC 3001	C7	QR 1002	B3
IC 4301	A1	QR 3006	C6
IC 4501	C9	QR 4001	D7
IC 4901	D4	QR 4002	D7
IC 4902	D5	QR 4003	D7
IC 4903	D5	QR 4004	D8
IC 4904	D5	QR 4005	D7
IC 4905	D2	QR 4501	C9
IC 6001	B5	QR 4502	D9
IC 6004	B3	QR 4503	C10
IC 6005	C3	QR 4504	D9
IC 6006	B7	QR 4505	C8
IC 6101	A3	QR 4901	D4
IC 7301	B10	QR 4902	D4
IC 7503	B5	QR 4903	D4
IC 7504	C5	QR 4904	D5
IC 8801	B9	QR 4905	D2
Q 3001	C7	QR 4906	D4
Q 4003	D7	QR 4907	D3
Q 4004	D7	QR 4908	D2
Q 4005	D7	QR 4909	D6
Q 4006	D7	QR 4910	D6
Q 4901	C5	QR 4911	D4
Q 4902	D3	QR 4912	D4
Q 4903	D3	QR 4913	D4
Q 4905	C5	QR 6001	B4
Q 4906	D5	QR 6101	B3
Q 4907	D3	QR 8801	B9
Q 4908	D3	QR 8802	B9
Q 4909	D4	RA 7502	A4
Q 4910	C3	RA 7503	A5
Q 4971	C2	RA 7504	A5
Q 6001	B6		
Q 6002	B6		
Q 6003	B6		
Q 8801	B10		

ADRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB
SOLDER SIDE

7 8 9 10 11 12

19.7. POWER PCB

(REPD0012A)

COMPONENT SIDE

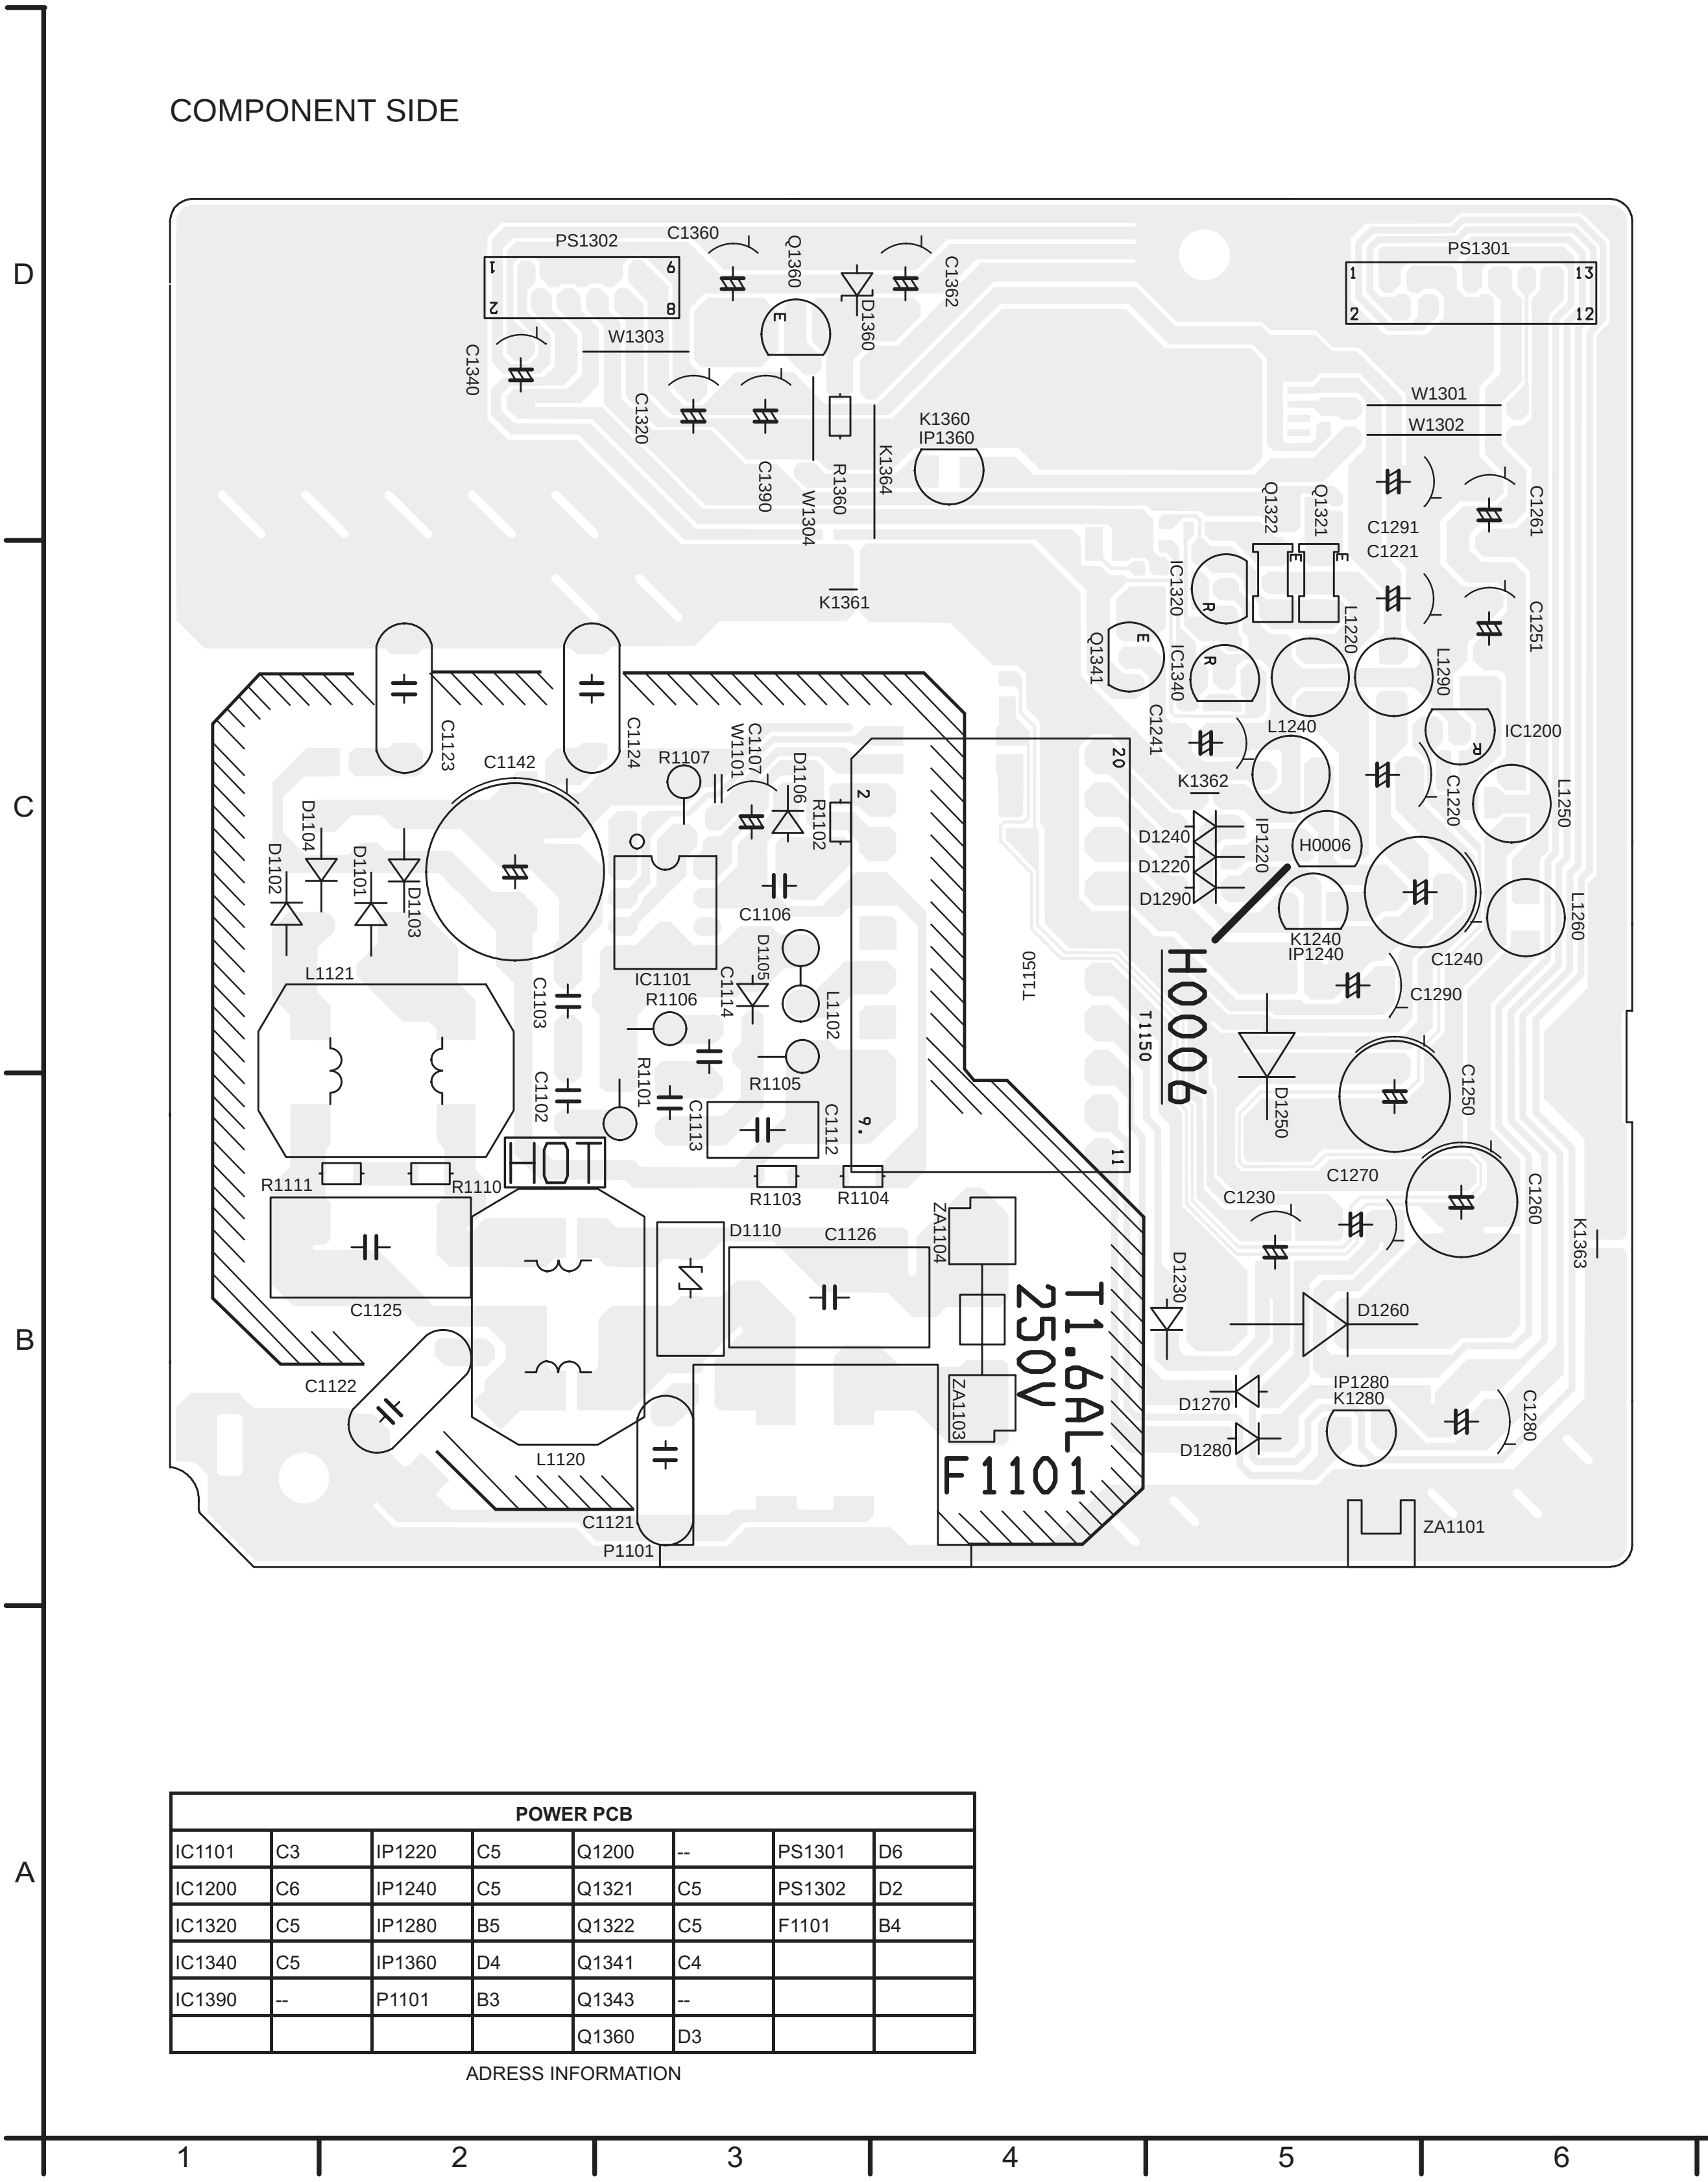
D
C
B
A
1
2
3
4
5
6
PS1302
C1360
Q1360
D1360
C1362
PS1301
W1303
C1340
C1320
C1390
R1360
W1304
K1364
K1360
IP1360
K1361
W1301
W1302
Q1322
Q1321
C1291
C1221
C1261
IC1320
IC1340
Q1341
L1220
L1290
C1251
C1241
L1240
IC1200
K1362
C1220
L1250
D1240
D1220
D1290
IP1220
H0006
K1240
IP1240
C1240
L1260
C1290
D1250
C1250
C1270
C1260
K1363
C1230
D1230
D1260
IP1280
K1280
D1270
D1280
C1280
ZA1101
C1123
C1124
C1142
R1107
C1107
W1101
D1106
R1102
D1104
D1102
D1101
D1103
C1106
D1105
IC1101
R1106
C1114
L1102
L1121
C1103
C1102
R1101
C1113
R1105
C1112
T1150
HOT
R1111
R1110
R1103
R1104
ZA1104
D1110
C1126
C1125
C1122
L1120
C1121
P1101
ZA1103
T1.6AL
250V
F1101

POWER PCB							
IC1101	C3	IP1220	C5	Q1200	--	PS1301	D6
IC1200	C6	IP1240	C5	Q1321	C5	PS1302	D2
IC1320	C5	IP1280	B5	Q1322	C5	F1101	B4
IC1340	C5	IP1360	D4	Q1341	C4		
IC1390	--	P1101	B3	Q1343	--		
				Q1360	D3		

ADRESS INFORMATION

SOLDER SIDE

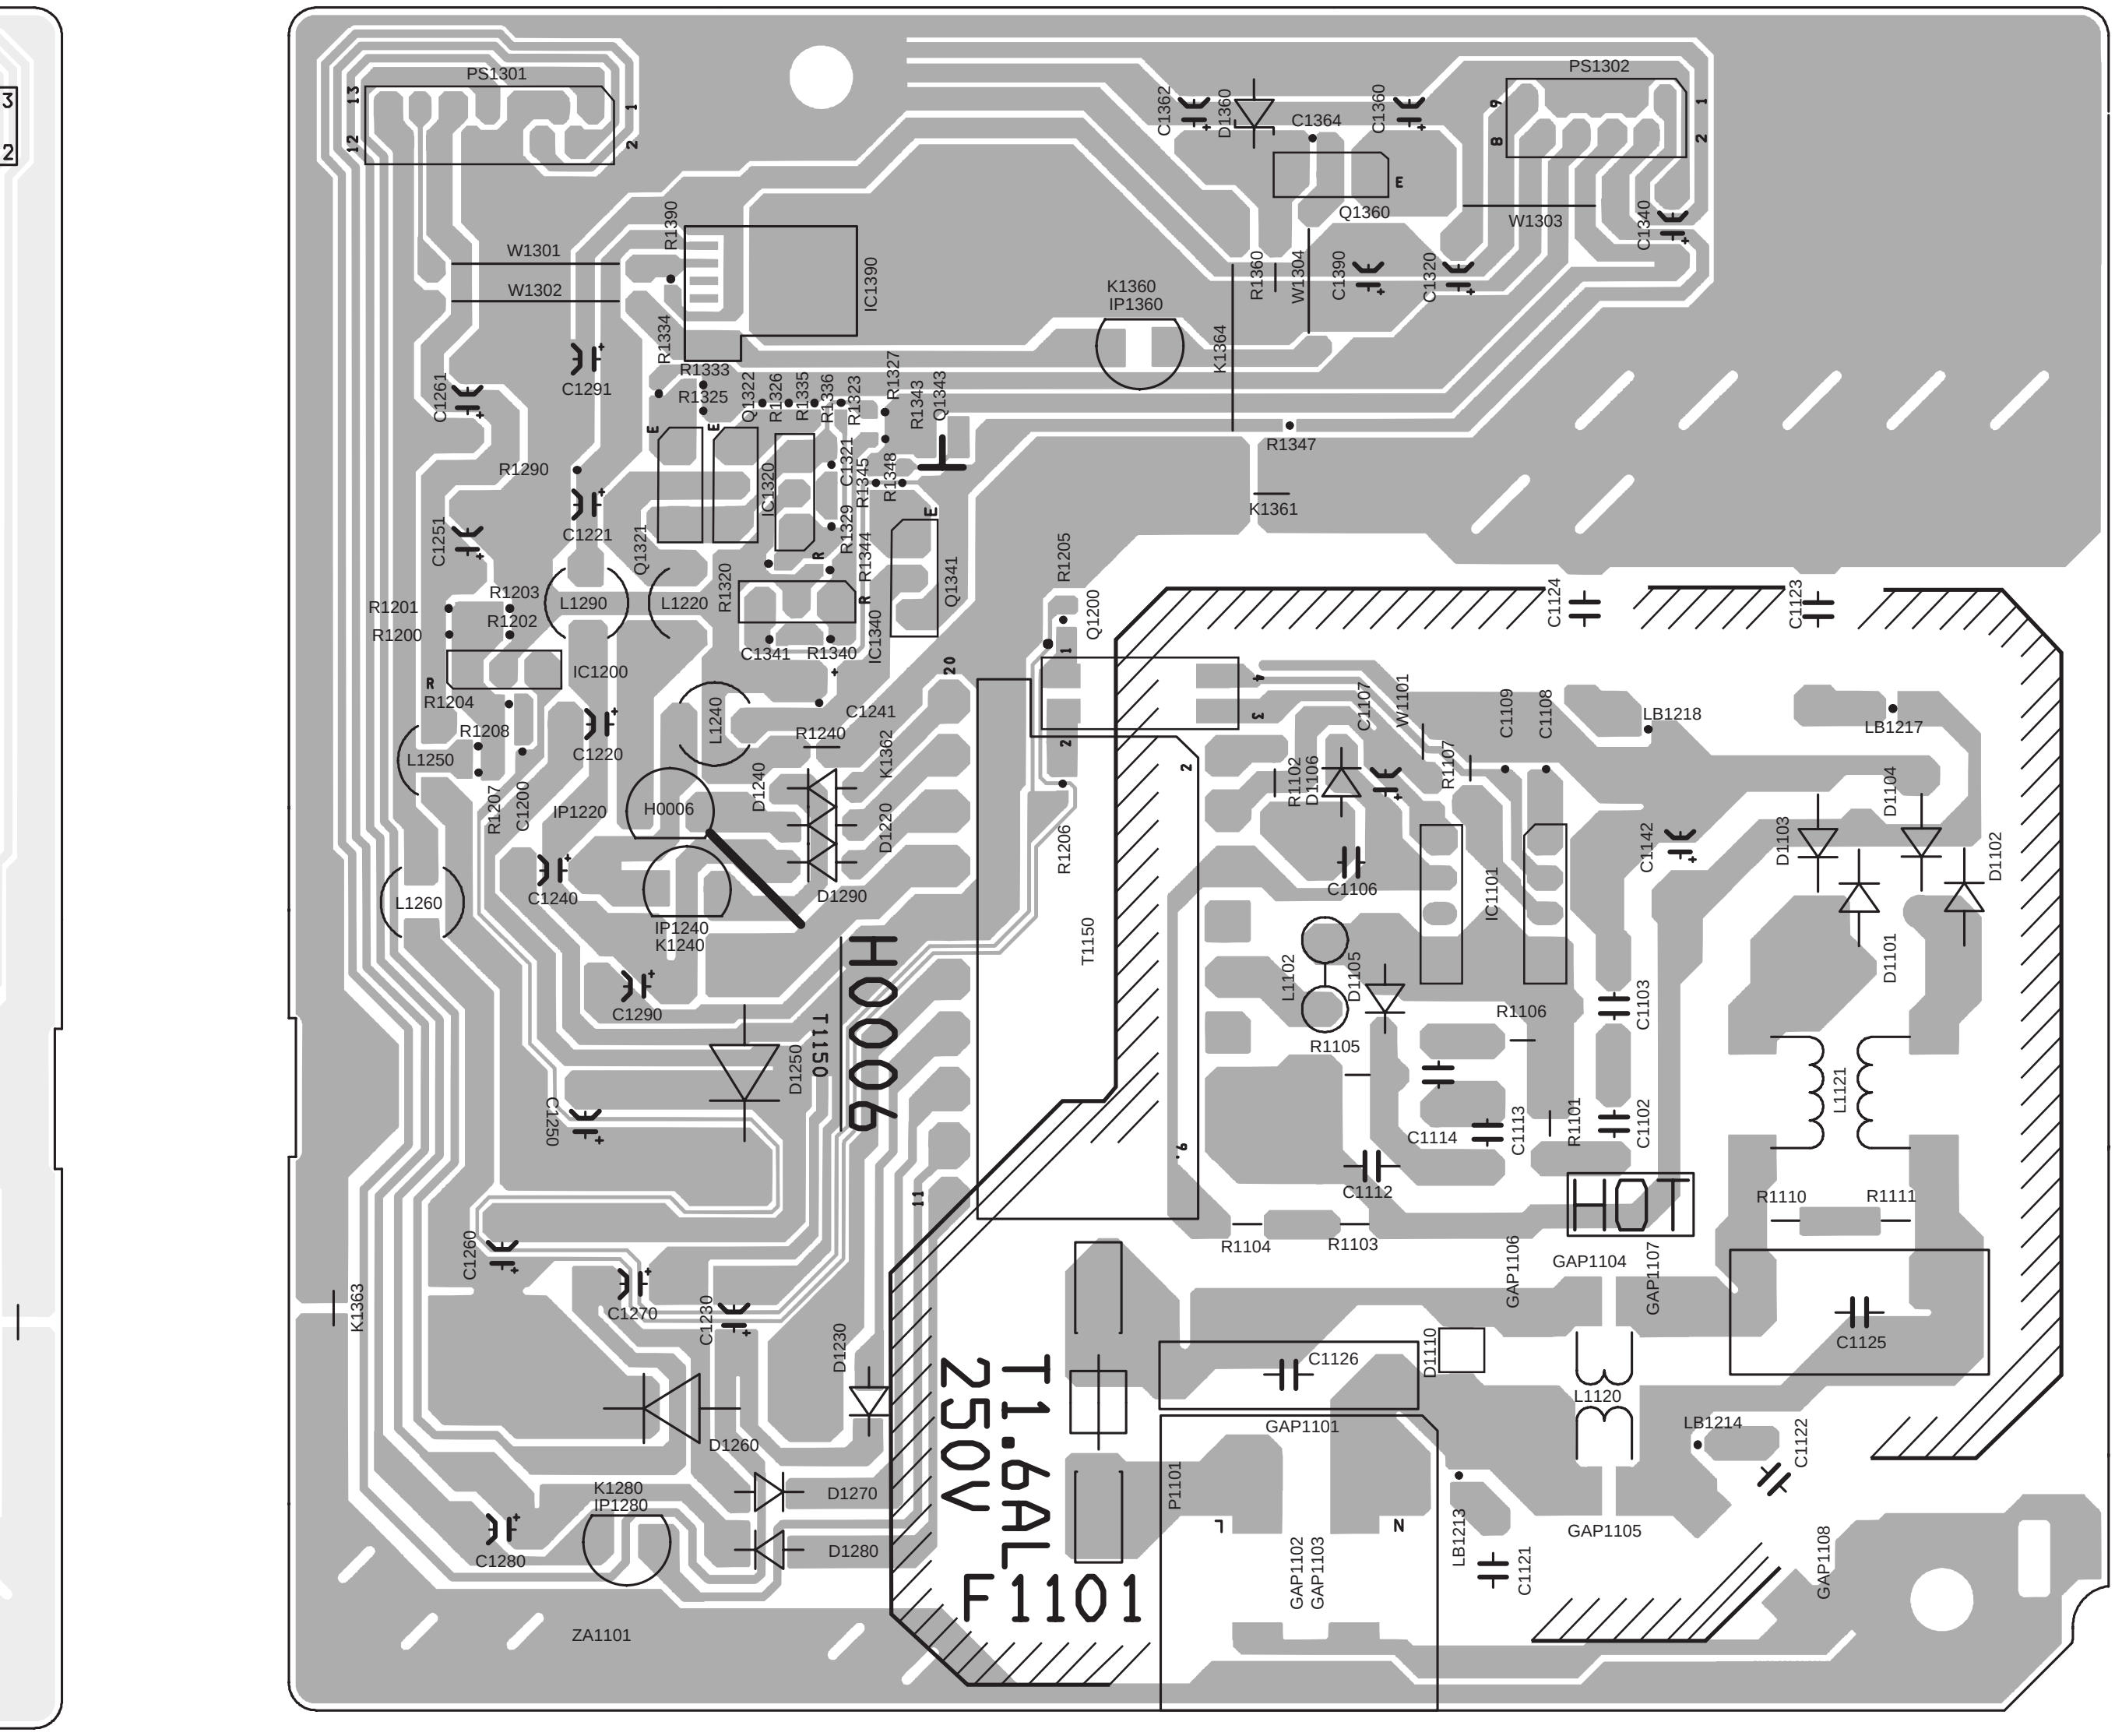
PS1301
W1301
W1302
IC1390
R1390
C1362
D1360
C1364
C1360
Q1360
PS1302
W1303
C1340
K1360
IP1360
R1360
W1304
C1390
C1320
K1364
R1347
K1361
C1291
C1261
R1334
R1333
R1325
Q1322
R1326
R1335
R1336
R1323
R1327
R1343
Q1343
R1290
C1221
C1251
IC1320
R1321
R1345
R1348
R1329
R1344
Q1341
Q1321
R1201
R1200
R1203
R1202
L1290
L1220
R1320
C1341
R1340
IC1340
R1205
Q1200
IC1200
R1204
R1208
L1250
C1220
L1240
C1241
R1240
K1362
R1207
C1200
IP1220
H0006
D1240
D1220
R1206
D1290
C1240
L1260
IP1240
K1240
C1290
H0006
T1150
D1250
C1250
T1150
C1124
C1123
C1107
W1101
C1109
C1108
LB1218
LB1217
R1102
D1106
R1107
C1142
D1103
D1104
D1102
C1106
IC1101
D1101
L1102
D1105
R1106
C1103
R1105
L1121
C1114
C1113
R1101
C1102
C1112
HOT
R1110
R1111
R1104
R1103
GAP1106
GAP1104
GAP1107
C1260
K1363
C1270
C1230
D1230
T1.6AL
250V
C1126
D1110
C1125
L1120
GAP1101
LB1214
C1122
D1260
D1270
K1280
IP1280
D1280
C1280
P1101
F1101
GAP1102
GAP1103
LB1213
C1121
GAP1105
GAP1108
ZA1101

POWER PCB							
IC1101	C10	IP1220	C8	Q1200	C9	PS1301	D7
IC1200	C8	IP1240	C8	Q1321	C8	PS1302	D11
IC1320	C8	IP1280	B8	Q1322	C8	F1101	B9
IC1340	C9	IP1360	D9	Q1341	C9		
IC1390	D9	P1101	B10	Q1343	D9		
				Q1360	D10		

ADRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
POWER PCB
COMPONENT SIDE / SOLDER SIDE

7 8 9 10 11 12

18 SCHEMATIC DIAGRAM

18.1. POWER PCB

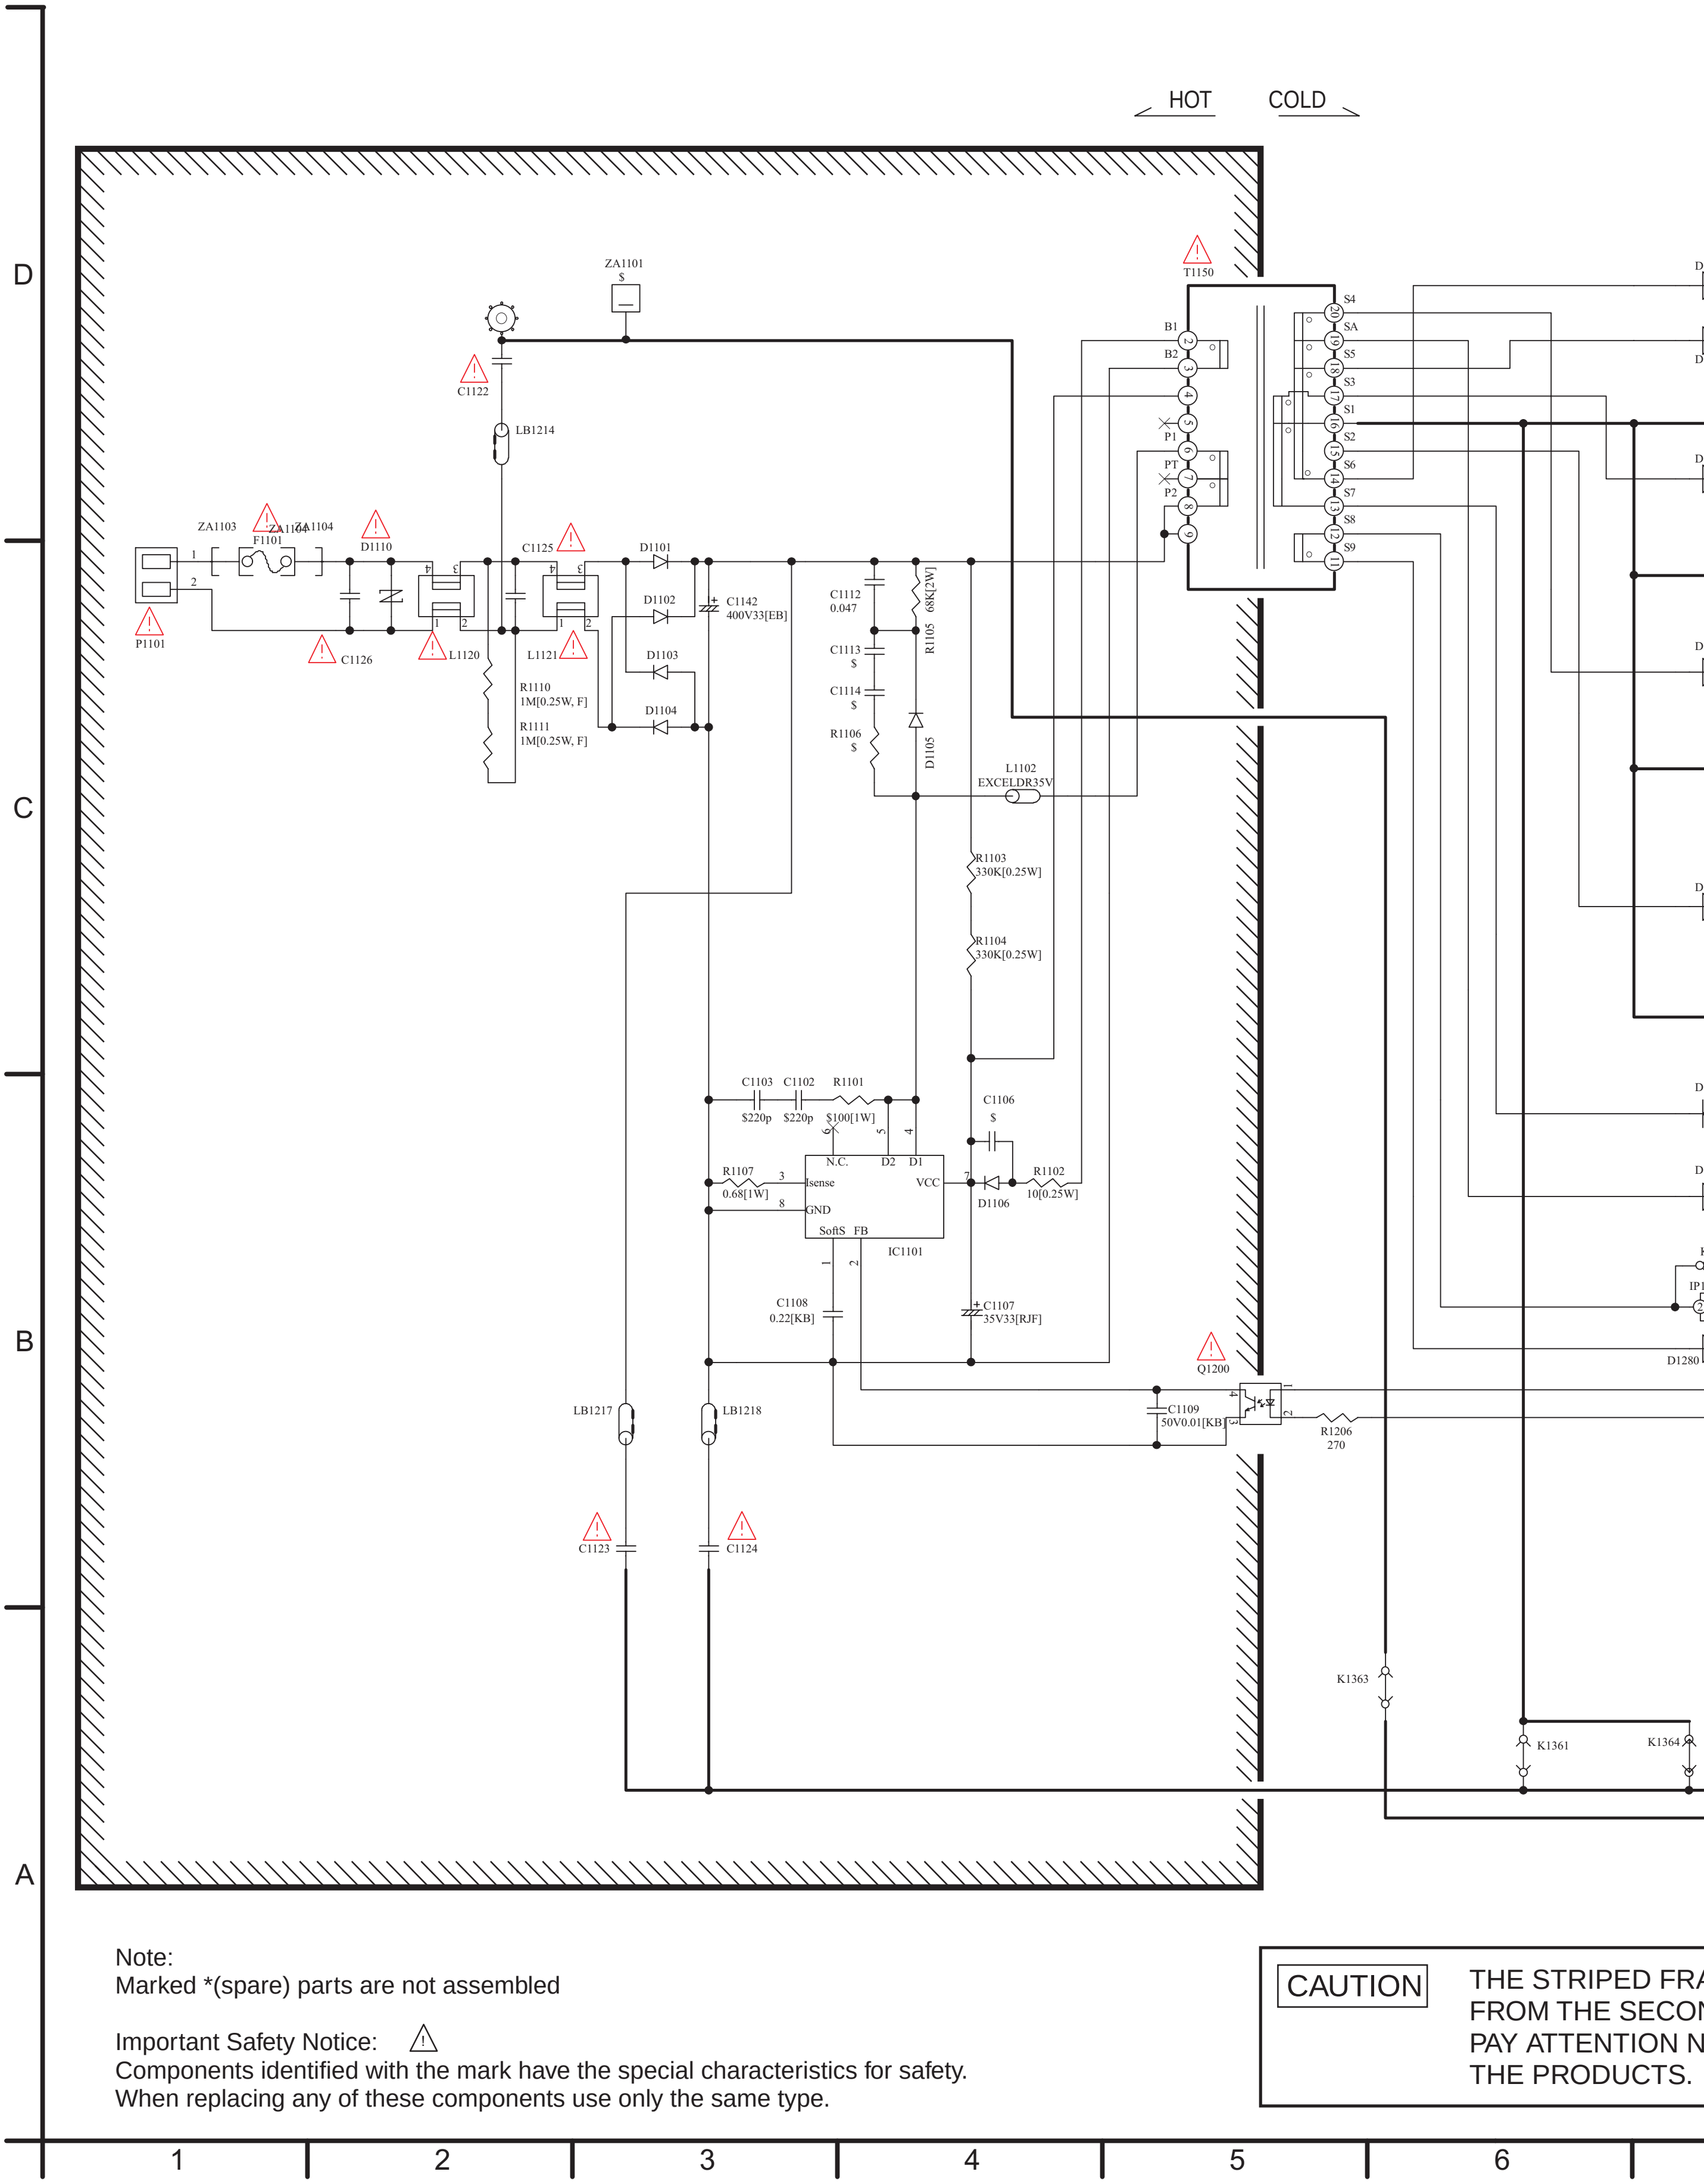
HOT
COLD
D
C
B
A
1
2
3
4
5
6
ZA1101
$
C1122
LB1214
ZA1103
ZA1104
ZA1104
F1101
D1110
P1101
1
2
C1126
L1120
C1125
L1121
1
2
3
4
R1110
1M[0.25W, F]
R1111
1M[0.25W, F]
D1101
D1102
D1103
D1104
C1142
400V33[EB]
C1112
0.047
R1105 68K[2W]
C1113
$
C1114
$
R1106
$
D1105
L1102
EXCELDR35V
R1103
330K[0.25W]
R1104
330K[0.25W]
T1150
B1
B2
P1
PT
P2
S4
SA
S5
S3
S1
S2
S6
S7
S8
S9
20
19
18
17
16
15
14
13
12
11
C1103
$220p
C1102
$220p
R1101
$100[1W]
C1106
$
R1107
0.68[1W]
N.C.
D2
D1
Isense
VCC
GND
SoftS
FB
IC1101
D1106
R1102
10[0.25W]
C1108
0.22[KB]
C1107
35V33[RJF]
Q1200
C1109
50V0.01[KB]
R1206
270
LB1217
LB1218
C1123
C1124
K1363
K1361
K1364
D1280
IP1
D

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety.
When replacing any of these components use only the same type.

CAUTION

THE STRIPED FRA
FROM THE SECON
PAY ATTENTION N
THE PRODUCTS.

NAVIGATION
INTERCONNECTION

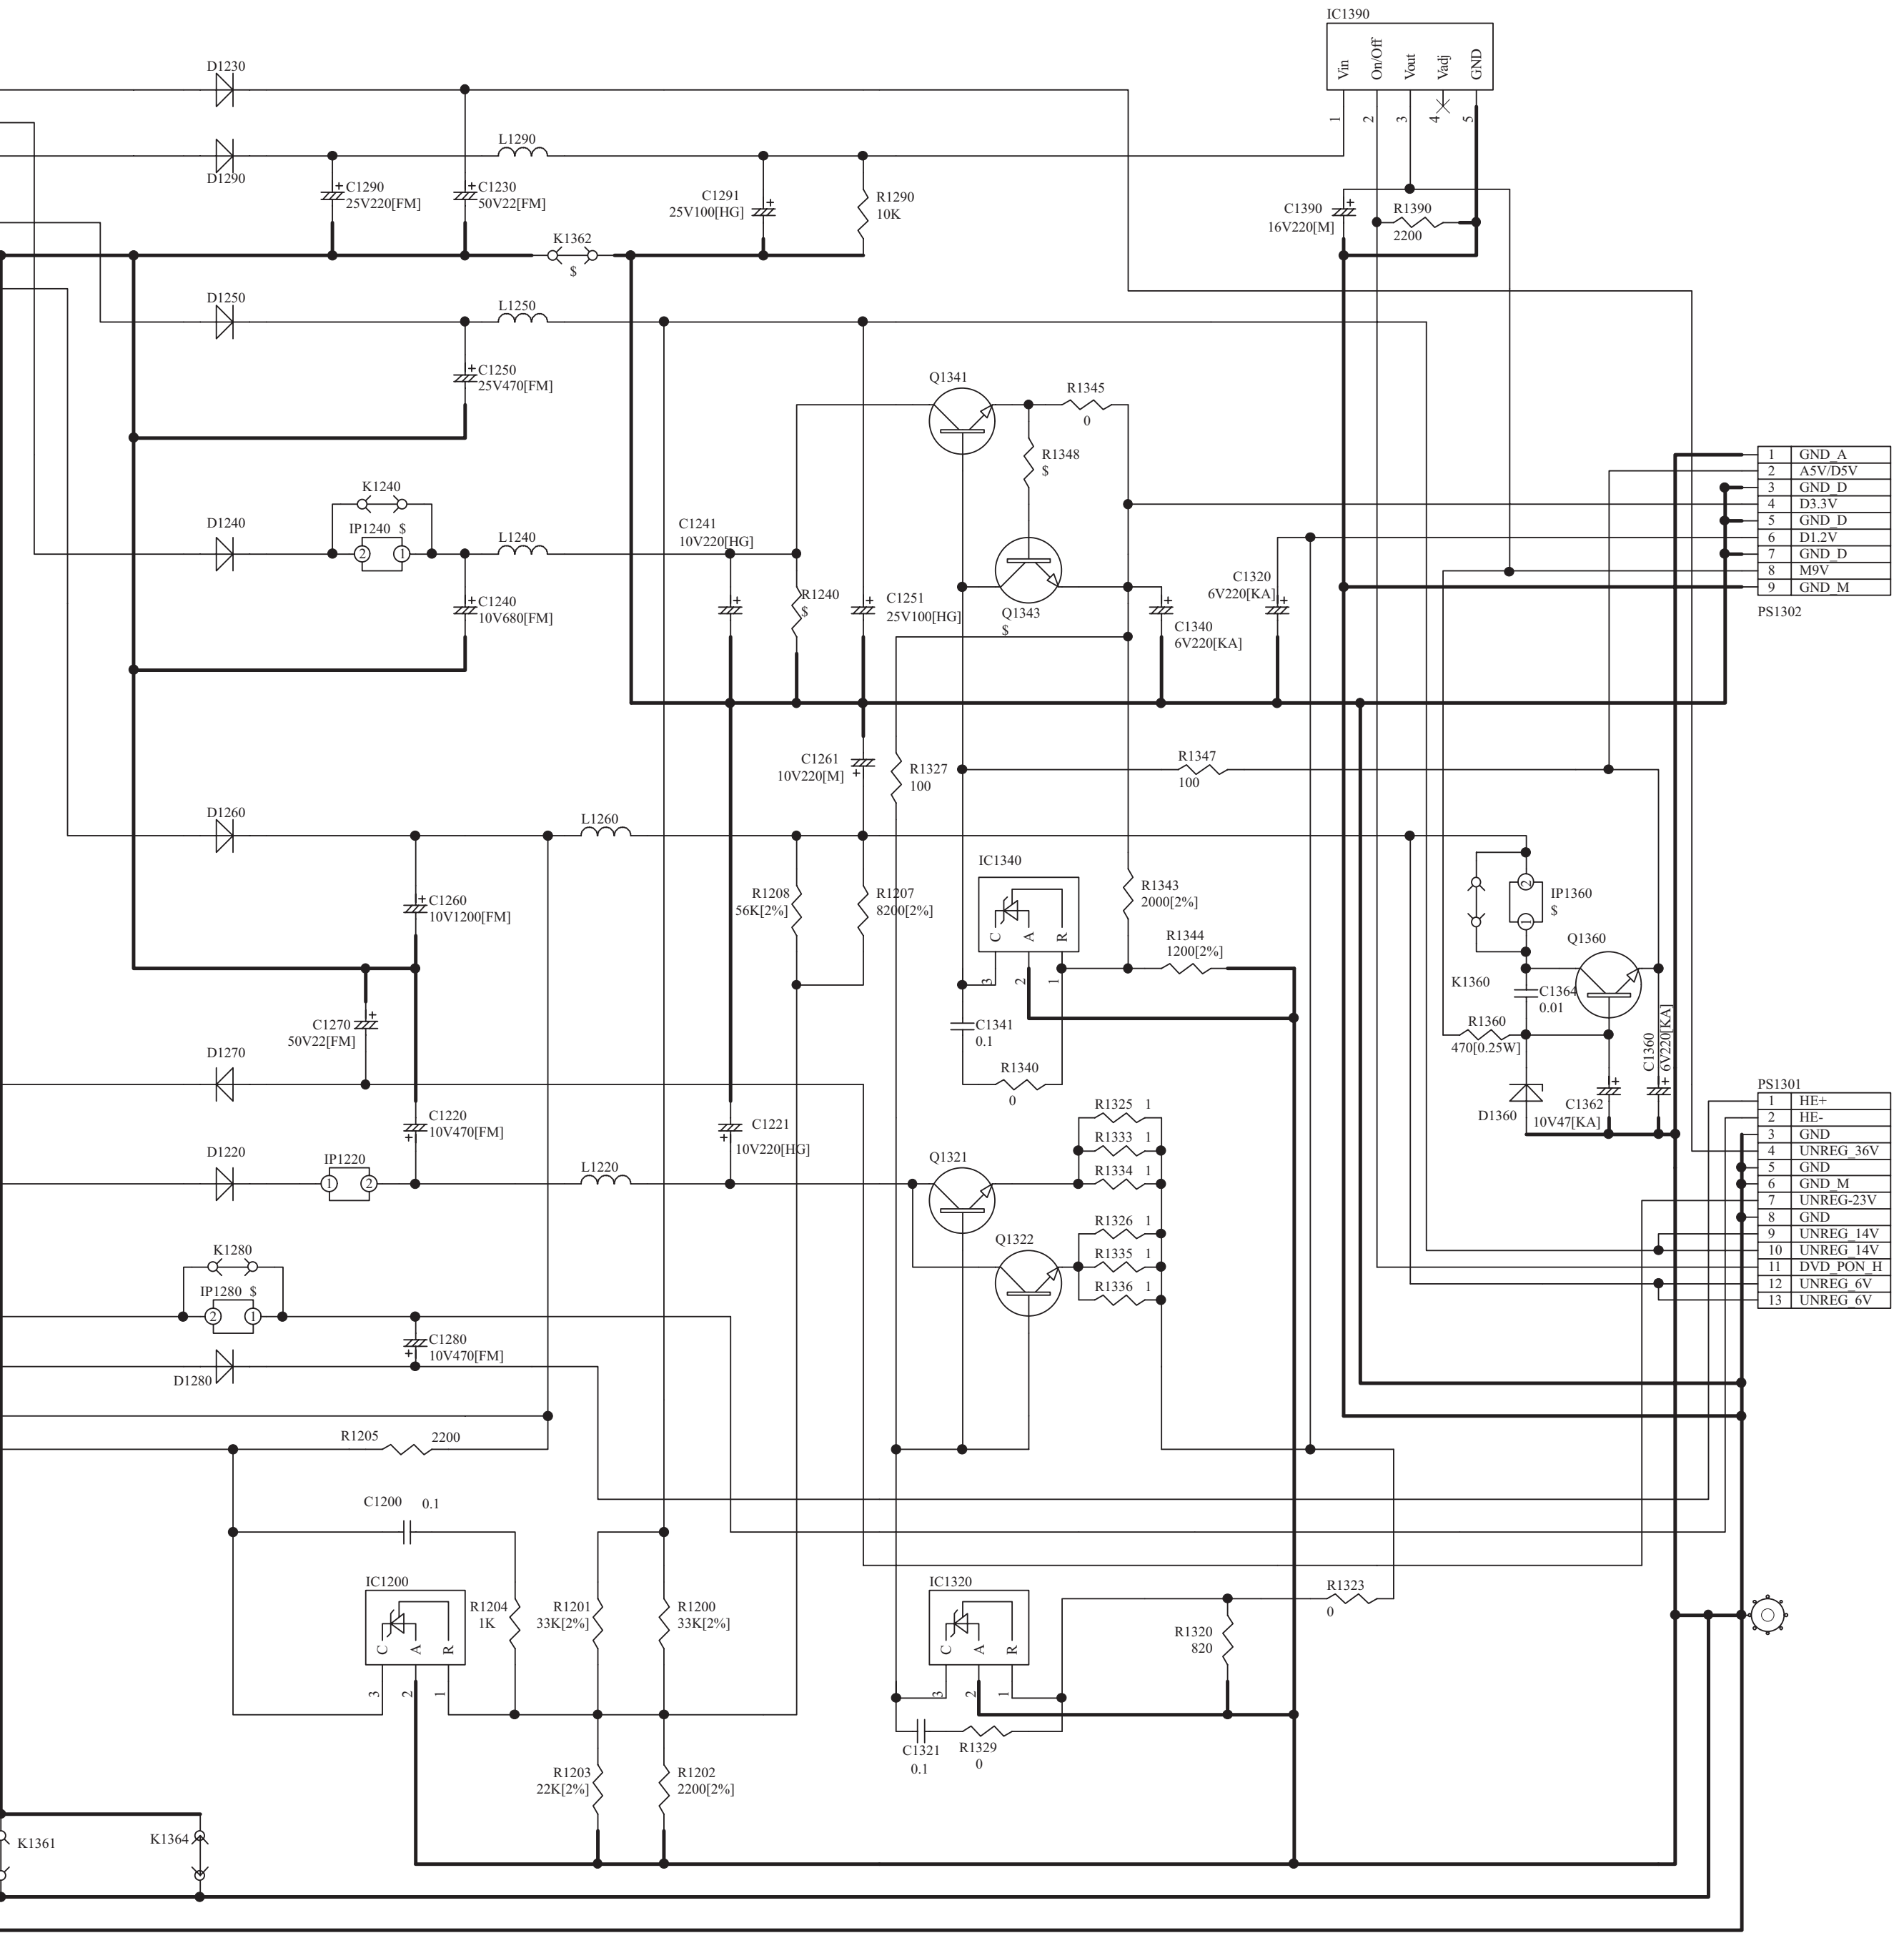
IC1390
Vin
On/Off
Vout
Vadj
GND
1
2
3
4
5
D1230
D1290
L1290
C1290
25V220[FM]
C1230
50V22[FM]
C1291
25V100[HG]
R1290
10K
K1362
$
C1390
16V220[M]
R1390
2200
D1250
L1250
C1250
25V470[FM]
Q1341
R1345
0
R1348
$
K1240
IP1240 $
D1240
L1240
C1240
10V680[FM]
C1241
10V220[HG]
R1240
$
C1251
25V100[HG]
Q1343
$
C1320
6V220[KA]
C1340
6V220[KA]
PS1302
1 GND_A
2 A5V/D5V
3 GND_D
4 D3.3V
5 GND_D
6 D1.2V
7 GND_D
8 M9V
9 GND_M
C1261
10V220[M]
R1327
100
R1347
100
D1260
L1260
C1260
10V1200[FM]
IC1340
C
A
R
R1208
56K[2%]
R1207
8200[2%]
R1343
2000[2%]
R1344
1200[2%]
IP1360
$
Q1360
K1360
C1364
0.01
R1360
470[0.25W]
D1360
C1362
10V47[KA]
C1360
6V220[KA]
C1270
50V22[FM]
D1270
C1341
0.1
R1340
0
C1220
10V470[FM]
C1221
10V220[HG]
D1220
IP1220
L1220
Q1321
R1325 1
R1333 1
R1334 1
R1326 1
R1335 1
R1336 1
Q1322
PS1301
1 HE+
2 HE-
3 GND
4 UNREG_36V
5 GND
6 GND_M
7 UNREG-23V
8 GND
9 UNREG_14V
10 UNREG_14V
11 DVD_PON_H
12 UNREG_6V
13 UNREG_6V
K1280
IP1280 $
C1280
10V470[FM]
D1280
R1205
2200
C1200
0.1
IC1200
R1204
1K
R1201
33K[2%]
R1200
33K[2%]
IC1320
R1323
0
R1320
820
C1321
0.1
R1329
0
R1203
22K[2%]
R1202
2200[2%]
K1361
K1364

STRIPED FRAME INDICATES THE PRIMARY CIRCUIT TO DISTINGUISH THE PRIMARY
M THE SECONDARY CIRCUIT.
ATTENTION NOT TO RECEIVE AN ELECTRIC SHOCK DURING REPAIR AND SERVICE OF
PRODUCTS.

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
POWER PCB
SCHEMATIC DIAGRAM

7 8 9 10 11 12

18.2. MAIN PCB - AUDIO/VIDEO

◀■ AUDIO MAIN SIGNAL PATH IN REC MODE
◁□ AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

◀ VIDEO MAIN SIGNAL PATH IN REC MODE
◁ VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE

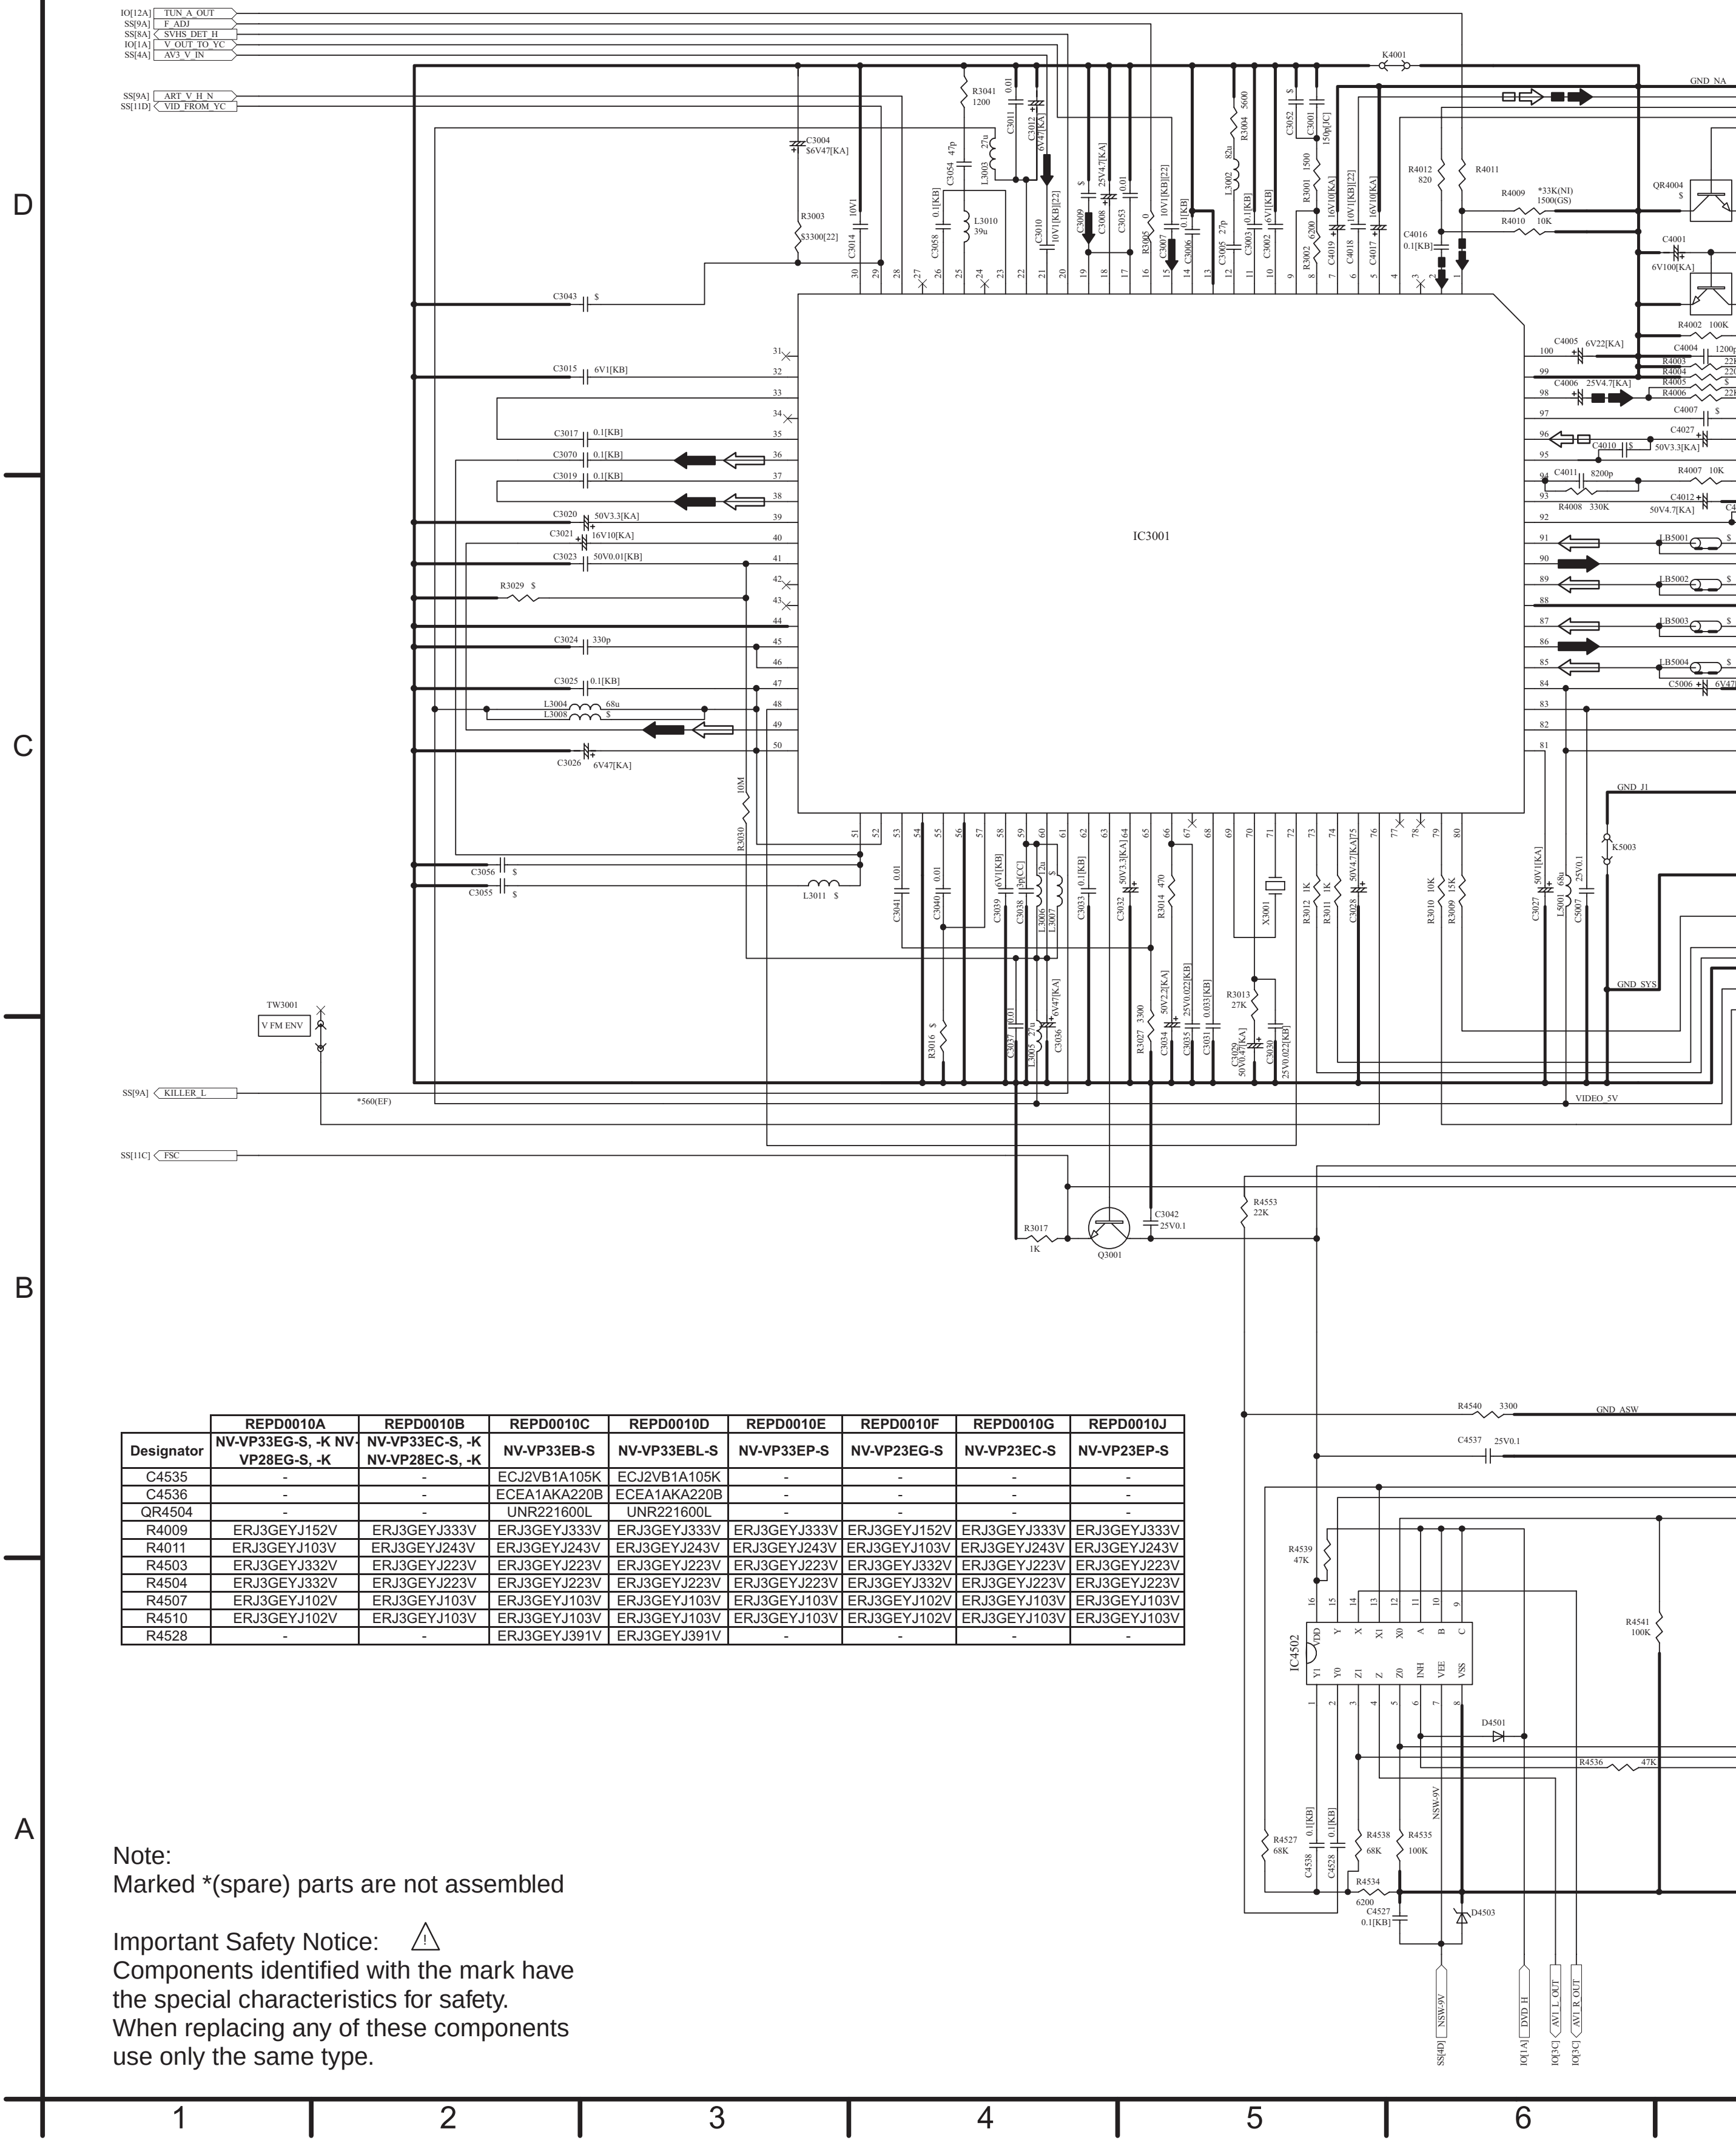

D
C
B
A
1
2
3
4
5
6
IO[12A] TUN_A_OUT
SS[9A] F_ADJ
SS[8A] SVHS_DET_H
IO[1A] V_OUT_TO_YC
SS[4A] AV3_V_IN
SS[9A] ART_V_H_N
SS[11D] VID_FROM_YC
K4001
GND_NA
IC3001
QR4004
R4012 820
R4011
R4009 *33K(NI) 1500(GS)
R4010 10K
C4001 6V100[KA]
R4002 100K
LB5001
LB5002
LB5003
LB5004
C5006
GND_J1
K5003
GND_SYS
VIDEO_5V
X3001
TW3001
V FM ENV
SS[9A] KILLER_L
*560(EF)
SS[11C] FSC
R3017 1K
Q3001
C3042 25V0.1
R4553 22K
R4540 3300
GND_ASW
C4537 25V0.1
IC4502
R4539 47K
R4541 100K
D4501
R4536 47K
R4527 68K
R4538 68K
R4535 100K
R4534 6200
C4527 0.1[KB]
D4503
NSW-9V
SS[4D] NSW-9V
IO[1A] DVD_H
IO[3C] AV1_L_OUT
IO[3C] AV1_R_OUT

	REPD0010A	REPD0010B	REPD0010C	REPD0010D	REPD0010E	REPD0010F	REPD0010G	REPD0010J
Designator	NV-VP33EG-S, -K NV-VP28EG-S, -K	NV-VP33EC-S, -K NV-VP28EC-S, -K	NV-VP33EB-S	NV-VP33EBL-S	NV-VP33EP-S	NV-VP23EG-S	NV-VP23EC-S	NV-VP23EP-S
C4535	-	-	ECJ2VB1A105K	ECJ2VB1A105K	-	-	-	-
C4536	-	-	ECEA1AKA220B	ECEA1AKA220B	-	-	-	-
QR4504	-	-	UNR221600L	UNR221600L	-	-	-	-
R4009	ERJ3GEYJ152V	ERJ3GEYJ333V	ERJ3GEYJ333V	ERJ3GEYJ333V	ERJ3GEYJ333V	ERJ3GEYJ152V	ERJ3GEYJ333V	ERJ3GEYJ333V
R4011	ERJ3GEYJ103V	ERJ3GEYJ243V	ERJ3GEYJ243V	ERJ3GEYJ243V	ERJ3GEYJ243V	ERJ3GEYJ103V	ERJ3GEYJ243V	ERJ3GEYJ243V
R4503	ERJ3GEYJ332V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ332V	ERJ3GEYJ223V	ERJ3GEYJ223V
R4504	ERJ3GEYJ332V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ332V	ERJ3GEYJ223V	ERJ3GEYJ223V
R4507	ERJ3GEYJ102V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ102V	ERJ3GEYJ103V	ERJ3GEYJ103V
R4510	ERJ3GEYJ102V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ102V	ERJ3GEYJ103V	ERJ3GEYJ103V
R4528	-	-	ERJ3GEYJ391V	ERJ3GEYJ391V	-	-	-	-

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety.
When replacing any of these components use only the same type.

NAVIGATION
INTERCONNECTION
MAIN PCB - I/O
MAIN PCB - SYSCON & SERVO

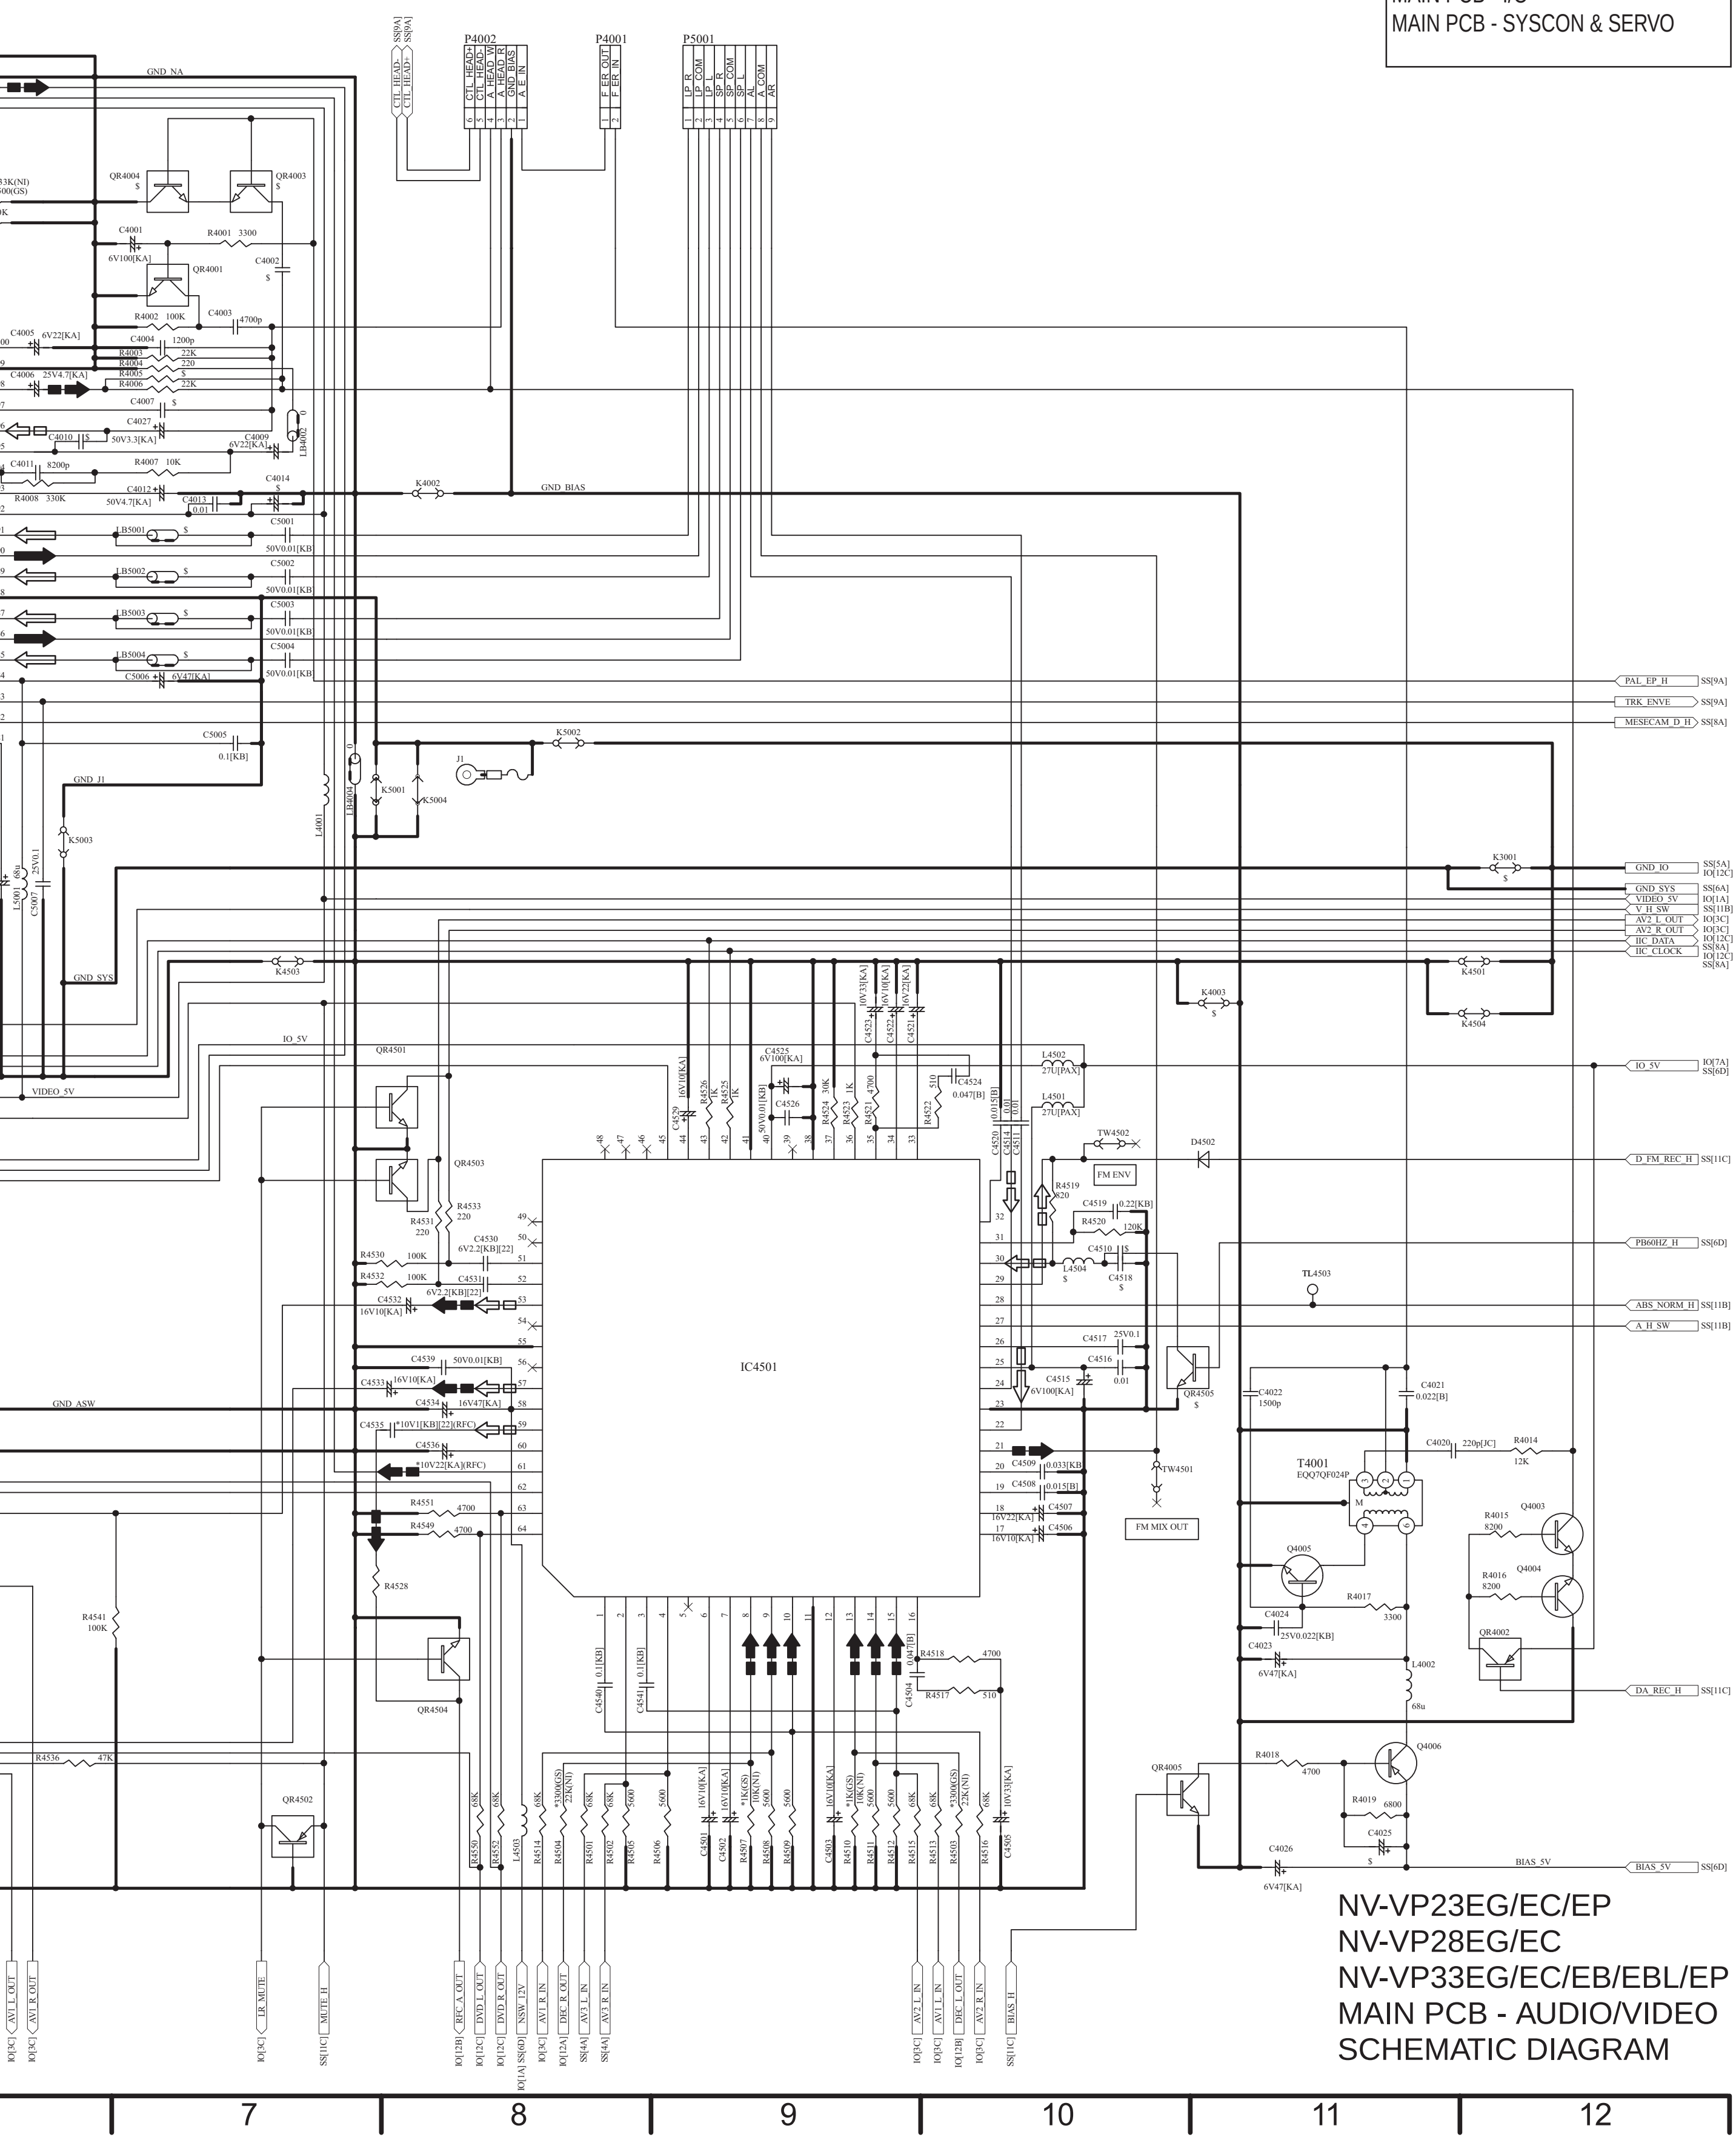
P4002
CTL_HEAD+
CTL_HEAD-
A_HEAD_W
A_HEAD_R
GND_BIAS
A_E_IN
P4001
F_ER_OUT
F_ER_IN
P5001
LP_R
LP_COM
LP_L
SP_R
SP_COM
SP_L
AL
A_COM
AR
GND_NA
GND_BIAS
GND_J1
GND_SYS
GND_ASW
IO_5V
VIDEO_5V
QR4004
QR4003
QR4001
C4001
6V100[KA]
R4001 3300
C4002
R4002 100K
C4003 4700p
C4004 1200p
R4003 22K
R4004 220
R4005
R4006 22K
C4005 6V22[KA]
C4006 25V4.7[KA]
C4007
C4027 50V3.3[KA]
C4010
C4009 6V22[KA]
LB4002
C4011 8200p
R4007 10K
R4008 330K
C4012 50V4.7[KA]
C4013 0.01
C4014
K4002
LB5001
LB5002
LB5003
LB5004
C5001 50V0.01[KB]
C5002 50V0.01[KB]
C5003 50V0.01[KB]
C5004 50V0.01[KB]
C5006 6V47[KA]
C5005 0.1[KB]
K5002
J1
K5001
K5004
K5003
L4001
LB4004
L5001
C5007 25V0.1
K4503
K3001
K4003
K4501
K4504
PAL_EP_H SS[9A]
TRK_ENVE SS[9A]
MESECAM_D_H SS[8A]
GND_IO SS[5A] IO[12C]
GND_SYS SS[6A]
VIDEO_5V IO[1A]
V_H_SW SS[11B]
AV2_L_OUT IO[3C]
AV2_R_OUT IO[3C]
IIC_DATA IO[12C] SS[8A]
IIC_CLOCK IO[12C] SS[8A]
IO_5V IO[7A] SS[6D]
D_FM_REC_H SS[11C]
PB60HZ_H SS[6D]
ABS_NORM_H SS[11B]
A_H_SW SS[11B]
DA_REC_H SS[11C]
BIAS_5V SS[6D]
QR4501
QR4503
R4533 220
R4531 220
R4530 100K
R4532 100K
C4530 6V2.2[KB][22]
C4531 6V2.2[KB][22]
C4532 16V10[KA]
C4539 50V0.01[KB]
C4533 16V10[KA]
C4534 16V47[KA]
C4535 *10V1[KB][22](RFC)
C4536 *10V22[KA](RFC)
R4551 4700
R4549 4700
R4528
QR4504
R4541 100K
R4536 47K
QR4502
IC4501
C4529 16V10[KA]
R4526 1K
R4525 1K
C4525 6V100[KA]
C4526 50V0.01[KB]
R4524 30K
R4523 1K
R4521 4700
R4522 510
C4523 10V33[KA]
C4522 6V10[KA]
C4521 6V22[KA]
C4524 0.047[B]
C4520 0.015[B]
C4514 0.01
C4511 0.01
L4502 27U[PAX]
L4501 27U[PAX]
TW4502
FM ENV
D4502
R4519 820
C4519 0.22[KB]
R4520 120K
C4510
L4504
C4518
TL4503
C4517 25V0.1
C4516 0.01
C4515 6V100[KA]
QR4505
C4509 0.033[KB]
C4508 0.015[B]
C4507 16V22[KA]
C4506 16V10[KA]
TW4501
FM MIX OUT
C4540 0.1[KB]
C4541 0.1[KB]
C4504 0.047[B]
R4518 4700
R4517 510
R4550 68K
R4552 68K
L4503 68K
R4514 68K
R4504 *3300(GS) 22K(NI)
R4501 68K
R4502 68K
R4505 5600
R4506 5600
C4501 16V10[KA]
C4502 16V10[KA]
R4507 *1K(GS) 10K(NI)
R4508 5600
R4509 5600
C4503 16V10[KA]
R4510 *1K(GS) 10K(NI)
R4511 5600
R4512 5600
R4515 68K
R4513 68K
R4503 *3300(GS) 22K(NI)
R4516 68K
C4505 10V33[KA]
C4022 1500p
C4021 0.022[B]
C4020 220p[JC]
R4014 12K
T4001 EQQ7QF024P
Q4003
R4015 8200
Q4004
R4016 8200
Q4005
R4017 3300
C4024 25V0.022[KB]
C4023 6V47[KA]
QR4002
L4002 68u
R4018 4700
Q4006
QR4005
R4019 6800
C4025
C4026 6V47[KA]
AV1_L_OUT IO[3C]
AV1_R_OUT IO[3C]
LR_MUTE IO[3C]
MUTE_H SS[11C]
RFC_A_OUT IO[12B]
DVD_L_OUT IO[12C]
DVD_R_OUT IO[12C]
NSW_12V IO[1A] SS[6D]
AV1_R_IN IO[3C]
DEC_R_OUT IO[12A]
AV3_L_IN SS[4A]
AV3_R_IN SS[4A]
AV2_L_IN IO[3C]
AV1_L_IN IO[3C]
DEC_L_OUT IO[12B]
AV2_R_IN IO[3C]
BIAS_H SS[11C]
7
8
9
10
11
12

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB - AUDIO/VIDEO
SCHEMATIC DIAGRAM

18.3. MAIN PCB - I/O SECTION

	REPD0010E	REPD0010F	REPD0010G	REPD0010J
Designator	NV-VP33EP-S	NV-VP23EG-S	NV-VP23EC-S	NV-VP23EP-S
C7301	ECJ1VF1H103Z	-	ECJ1VF1H103Z	ECJ1VF1H103Z
C7303	ECJ1VF1H103Z	-	ECJ1VF1H103Z	ECJ1VF1H103Z
C7305	ECJ1VC1H330J	-	ECJ1VC1H330J	ECJ1VC1H330J
C7306	ECJ1VC1H330J	-	ECJ1VC1H330J	ECJ1VC1H330J
C7307	-	ECJ1VB1H332K	-	-
C7308	ERJ3GEYJ822V	ECJ1VC1H681J	ERJ3GEYJ822V	ERJ3GEYJ822V
C7309	-	ECJ1VB1H332K	-	-
C7310	-	ECJ1VC1H681J	-	-
C7313	-	ECJ1VF1C474Z	-	-
C7314	ECJ1VB1C104K	ECJ1VB1H103K	ECJ1VB1C104K	ECJ1VB1C104K
C7315	-	ECJ1VC1H090D	-	-
C7316	ECJ1VF1E104Z	-	ECJ1VF1E104Z	ECJ1VF1E104Z
C7317	-	ECJ1VB1H152K	-	-
C7321	-	ECJ1VB1H472K	-	-
C7322	-	ECJ1VF1C474Z	-	-
C7323	ECJ1VF1E104Z	-	ECJ1VF1E104Z	ECJ1VF1E104Z
C7324	-	ECJ1VB1H152K	-	-
C7325	ECJ1VB1C104K	ECJ1VB1H103K	ECJ1VB1C104K	ECJ1VB1C104K
C7327	-	ECJ1VB1H152K	-	-
C7328	ECJ1VF1E104Z	ECJ1VF1C474Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C7329	-	ECJ1VF1C474Z	-	-
C7330	-	ECJ1VB1C104K	-	-
C7331	ECJ2VB1A105K	ECJ2VF1C474Z	ECJ2VB1A105K	ECJ2VB1A105K
C7341	ECJ1VB1H472K	-	ECJ1VB1H472K	ECJ1VB1H472K
C7342	ECJ1VB1H472K	-	ECJ1VB1H472K	ECJ1VB1H472K
C7343	ECEA0JKA221B	-	ECEA0JKA221B	ECEA0JKA221B
D7301	MA2C165001VT	-	MA2C165001VT	MA2C165001VT
IC7301	C1AB00001404	C0ZBZ0000580	C1AB00001404	C1AB00001404
K7306	ERJ3GEY0R00V	-	ERJ3GEY0R00V	ERJ3GEY0R00V
K7307	ERJ3GEY0R00V	-	ERJ3GEY0R00V	ERJ3GEY0R00V
L7607	G0C2R2JA0019	G0C470JA0019	G0C2R2JA0019	G0C2R2JA0019
LB7301	ERJ6GEY0R00V	-	ERJ6GEY0R00V	ERJ6GEY0R00V
LB7302	J0JBC0000011	-	J0JBC0000011	J0JBC0000011
LB7303	ERJ6GEY0R00V	-	ERJ6GEY0R00V	ERJ6GEY0R00V
R7301	-	ERJ3GEYJ912V	-	-
R7302	ERJ3GEY0R00V	ERJ3GEYJ122V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7303	-	ERJ3GEY0R00V	-	-
R7304	ERJ3GEY0R00V	-	ERJ3GEY0R00V	ERJ3GEY0R00V
R7307	-	ERJ3GEYJ562V	-	-
R7309	-	ERJ3GEYJ273V	-	-
R7310	ERJ3GEY0R00V	ERJ3GEYJ472V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7311	-	ERJ3GEYJ752V	-	-
R7312	ERJ3GEY0R00V	ERJ3GEYJ472V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7316	ERJ3GEYJ103V	-	ERJ3GEYJ103V	ERJ3GEYJ103V
R7328	ERJ3GEYJ221V	ERJ3GEYJ822V	ERJ3GEYJ221V	ERJ3GEYJ221V
R7329	ERJ3GEYJ221V	ERJ3GEYJ822V	ERJ3GEYJ221V	ERJ3GEYJ221V
TU7601	ENGF7502GF	ENGF7501GF	ENGF7501GF	ENGF7502GF
X7301	H0D245500011	H0H400400006	H0D245500011	H0D245500011

	REPD0010A	REPD0010B	REPD0010C	REPD0010D
Designator	NV-VP33EG-S, -K NV-VP28EG-S, -K	NV-VP33EC-S, -K NV-VP28EC-S, -K	NV-VP33EB-S	NV-VP33EBL-S
C7301	-	ECJ1VF1H103Z	ECJ1VF1H103Z	ECJ1VF1H103Z
C7303	-	ECJ1VF1H103Z	ECJ1VF1H103Z	ECJ1VF1H103Z
C7305	-	ECJ1VC1H330J	ECJ1VC1H330J	ECJ1VC1H330J
C7306	-	ECJ1VC1H330J	ECJ1VC1H330J	ECJ1VC1H330J
C7307	ECJ1VB1H332K	-	-	-
C7308	ECJ1VC1H681J	ERJ3GEYJ822V	ERJ3GEYJ822V	ERJ3GEYJ822V
C7309	ECJ1VB1H332K	-	-	-
C7310	ECJ1VC1H681J	-	-	-
C7313	ECJ1VF1C474Z	-	-	-
C7314	ECJ1VB1H103K	ECJ1VB1C104K	ECJ1VB1C104K	ECJ1VB1C104K
C7315	ECJ1VC1H090D	-	-	-
C7316	-	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C7317	ECJ1VB1H152K	-	-	-
C7321	ECJ1VB1H472K	-	-	-
C7322	ECJ1VF1C474Z	-	-	-
C7323	-	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C7324	ECJ1VB1H152K	-	-	-
C7325	ECJ1VB1H103K	ECJ1VB1C104K	ECJ1VB1C104K	ECJ1VB1C104K
C7327	ECJ1VB1H152K	-	-	-
C7328	ECJ1VF1C474Z	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C7329	ECJ1VF1C474Z	-	-	-
C7330	ECJ1VB1C104K	-	-	-
C7331	ECJ2VF1C474Z	ECJ2VB1A105K	ECJ2VB1A105K	ECJ2VB1A105K
C7341	-	ECJ1VB1H472K	ECJ1VB1H472K	ECJ1VB1H472K
C7342	-	ECJ1VB1H472K	ECJ1VB1H472K	ECJ1VB1H472K
C7343	-	ECEA0JKA221B	ECEA0JKA221B	ECEA0JKA221B
C7604	-	-	ECEA0JKA101B	ECEA0JKA101B
C7606	-	-	ECJ1VF1H103Z	ECJ1VF1H103Z
C7627	-	-	ECJ1VB1H471K	ECJ1VB1H471K
C7628	-	-	ECJ1VB1H102K	ECJ1VB1H102K
D7301	-	MA2C165001VT	MA2C165001VT	MA2C165001VT
IC7301	C0ZBZ0000580	C1AB00001404	C1AB00001404	C1AB00001404
K7306	-	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
K7307	-	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
L7602	-	-	G0C270JA0019	G0C270JA0019
L7603	-	-	G0C270JA0019	G0C270JA0019
L7607	G0C470JA0019	G0C2R2JA0019	G0C2R2JA0019	G0C2R2JA0019
L7609	-	-	VWJ0023=5	VWJ0023=5
LB7301	-	ERJ6GEY0R00V	ERJ6GEY0R00V	ERJ6GEY0R00V
LB7302	-	J0JBC0000011	J0JBC0000011	J0JBC0000011
LB7303	-	ERJ6GEY0R00V	ERJ6GEY0R00V	ERJ6GEY0R00V
R7301	ERJ3GEYJ912V	-	-	-
R7302	ERJ3GEYJ122V	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7303	ERJ3GEY0R00V	-	-	-
R7304	-	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7307	ERJ3GEYJ562V	-	-	-
R7309	ERJ3GEYJ273V	-	-	-
R7310	ERJ3GEYJ472V	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7311	ERJ3GEYJ752V	-	-	-
R7312	ERJ3GEYJ472V	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7316	-	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V
R7328	ERJ3GEYJ822V	ERJ3GEYJ221V	ERJ3GEYJ221V	ERJ3GEYJ221V
R7329	ERJ3GEYJ822V	ERJ3GEYJ221V	ERJ3GEYJ221V	ERJ3GEYJ221V
R7603	-	-	ERJ3GEY0R00V	ERJ3GEY0R00V
R7605	-	-	ERJ3GEYJ101Z	ERJ3GEYJ101Z
R7606	-	-	ERJ3GEY0R00V	ERJ3GEY0R00V
TU7601	ENGF7501GF	ENGF7501GF	ENG57D02G1F	ENG57D03G1F
X7301	H0H400400006	H0D245500011	H0D245500011	H0D245500011

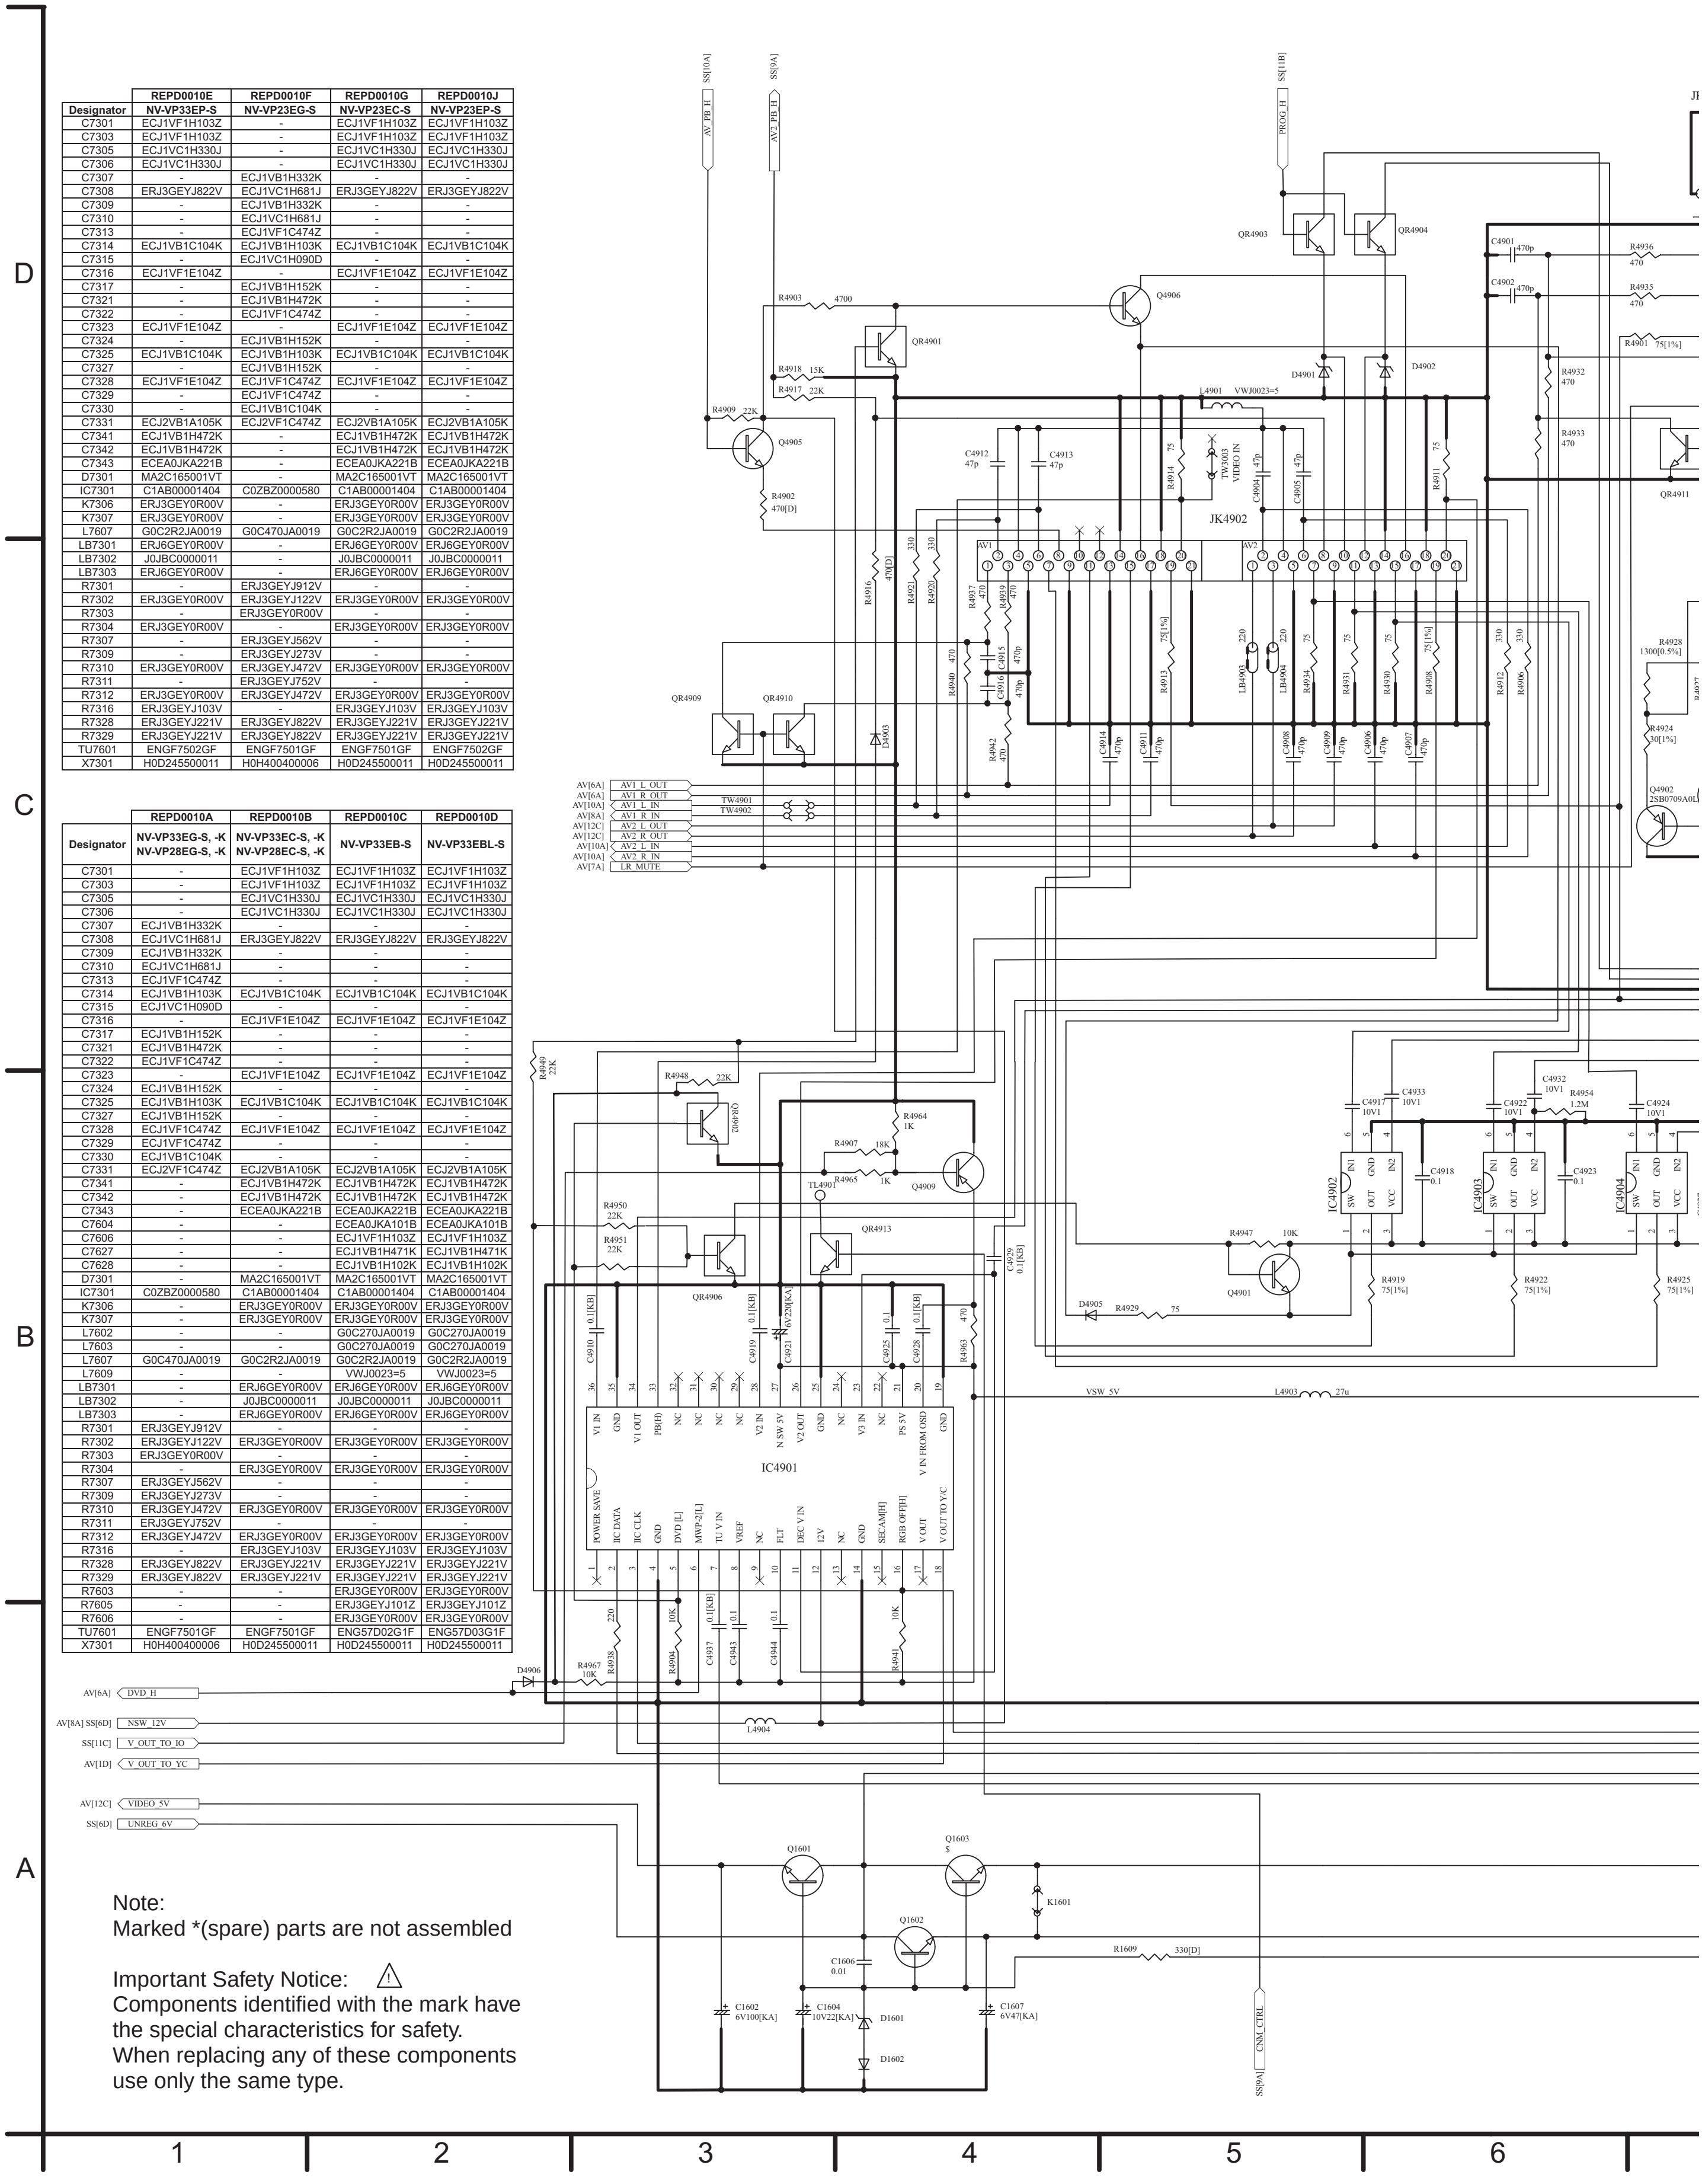
D
C
B
A
1
2
3
4
5
6
AV_PB_H
SS[10A]
AV2_PB_H
SS[9A]
PROG_H
SS[11B]
QR4903
QR4904
Q4906
QR4901
QR4905
QR4909
QR4910
QR4911
Q4902
2SB0709A0L
R4903 4700
R4918 15K
R4917 22K
R4909 22K
R4902 470[D]
L4901 VWJ0023=5
D4901
D4902
C4901 470p
C4902 470p
R4936 470
R4935 470
R4901 75[1%]
R4932 470
R4933 470
C4912 47p
C4913 47p
JK4902
AV1
AV2
TW3003 VIDEO IN
R4928 1300[0.5%]
R4924 30[1%]
D4903
AV[6A] AV1_L_OUT
AV[6A] AV1_R_OUT
AV[10A] AV1_L_IN
AV[8A] AV1_R_IN
AV[12C] AV2_L_OUT
AV[12C] AV2_R_OUT
AV[10A] AV2_L_IN
AV[10A] AV2_R_IN
AV[7A] LR_MUTE
TW4901
TW4902
R4949 22K
R4948 22K
QR4902
R4964 1K
R4907 18K
R4965 1K
TL4901
Q4909
R4950 22K
R4951 22K
QR4913
QR4906
C4929 0.1[KB]
R4947 10K
Q4901
D4905
R4929 75
C4917 10V1
C4933 10V1
C4918 0.1
IC4902
C4922 10V1
C4932 10V1
R4954 1.2M
C4923 0.1
IC4903
C4924 10V1
IC4904
R4919 75[1%]
R4922 75[1%]
R4925 75[1%]
VSW_5V
L4903 27u
IC4901
V1 IN
GND
V1 OUT
PB(H)
NC
V2 IN
N SW 5V
V2 OUT
V3 IN
PS 5V
V IN FROM OSD
POWER SAVE
IIC DATA
IIC CLK
DVD [L]
MWP-2[L]
TU V IN
VREF
FLT
DEC V IN
12V
SECAM[H]
RGB OFF[H]
V OUT
V OUT TO Y/C
C4910 0.1[KB]
C4919 0.1[KB]
C4920 220[KA]
C4925 0.1
C4928 0.1[KB]
R4963 470
R4938 220
R4904 10K
C4937 0.1[KB]
C4943 0.1
C4944 0.1
R4941 10K
D4906
R4967 10K
L4904
AV[6A] DVD_H
AV[8A] SS[6D] NSW_12V
SS[11C] V_OUT_TO_IO
AV[1D] V_OUT_TO_YC
AV[12C] VIDEO_5V
SS[6D] UNREG_6V
Q1601
Q1603
Q1602
K1601
C1606 0.01
R1609 330[D]
C1602 6V100[KA]
C1604 10V22[KA]
D1601
D1602
C1607 6V47[KA]
CNM_CTRL
SS[9A]

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety.
When replacing any of these components use only the same type.

NAVIGATION
INTERCONNECTION
MAIN PCB - AUDIO / VIDEO
MAIN PCB - SYSCON & SERVO

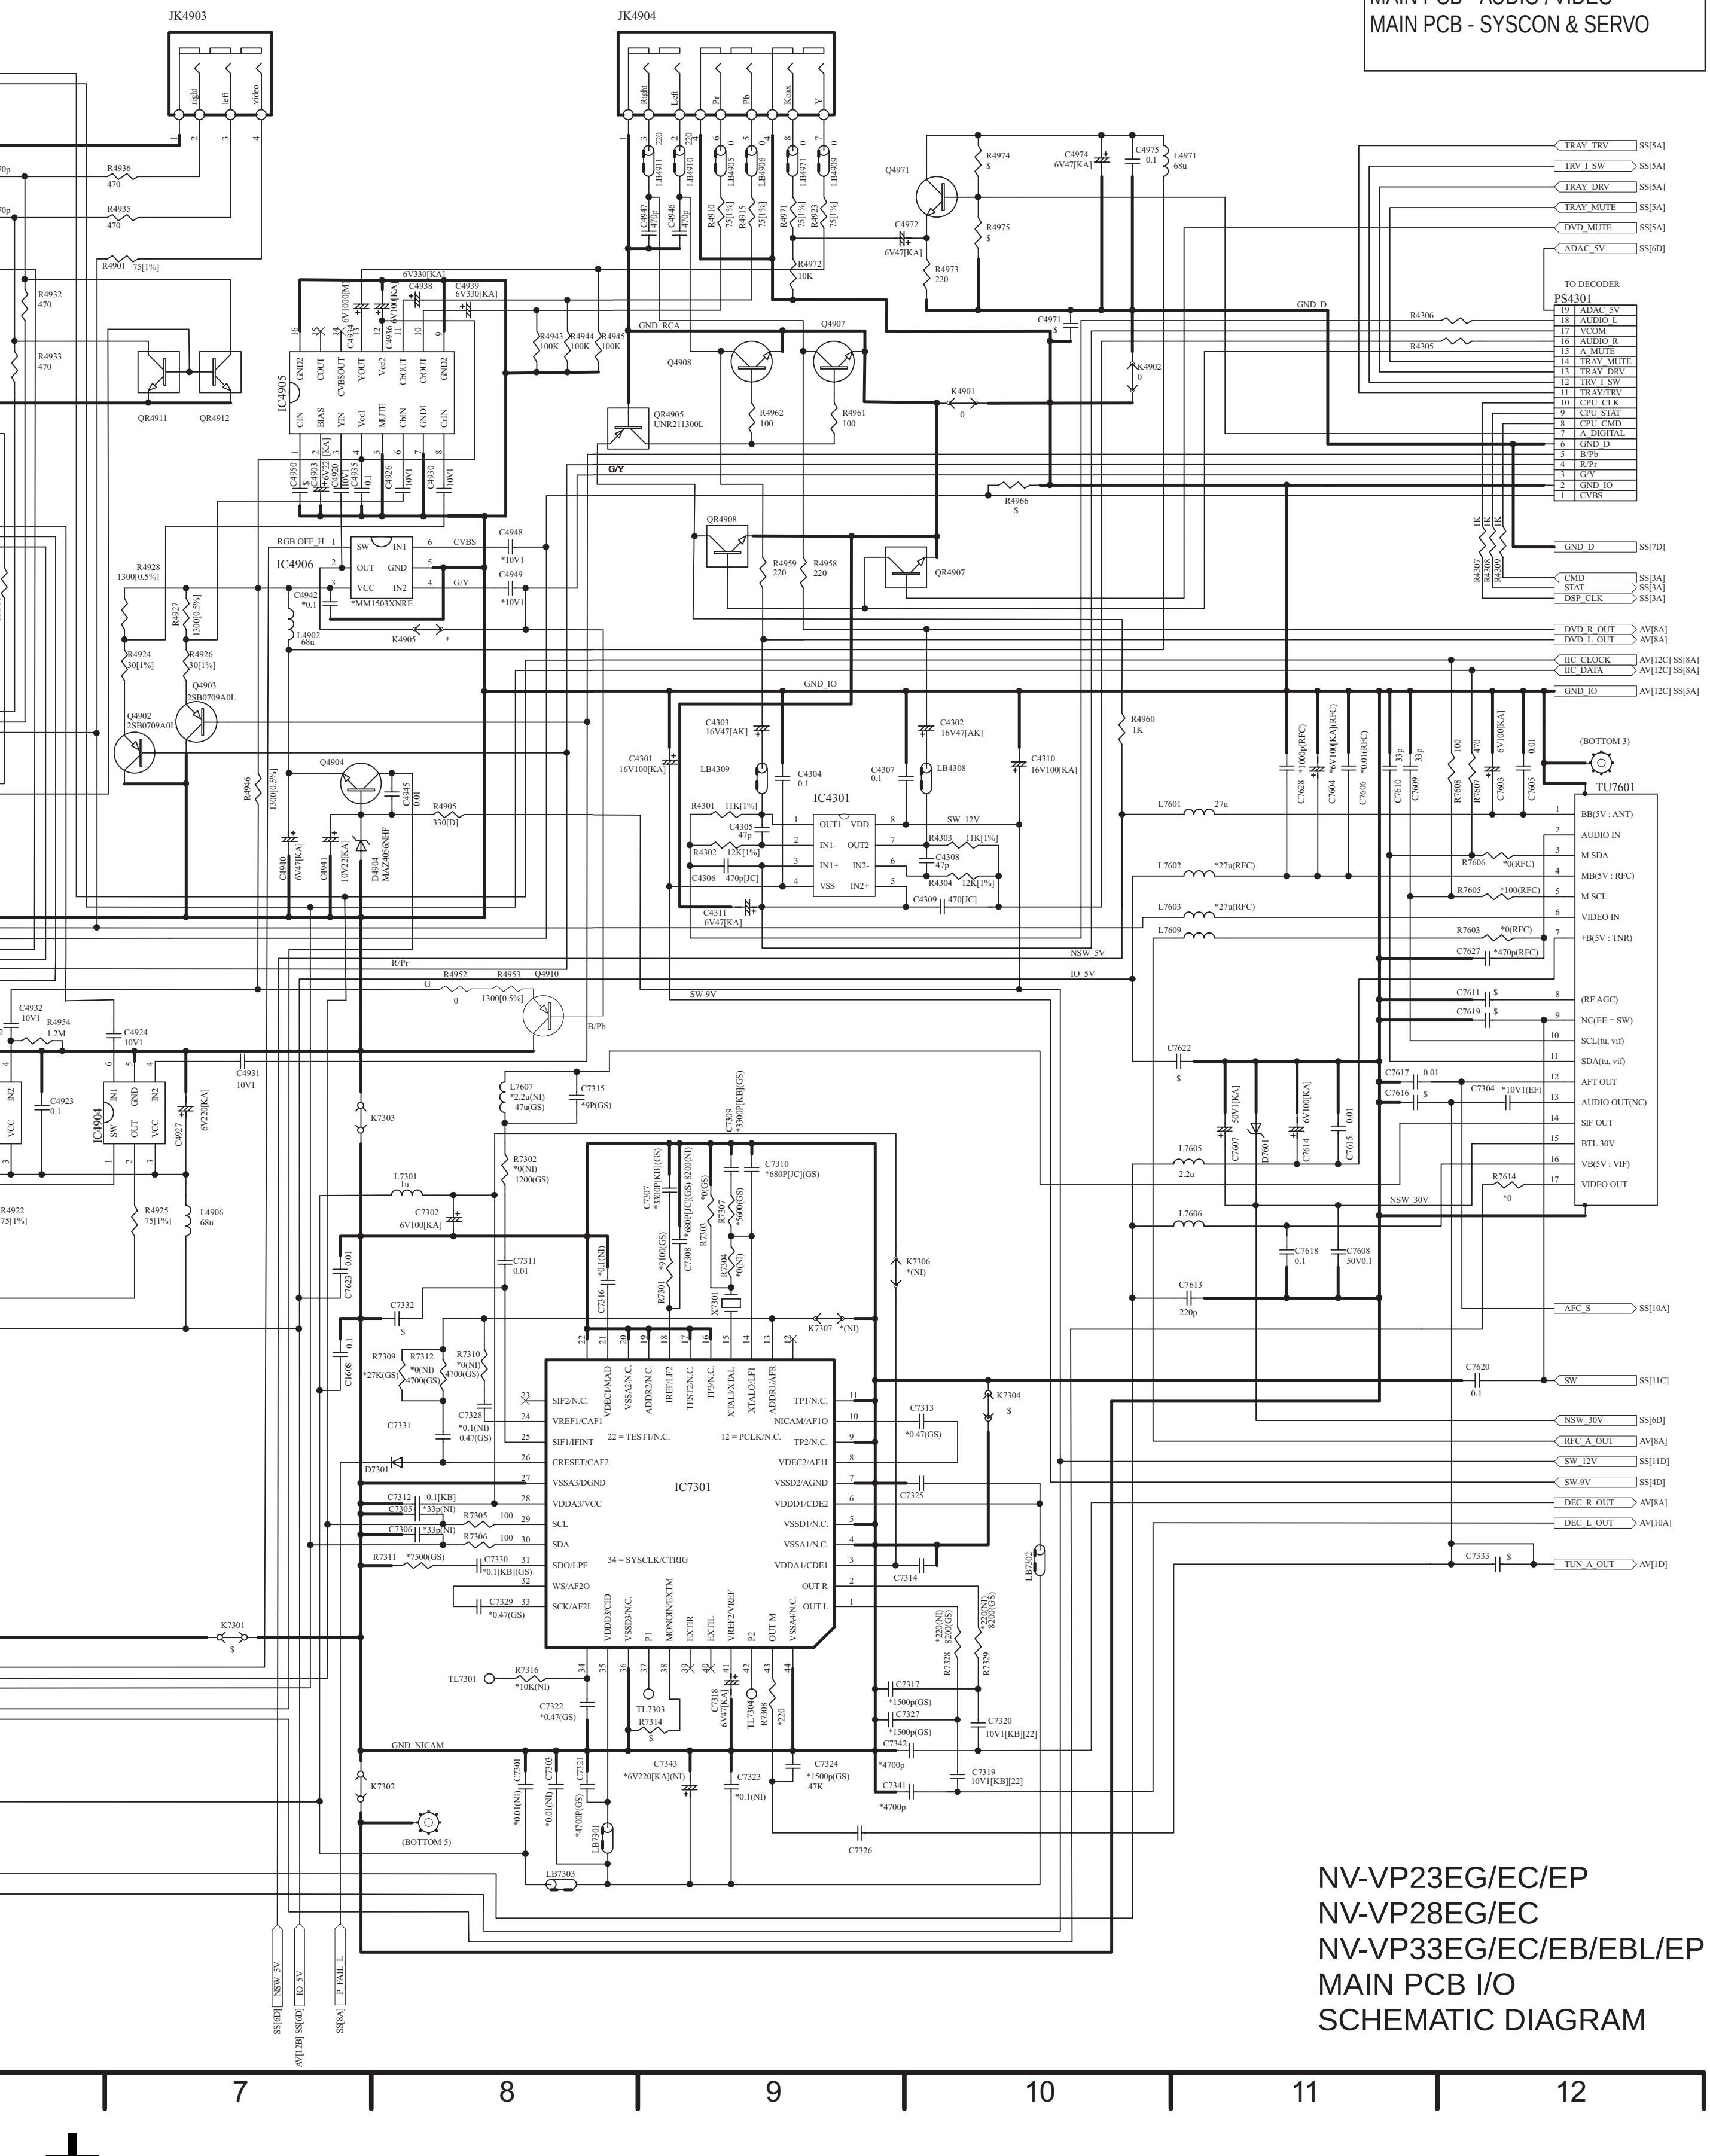
JK4903
right
left
video
JK4904
Right
Left
Pr
Pb
Koax
Y
IC4905
IC4906
*MM1503XNRE
IC4301
IC4904
IC7301
TU7601
PS4301
TO DECODER
Q4971
Q4908
Q4907
QR4905
UNR211300L
QR4908
QR4907
QR4911
QR4912
Q4902
2SB0709A0L
Q4903
2SB0709A0L
Q4904
D4904
MAZ4056NHF
Q4910
GND_RCA
GND_D
GND_IO
GND_NICAM
G/Y
R/Pr
B/Pb
SW_12V
NSW_5V
IO_5V
SW-9V
NSW_30V
TRAY_TRV
TRV_I_SW
TRAY_DRV
TRAY_MUTE
DVD_MUTE
ADAC_5V
CMD
STAT
DSP_CLK
DVD_R_OUT
DVD_L_OUT
IIC_CLOCK
IIC_DATA
GND_IO
AFC_S
SW
NSW_30V
RFC_A_OUT
SW_12V
SW-9V
DEC_R_OUT
DEC_L_OUT
TUN_A_OUT
NSW_5V
IO_5V
P_FAIL_L
(BOTTOM 3)
(BOTTOM 5)
TL7301
TL7303
LB7301
LB7302
LB7303
7
8
9
10
11
12

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB I/O
SCHEMATIC DIAGRAM

18.4. MAIN PCB - SYSCON & SERVO

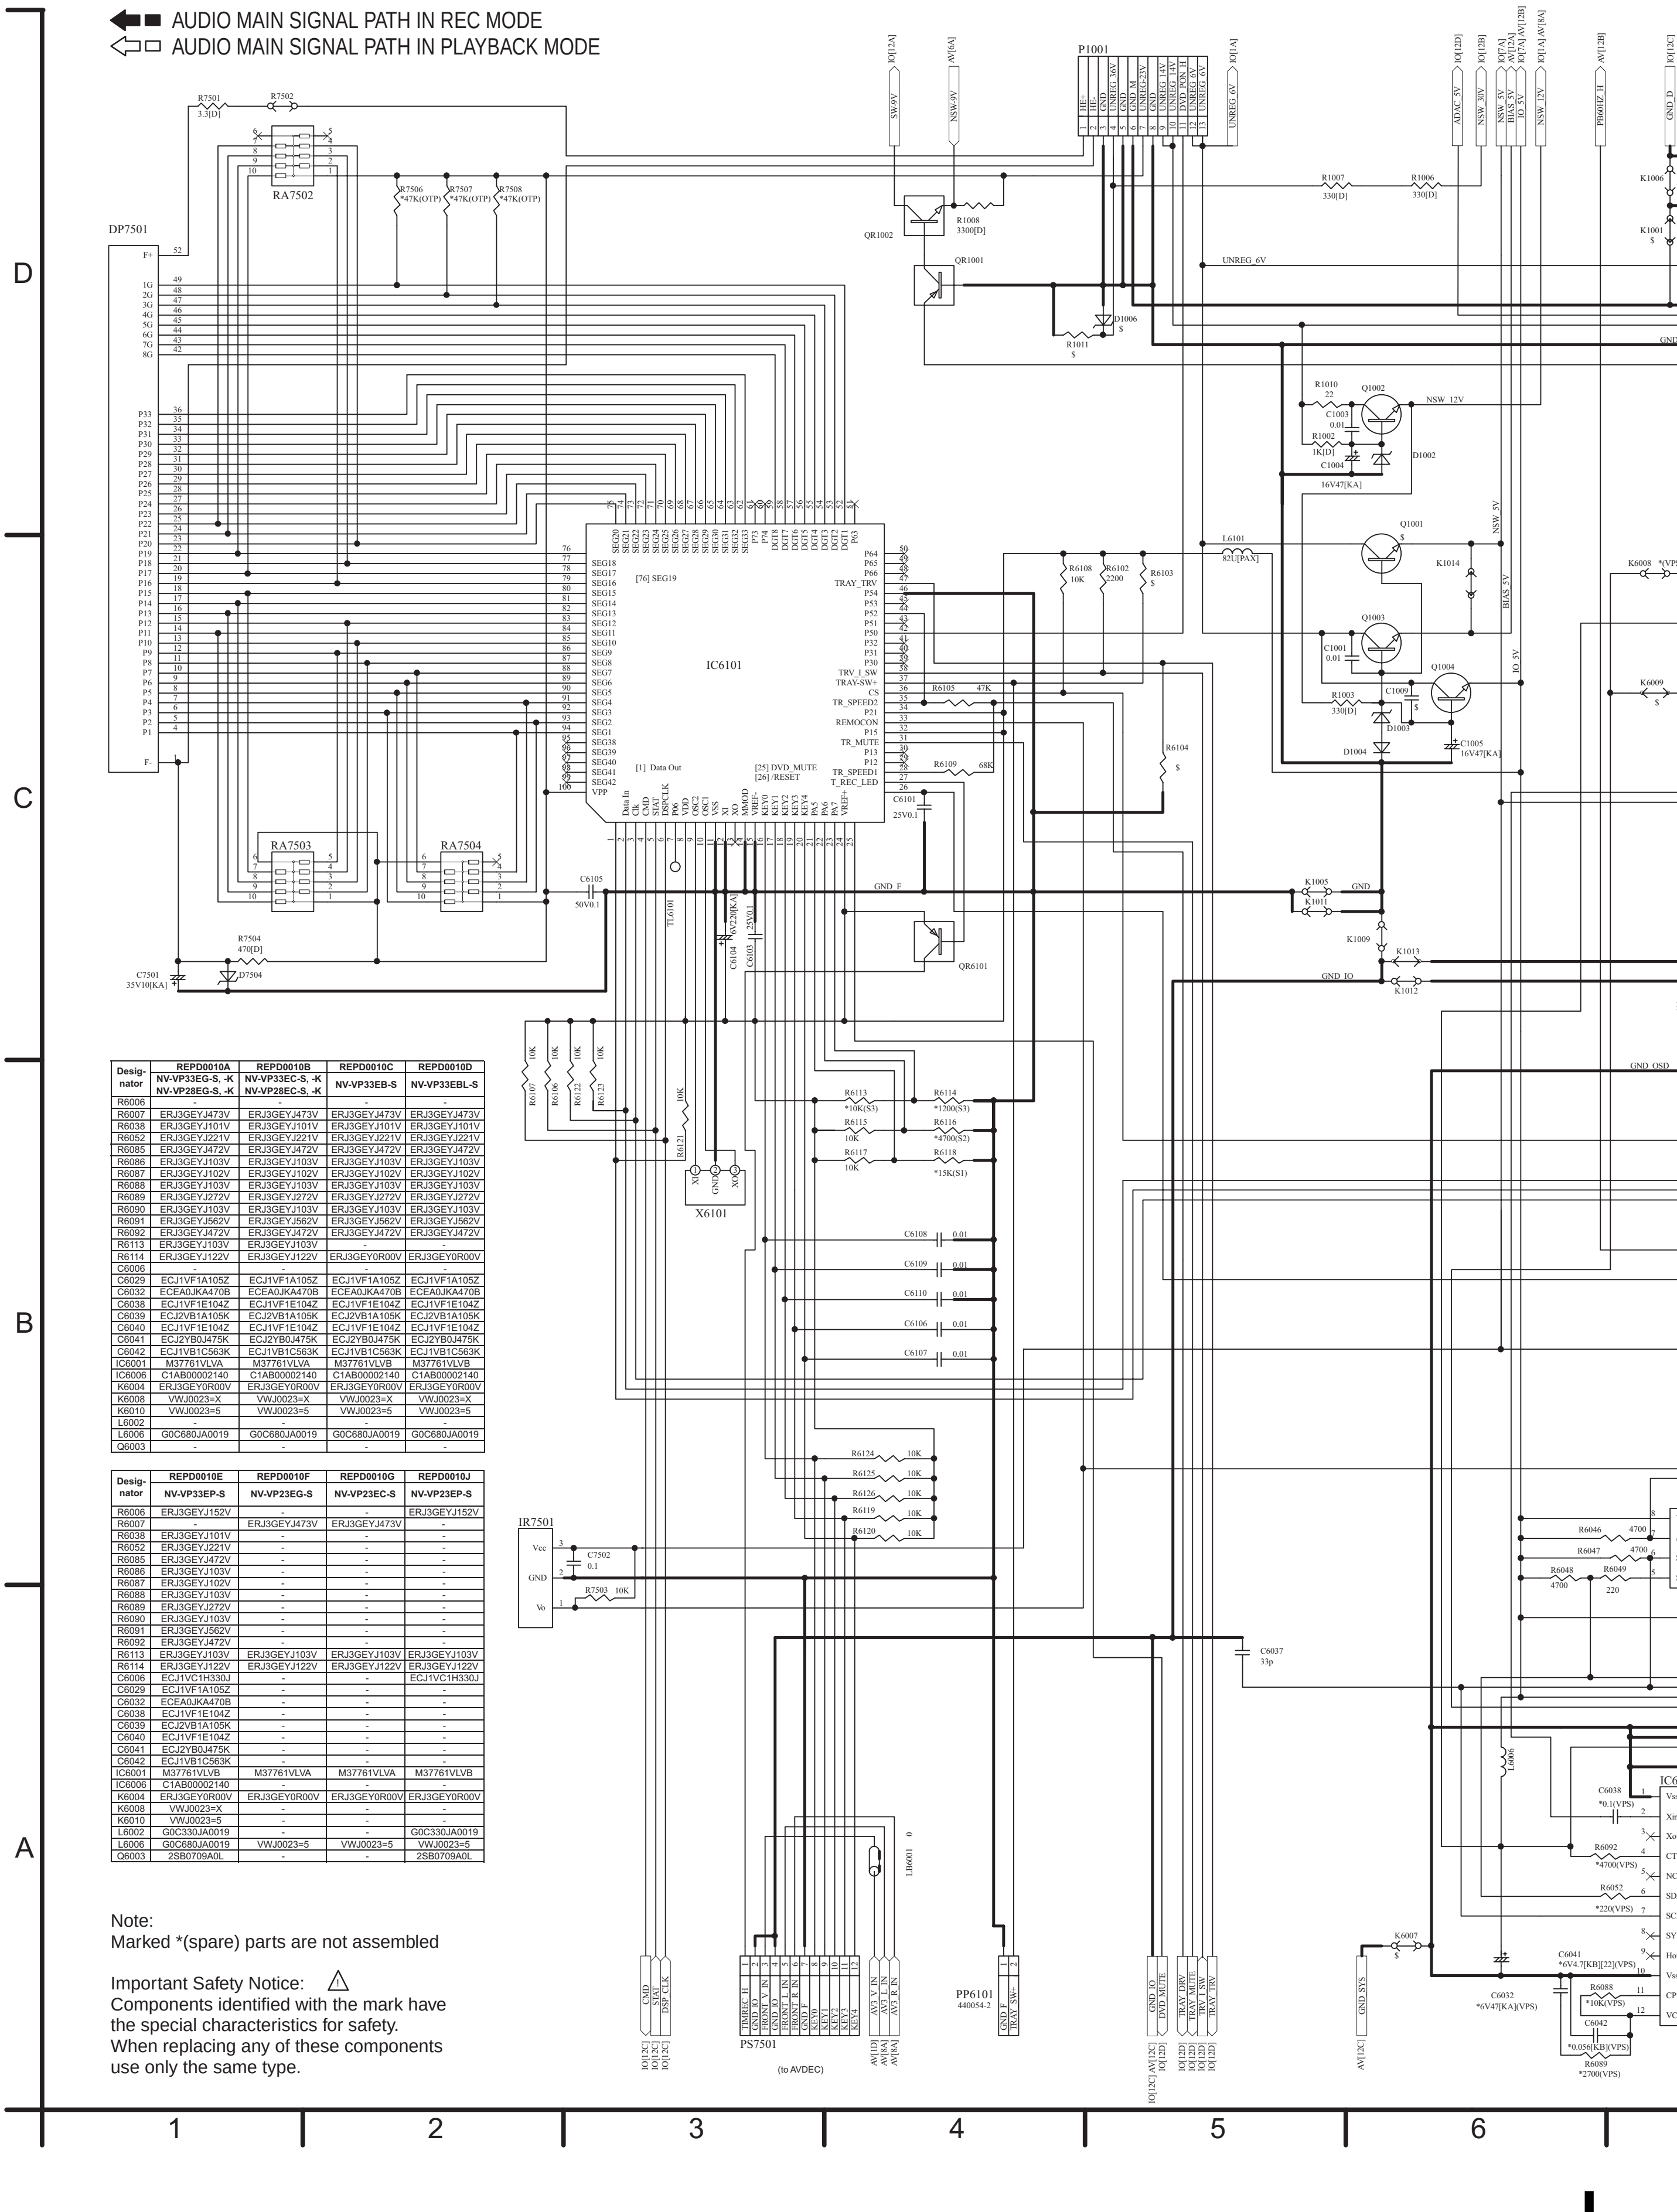
AUDIO MAIN SIGNAL PATH IN REC MODE
AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE
D
C
B
A
1
2
3
4
5
6
DP7501
RA7502
RA7503
RA7504
R7501
3.3[D]
R7502
R7504
470[D]
C7501
35V10[KA]
D7504
R7506
*47K(OTP)
R7507
*47K(OTP)
R7508
*47K(OTP)
IC6101
[76] SEG19
[1] Data Out
[25] DVD_MUTE
[26] /RESET
C6101
25V0.1
C6105
50V0.1
TL6101
C6104
6V220[KA]
C6103
25V0.1
X6101
R6107
R6106
R6122
R6123
R6121
R6113
*10K(S3)
R6114
*1200(S3)
R6115
10K
R6116
*4700(S2)
R6117
10K
R6118
*15K(S1)
C6108
C6109
C6110
C6106
C6107
0.01
R6124
R6125
R6126
R6119
R6120
10K
IR7501
Vcc
GND
Vo
C7502
0.1
R7503
10K
C6037
33p
P1001
HE+
HE-
GND
UNREG_16V
GND_M
UNREG_23V
GND
UNREG_14V
DVD_PON_H
UNREG_6V
UNREG_6V
QR1001
QR1002
R1008
3300[D]
R1011
$
D1006
$
UNREG_6V
R1007
330[D]
R1006
330[D]
K1006
K1001
$
R1010
22
Q1002
C1003
0.01
R1002
1K[D]
C1004
16V47[KA]
D1002
NSW_12V
Q1001
$
L6101
82U[PAX]
K1014
Q1003
C1001
0.01
Q1004
R1003
330[D]
C1009
D1003
C1005
16V47[KA]
D1004
R6108
10K
R6102
2200
R6103
$
R6105
47K
R6104
$
R6109
68K
GND_F
K1005
K1011
GND
K1009
K1013
GND_IO
K1012
QR6101
GND_OSD
SW-9V
NSW-9V
IO[12A]
AV[6A]
IO[1A]
ADAC_5V
NSW_30V
NSW_5V
BIAS_5V
IO_5V
NSW_12V
PB60HZ_H
GND_D
K6008
K6009
$
R6046
4700
R6047
4700
R6048
4700
R6049
220
L6006
C6038
*0.1(VPS)
R6092
*4700(VPS)
R6052
*220(VPS)
K6007
$
C6041
*6V4.7[KB][22](VPS)
C6032
*6V47[KA](VPS)
R6088
*10K(VPS)
C6042
*0.056[KB](VPS)
R6089
*2700(VPS)
CMD
STAT
DSP_CLK
IO[12C]
PS7501
(to AVDEC)
TIMER_H
GND_IO
FRONT_V_IN
GND_D
FRONT_L_IN
FRONT_R_IN
GND
KEY0
KEY1
KEY2
KEY3
KEY4
AV3_V_IN
AV3_L_IN
AV3_R_IN
AV[1D]
AV[8A]
LB6001
PP6101
440054-2
GND_F
TRAY_SW+
GND_IO
DVD_MUTE
TRAY_DRV
TRAY_MUTE
TRAY_I_SW
TRAY_TRV
IO[12D]
GND_SYS
AV[12C]

Desig-nator	REPD0010A NV-VP33EG-S, -K NV-VP28EG-S, -K	REPD0010B NV-VP33EC-S, -K NV-VP28EC-S, -K	REPD0010C NV-VP33EB-S	REPD0010D NV-VP33EBL-S
R6006	-	-	-	-
R6007	ERJ3GEYJ473V	ERJ3GEYJ473V	ERJ3GEYJ473V	ERJ3GEYJ473V
R6038	ERJ3GEYJ101V	ERJ3GEYJ101V	ERJ3GEYJ101V	ERJ3GEYJ101V
R6052	ERJ3GEYJ221V	ERJ3GEYJ221V	ERJ3GEYJ221V	ERJ3GEYJ221V
R6085	ERJ3GEYJ472V	ERJ3GEYJ472V	ERJ3GEYJ472V	ERJ3GEYJ472V
R6086	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V
R6087	ERJ3GEYJ102V	ERJ3GEYJ102V	ERJ3GEYJ102V	ERJ3GEYJ102V
R6088	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V
R6089	ERJ3GEYJ272V	ERJ3GEYJ272V	ERJ3GEYJ272V	ERJ3GEYJ272V
R6090	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V
R6091	ERJ3GEYJ562V	ERJ3GEYJ562V	ERJ3GEYJ562V	ERJ3GEYJ562V
R6092	ERJ3GEYJ472V	ERJ3GEYJ472V	ERJ3GEYJ472V	ERJ3GEYJ472V
R6113	ERJ3GEYJ103V	ERJ3GEYJ103V	-	-
R6114	ERJ3GEYJ122V	ERJ3GEYJ122V	ERJ3GEY0R00V	ERJ3GEY0R00V
C6006	-	-	-	-
C6029	ECJ1VF1A105Z	ECJ1VF1A105Z	ECJ1VF1A105Z	ECJ1VF1A105Z
C6032	ECEA0JKA470B	ECEA0JKA470B	ECEA0JKA470B	ECEA0JKA470B
C6038	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C6039	ECJ2VB1A105K	ECJ2VB1A105K	ECJ2VB1A105K	ECJ2VB1A105K
C6040	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C6041	ECJ2YB0J475K	ECJ2YB0J475K	ECJ2YB0J475K	ECJ2YB0J475K
C6042	ECJ1VB1C563K	ECJ1VB1C563K	ECJ1VB1C563K	ECJ1VB1C563K
IC6001	M37761VLVA	M37761VLVA	M37761VLVB	M37761VLVB
IC6006	C1AB00002140	C1AB00002140	C1AB00002140	C1AB00002140
K6004	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
K6008	VWJ0023=X	VWJ0023=X	VWJ0023=X	VWJ0023=X
K6010	VWJ0023=5	VWJ0023=5	VWJ0023=5	VWJ0023=5
L6002	-	-	-	-
L6006	G0C680JA0019	G0C680JA0019	G0C680JA0019	G0C680JA0019
Q6003	-	-	-	-

Desig-nator	REPD0010E NV-VP33EP-S	REPD0010F NV-VP23EG-S	REPD0010G NV-VP23EC-S	REPD0010J NV-VP23EP-S
R6006	ERJ3GEYJ152V	-	-	ERJ3GEYJ152V
R6007	-	ERJ3GEYJ473V	ERJ3GEYJ473V	-
R6038	ERJ3GEYJ101V	-	-	-
R6052	ERJ3GEYJ221V	-	-	-
R6085	ERJ3GEYJ472V	-	-	-
R6086	ERJ3GEYJ103V	-	-	-
R6087	ERJ3GEYJ102V	-	-	-
R6088	ERJ3GEYJ103V	-	-	-
R6089	ERJ3GEYJ272V	-	-	-
R6090	ERJ3GEYJ103V	-	-	-
R6091	ERJ3GEYJ562V	-	-	-
R6092	ERJ3GEYJ472V	-	-	-
R6113	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V
R6114	ERJ3GEYJ122V	ERJ3GEYJ122V	ERJ3GEYJ122V	ERJ3GEYJ122V
C6006	ECJ1VC1H330J	-	-	ECJ1VC1H330J
C6029	ECJ1VF1A105Z	-	-	-
C6032	ECEA0JKA470B	-	-	-
C6038	ECJ1VF1E104Z	-	-	-
C6039	ECJ2VB1A105K	-	-	-
C6040	ECJ1VF1E104Z	-	-	-
C6041	ECJ2YB0J475K	-	-	-
C6042	ECJ1VB1C563K	-	-	-
IC6001	M37761VLVB	M37761VLVA	M37761VLVA	M37761VLVB
IC6006	C1AB00002140	-	-	-
K6004	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
K6008	VWJ0023=X	-	-	-
K6010	VWJ0023=5	-	-	-
L6002	G0C330JA0019	-	-	G0C330JA0019
L6006	G0C680JA0019	VWJ0023=5	VWJ0023=5	VWJ0023=5
Q6003	2SB0709A0L	-	-	2SB0709A0L

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety.
When replacing any of these components use only the same type.

NAVIGATION
INTERCONNECTION
MAIN PCB - AUDIO / VIDEO
MAIN PCB - I/O

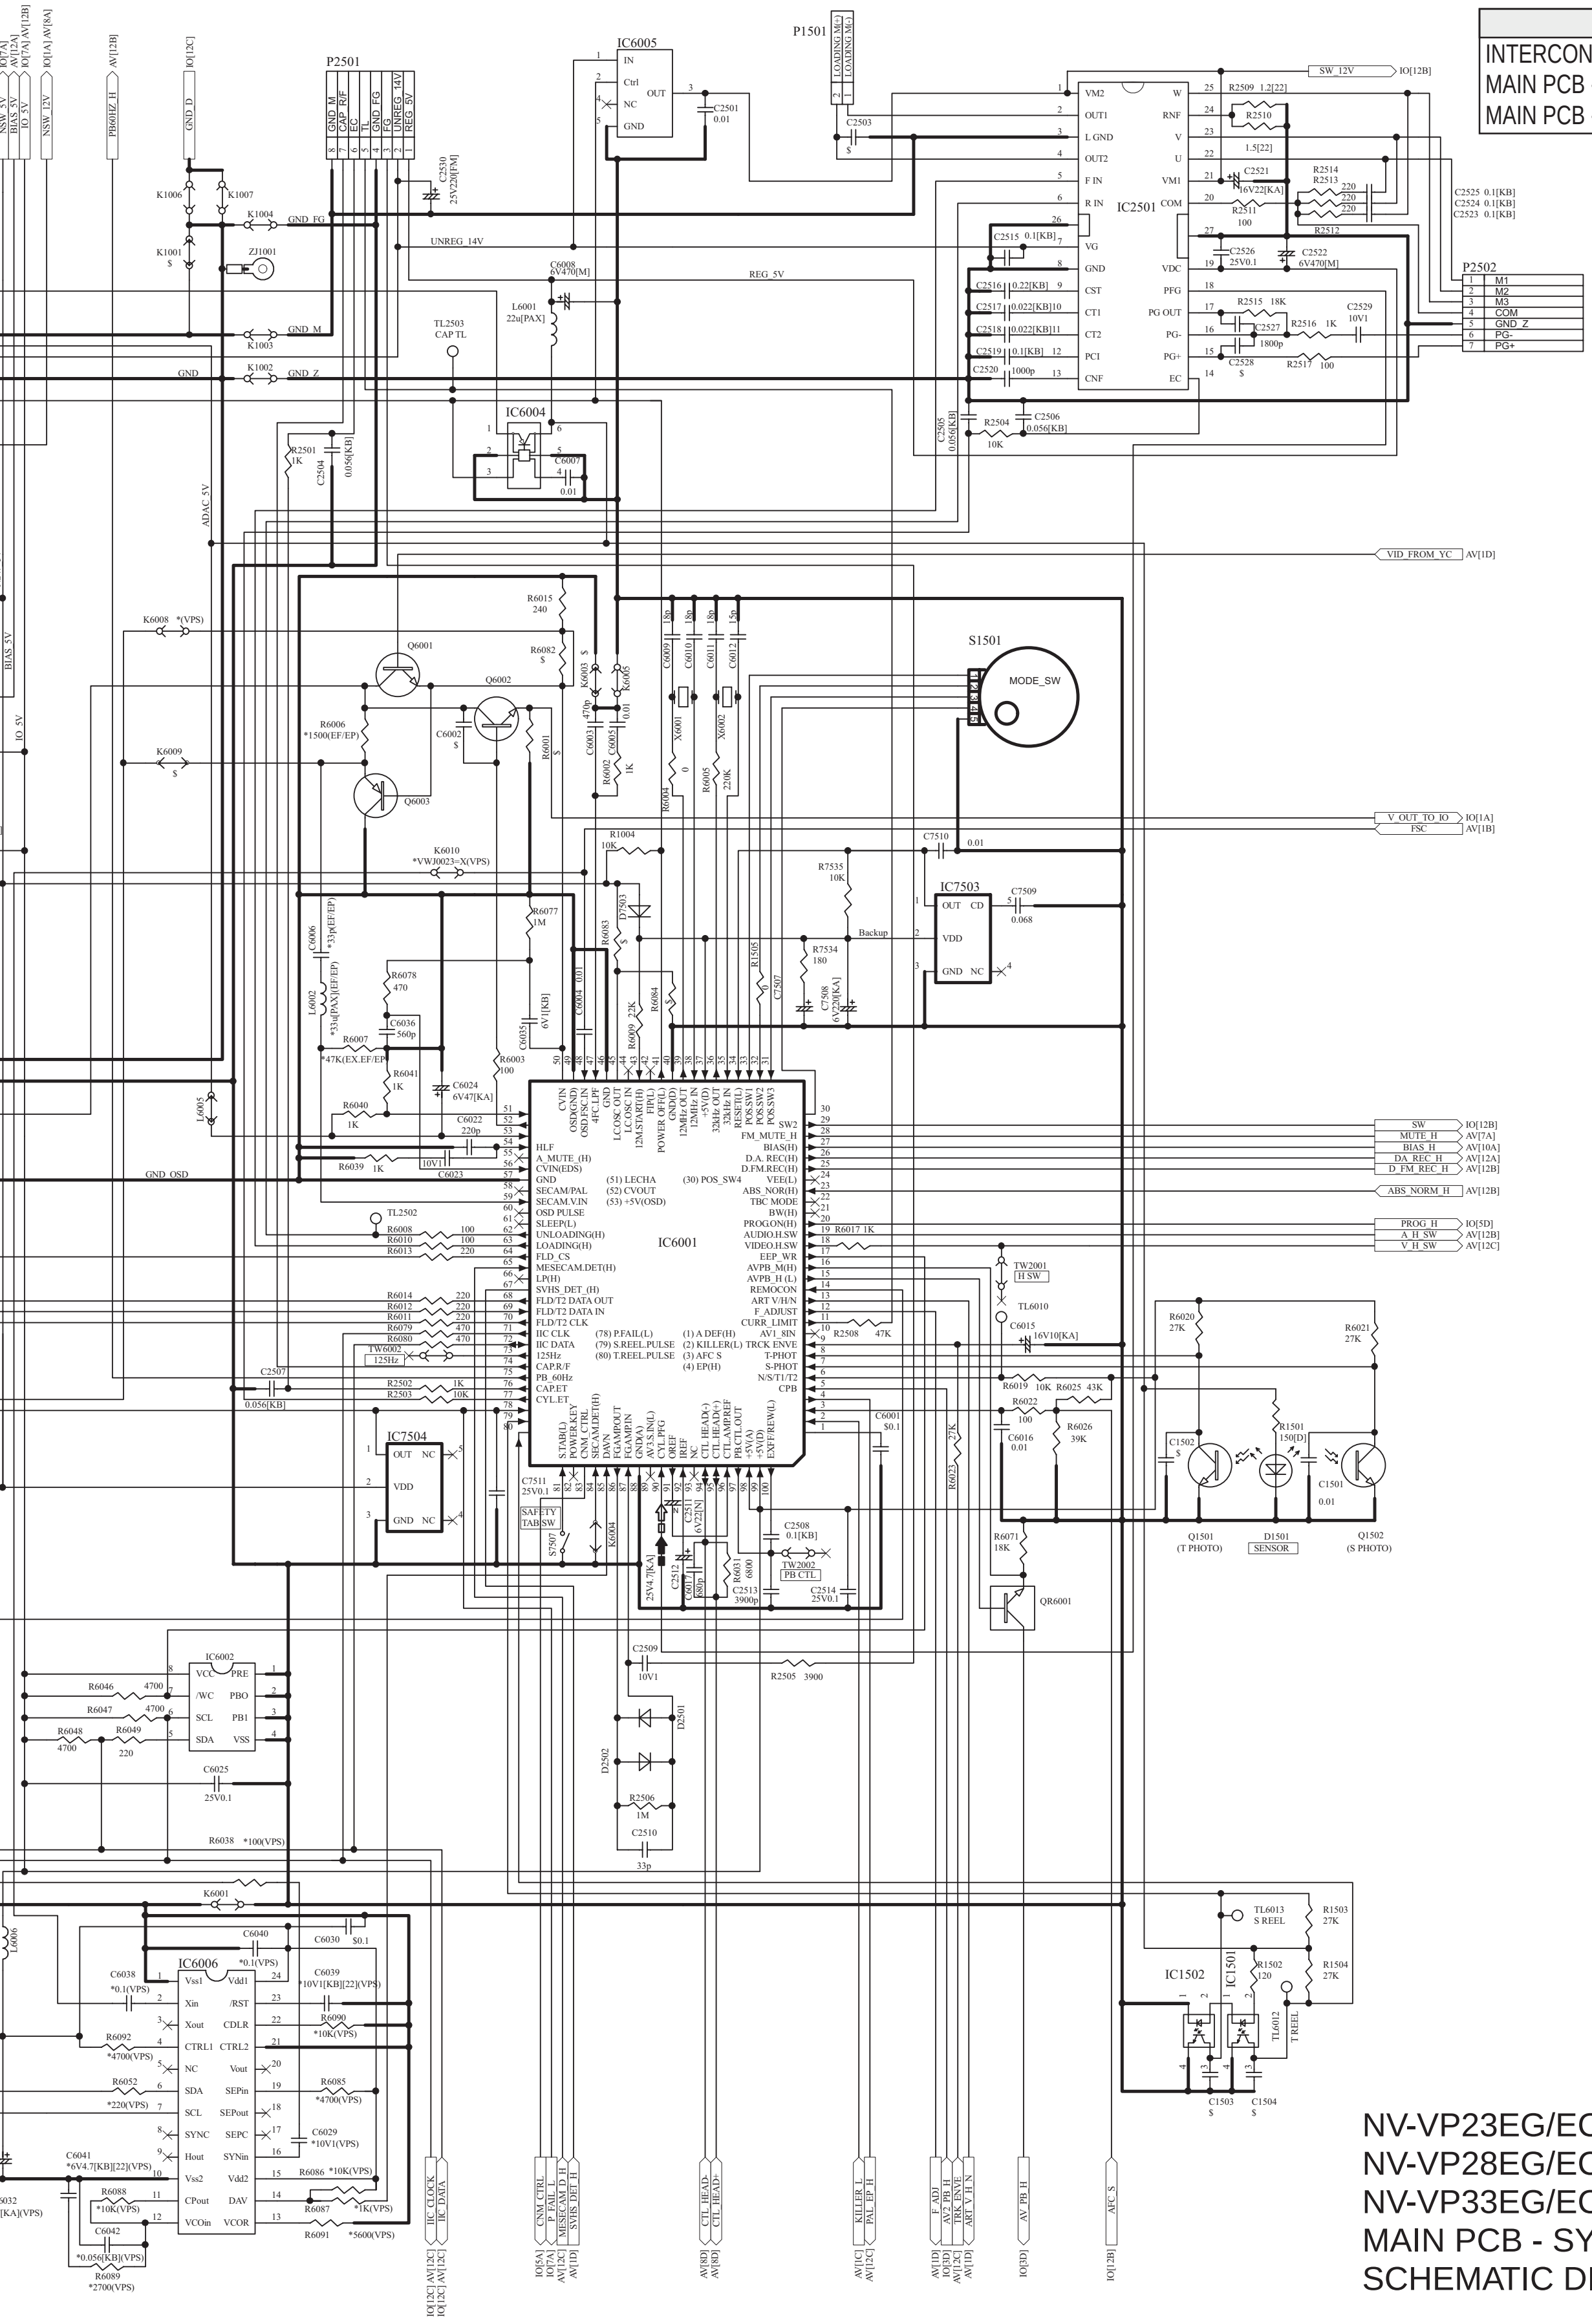

P2501
GND_M
CAP_RF
EC
TL
GND_FG
FG
UNREG_14V
REG_5V
IC6005
IN
Ctrl
NC
OUT
GND
C2501 0.01
C2530 25V220[FM]
P1501
LOADING M(-)
LOADING M(+)
C2503
IC2501
VM2
OUT1
L GND
OUT2
F IN
R IN
VG
GND
CST
CT1
CT2
PCI
CNF
W
RNF
V
U
VM1
COM
VDC
PFG
PG OUT
PG-
PG+
EC
SW_12V
IO[12B]
P2502
M1
M2
M3
COM
GND_Z
PG-
PG+
C2525 0.1[KB]
C2524 0.1[KB]
C2523 0.1[KB]
C2522 6V470[M]
C2526 25V0.1
C2529 10V1
K1006
K1007
K1004
GND_FG
K1001
ZJ1001
UNREG_14V
C6008 6V470[M]
REG_5V
L6001 22u[PAX]
TL2503 CAP TL
K1003
GND_M
GND
K1002
GND_Z
IC6004
C6007 0.01
R2501 1K
C2504 0.056[KB]
ADAC_5V
C2505 0.056[KB]
R2504 10K
C2506 0.056[KB]
VID_FROM_YC AV[1D]
NSW_5V
BIAS_5V
IO_5V
NSW_12V
PB60HZ_H AV[12B]
GND_D IO[12C]
K6008 *(VPS)
R6015 240
Q6001
Q6002
R6082 $
R6006 *1500(EF/EP)
C6002 $
Q6003
K6009 $
K6010 *VWJ0023×X(VPS)
C6009 18p
C6010 18p
C6011 18p
C6012 15p
X6001
X6002
S1501
MODE_SW
V_OUT_TO_IO IO[1A]
FSC AV[1B]
R1004 10K
C7510 0.01
R7535 10K
IC7503
OUT
CD
VDD
GND
NC
C7509 0.068
Backup
R7534 180
C7508 6V220[KA]
D7503
C6006 *33p(EF/EP)
L6002 *33u(PAX)(EF/EP)
R6078 470
C6036 560p
R6007 *47K(EX.EF/EP)
R6041 1K
C6024 6V47[KA]
R6077 1M
R6003 100
R6040 1K
C6022 220p
R6039 1K
C6023
L6005
GND_OSD
IC6001
CVIN
OSD(GND)
OSD.FSC.IN
4FC.LPF
GND
LC.OSC.OUT
LC.OSC.IN
12M.START(H)
DINL
POWER OFF(L)
GND(D)
12MHz OUT
12MHz IN
+5V(D)
32kHz OUT
32kHz IN
RESET(L)
POS.SW1
POS.SW2
POS.SW3
SW2
FM_MUTE_H
BIAS(H)
D.A. REC(H)
D.FM.REC(H)
VEE(L)
ABS_NOR(H)
TBC MODE
BW(H)
PROG.ON(H)
AUDIO.H.SW
VIDEO.H.SW
EEP_WR
AVPB_M(H)
AVPB_H (L)
REMOCON
ART V/H/N
F_ADJUST
CURR_LIMIT
AV1_8IN
TRCK ENVE
T-PHOT
S-PHOT
N/S/T1/T2
CPB
HLF
A_MUTE_(H)
CVIN(EDS)
GND
SECAM/PAL
SECAM.V.IN
OSD PULSE
SLEEP(L)
UNLOADING(H)
LOADING(H)
FLD_CS
MESECAM.DET(H)
LP(H)
SVHS_DET_(H)
FLD/T2 DATA OUT
FLD/T2 DATA IN
FLD/T2 CLK
IIC CLK
IIC DATA
125Hz
CAP.R/F
PB_60Hz
CAP.ET
CYL.ET
(51) LECHA
(52) CVOUT
(53) +5V(OSD)
(30) POS_SW4
(78) P.FAIL(L)
(79) S.REEL.PULSE
(80) T.REEL.PULSE
(1) A DEF(H)
(2) KILLER(L)
(3) AFC S
(4) EP(H)
STAB(L)
POWER KEY
CNM CTRL
SECAM.DET(H)
DAVN
FGAMPOUT
FGAMPIN
(GNDA)
W.S.IN(L)
CYL.PFG
DREF
IREF
NC
CTL.HEAD(-)
CTL.HEAD(+)
CTL.AMPREF
PB.CTL.OUT
+5V(A)
+5V(D)
EXF/FREW(L)
SW IO[12B]
MUTE_H AV[7A]
BIAS_H AV[10A]
DA_REC_H AV[12A]
D_FM_REC_H AV[12B]
ABS_NORM_H AV[12B]
PROG_H IO[5D]
A_H_SW AV[12B]
V_H_SW AV[12C]
R6017 1K
TW2001 H SW
TL6010
C6015 16V10[KA]
R2508 47K
TL2502
R6008 100
R6010 100
R6013 220
R6014 220
R6012 220
R6011 220
R6079 470
R6080 470
TW6002 125Hz
C2507 0.056[KB]
R2502 1K
R2503 10K
IC7504
OUT
NC
VDD
GND
NC
C7511 25V0.1
SAFETY TAB SW
S7507
K6004
C2512 25V4.7[KA]
C2511 6V22[N]
C6017 680p
R6001 6800
C2508 0.1[KB]
TW2002 PB CTL
C2513 3900p
C2514 25V0.1
C6001 $0.1
R6023
R6019 10K
R6025 43K
R6022 100
C6016 0.01
R6026 39K
R6020 27K
R6021 27K
R1501 150[D]
C1502 $
C1501 0.01
Q1501 (T PHOTO)
D1501 SENSOR
Q1502 (S PHOTO)
R6071 18K
QR6001
C2509 10V1
R2505 3900
D2501
D2502
R2506 1M
C2510 33p
IC6002
VCC
/WC
SCL
SDA
PRE
PBO
PB1
VSS
R6046 4700
R6047 4700
R6048 4700
R6049 220
C6025 25V0.1
R6038 *100(VPS)
K6001
C6040 *0.1(VPS)
C6030 $0.1
IC6006
Vss1
Xin
Xout
CTRL1
NC
SDA
SCL
SYNC
Hout
Vss2
CPout
VCOin
Vdd1
/RST
CDLR
CTRL2
Vout
SEPin
SEPout
SEPC
SYNin
Vdd2
DAV
VCOR
C6038 *0.1(VPS)
C6039 *10V1[KB][22](VPS)
R6092 *4700(VPS)
R6090 *10K(VPS)
R6052 *220(VPS)
R6085 *4700(VPS)
C6029 *10V1(VPS)
C6041 *6V4.7[KB][22](VPS)
R6086 *10K(VPS)
R6088 *10K(VPS)
R6087 *1K(VPS)
C6042 *0.056[KB](VPS)
R6091 *5600(VPS)
R6089 *2700(VPS)
TL6013 S REEL
R1503 27K
R1504 27K
IC1502
IC1501
R1502 120
TL6012 T REEL
C1503 $
C1504 $
IIC_CLOCK
IIC_DATA
CNM_CTRL
P_FAIL_L
MESECAM_D_H
SVHS_DET_H
CTL_HEAD+
CTL_HEAD-
KILLER_L
PAL_EP_H
F_ADJ
AV2_PB_H
TRK_ENVE
ART_V_H_N
AV_PB_H
AFC_S
7
8
9
10
11
12

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB - SYSCON & SERVO
SCHEMATIC DIAGRAM

18.5. MAIN PCB - SYSCON & SERVO (ONLY REPD0024x)

AUDIO MAIN SIGNAL PATH IN REC MODE
AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

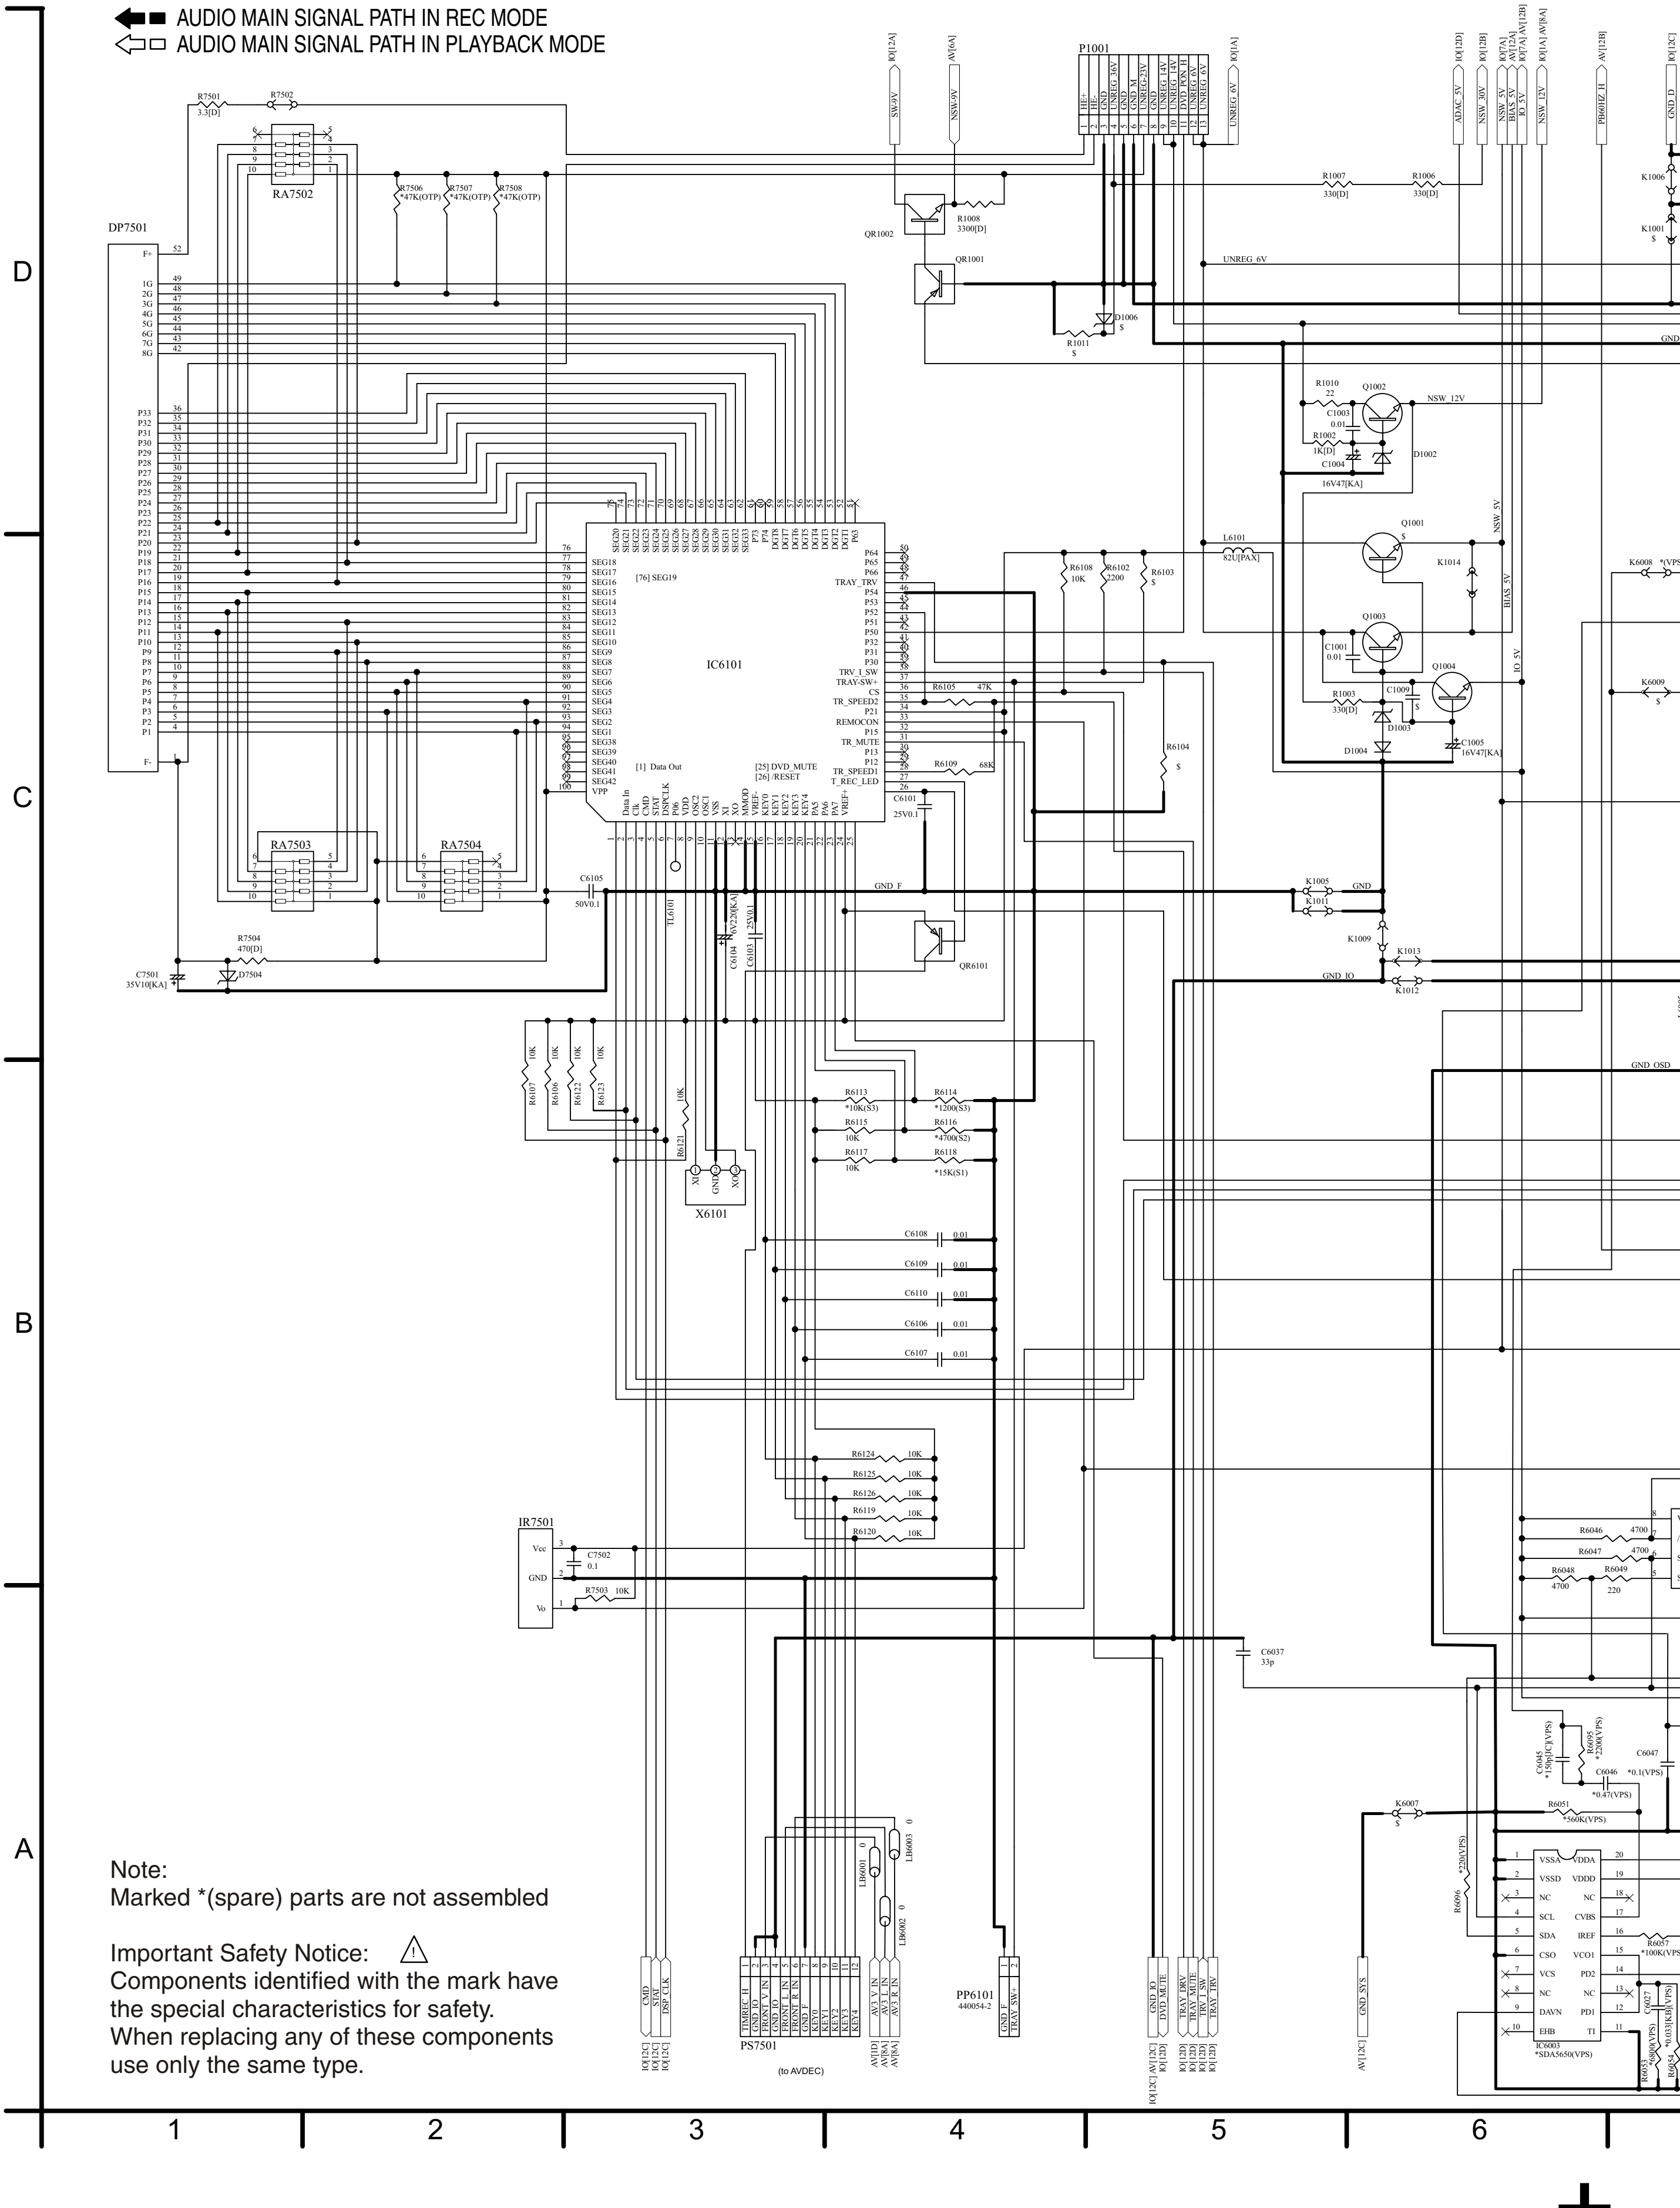

D
C
B
A
1
2
3
4
5
6
DP7501
RA7502
RA7503
RA7504
R7501
R7502
R7504
C7501
D7504
R7506
R7507
R7508
IC6101
P1001
QR1001
QR1002
R1008
R1011
D1006
R1007
R1006
K1006
K1001
UNREG_6V
Q1001
Q1002
Q1003
Q1004
D1002
D1003
D1004
L6101
K1014
NSW_12V
GND_F
GND_IO
GND_OSD
K1005
K1011
K1009
K1013
K1012
QR6101
X6101
C6105
C6101
C6104
C6103
R6107
R6106
R6122
R6123
R6121
R6113
R6114
R6115
R6116
R6117
R6118
C6108
C6109
C6110
C6106
C6107
R6124
R6125
R6126
R6119
R6120
IR7501
C7502
R7503
C6037
PS7501
(to AVDEC)
PP6101
LB6001
LB6002
LB6003
K6007
K6008
K6009
R6046
R6047
R6048
R6049
R6051
R6096
IC6003
*SDA5650(VPS)

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety.
When replacing any of these components use only the same type.

NAVIGATION
INTERCONNECTION
MAIN PCB - AUDIO / VIDEO
MAIN PCB - I/O

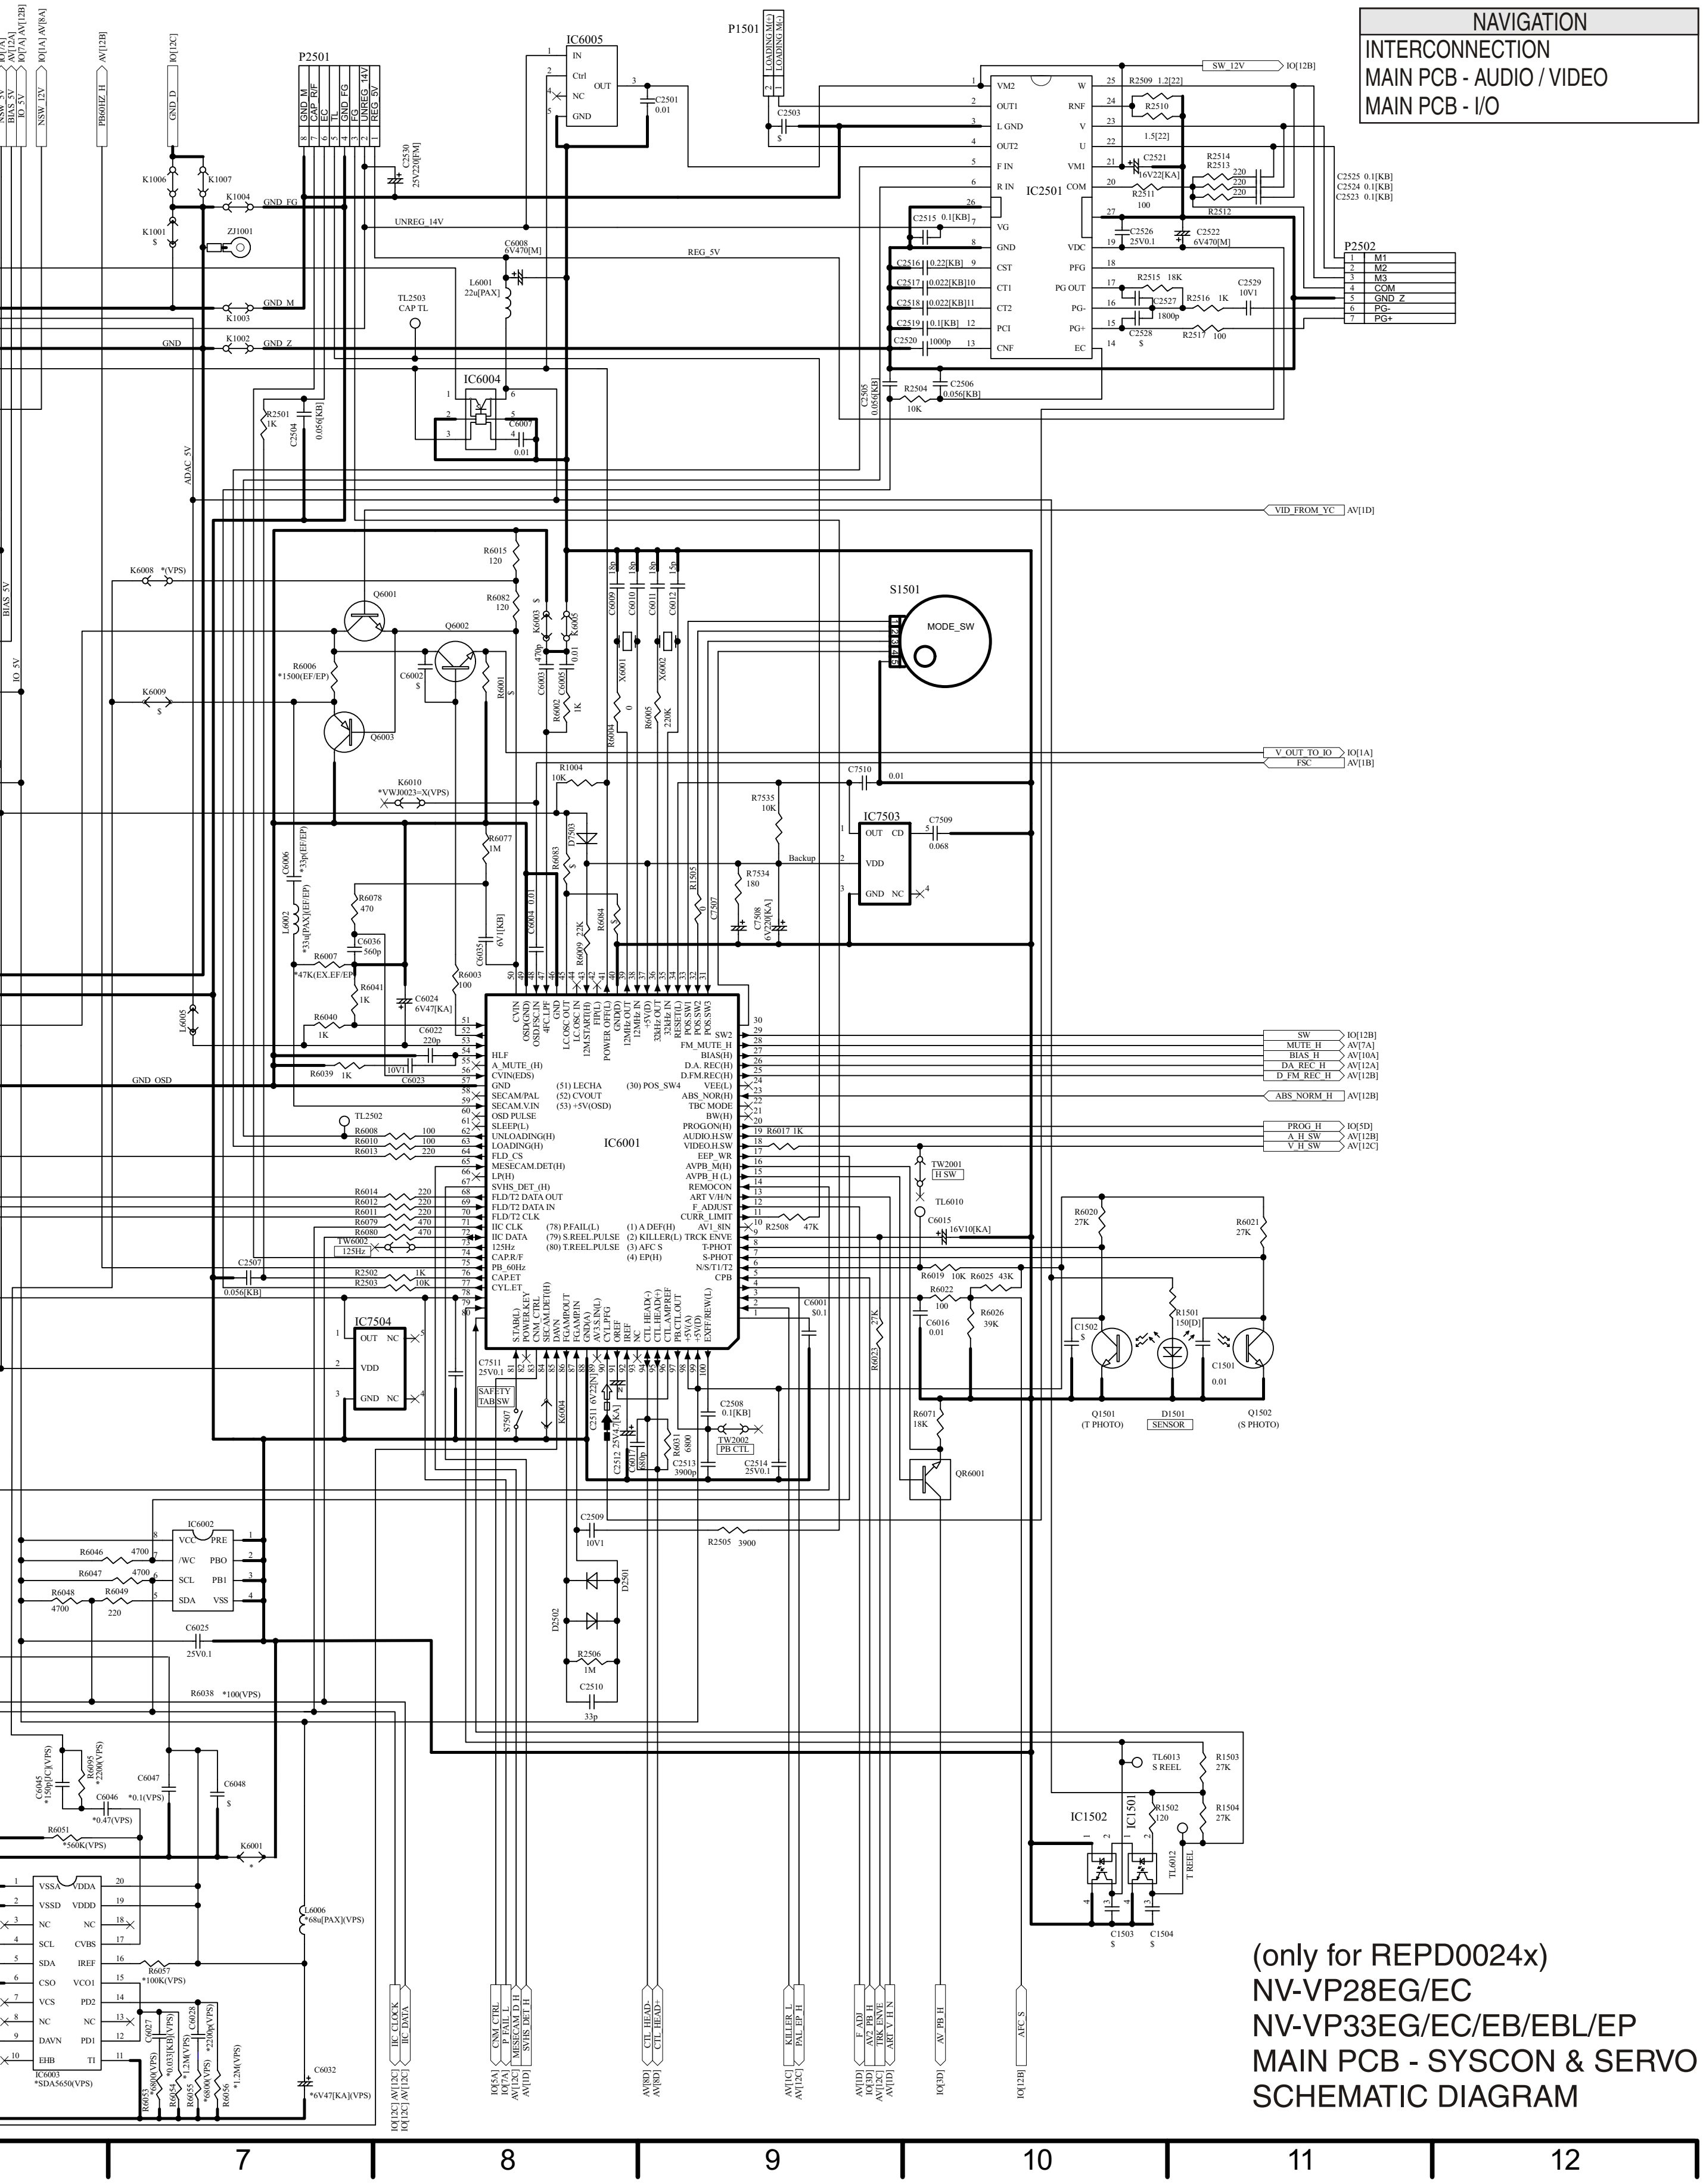

IC6005
IN
Ctrl
NC
GND
OUT
C2501 0.01
P1501
LOADING M(+)
LOADING M(-)
C2503
P2501
GND_M
CAP_RF
EC
TL
GND_FG
FG
UNREG_14V
REG_5V
C2530 25V220[FM]
K1006
K1007
K1004
GND_FG
K1001
ZJ1001
UNREG_14V
C6008 6V470[M]
REG_5V
L6001 22u[PAX]
K1003
GND_M
TL2503 CAP TL
GND
K1002
GND_Z
IC6004
C6007 0.01
R2501 1K
C2504 0.056[KB]
ADAC_5V
IC2501
VM2
OUT1
L GND
OUT2
F IN
R IN
VG
GND
CST
CT1
CT2
PC1
CNF
W
RNF
V
U
VM1
COM
VDC
PFG
PG OUT
PG-
PG+
EC
SW_12V
IO[12B]
R2509 1.2[22]
R2510
1.5[22]
C2521 16V22[KA]
R2511 100
R2514
R2513
R2512
C2525 0.1[KB]
C2524 0.1[KB]
C2523 0.1[KB]
C2526 25V0.1
C2522 6V470[M]
C2515 0.1[KB]
C2516 0.22[KB]
C2517 0.022[KB]
C2518 0.022[KB]
C2519 0.1[KB]
C2520 1000p
R2515 18K
C2527 1800p
R2516 1K
C2529 10V1
C2528 $
R2517 100
P2502
M1
M2
M3
COM
GND_Z
PG-
PG+
C2505 0.056[KB]
R2504 10K
C2506 0.056[KB]
VID_FROM_YC AV[1D]
S1501
MODE_SW
K6008 *(VPS)
BIAS_5V
IO_5V
R6015 120
R6082 120
Q6001
Q6002
Q6003
R6006 *1500(EF/EP)
C6002 $
K6009 $
K6003 $
K6005
C6003 470p
C6005 0.01
R6002 1K
C6009 18p
C6010 18p
C6011 18p
C6012 15p
X6001
X6002
R6004
R6005 220K
V_OUT_TO_IO IO[1A]
FSC AV[1B]
R1004 10K
K6010 *VWJ0023=X(VPS)
C7510 0.01
R7535 10K
IC7503
OUT
CD
VDD
GND
NC
C7509 0.068
Backup
R7534 180
C7507
C7508 6V220[KA]
D7503
R6083
R6084
R1505
R6077 1M
C6006 *33p(EF/EP)
L6002 *33u[PAX](EF/EP)
R6078 470
C6036 560p
R6007 *47K(EX,EF/EP)
R6041 1K
C6024 6V47[KA]
R6003 100
C6035 6V1[KB]
C6004 0.01
R6009 22K
L6005
R6040 1K
C6022 220p
C6023
10V1
R6039 1K
GND_OSD
TL2502
R6008 100
R6010 100
R6013 220
R6014 220
R6012 220
R6011 220
R6079 470
R6080 470
TW6002 125Hz
R2502 1K
R2503 10K
C2507 0.056[KB]
IC6001
CVIN OSD(GND) OSD SC IN 4FC LPF GND LC OSC OUT LC OSC IN 12MSTART(H) FIP(L) POWER OFF(L) GND(D) 12MHz OUT 12MHz IN 5V(D) 32kHz OUT 32kHz IN RESET(L) POS SW1 POS SW2 POS SW3
HLF
A_MUTE_(H)
CVIN(EDS)
GND
SECAM/PAL
SECAM.V.IN
OSD PULSE
SLEEP(L)
UNLOADING(H)
LOADING(H)
FLD_CS
MESECAM.DET(H)
LP(H)
SVHS_DET_(H)
FLD/T2 DATA OUT
FLD/T2 DATA IN
FLD/T2 CLK
IIC CLK
IIC DATA
125Hz
CAP.R/F
PB_60Hz
CAP.ET
CYL.ET
(51) LECHA
(52) CVOUT
(53) +5V(OSD)
(30) POS_SW4
(78) P.FAIL(L)
(79) S.REEL.PULSE
(80) T.REEL.PULSE
(1) A DEF(H)
(2) KILLER(L)
(3) AFC S
(4) EP(H)
SW2
FM_MUTE_H
BIAS(H)
D.A. REC(H)
D.FM.REC(H)
VEE(L)
ABS_NOR(H)
TBC MODE
BW(H)
PROG.ON(H)
AUDIO.H.SW
VIDEO.H.SW
EEP_WR
AVPB_M(H)
AVPB_H (L)
REMOCON
ART V/H/N
F_ADJUST
CURR_LIMIT
AV1_8IN
TRCK ENVE
T-PHOT
S-PHOT
N/S/T1/T2
CPB
S.TAB(L) POWER KEY CNM CTRL SECAM DET(H) DAVN FGAMPOUT FGAMPIN (GND)(A) AV.S.IN(L) CYL.PFG IREF NC CTL HEAD(-) CTL HEAD(+) CTL AMPREF PB.CTLOUT +5V(A) +5V(D) EXTP REW(L)
SW IO[12B]
MUTE_H AV[7A]
BIAS_H AV[10A]
DA_REC_H AV[12A]
D_FM_REC_H AV[12B]
ABS_NORM_H AV[12B]
R6017 1K
PROG_H IO[5D]
A_H_SW AV[12B]
V_H_SW AV[12C]
TW2001 H SW
TL6010
C6015 16V10[KA]
R2508 47K
R6019 10K
R6025 43K
R6022 100
C6016 0.01
R6026 39K
C6001 $0.1
R6023 27K
R6020 27K
R6021 27K
R1501 150[D]
C1502 $
C1501 0.01
Q1501 (T PHOTO)
D1501 SENSOR
Q1502 (S PHOTO)
R6071 18K
QR6001
IC7504
OUT NC
VDD
GND NC
C7511 25V0.1
SAFETY TAB SW
S7507
K6004
C2511 6V22[KA]
C2512 25V4.7[KA]
C6017 6800p
R6031 6800
C2513 3900p
C2508 0.1[KB]
TW2002 PB CTL
C2514 25V0.1
C2509 10V1
R2505 3900
D2501
D2502
R2506 1M
C2510 33p
IC6002
VCC PRE
/WC PBO
SCL PB1
SDA VSS
R6046 4700
R6047 4700
R6048 4700
R6049 220
C6025 25V0.1
R6038 *100(VPS)
C6045 *150p[JC](VPS)
R6095 *2200(VPS)
C6047
C6046 *0.1(VPS)
*0.47(VPS)
C6048 $
R6051 *560K(VPS)
K6001
L6006 *68u[PAX](VPS)
IC6003 *SDA5650(VPS)
VSSA VDDA
VSSD VDDD
NC NC
SCL CVBS
SDA IREF
CSO VCO1
NC PD2
DAVN PD1
EHB TI
R6057 *100K(VPS)
C6027 *0.033[KB](VPS)
C6028 *2200p(VPS)
R6052 *680(VPS)
R6054 *1.2M(VPS)
R6055 *6800(VPS)
R6056 *1.2M(VPS)
C6032 *6V47[KA](VPS)
TL6013 S REEL
R1503 27K
R1504 27K
IC1502
IC1501
R1502 120
TL6012 T REEL
C1503 $
C1504 $
IIC_CLOCK IIC_DATA IO[12C] AV[12C] IO[12C] AV[12C]
CNM_CTRL P_FAIL MESECAM_D_H SVHS_DET_H IO[5A] IO[7A] AV[12C] AV[1D]
CTL_HEAD- CTL_HEAD+ AV[8D] AV[8D]
KILLER_L PAL_EP_H AV[1C] AV[12C]
F_ADJ AVC_PB_H TRK_ENVE ART_V_H_N AV[1D] IO[3D] AV[12C] AV[1D]
AV_PB_H IO[3D]
AFC_S IO[12B]
7
8
9
10
11
12

(only for REPD0024x)
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB - SYSCON & SERVO
SCHEMATIC DIAGRAM

18.6. AV DECODER PCB

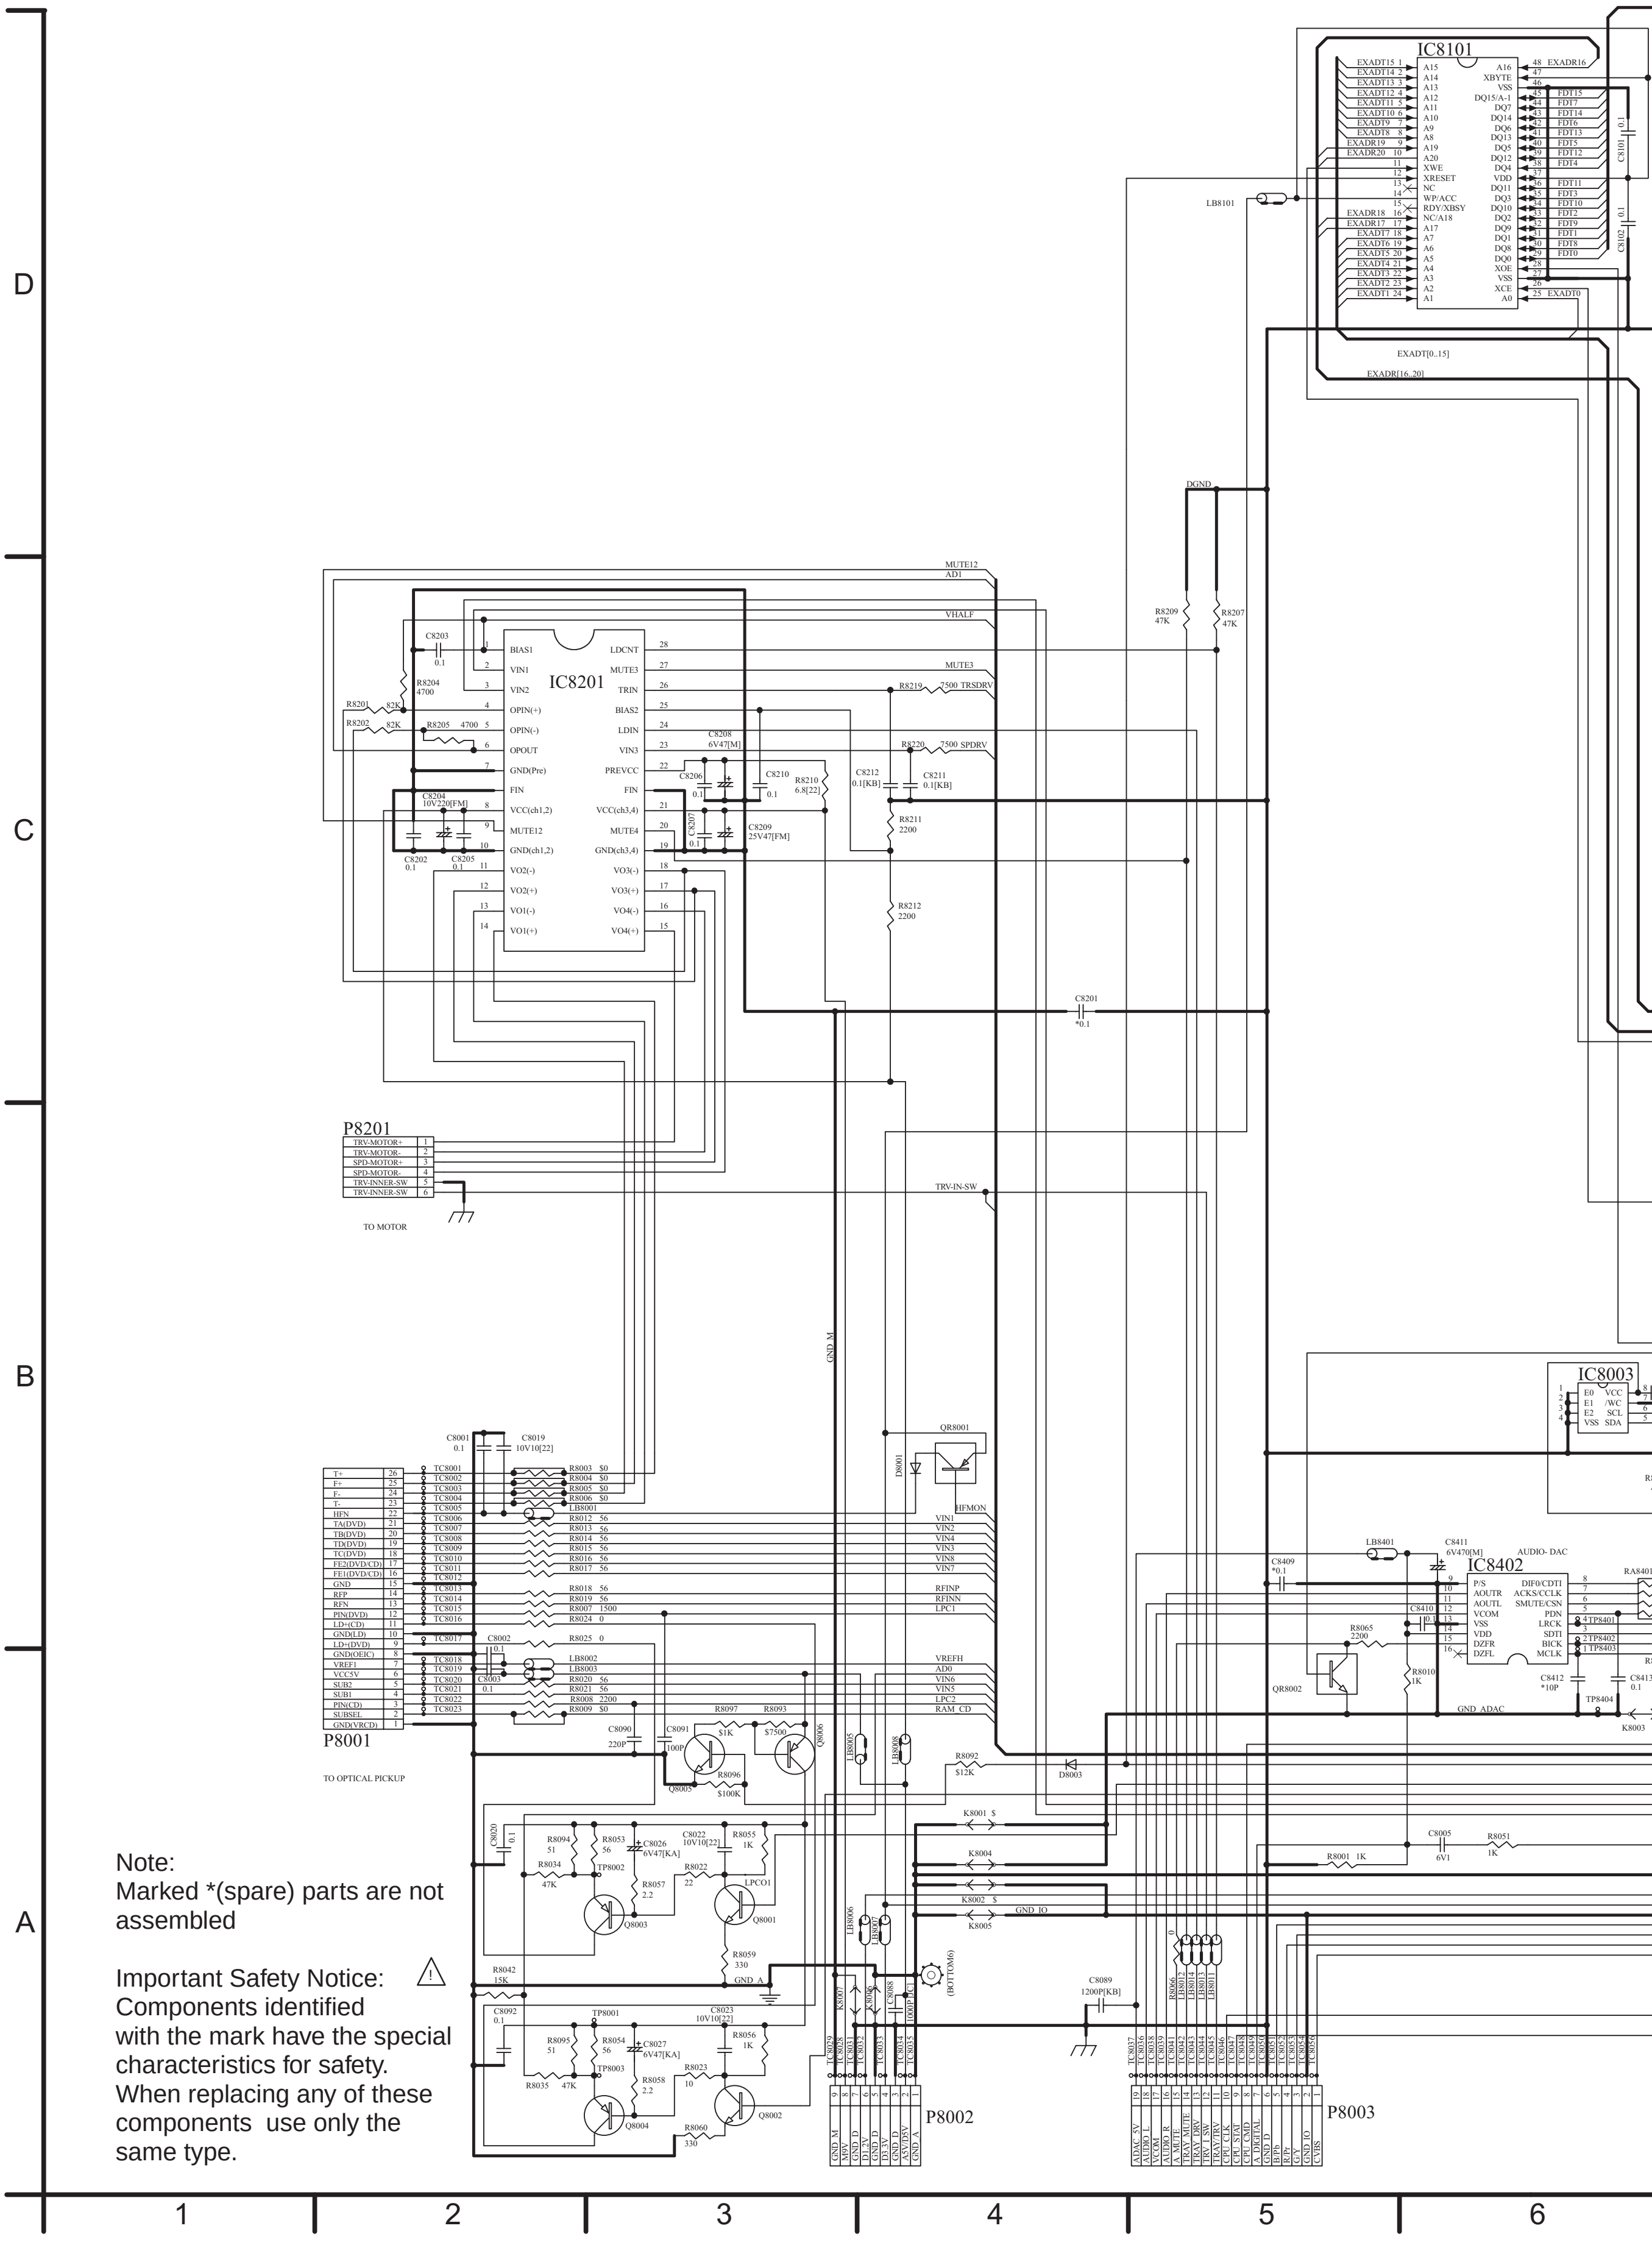

D
C
B
A
1
2
3
4
5
6
IC8101
EXADT[0..15]
EXADR[16..20]
LB8101
DGND
R8209 47K
R8207 47K
IC8201
BIAS1
VIN1
VIN2
OPIN(+)
OPIN(-)
OPOUT
GND(Pre)
FIN
VCC(ch1,2)
MUTE12
GND(ch1,2)
VO2(-)
VO2(+)
VO1(-)
VO1(+)
LDCNT
MUTE3
TRIN
BIAS2
LDIN
VIN3
PREVCC
FIN
VCC(ch3,4)
MUTE4
GND(ch3,4)
VO3(-)
VO3(+)
VO4(-)
VO4(+)
MUTE12
AD1
VHALF
MUTE3
R8219 7500 TRSDRV
R8220 7500 SPDRV
C8201 *0.1
P8201
TRV-MOTOR+
TRV-MOTOR-
SPD-MOTOR+
SPD-MOTOR-
TRV-INNER-SW
TRV-INNER-SW
TO MOTOR
TRV-IN-SW
GND_M
QR8001
D8001
HFMON
P8001
TO OPTICAL PICKUP
VIN1
VIN2
VIN4
VIN8
VIN7
RFINP
RFINN
LPC1
VREFH
AD0
VIN6
VIN5
LPC2
RAM_CD
Q8005
Q8006
Q8003
Q8001
Q8004
Q8002
TP8001
TP8002
TP8003
LPCO1
GND_A
D8003
K8001
K8004
K8002
K8005
GND_IO
(BOTTOM6)
P8002
P8003
C8089 1200P[KB]
IC8003
IC8402
AUDIO- DAC
LB8401
C8411 6V470[M]
QR8002
GND_ADAC
R8001 1K
C8005 6V1
R8051 1K

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety. When replacing any of these components use only the same type.

NAVIGATION
INTERCONNECTION

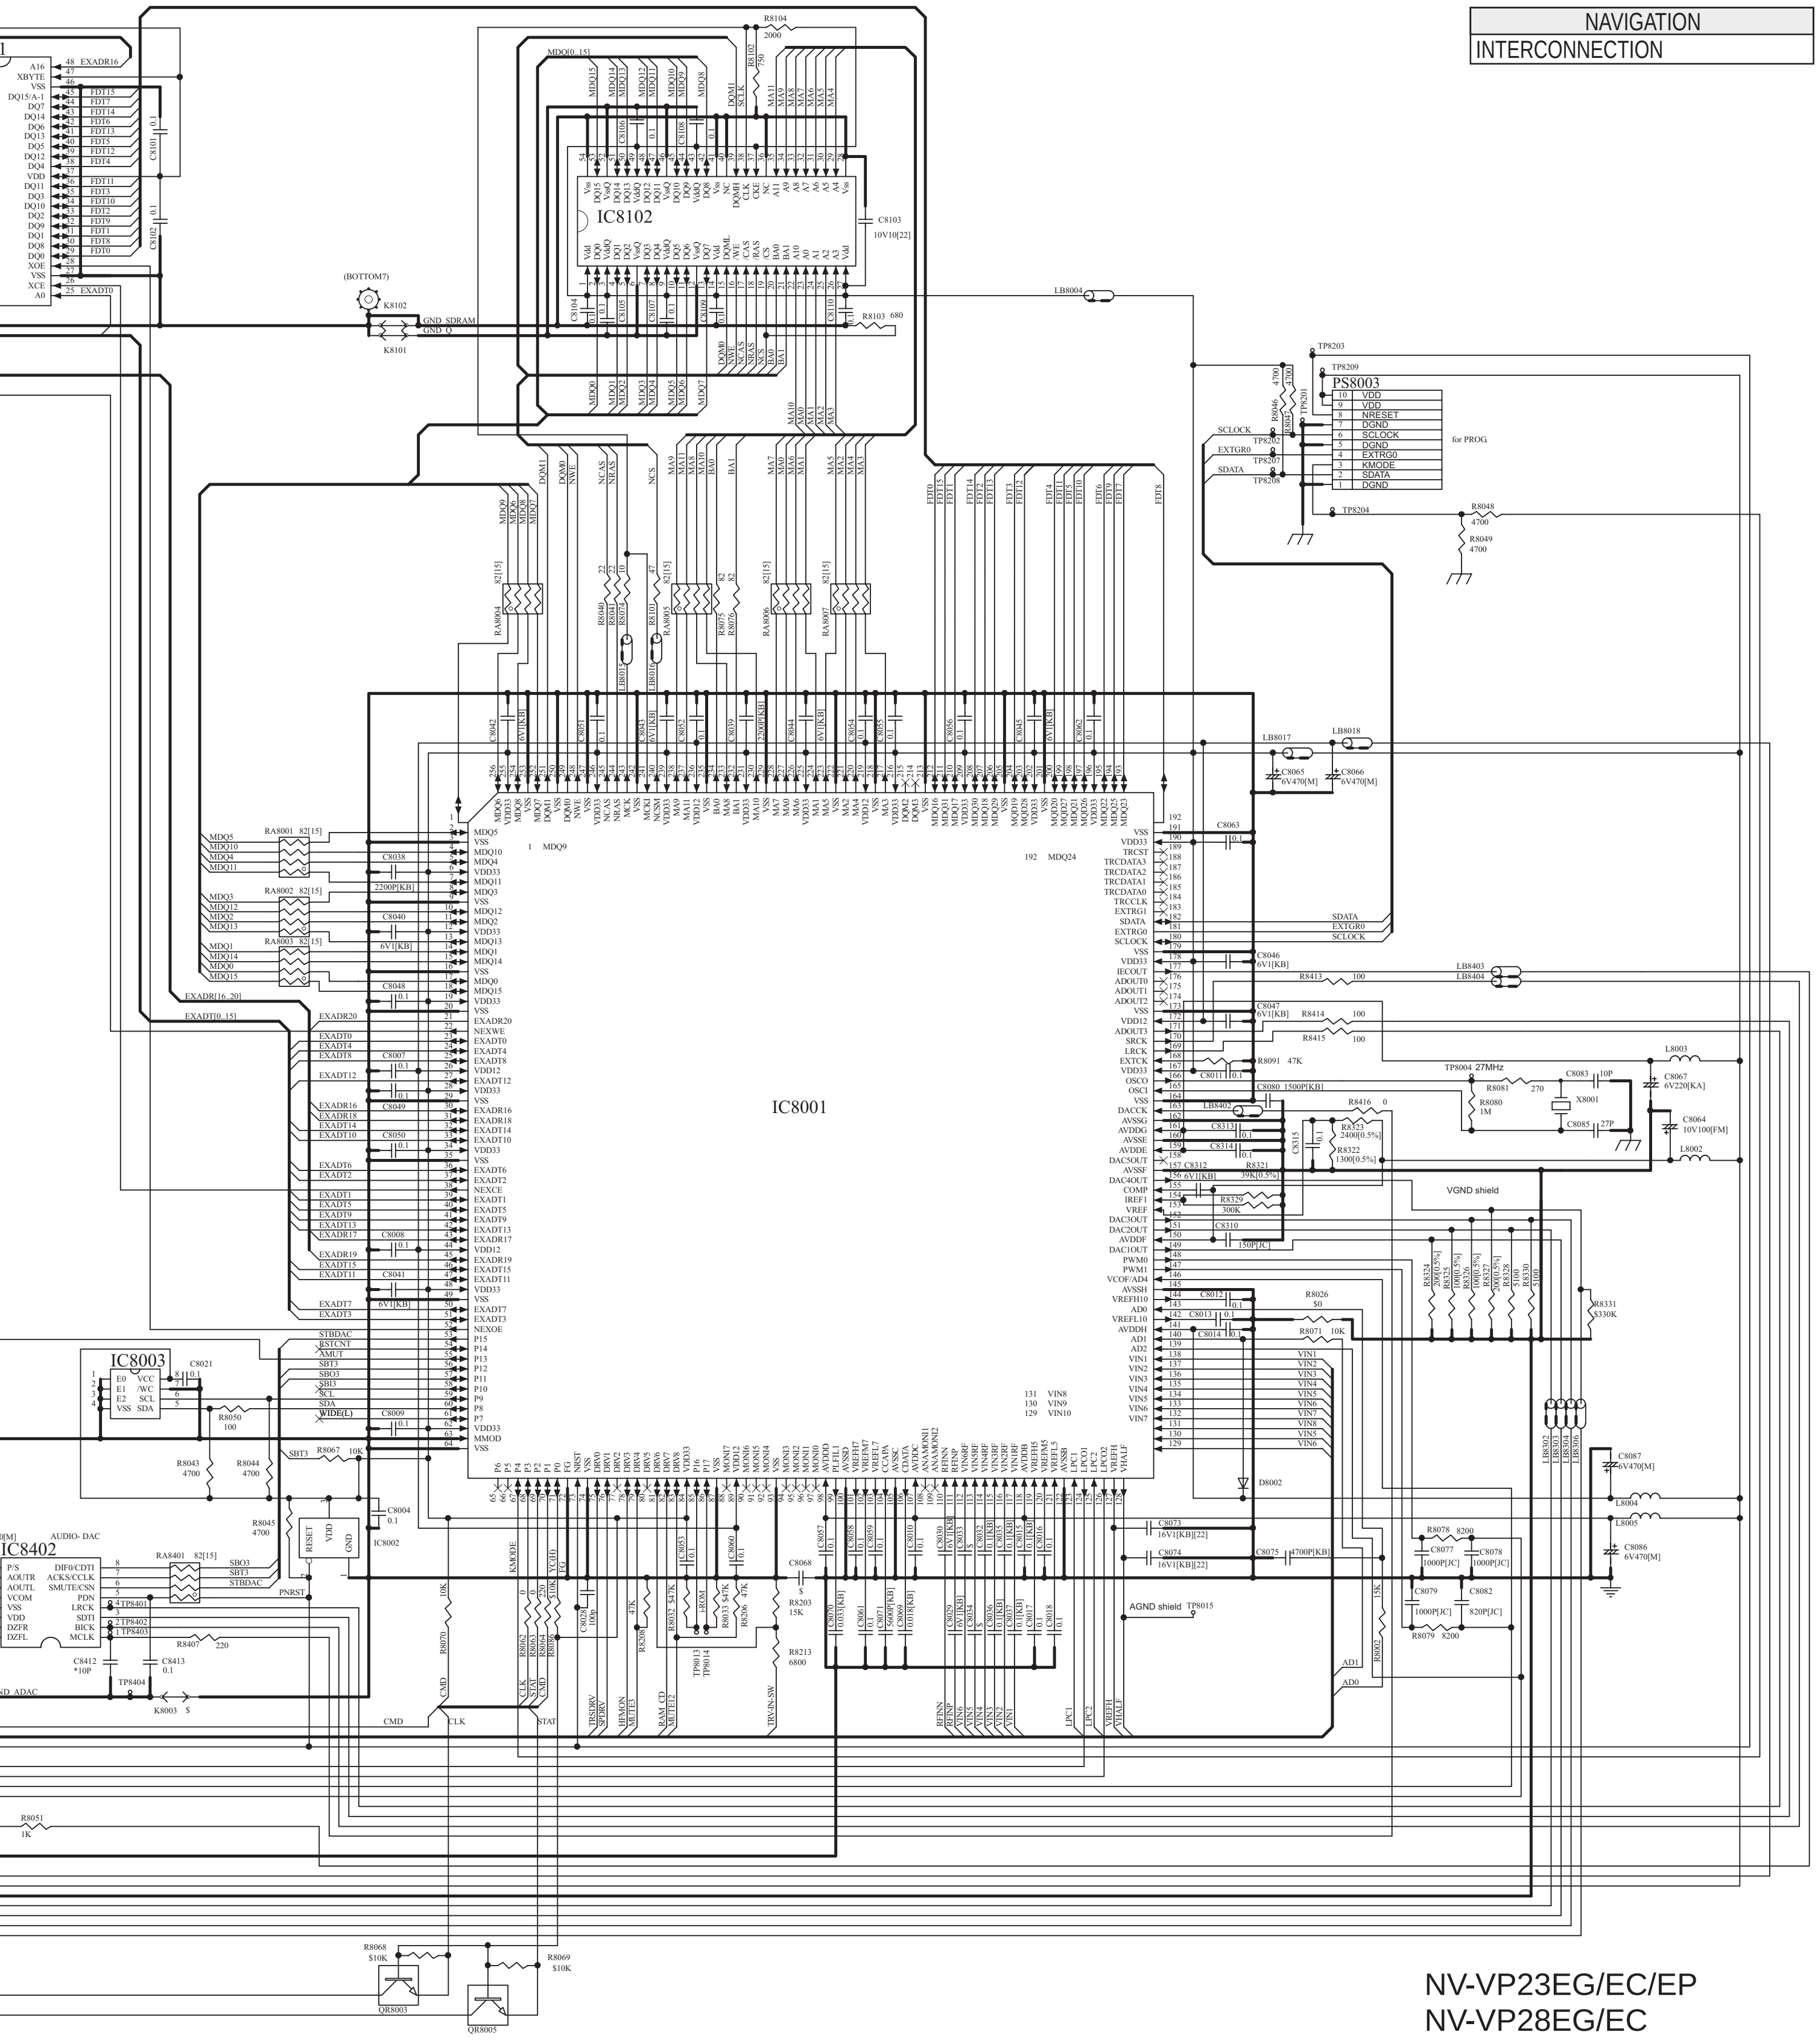
IC8102
IC8001
IC8003
IC8402
AUDIO- DAC
PS8003
VDD
VDD
NRESET
DGND
SCLOCK
DGND
EXTRG0
KMODE
SDATA
DGND
for PROG.
(BOTTOM7)
K8102
K8101
GND_SDRAM
GND_Q
MDQ[0..15]
EXADR[16..20]
EXADT[0..15]
27MHz
X8001
VGND shield
AGND shield
D8002
QR8003
QR8005
R8068 $10K
R8069 $10K
R8051 1K
K8003
CMD
CLK
STAT
6
7
8
9
10
11
12

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
AV DECODER PCB
SCHEMATIC DIAGRAM

18.7. FRONT PANEL PCB

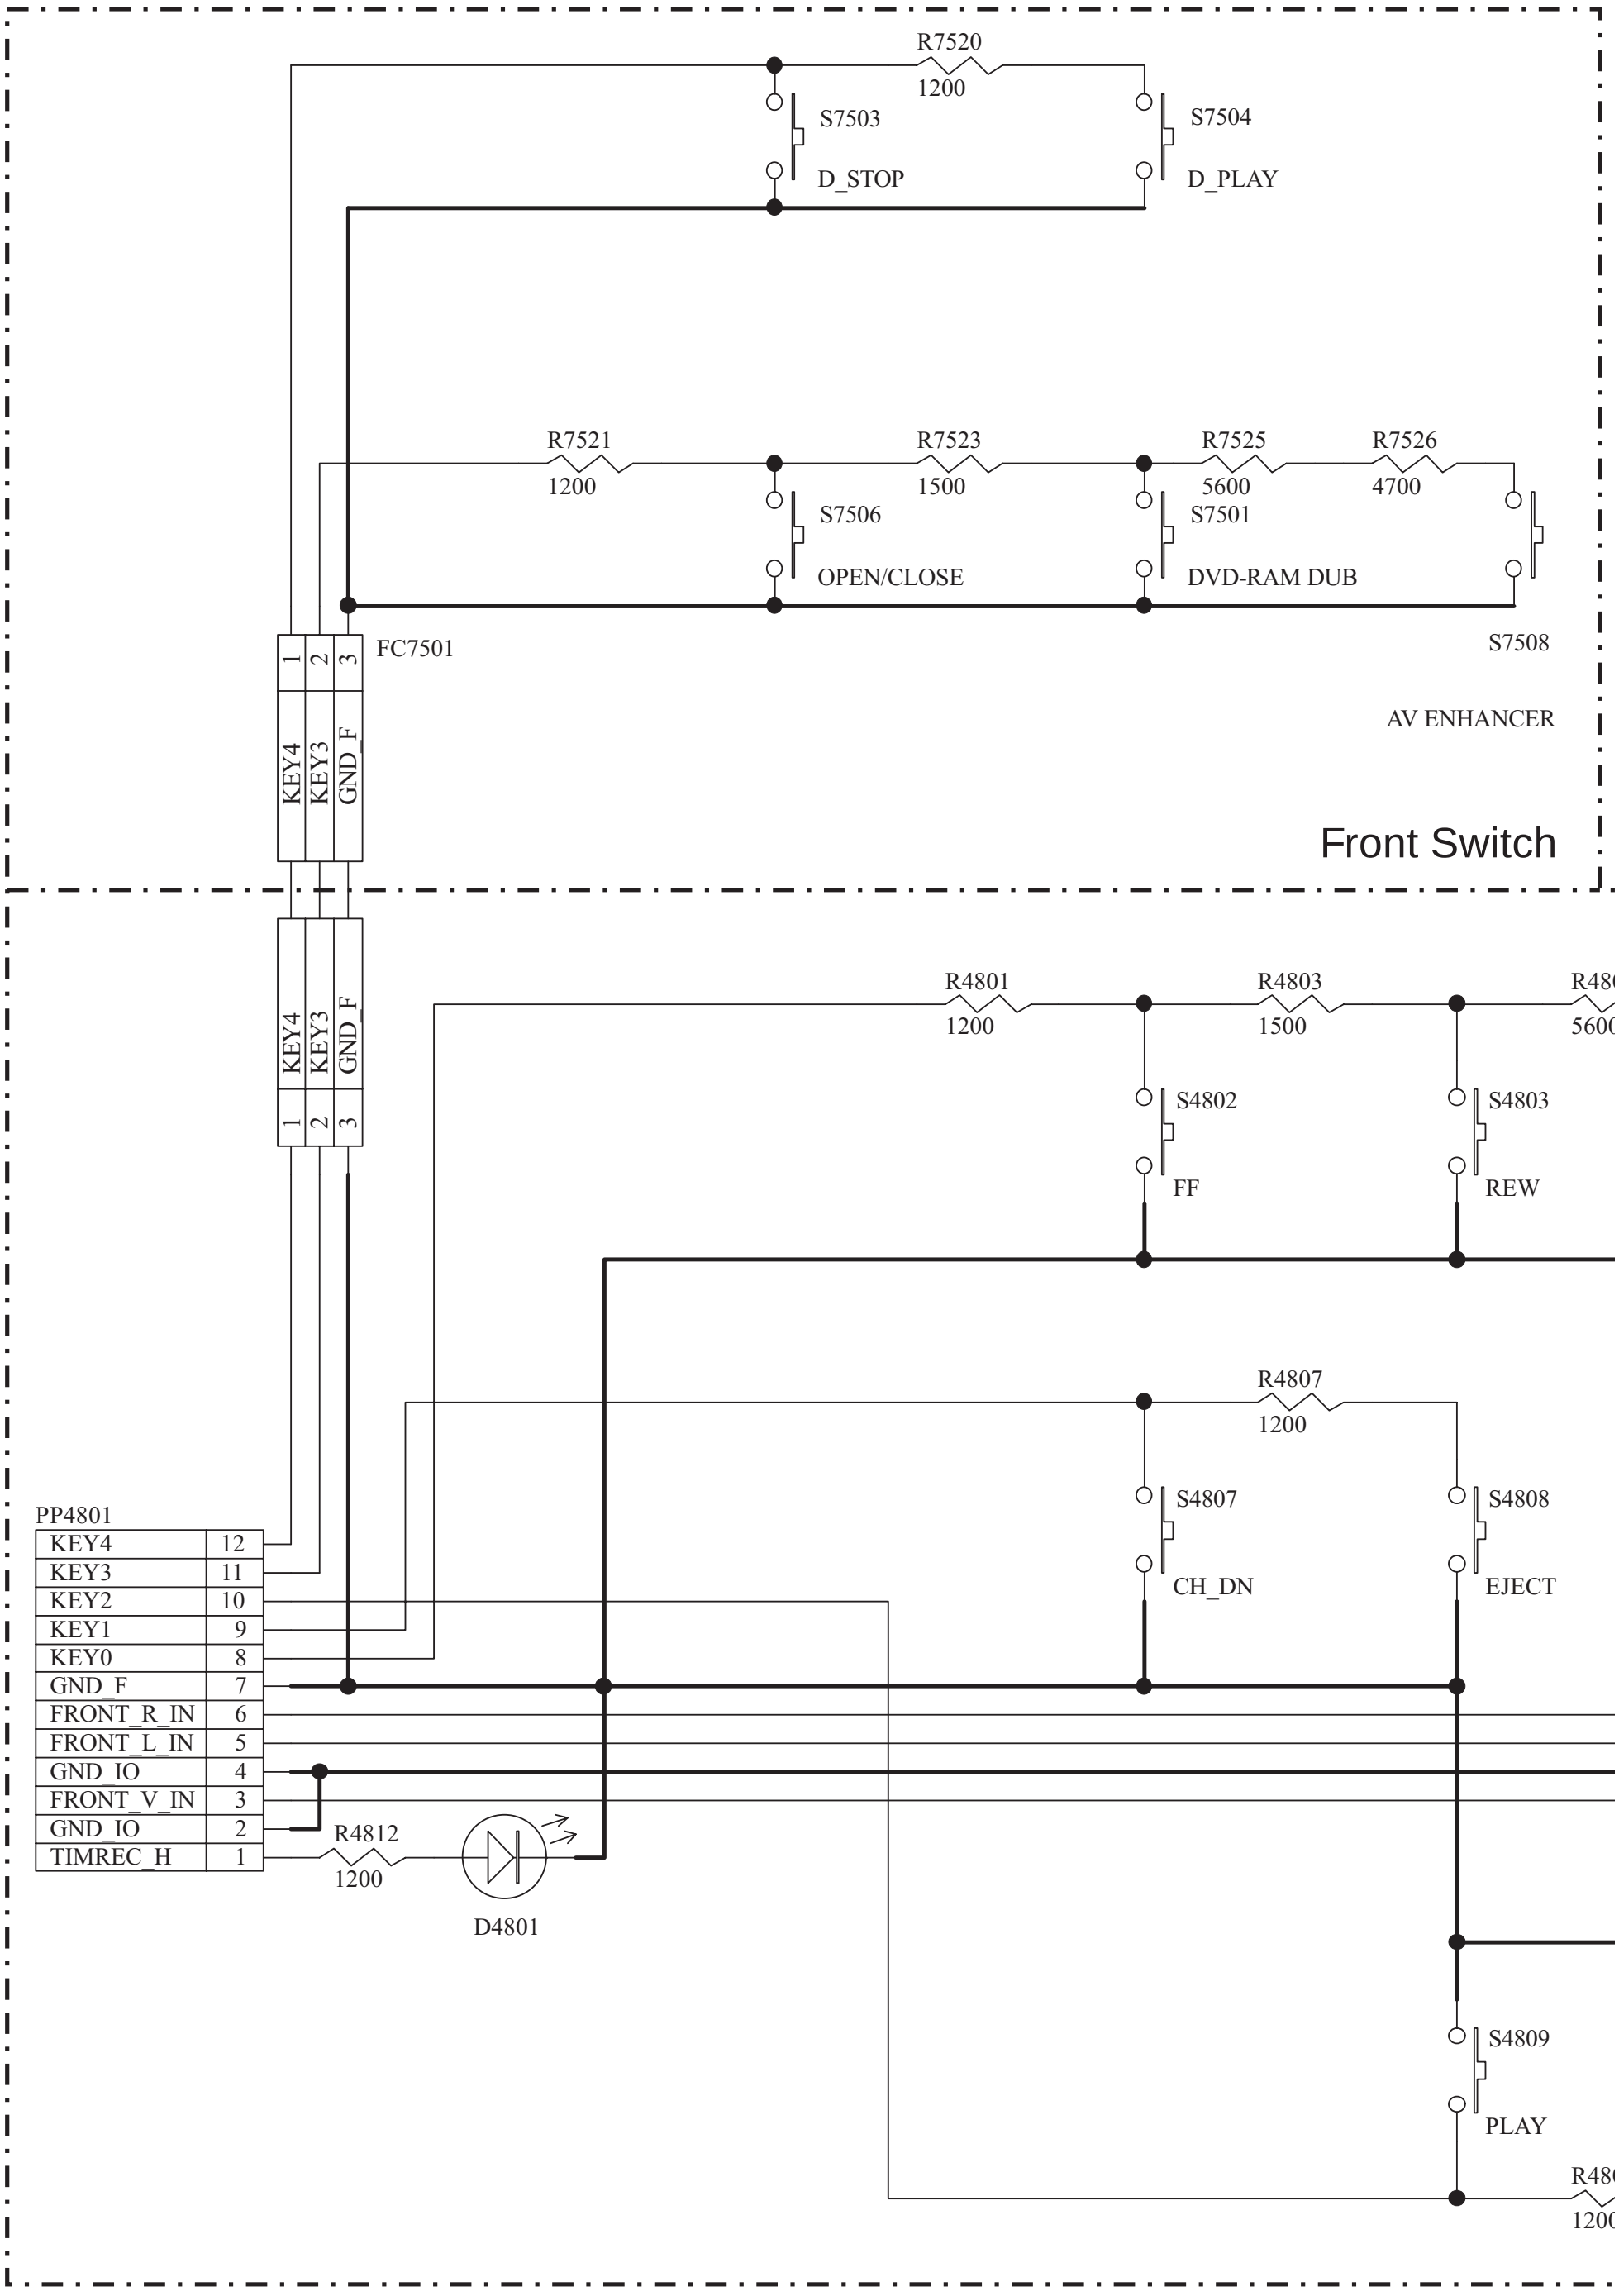
R7520
1200
S7503
D_STOP
S7504
D_PLAY
R7521
1200
R7523
1500
R7525
5600
R7526
4700
S7506
OPEN/CLOSE
S7501
DVD-RAM DUB
S7508
AV ENHANCER
FC7501
1
2
3
KEY4
KEY3
GND_F
Front Switch
R4801
1200
R4803
1500
S4802
FF
S4803
REW
R4807
1200
S4807
CH_DN
S4808
EJECT
PP4801
KEY4 12
KEY3 11
KEY2 10
KEY1 9
KEY0 8
GND_F 7
FRONT_R_IN 6
FRONT_L_IN 5
GND_IO 4
FRONT_V_IN 3
GND_IO 2
TIMREC_H 1
R4812
1200
D4801
S4809
PLAY

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety.
When replacing any of these components use only the same type.

NAVIGATION
INTERCONNECTION

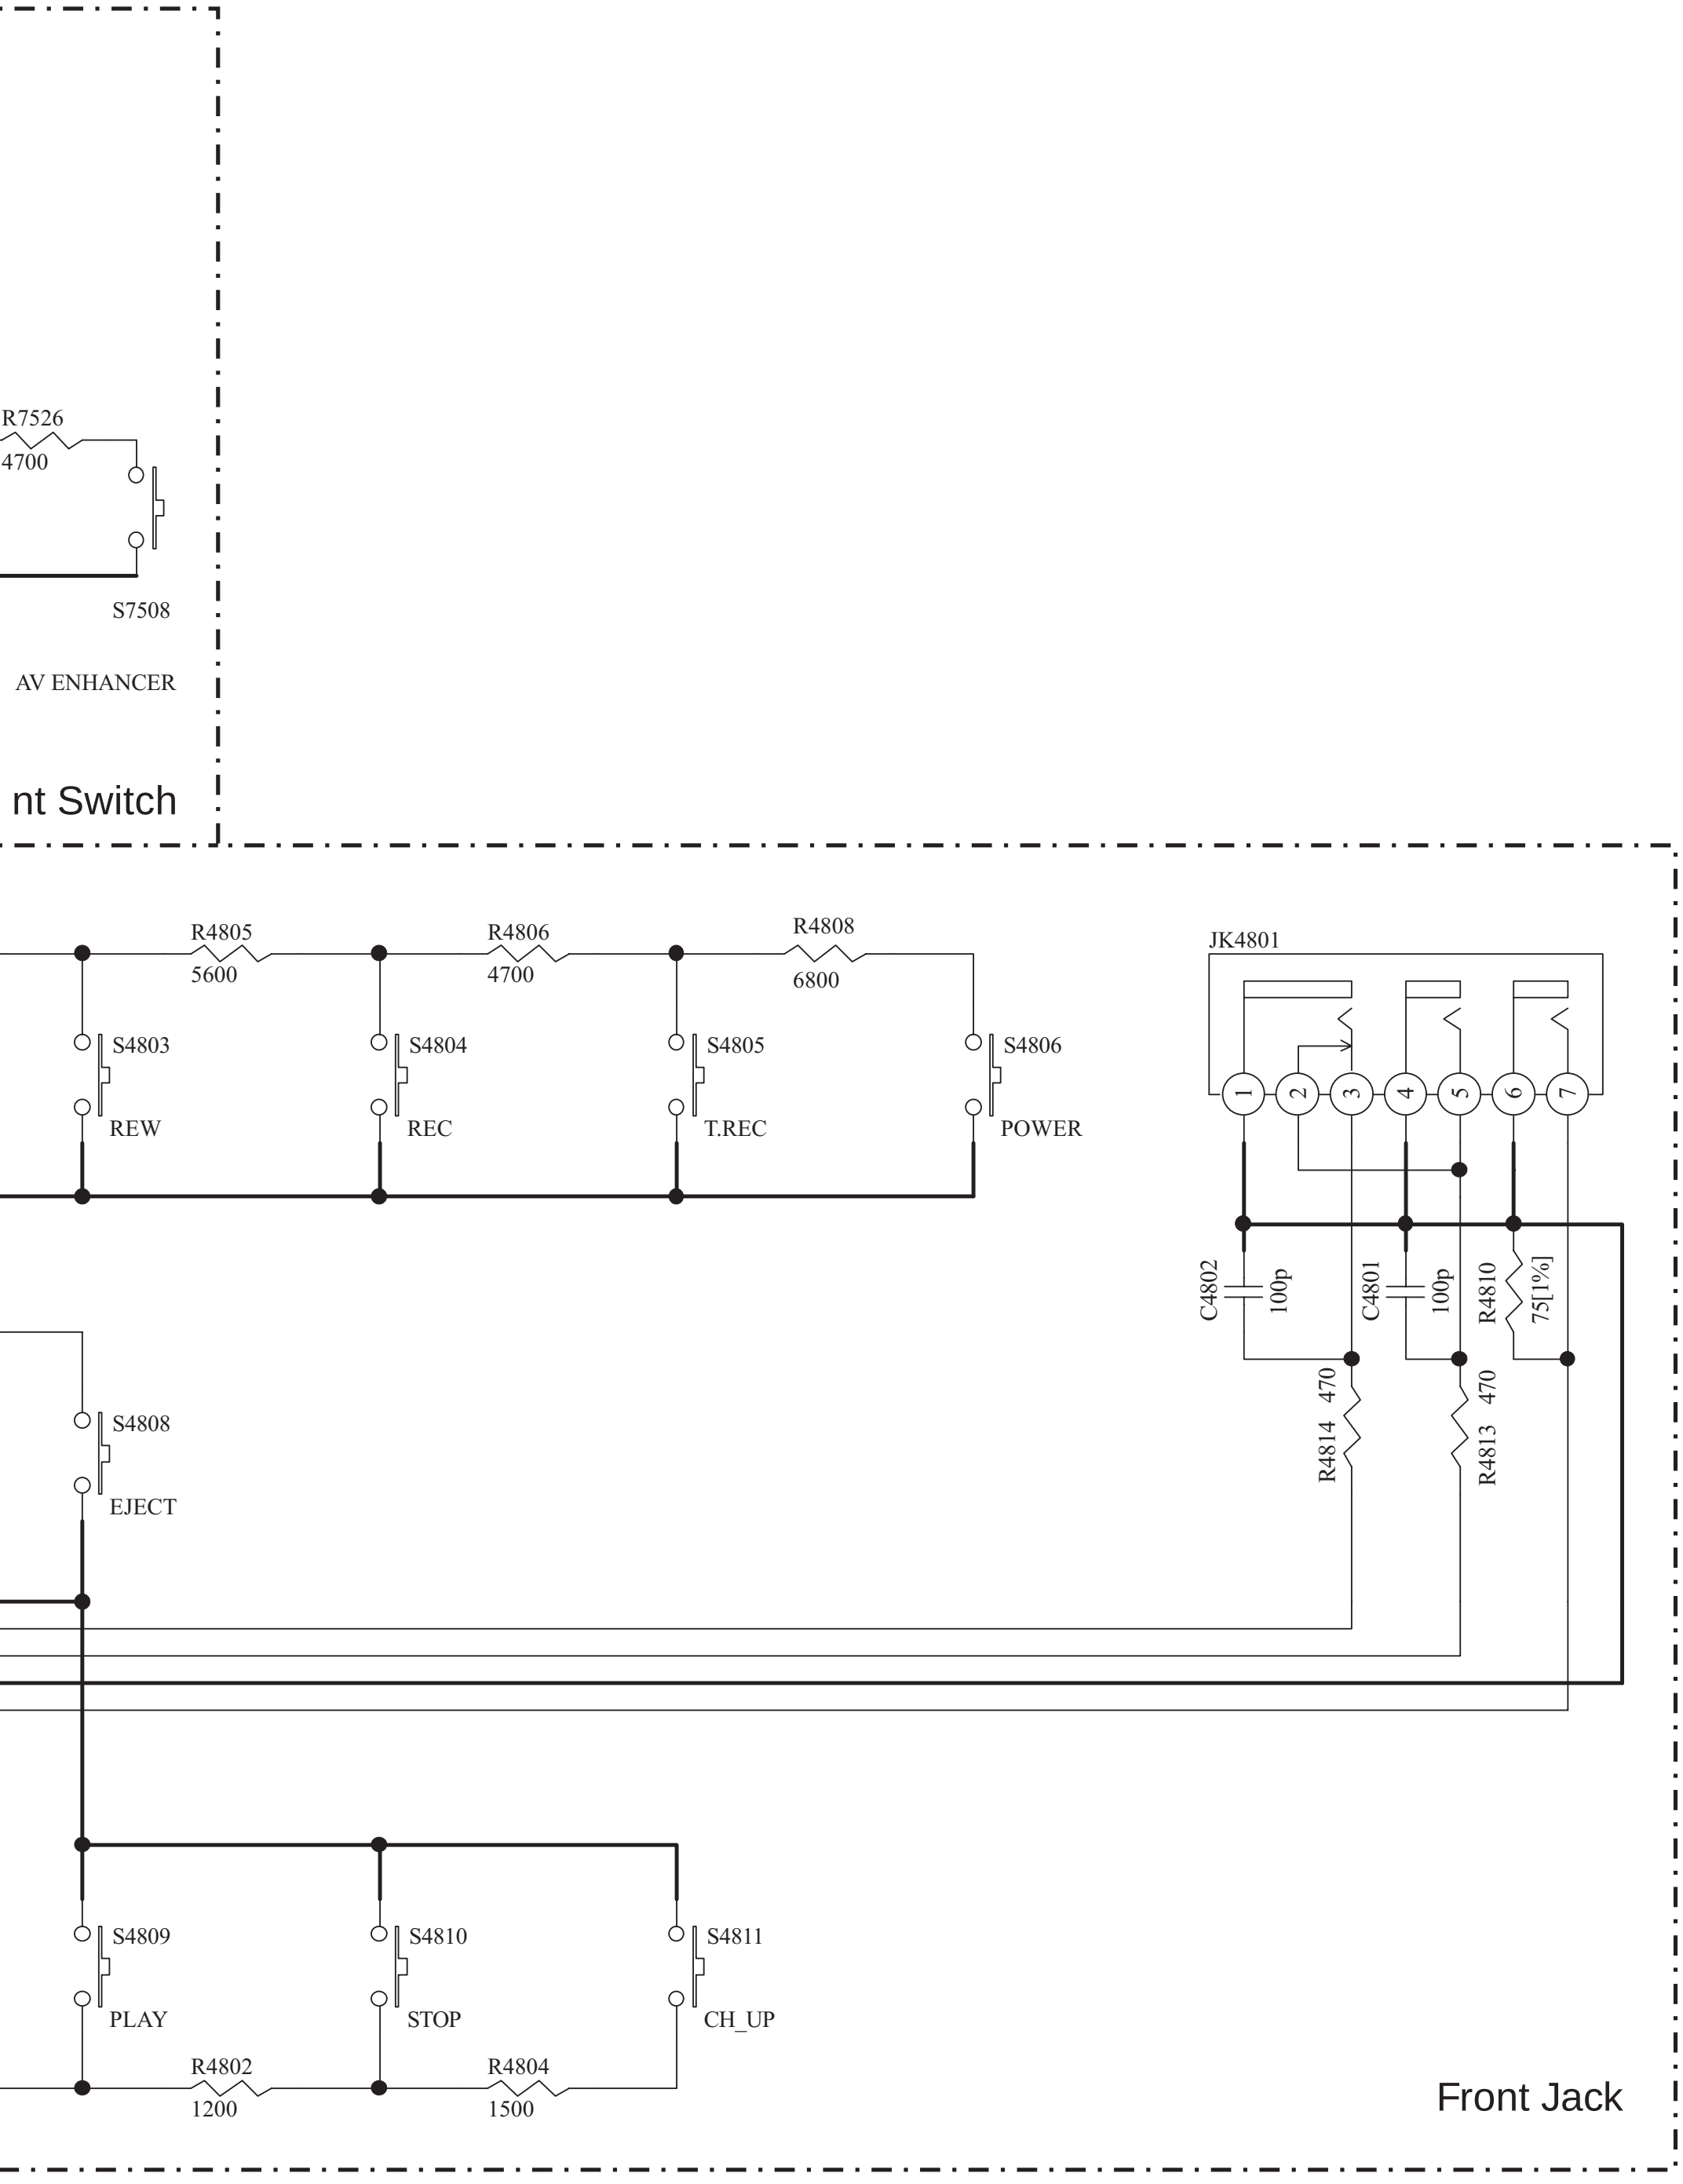
R7526
4700
S7508
AV ENHANCER
nt Switch
R4805
5600
R4806
4700
R4808
6800
JK4801
S4803
REW
S4804
REC
S4805
T.REC
S4806
POWER
1
2
3
4
5
6
7
C4802
100p
C4801
100p
R4810
75[1%]
470
R4814
470
R4813
S4808
EJECT
S4809
PLAY
S4810
STOP
S4811
CH_UP
R4802
1200
R4804
1500
Front Jack

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
FRONT PANEL PCB
SCHEMATIC DIAGRAM

18.8. TERMINAL PCB

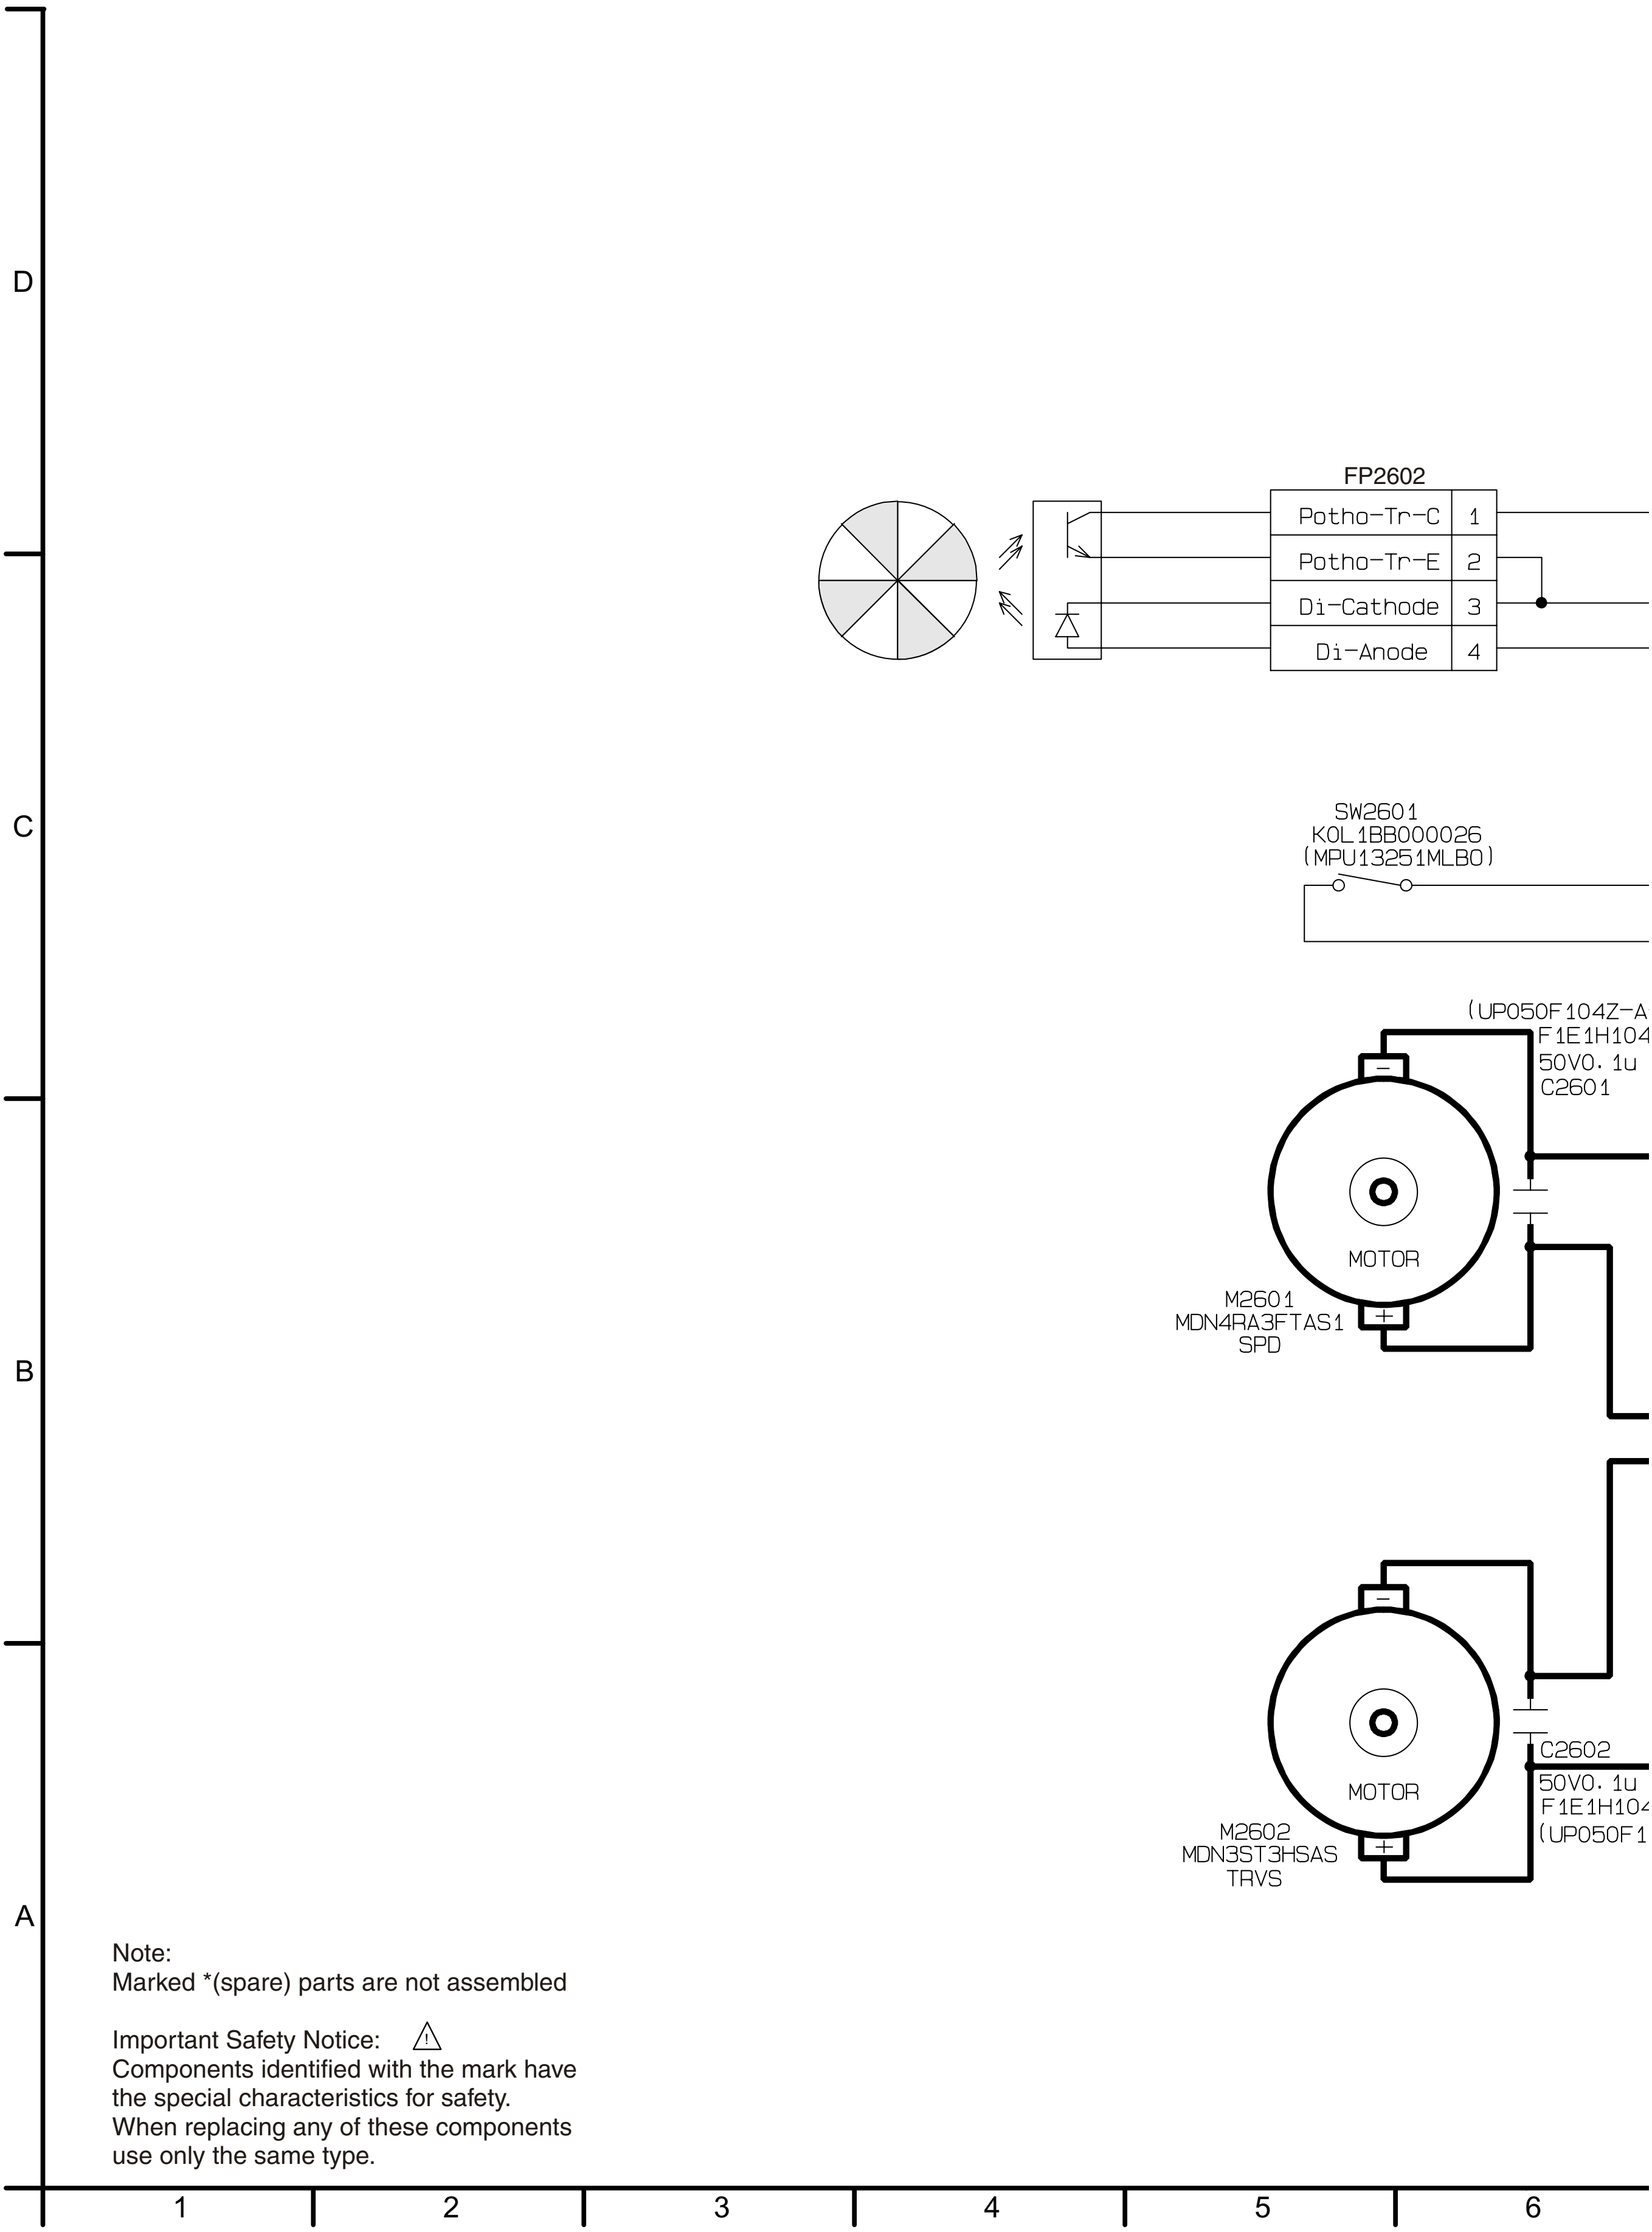
D
C
B
A
1
2
3
4
5
6
FP2602
Potho-Tr-C
1
Potho-Tr-E
2
Di-Cathode
3
Di-Anode
4
SW2601
K0L1BB000026
(MPU13251MLB0)
(UP050F104Z-A
F1E1H104
50V0.1u
C2601
MOTOR
M2601
MDN4RA3FTAS1
SPD
MOTOR
C2602
50V0.1u
F1E1H104
(UP050F1
M2602
MDN3ST3HSAS
TRVS

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have
the special characteristics for safety.
When replacing any of these components
use only the same type.

NAVIGATION
INTERCONNECTION

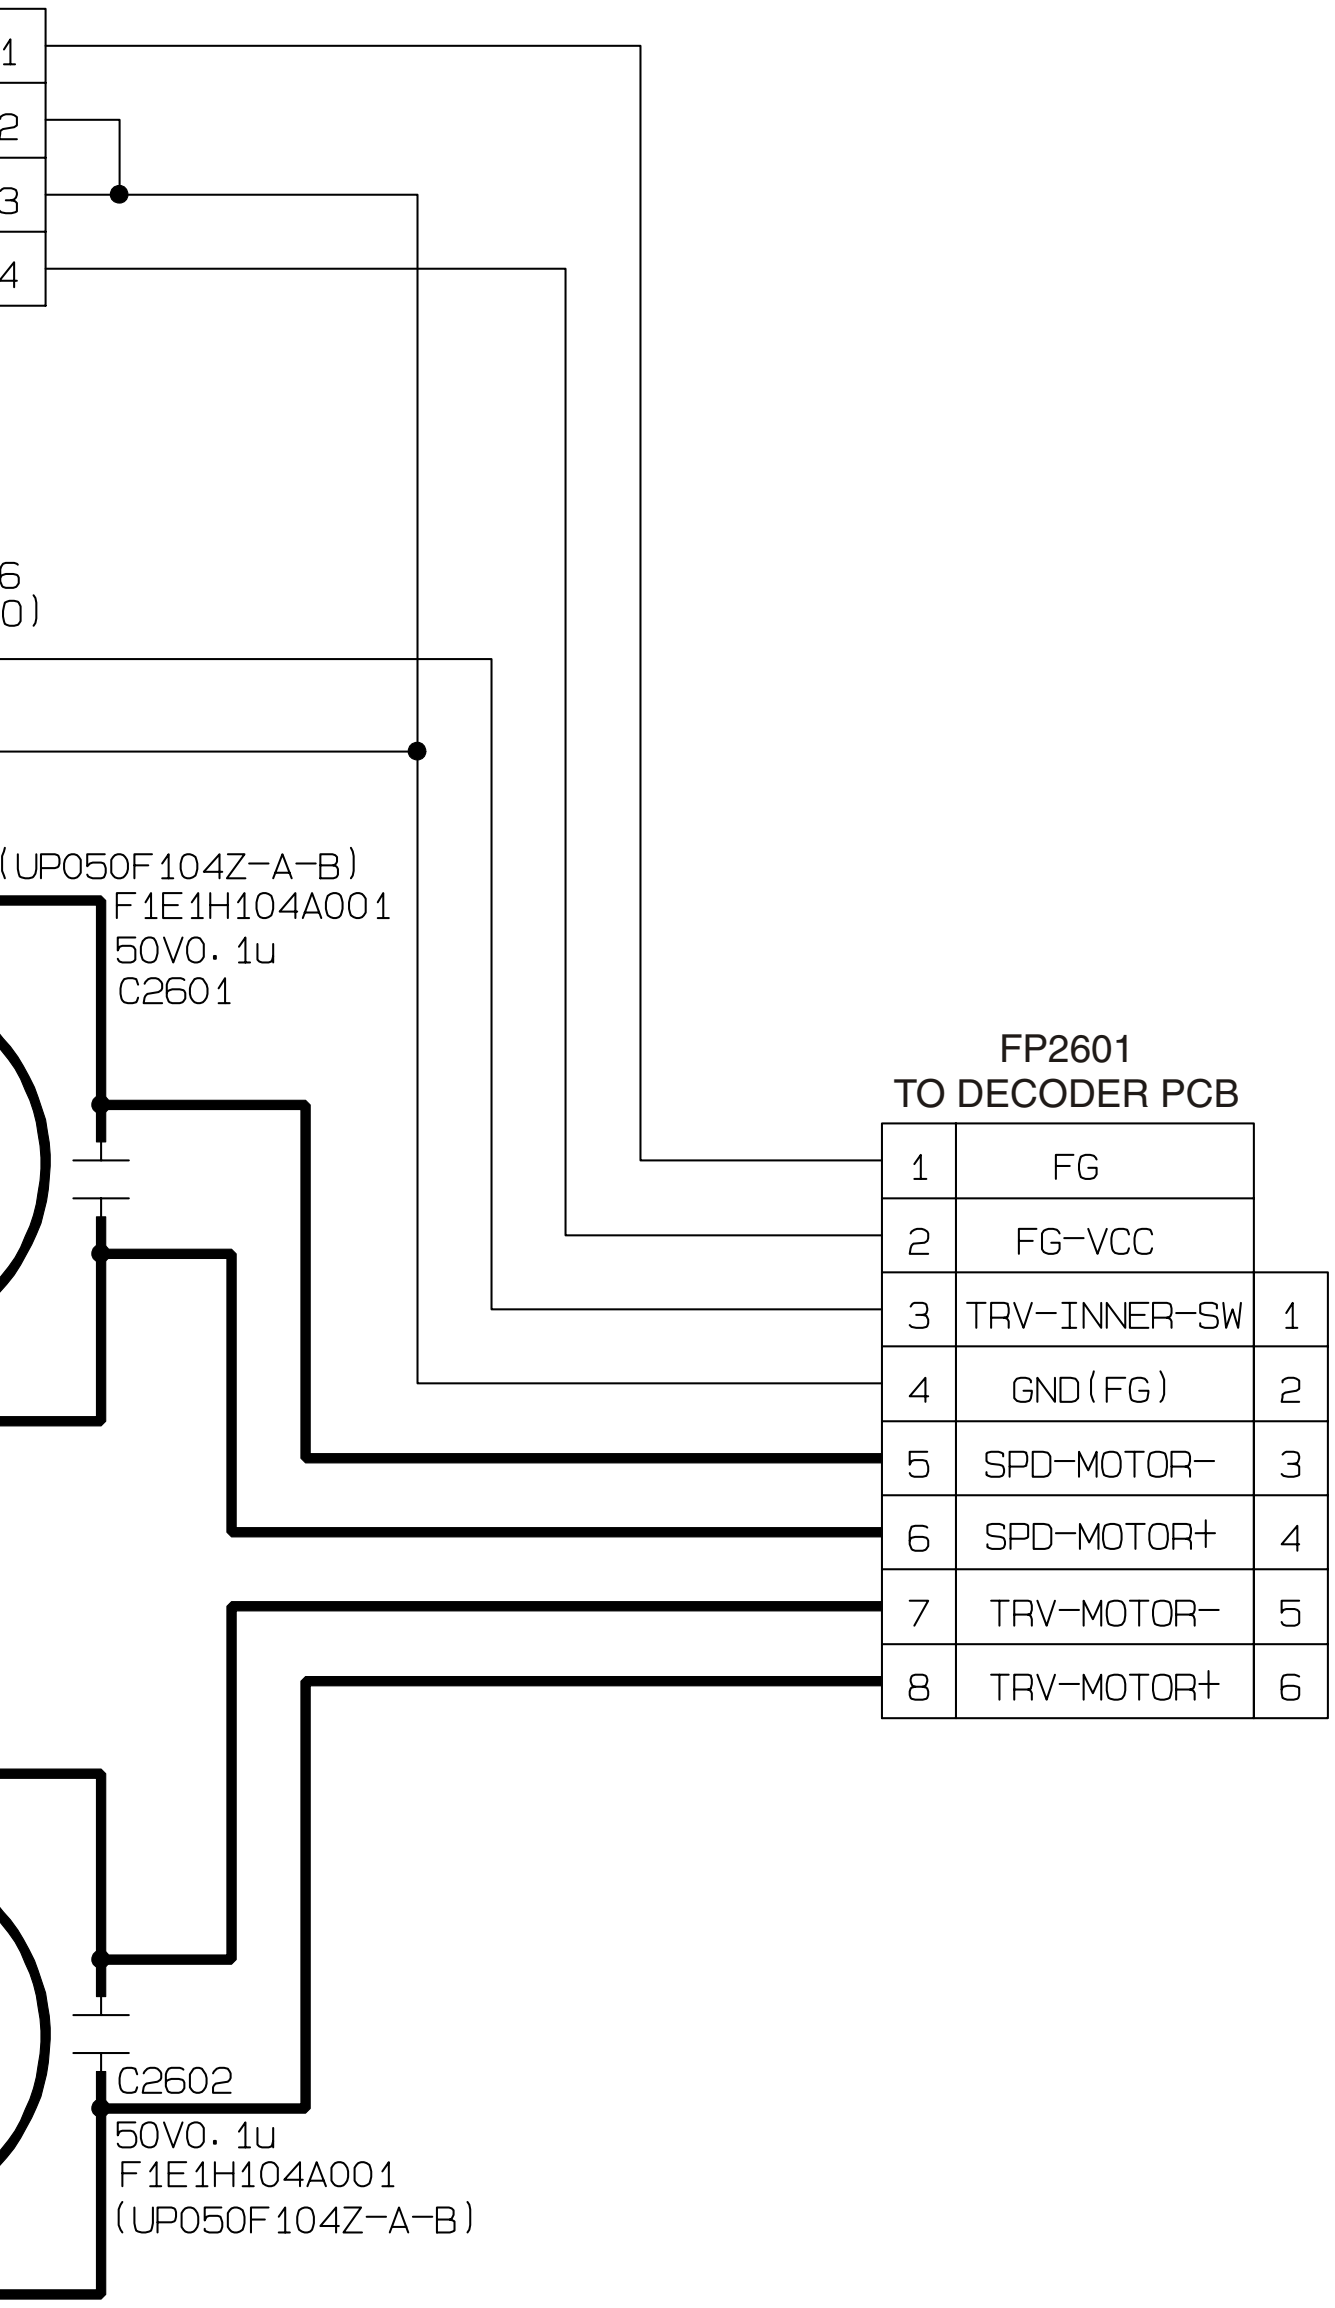
1
2
3
4
6
0)
(UP050F104Z-A-B)
F1E1H104A001
50V0.1u
C2601
FP2601
TO DECODER PCB
1 FG
2 FG-VCC
3 TRV-INNER-SW 1
4 GND(FG) 2
5 SPD-MOTOR- 3
6 SPD-MOTOR+ 4
7 TRV-MOTOR- 5
8 TRV-MOTOR+ 6
C2602
50V0.1u
F1E1H104A001
(UP050F104Z-A-B)

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL
TERMINAL PCB
SCHEMATIC DIAGRAM

6 7 8 9 10 11 12

19.9. TERMINAL PCB

(REP3606A-C)

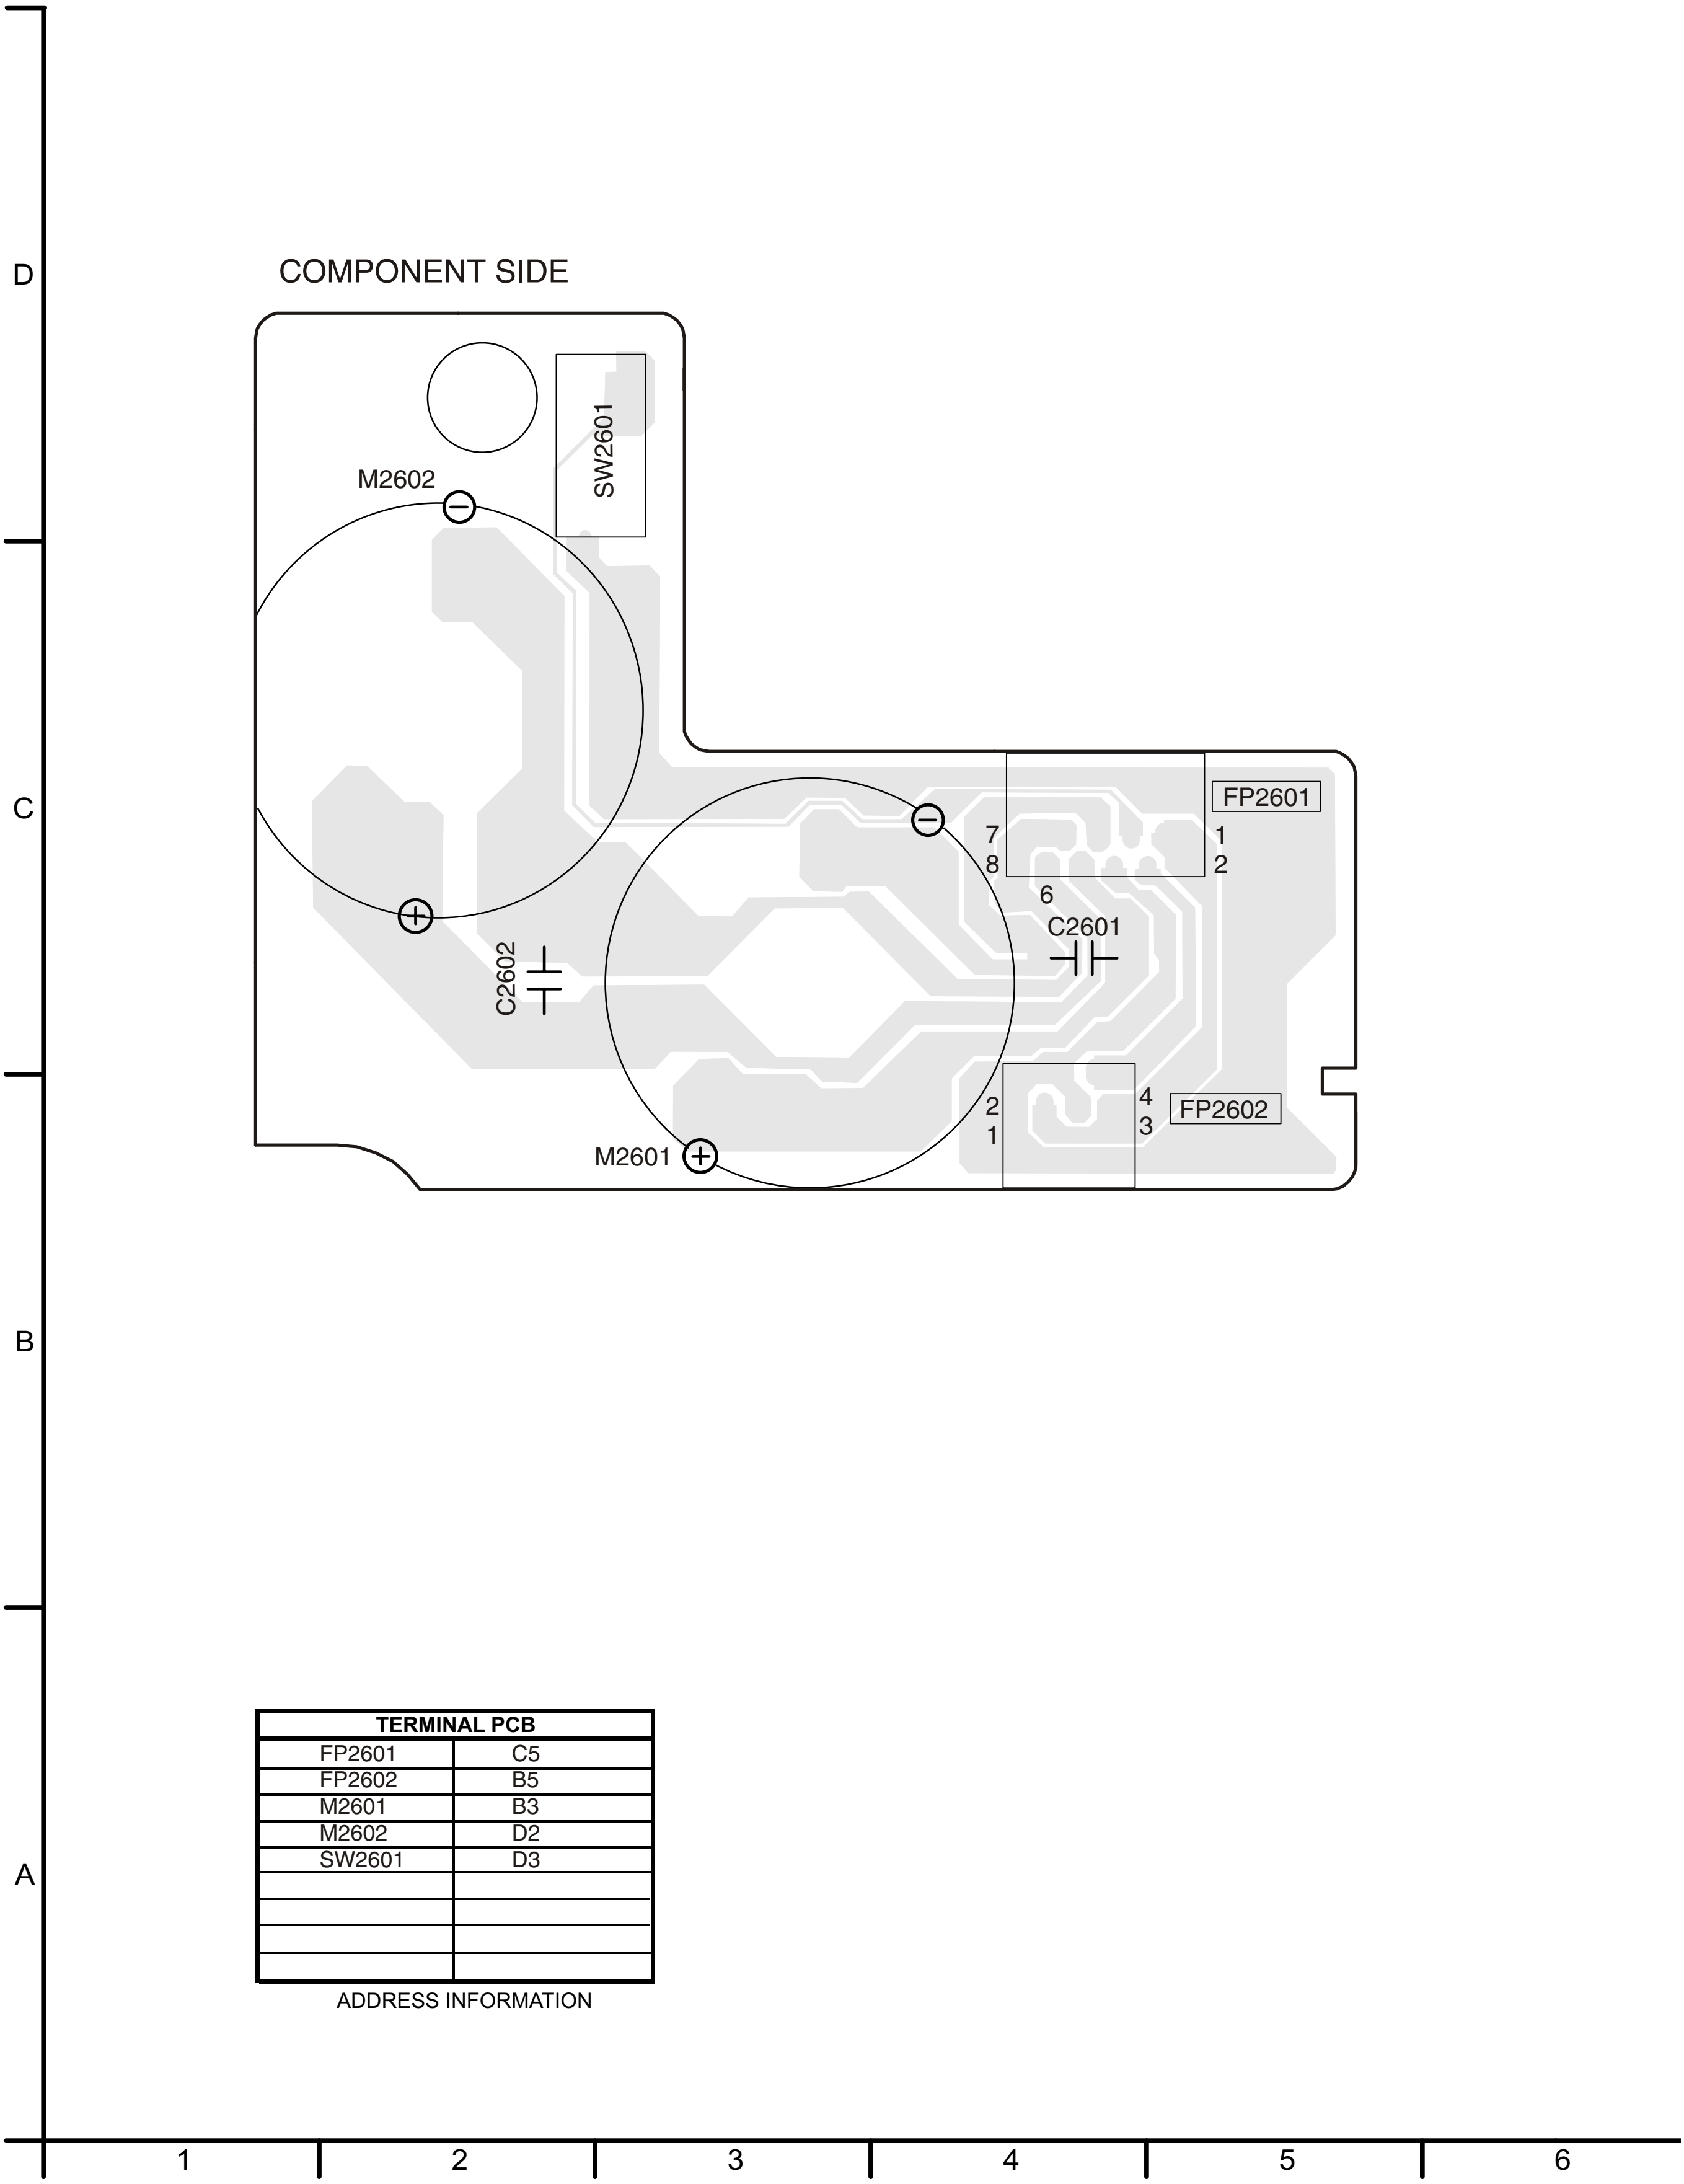

COMPONENT SIDE
SW2601
M2602
M2601
C2602
C2601
FP2601
FP2602
7
8
1
2
6
2
1
4
3
D
C
B
A
1
2
3
4
5
6

TERMINAL PCB	
FP2601	C5
FP2602	B5
M2601	B3
M2602	D2
SW2601	D3

ADDRESS INFORMATION

SOLDER SIDE

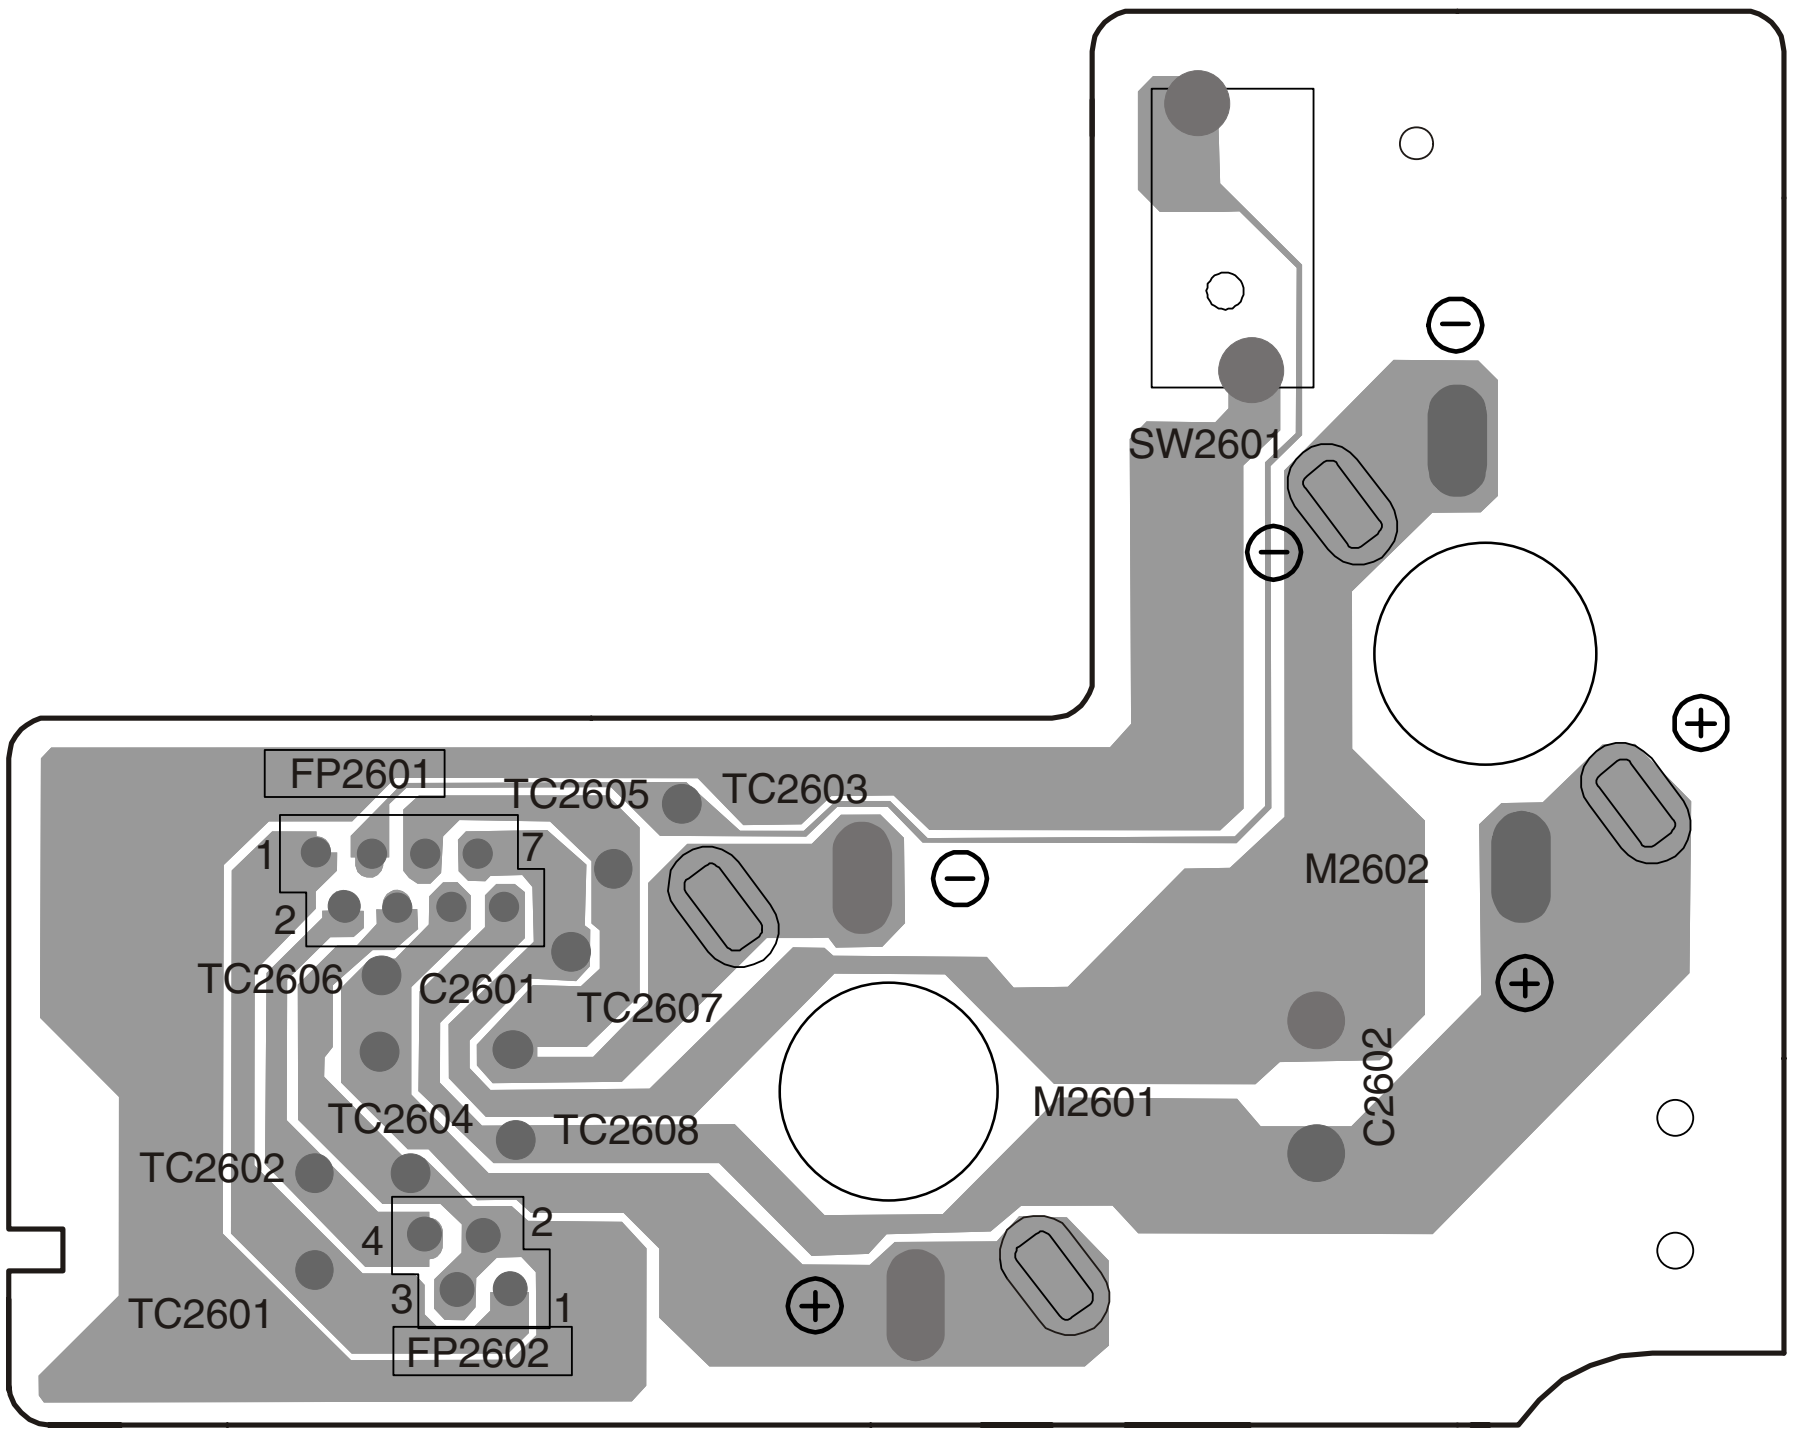
SW2601
FP2601
TC2605
TC2603
1
7
2
TC2606
C2601
TC2607
M2602
C2602
M2601
TC2604
TC2608
TC2602
2
4
3
1
TC2601
FP2602

TERMINAL PCB	
FP2601	C8
FP2602	B8
M2601	C9
M2602	C10
SW2601	D10

ADDRESS INFORMATION

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
TERMINAL PCB
COMPONENT SIDE / SOLDER SIDE

◀■ AUDIO MAIN SIGNAL PATH IN REC MODE
◁□ AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

◀ VIDEO MAIN SIGNAL PATH IN REC MODE
◁ VIDEO MAIN SIGNAL PATH IN PLAYBACK MODE

NAVIGATION
INTERCONNECTION
MAIN PCB - I/O
MAIN PCB - SYSCON & SERVO

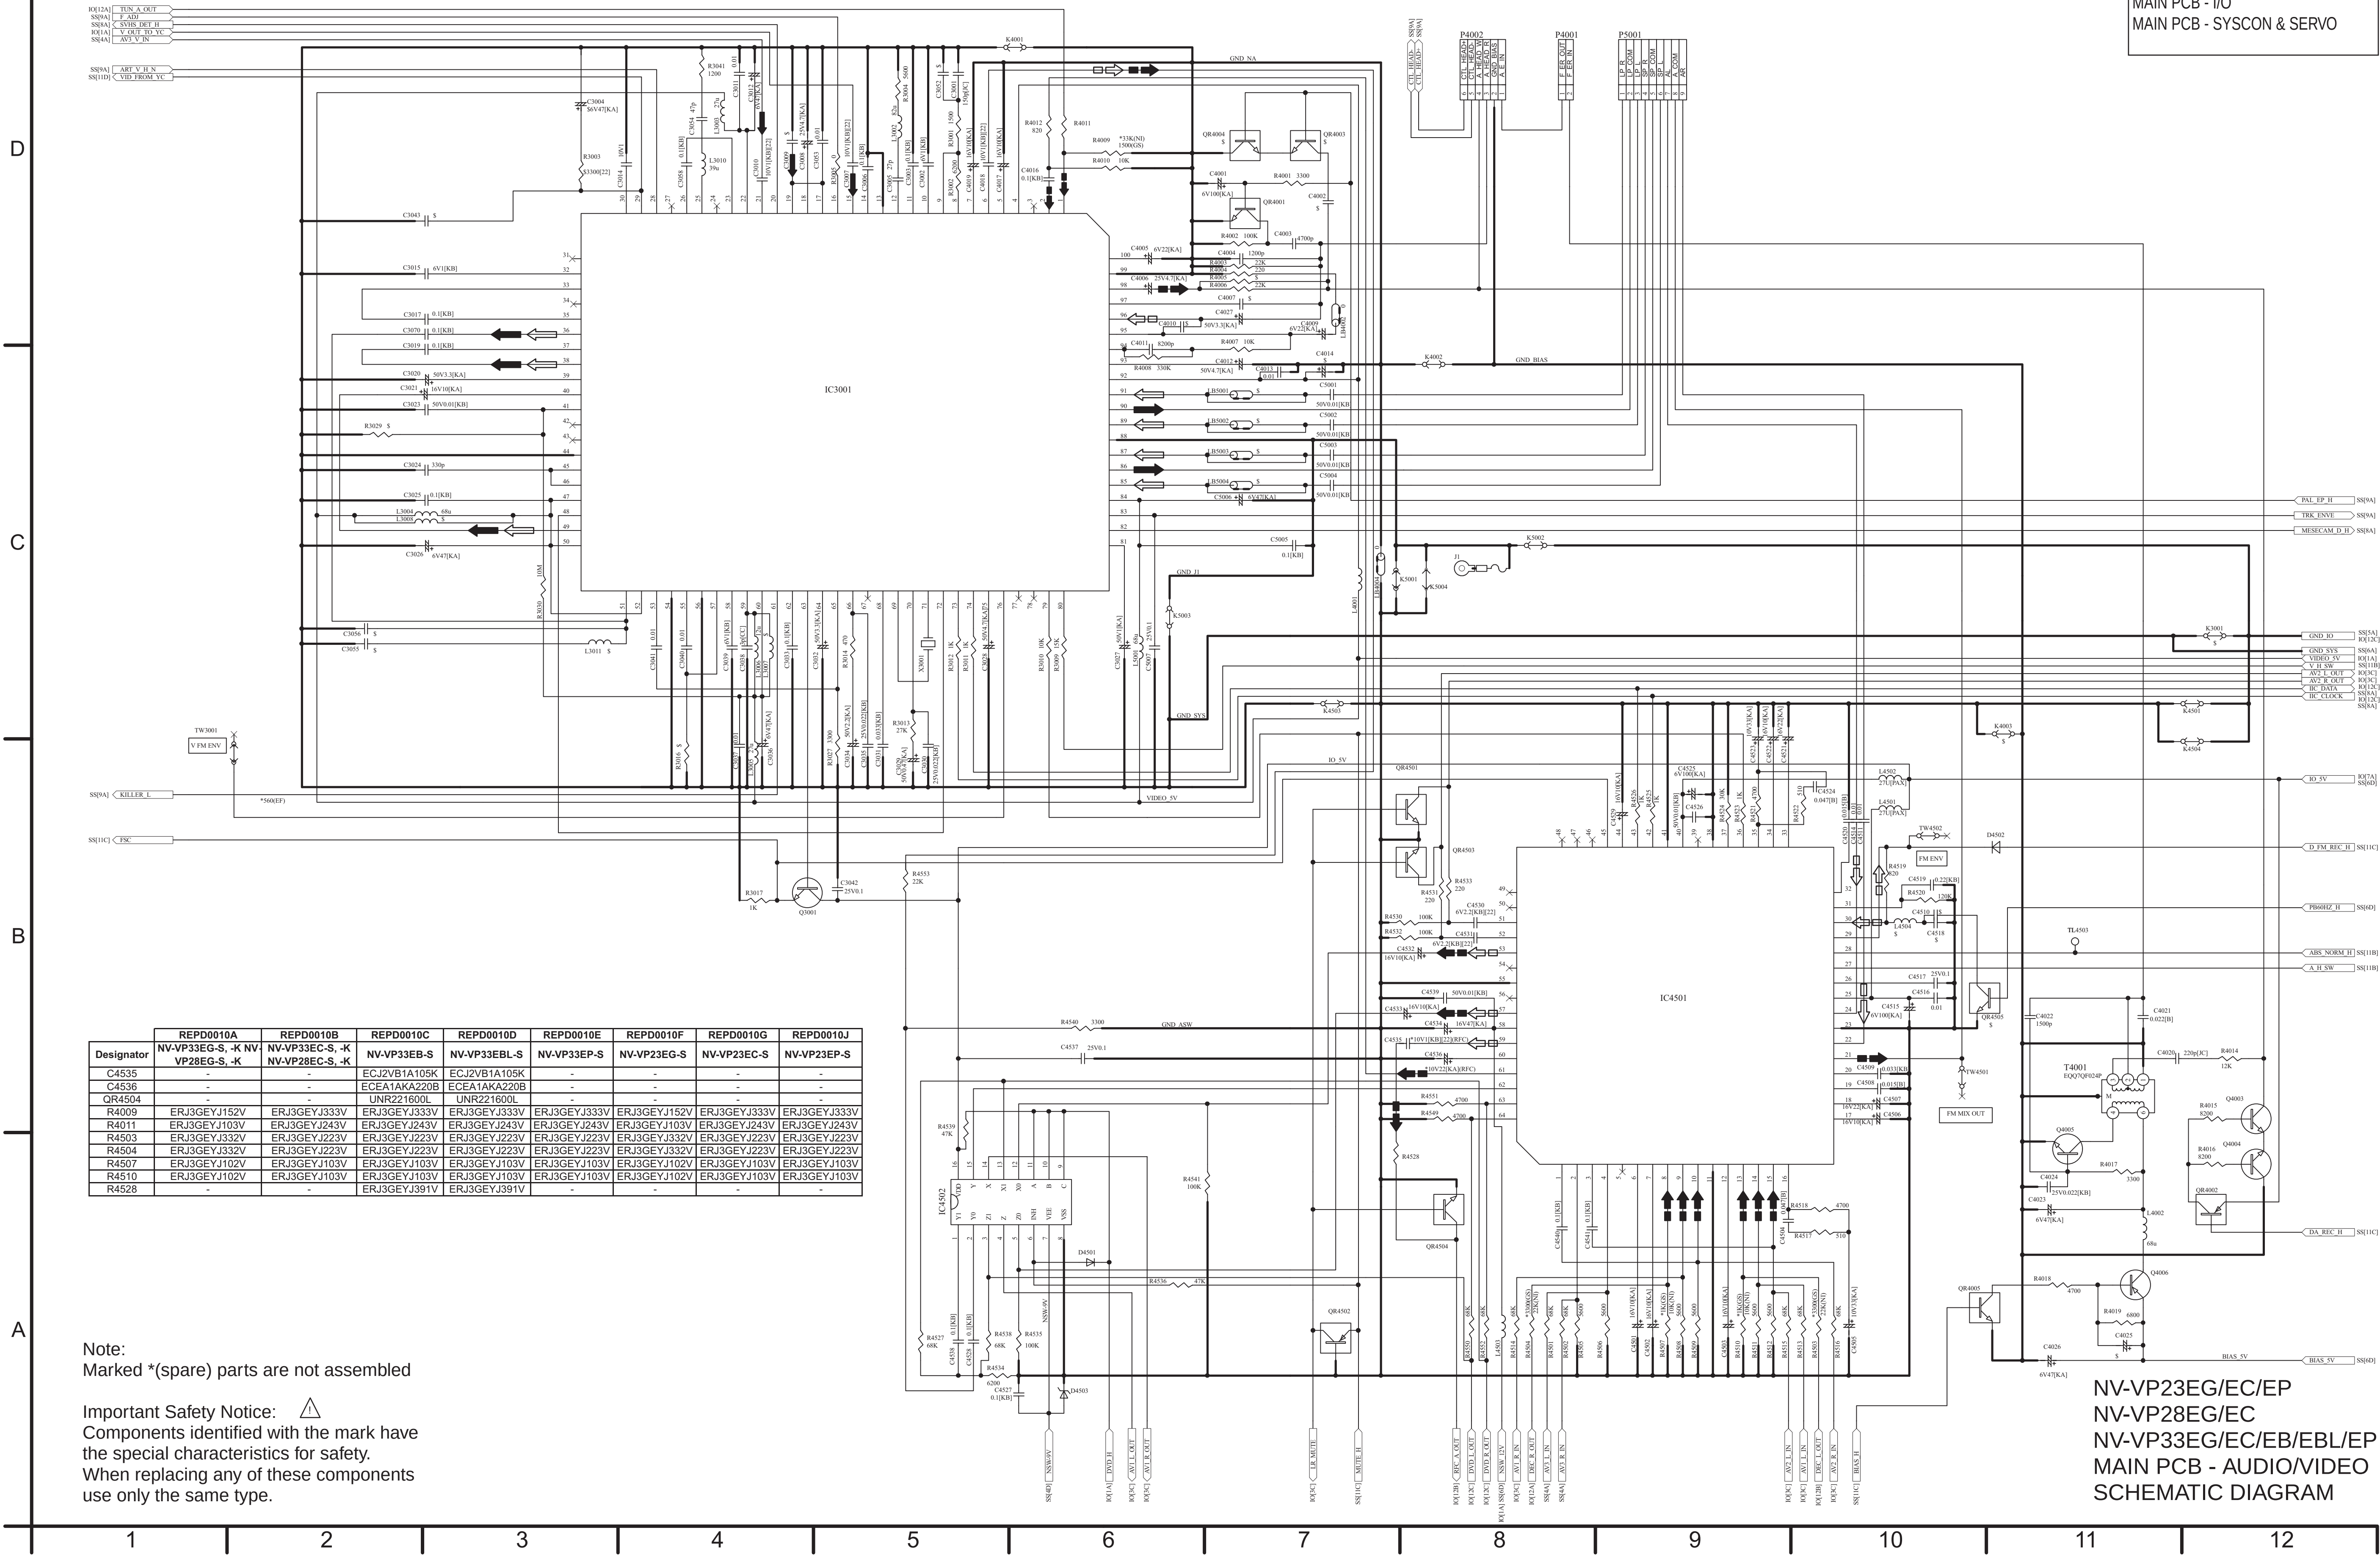
D
C
B
A
1
2
3
4
5
6
7
8
9
10
11
12
IC3001
IC4501
IC4502
TUN_A_OUT
F_ADJ
SVHS_DET_H
V_OUT_TO_YC
AV3_V_IN
ART_V_H_N
VID_FROM_YC
KILLER_L
FSC
TW3001
V FM ENV
Q3001
QR4001
QR4003
QR4004
QR4501
QR4502
QR4503
QR4504
QR4505
QR4002
QR4005
Q4003
Q4004
Q4005
Q4006
T4001
P4002
P4001
P5001
J1
X3001
GND_NA
GND_BIAS
GND_J1
GND_SYS
GND_ASW
IO_5V
VIDEO_5V
K4001
K4002
K4003
K3001
K4501
K4503
K4504
K5001
K5002
K5003
K5004
PAL_EP_H
TRK_ENVE
MESECAM_D_H
GND_IO
GND_SYS
VIDEO_5V
V_H_SW
AV2_L_OUT
AV2_R_OUT
IIC_DATA
IIC_CLOCK
IO_5V
D_FM_REC_H
PB60HZ_H
ABS_NORM_H
A_H_SW
DA_REC_H
BIAS_5V
FM ENV
FM MIX OUT
TW4501
TW4502
TL4503
D4501
D4502
D4503
NSW-9V
DVD_H
AV3_L_OUT
AV3_R_OUT
LR_MUTE
MUTE_H
REC_A_OUT
DVD_L_OUT
DVD_R_OUT
SW_12V
DEC_R_OUT
AV3_L_IN
AV3_R_IN
AV2_L_IN
AV1_L_IN
DEC_L_OUT
AV2_R_IN
AV1_R_IN
BIAS_H
*560(EF)

Designator	REPD0010A NV-VP33EG-S, -K NV-VP28EG-S, -K	REPD0010B NV-VP33EC-S, -K NV-VP28EC-S, -K	REPD0010C NV-VP33EB-S	REPD0010D NV-VP33EBL-S	REPD0010E NV-VP33EP-S	REPD0010F NV-VP23EG-S	REPD0010G NV-VP23EC-S	REPD0010J NV-VP23EP-S
C4535	-	-	ECJ2VB1A105K	ECJ2VB1A105K	-	-	-	-
C4536	-	-	ECEA1AKA220B	ECEA1AKA220B	-	-	-	-
QR4504	-	-	UNR221600L	UNR221600L	-	-	-	-
R4009	ERJ3GEYJ152V	ERJ3GEYJ333V	ERJ3GEYJ333V	ERJ3GEYJ333V	ERJ3GEYJ333V	ERJ3GEYJ152V	ERJ3GEYJ333V	ERJ3GEYJ333V
R4011	ERJ3GEYJ103V	ERJ3GEYJ243V	ERJ3GEYJ243V	ERJ3GEYJ243V	ERJ3GEYJ243V	ERJ3GEYJ103V	ERJ3GEYJ243V	ERJ3GEYJ243V
R4503	ERJ3GEYJ332V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ332V	ERJ3GEYJ223V	ERJ3GEYJ223V
R4504	ERJ3GEYJ332V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ223V	ERJ3GEYJ332V	ERJ3GEYJ223V	ERJ3GEYJ223V
R4507	ERJ3GEYJ102V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ102V	ERJ3GEYJ103V	ERJ3GEYJ103V
R4510	ERJ3GEYJ102V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ102V	ERJ3GEYJ103V	ERJ3GEYJ103V
R4528	-	-	ERJ3GEYJ391V	ERJ3GEYJ391V	-	-	-	-

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety.
When replacing any of these components use only the same type.

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB - AUDIO/VIDEO
SCHEMATIC DIAGRAM

NAVIGATION
INTERCONNECTION

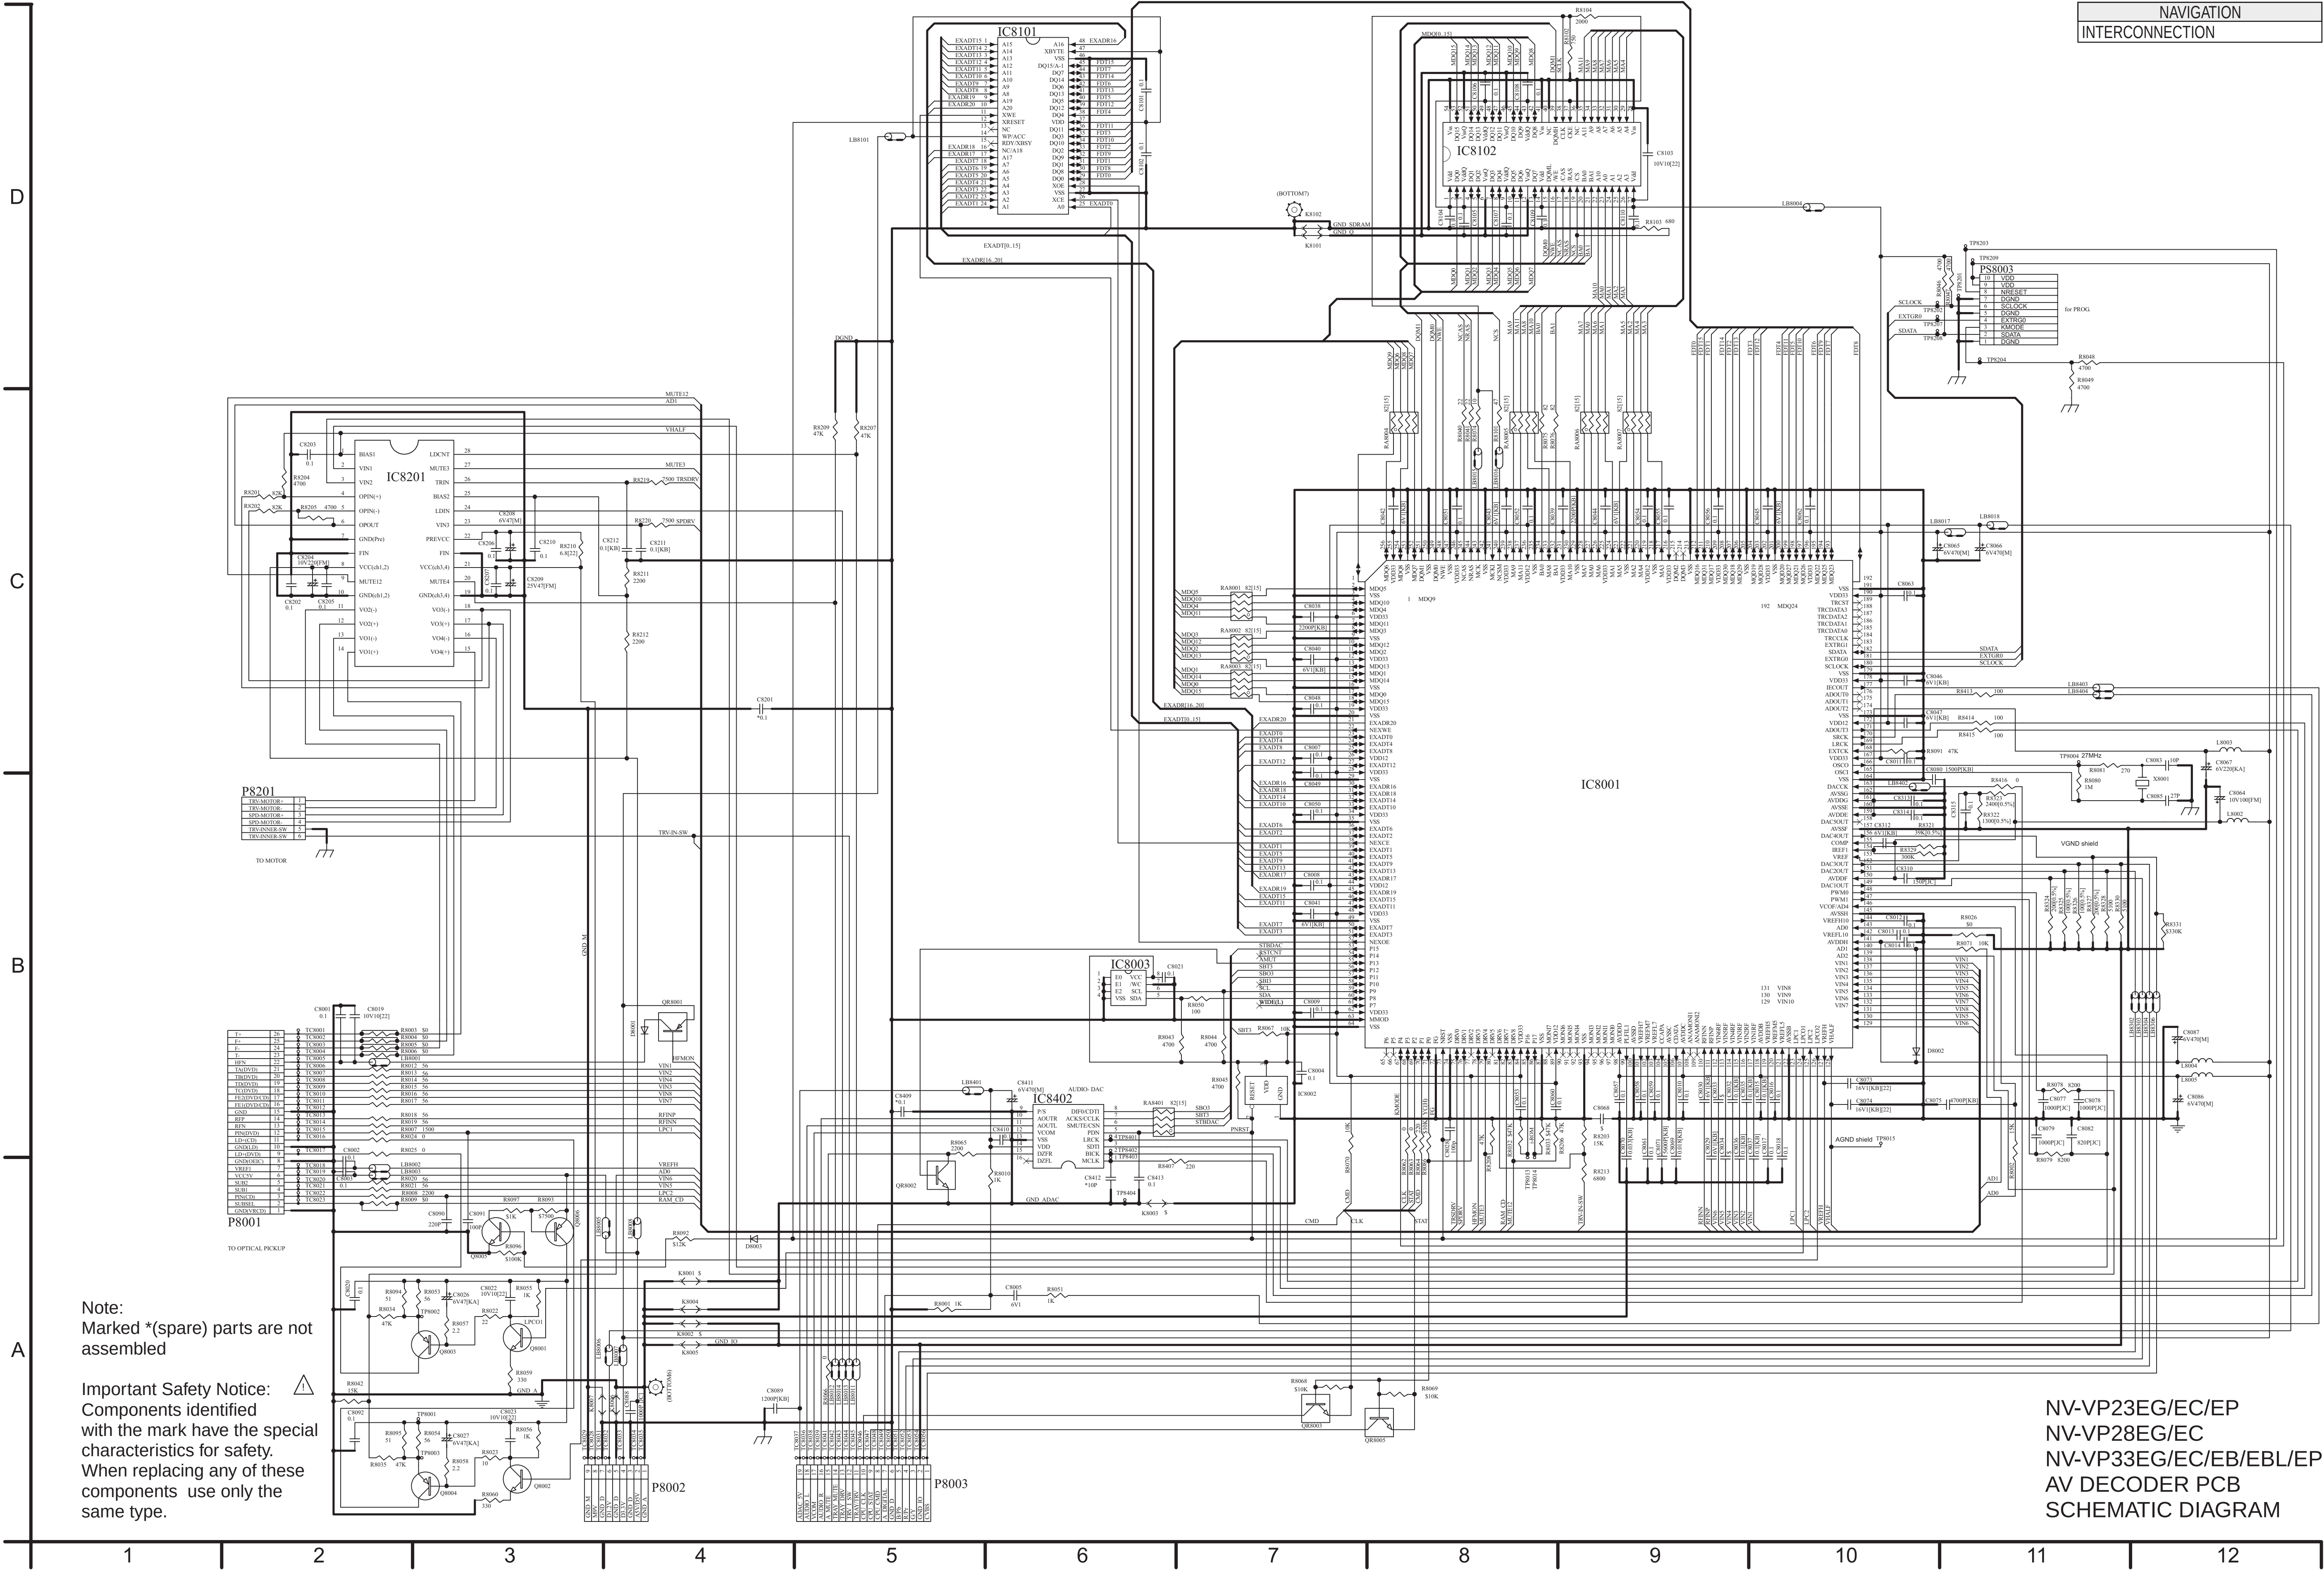
IC8101
IC8102
IC8201
IC8001
IC8003
IC8402
IC8002
P8201
TO MOTOR
P8001
TO OPTICAL PICKUP
P8002
P8003
PS8003
for PROG
AUDIO- DAC
VGND shield
AGND shield
(BOTTOM7)
(BOTTOM6)
D
C
B
A
1
2
3
4
5
6
7
8
9
10
11
12

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety. When replacing any of these components use only the same type.

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
AV DECODER PCB
SCHEMATIC DIAGRAM

NAVIGATION
INTERCONNECTION
MAIN PCB - AUDIO / VIDEO
MAIN PCB - SYSCON & SERVO

	REPD0010E	REPD0010F	REPD0010G	REPD0010J
Designator	NV-VP33EP-S	NV-VP23EG-S	NV-VP23EC-S	NV-VP23EP-S
C7301	ECJ1VF1H103Z	-	ECJ1VF1H103Z	ECJ1VF1H103Z
C7303	ECJ1VF1H103Z	-	ECJ1VF1H103Z	ECJ1VF1H103Z
C7305	ECJ1VC1H330J	-	ECJ1VC1H330J	ECJ1VC1H330J
C7306	ECJ1VC1H330J	-	ECJ1VC1H330J	ECJ1VC1H330J
C7307	-	ECJ1VB1H332K	-	-
C7308	ERJ3GEYJ822V	ECJ1VC1H681J	ERJ3GEYJ822V	ERJ3GEYJ822V
C7309	-	ECJ1VB1H332K	-	-
C7310	-	ECJ1VC1H681J	-	-
C7313	-	ECJ1VF1C474Z	-	-
C7314	ECJ1VB1C104K	ECJ1VB1H103K	ECJ1VB1C104K	ECJ1VB1C104K
C7315	-	ECJ1VC1H090D	-	-
C7316	ECJ1VF1E104Z	-	ECJ1VF1E104Z	ECJ1VF1E104Z
C7317	-	ECJ1VB1H152K	-	-
C7321	-	ECJ1VB1H472K	-	-
C7322	-	ECJ1VF1C474Z	-	-
C7323	ECJ1VF1E104Z	-	ECJ1VF1E104Z	ECJ1VF1E104Z
C7324	-	ECJ1VB1H152K	-	-
C7325	ECJ1VB1C104K	ECJ1VB1H103K	ECJ1VB1C104K	ECJ1VB1C104K
C7327	-	ECJ1VB1H152K	-	-
C7328	ECJ1VF1E104Z	ECJ1VF1C474Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C7329	-	ECJ1VF1C474Z	-	-
C7330	-	ECJ1VB1C104K	-	-
C7331	ECJ2VB1A105K	ECJ2VF1C474Z	ECJ2VB1A105K	ECJ2VB1A105K
C7341	ECJ1VB1H472K	-	ECJ1VB1H472K	ECJ1VB1H472K
C7342	ECJ1VB1H472K	-	ECJ1VB1H472K	ECJ1VB1H472K
C7343	ECEA0JKA221B	-	ECEA0JKA221B	ECEA0JKA221B
D7301	MA2C165001VT	-	MA2C165001VT	MA2C165001VT
IC7301	C1AB00001404	C0ZBZ0000580	C1AB00001404	C1AB00001404
K7306	ERJ3GEY0R00V	-	ERJ3GEY0R00V	ERJ3GEY0R00V
K7307	ERJ3GEY0R00V	-	ERJ3GEY0R00V	ERJ3GEY0R00V
L7607	G0C2R2JA0019	G0C470JA0019	G0C2R2JA0019	G0C2R2JA0019
LB7301	ERJ6GEY0R00V	-	ERJ6GEY0R00V	ERJ6GEY0R00V
LB7302	J0JBC0000011	-	J0JBC0000011	J0JBC0000011
LB7303	ERJ6GEY0R00V	-	ERJ6GEY0R00V	ERJ6GEY0R00V
R7301	-	ERJ3GEYJ912V	-	-
R7302	ERJ3GEY0R00V	ERJ3GEYJ122V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7303	-	ERJ3GEY0R00V	-	-
R7304	ERJ3GEY0R00V	-	ERJ3GEY0R00V	ERJ3GEY0R00V
R7307	-	ERJ3GEYJ562V	-	-
R7309	-	ERJ3GEYJ273V	-	-
R7310	ERJ3GEY0R00V	ERJ3GEYJ472V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7311	-	ERJ3GEYJ752V	-	-
R7312	ERJ3GEY0R00V	ERJ3GEYJ472V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7316	ERJ3GEYJ103V	-	ERJ3GEYJ103V	ERJ3GEYJ103V
R7328	ERJ3GEYJ221V	ERJ3GEYJ822V	ERJ3GEYJ221V	ERJ3GEYJ221V
R7329	ERJ3GEYJ221V	ERJ3GEYJ822V	ERJ3GEYJ221V	ERJ3GEYJ221V
TU7601	ENGF7502GF	ENGF7501GF	ENGF7501GF	ENGF7502GF
X7301	H0D245500011	H0H400400006	H0D245500011	H0D245500011

	REPD0010A	REPD0010B	REPD0010C	REPD0010D
Designator	NV-VP33EG-S, -K NV-VP28EG-S, -K	NV-VP33EC-S, -K NV-VP28EC-S, -K	NV-VP33EB-S	NV-VP33EBL-S
C7301	-	ECJ1VF1H103Z	ECJ1VF1H103Z	ECJ1VF1H103Z
C7303	-	ECJ1VF1H103Z	ECJ1VF1H103Z	ECJ1VF1H103Z
C7305	-	ECJ1VC1H330J	ECJ1VC1H330J	ECJ1VC1H330J
C7306	-	ECJ1VC1H330J	ECJ1VC1H330J	ECJ1VC1H330J
C7307	ECJ1VB1H332K	-	-	-
C7308	ECJ1VC1H681J	ERJ3GEYJ822V	ERJ3GEYJ822V	ERJ3GEYJ822V
C7309	ECJ1VB1H332K	-	-	-
C7310	ECJ1VC1H681J	-	-	-
C7313	ECJ1VF1C474Z	-	-	-
C7314	ECJ1VB1H103K	ECJ1VB1C104K	ECJ1VB1C104K	ECJ1VB1C104K
C7315	ECJ1VC1H090D	-	-	-
C7316	-	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C7317	ECJ1VB1H152K	-	-	-
C7321	ECJ1VB1H472K	-	-	-
C7322	ECJ1VF1C474Z	-	-	-
C7323	-	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C7324	ECJ1VB1H152K	-	-	-
C7325	ECJ1VB1H103K	ECJ1VB1C104K	ECJ1VB1C104K	ECJ1VB1C104K
C7327	ECJ1VB1H152K	-	-	-
C7328	ECJ1VF1C474Z	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C7329	ECJ1VF1C474Z	-	-	-
C7330	ECJ1VB1C104K	-	-	-
C7331	ECJ2VF1C474Z	ECJ2VB1A105K	ECJ2VB1A105K	ECJ2VB1A105K
C7341	-	ECJ1VB1H472K	ECJ1VB1H472K	ECJ1VB1H472K
C7342	-	ECJ1VB1H472K	ECJ1VB1H472K	ECJ1VB1H472K
C7343	-	ECEA0JKA221B	ECEA0JKA221B	ECEA0JKA221B
C7604	-	-	ECEA0JKA101B	ECEA0JKA101B
C7606	-	-	ECJ1VF1H103Z	ECJ1VF1H103Z
C7627	-	-	ECJ1VB1H471K	ECJ1VB1H471K
C7628	-	-	ECJ1VB1H102K	ECJ1VB1H102K
D7301	-	MA2C165001VT	MA2C165001VT	MA2C165001VT
IC7301	C0ZBZ0000580	C1AB00001404	C1AB00001404	C1AB00001404
K7306	-	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
K7307	-	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
L7602	-	-	G0C270JA0019	G0C270JA0019
L7603	-	-	G0C270JA0019	G0C270JA0019
L7607	G0C470JA0019	G0C2R2JA0019	G0C2R2JA0019	G0C2R2JA0019
L7609	-	-	VWJ0023=5	VWJ0023=5
LB7301	-	ERJ6GEY0R00V	ERJ6GEY0R00V	ERJ6GEY0R00V
LB7302	-	J0JBC0000011	J0JBC0000011	J0JBC0000011
LB7303	-	ERJ6GEY0R00V	ERJ6GEY0R00V	ERJ6GEY0R00V
R7301	ERJ3GEYJ912V	-	-	-
R7302	ERJ3GEYJ122V	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7303	ERJ3GEY0R00V	-	-	-
R7304	-	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7307	ERJ3GEYJ562V	-	-	-
R7309	ERJ3GEYJ273V	-	-	-
R7310	ERJ3GEYJ472V	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7311	ERJ3GEYJ752V	-	-	-
R7312	ERJ3GEYJ472V	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
R7316	-	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V
R7328	ERJ3GEYJ822V	ERJ3GEYJ221V	ERJ3GEYJ221V	ERJ3GEYJ221V
R7329	ERJ3GEYJ822V	ERJ3GEYJ221V	ERJ3GEYJ221V	ERJ3GEYJ221V
R7603	-	-	ERJ3GEY0R00V	ERJ3GEY0R00V
R7605	-	-	ERJ3GEYJ101Z	ERJ3GEYJ101Z
R7606	-	-	ERJ3GEY0R00V	ERJ3GEY0R00V
TU7601	ENGF7501GF	ENGF7501GF	ENG57D02G1F	ENG57D03G1F
X7301	H0H400400006	H0D245500011	H0D245500011	H0D245500011

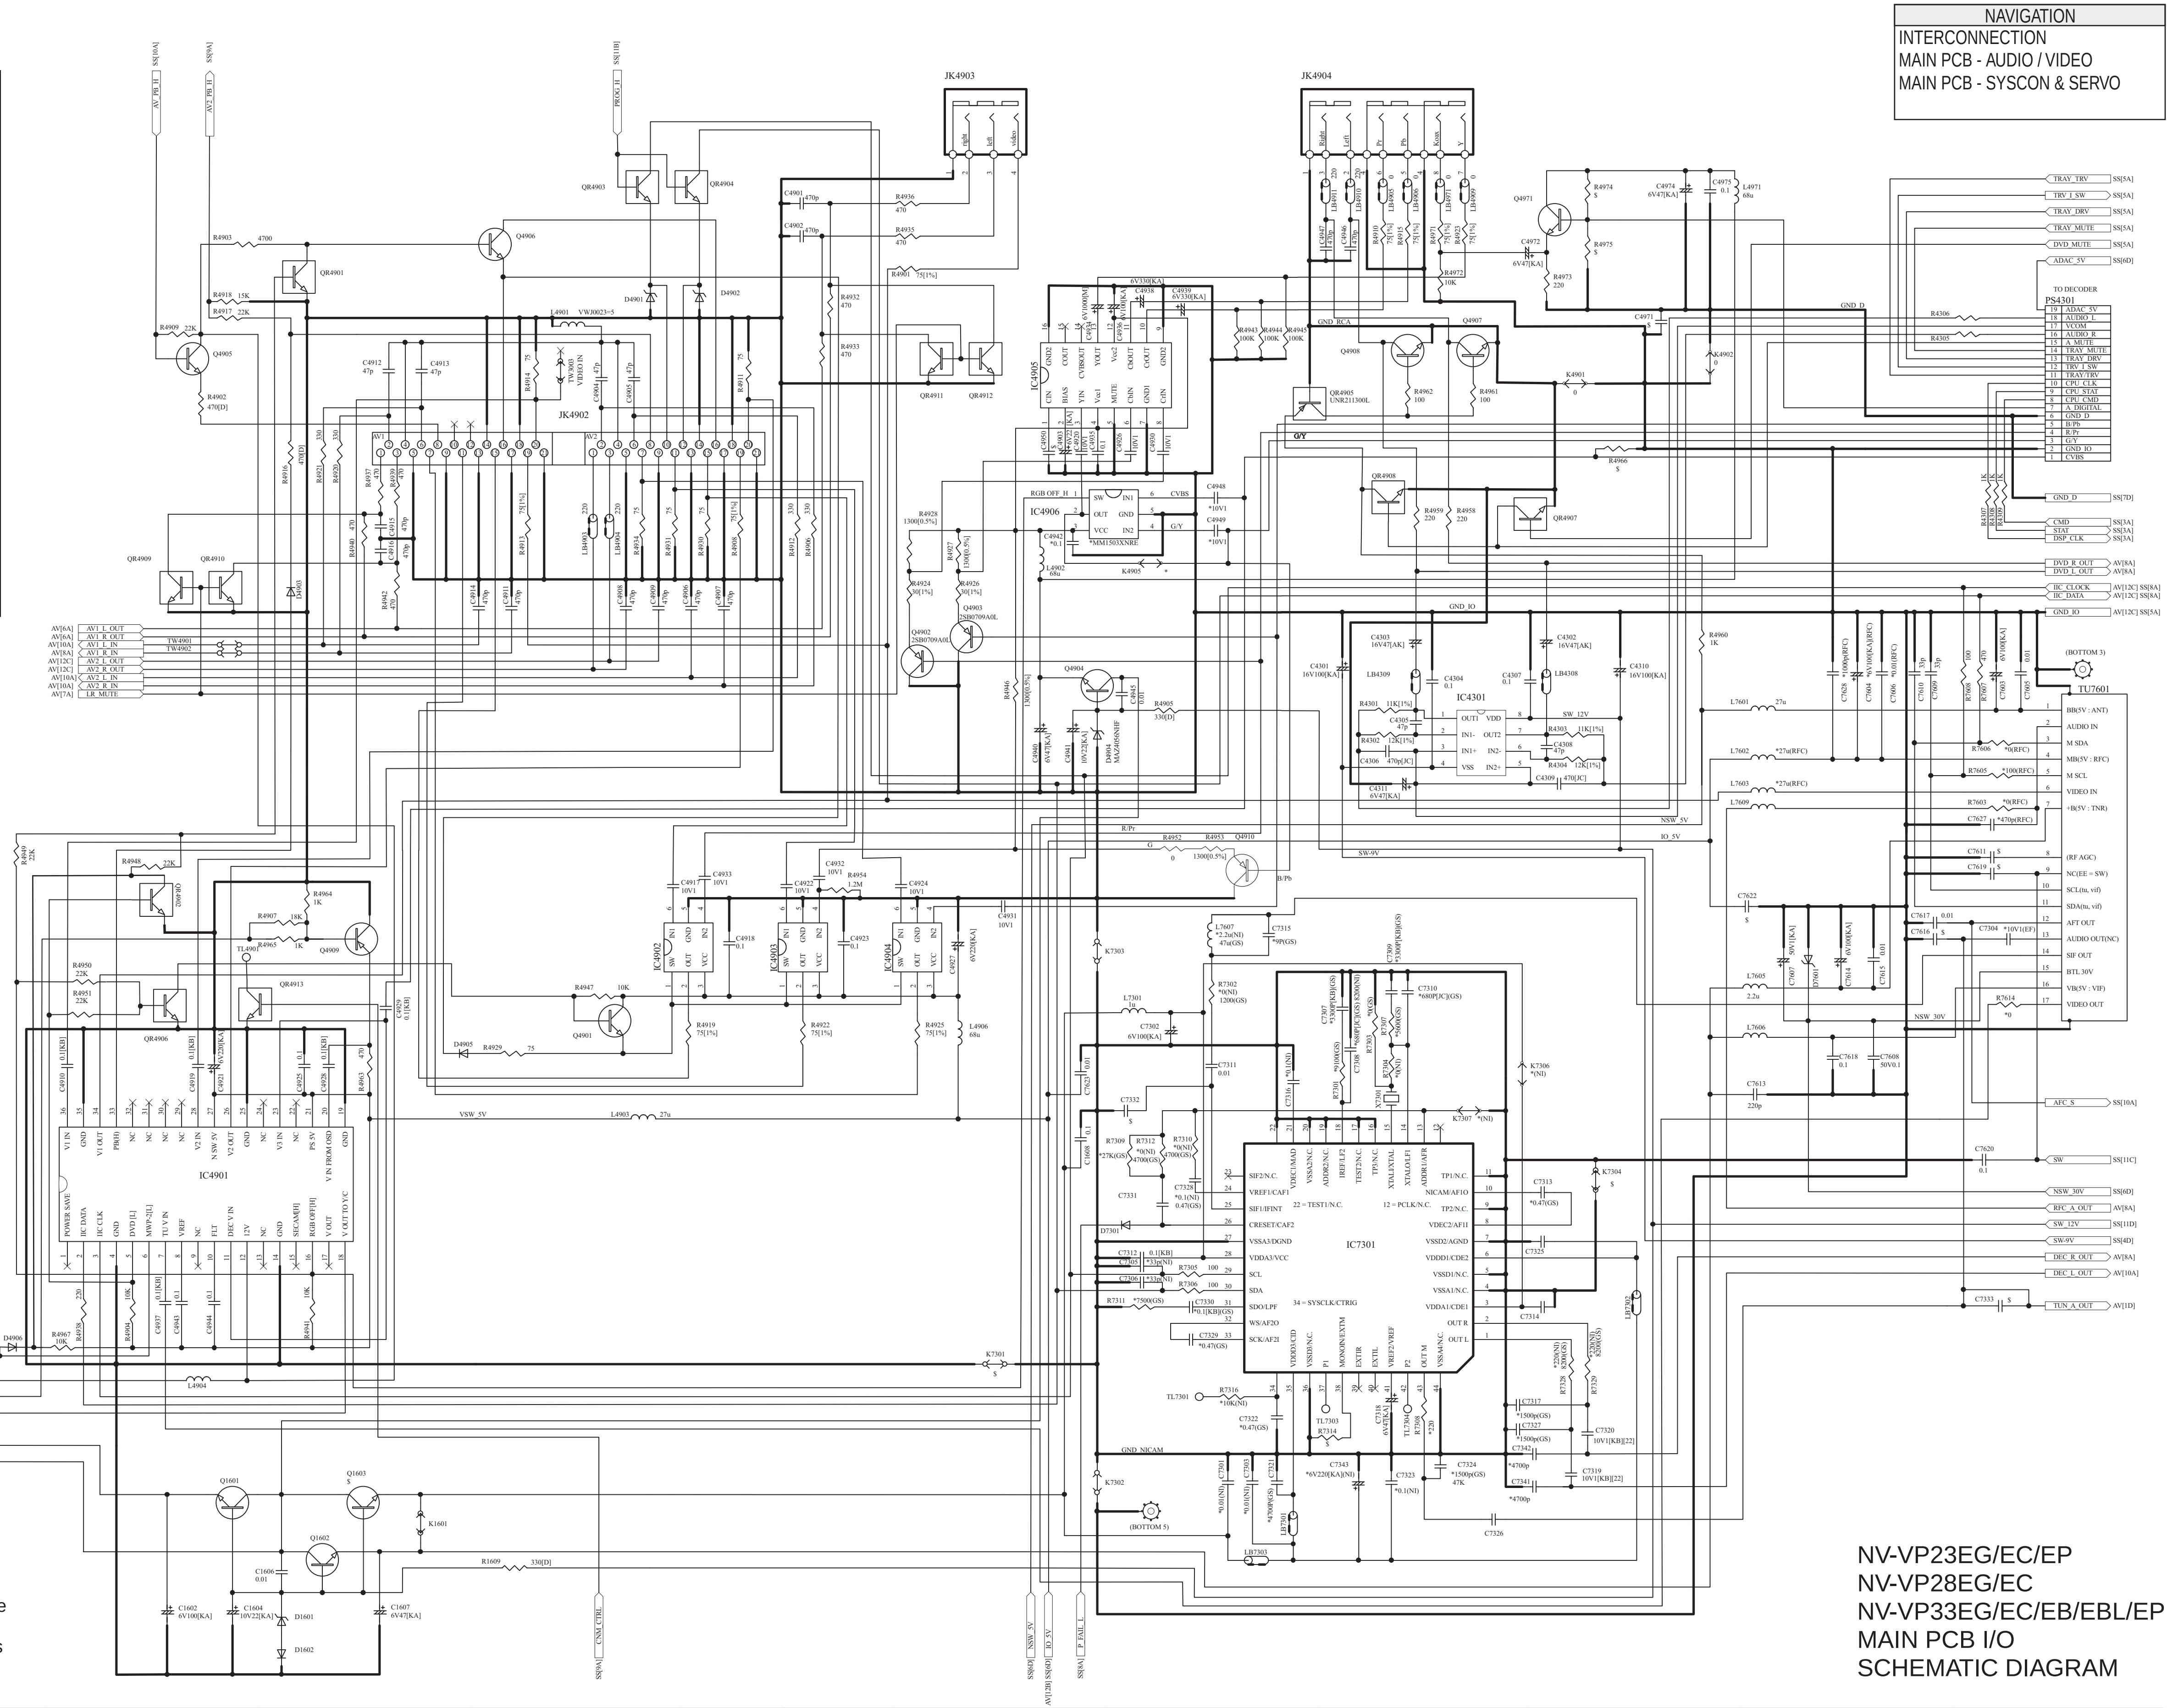

D
C
B
A
1
2
3
4
5
6
7
8
9
10
11
12
JK4903
JK4904
JK4902
IC4905
IC4906
IC4301
IC4901
IC4902
IC4903
IC4904
IC7301
TU7601
PS4301
TO DECODER
Q4906
Q4905
QR4901
QR4903
QR4904
QR4909
QR4910
QR4911
QR4912
QR4905
QR4906
QR4907
QR4908
QR4913
Q4901
Q4902
Q4903
Q4904
Q4907
Q4908
Q4909
Q4910
Q4971
Q1601
Q1602
Q1603
AV_PB_H
AV2_PB_H
PROG_H
DVD_H
NSW_12V
V_OUT_TO_IO
V_OUT_TO_YC
VIDEO_5V
UNREG_6V
AV1_L_OUT
AV1_R_OUT
AV1_L_IN
AV1_R_IN
AV2_L_OUT
AV2_R_OUT
AV2_L_IN
AV2_R_IN
LR_MUTE
TRAY_TRV
TRV_I_SW
TRAY_DRV
TRAY_MUTE
DVD_MUTE
ADAC_5V
GND_D
CMD
STAT
DSP_CLK
DVD_R_OUT
DVD_L_OUT
IIC_CLOCK
IIC_DATA
GND_IO
AFC_S
SW
NSW_30V
RFC_A_OUT
SW_12V
SW-9V
DEC_R_OUT
DEC_L_OUT
TUN_A_OUT
NSW_5V
IO_5V
P_FAIL_L
CNM_CTRL
GND_NICAM
(BOTTOM 3)
(BOTTOM 5)

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety.
When replacing any of these components use only the same type.

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB I/O
SCHEMATIC DIAGRAM

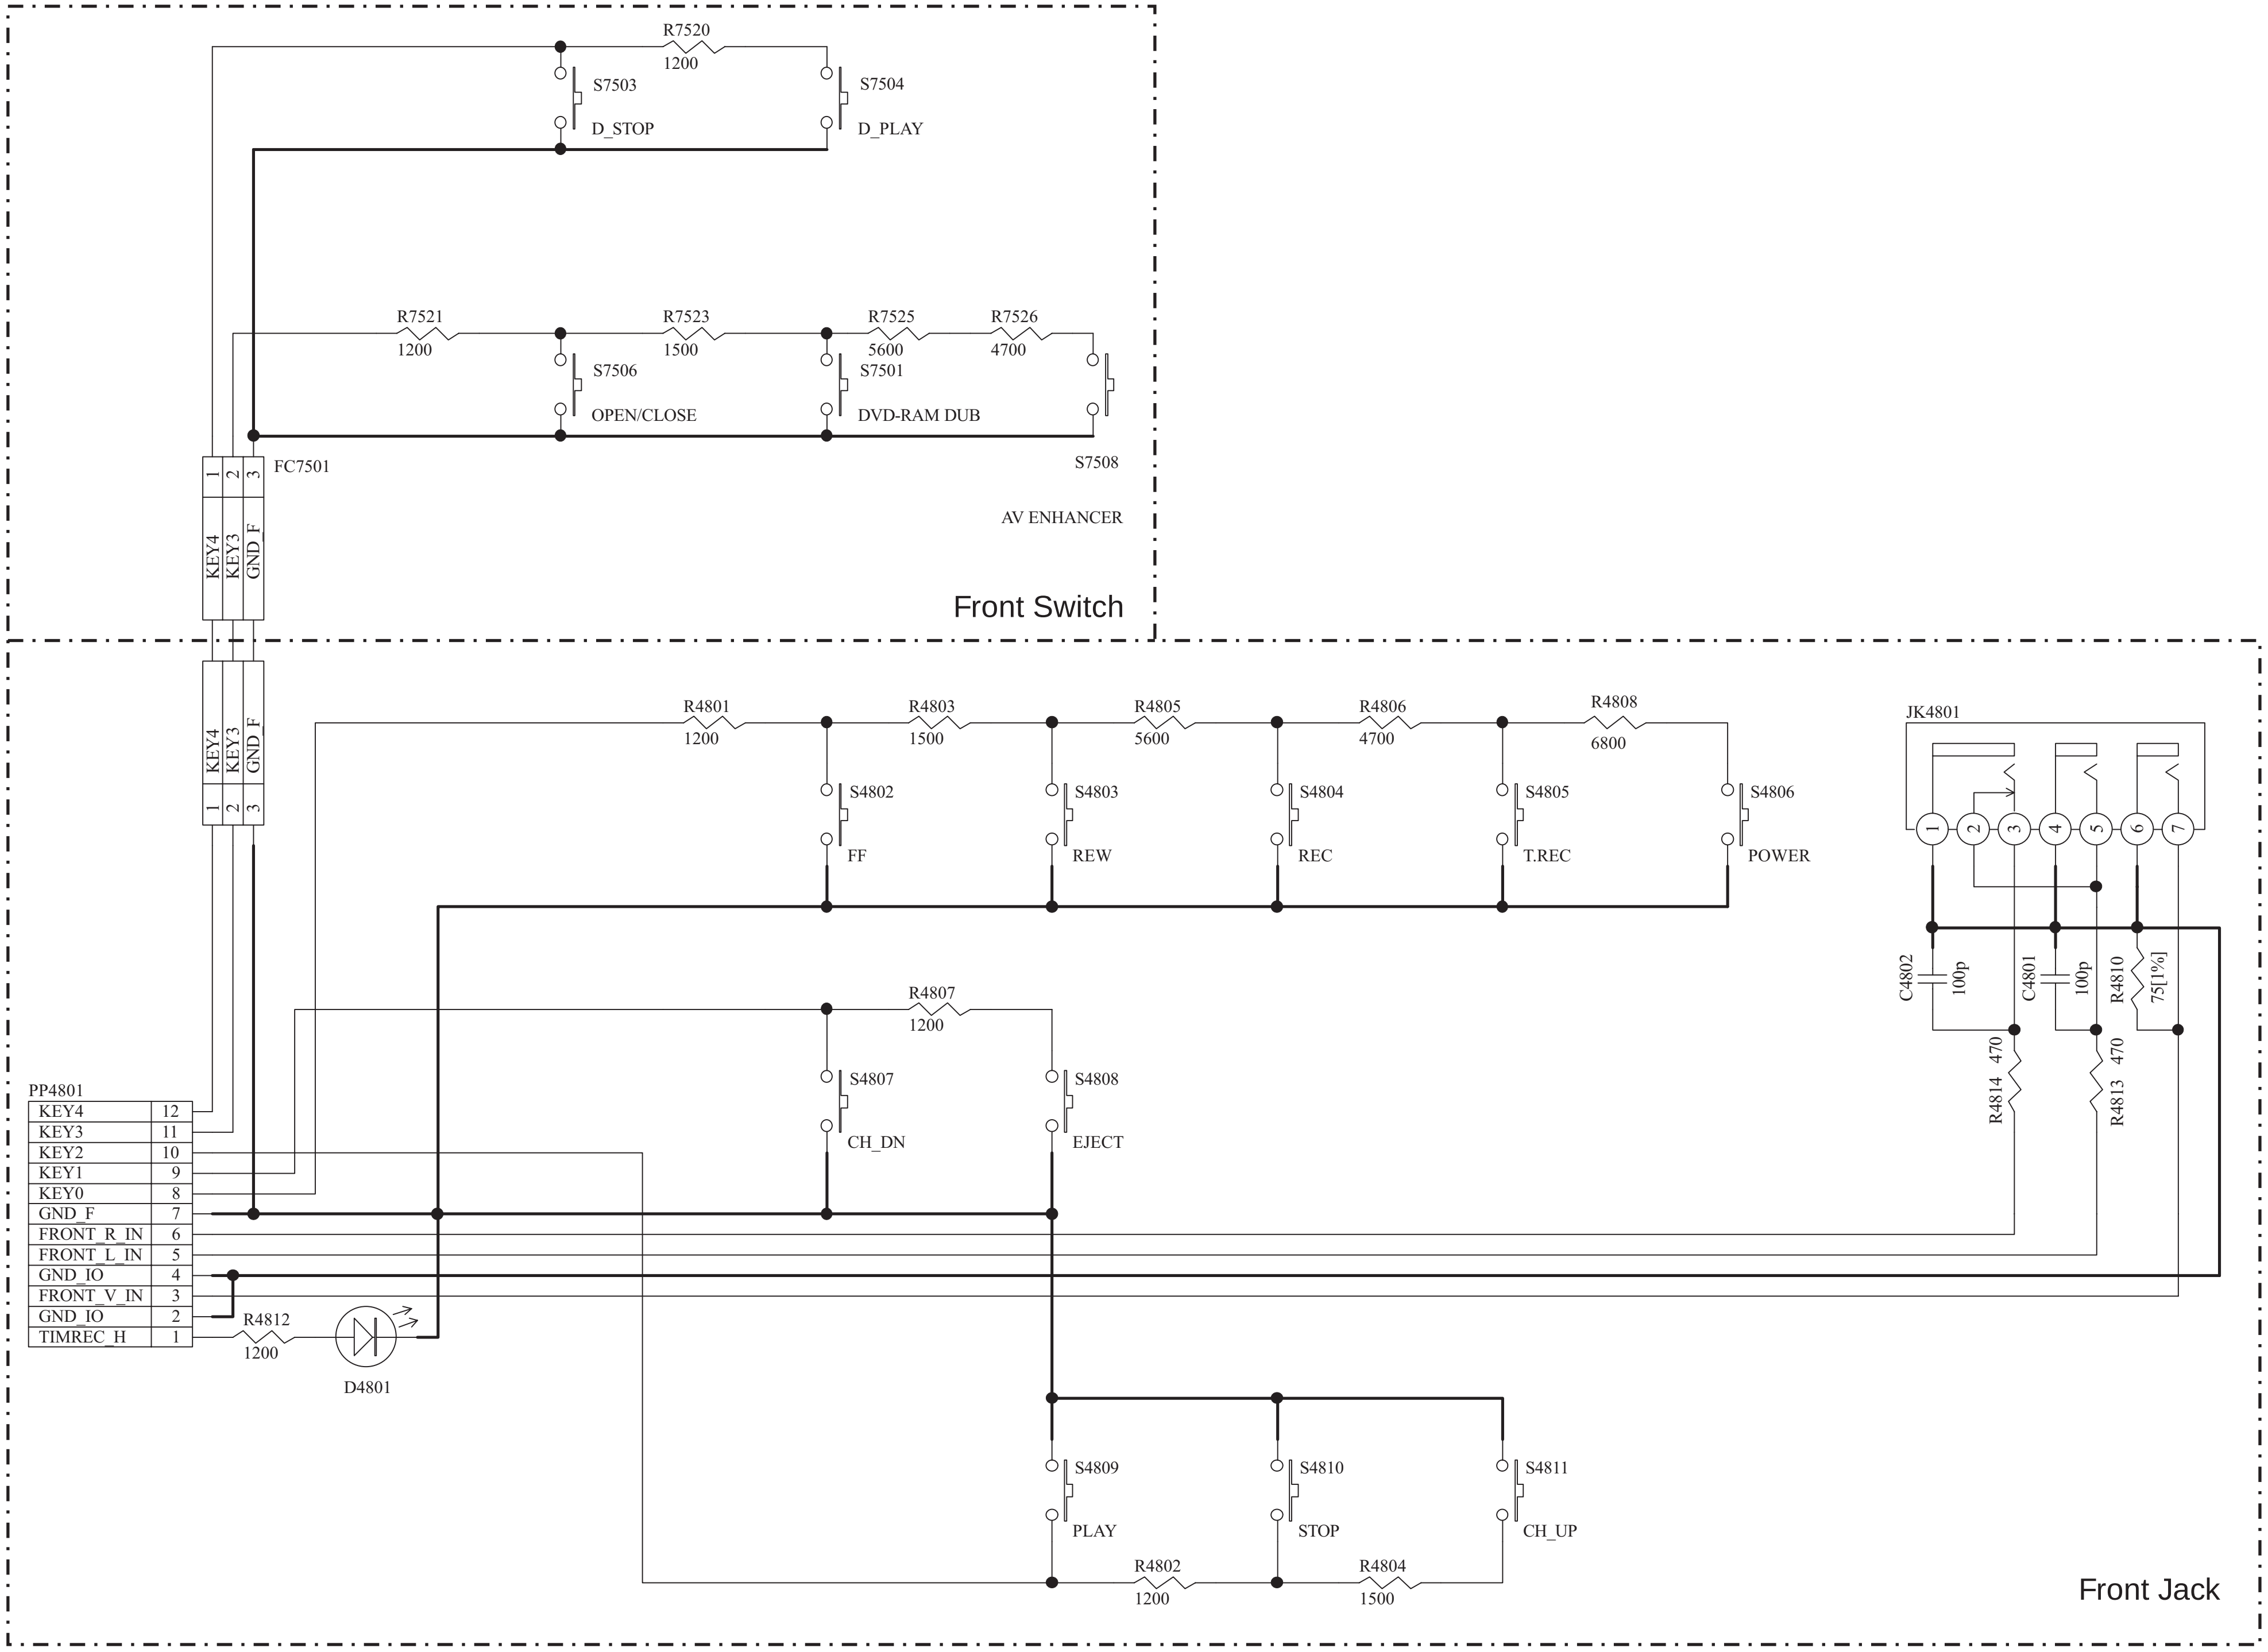
R7520
1200
S7503
D_STOP
S7504
D_PLAY
R7521
1200
R7523
1500
R7525
5600
R7526
4700
S7506
OPEN/CLOSE
S7501
DVD-RAM DUB
S7508
AV ENHANCER
FC7501
1
2
3
KEY4
KEY3
GND F
Front Switch
R4801
1200
R4803
1500
R4805
5600
R4806
4700
R4808
6800
S4802
FF
S4803
REW
S4804
REC
S4805
T.REC
S4806
POWER
JK4801
1
2
3
4
5
6
7
C4802
100p
C4801
100p
R4810
75[1%]
R4814
470
R4813
470
R4807
1200
S4807
CH_DN
S4808
EJECT
PP4801
KEY4 12
KEY3 11
KEY2 10
KEY1 9
KEY0 8
GND_F 7
FRONT_R_IN 6
FRONT_L_IN 5
GND_IO 4
FRONT_V_IN 3
GND_IO 2
TIMREC_H 1
R4812
1200
D4801
S4809
PLAY
S4810
STOP
S4811
CH_UP
R4802
1200
R4804
1500
Front Jack

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have
the special characteristics for safety.
When replacing any of these components
use only the same type.

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
FRONT PANEL PCB
SCHEMATIC DIAGRAM

NAVIGATION
INTERCONNECTION

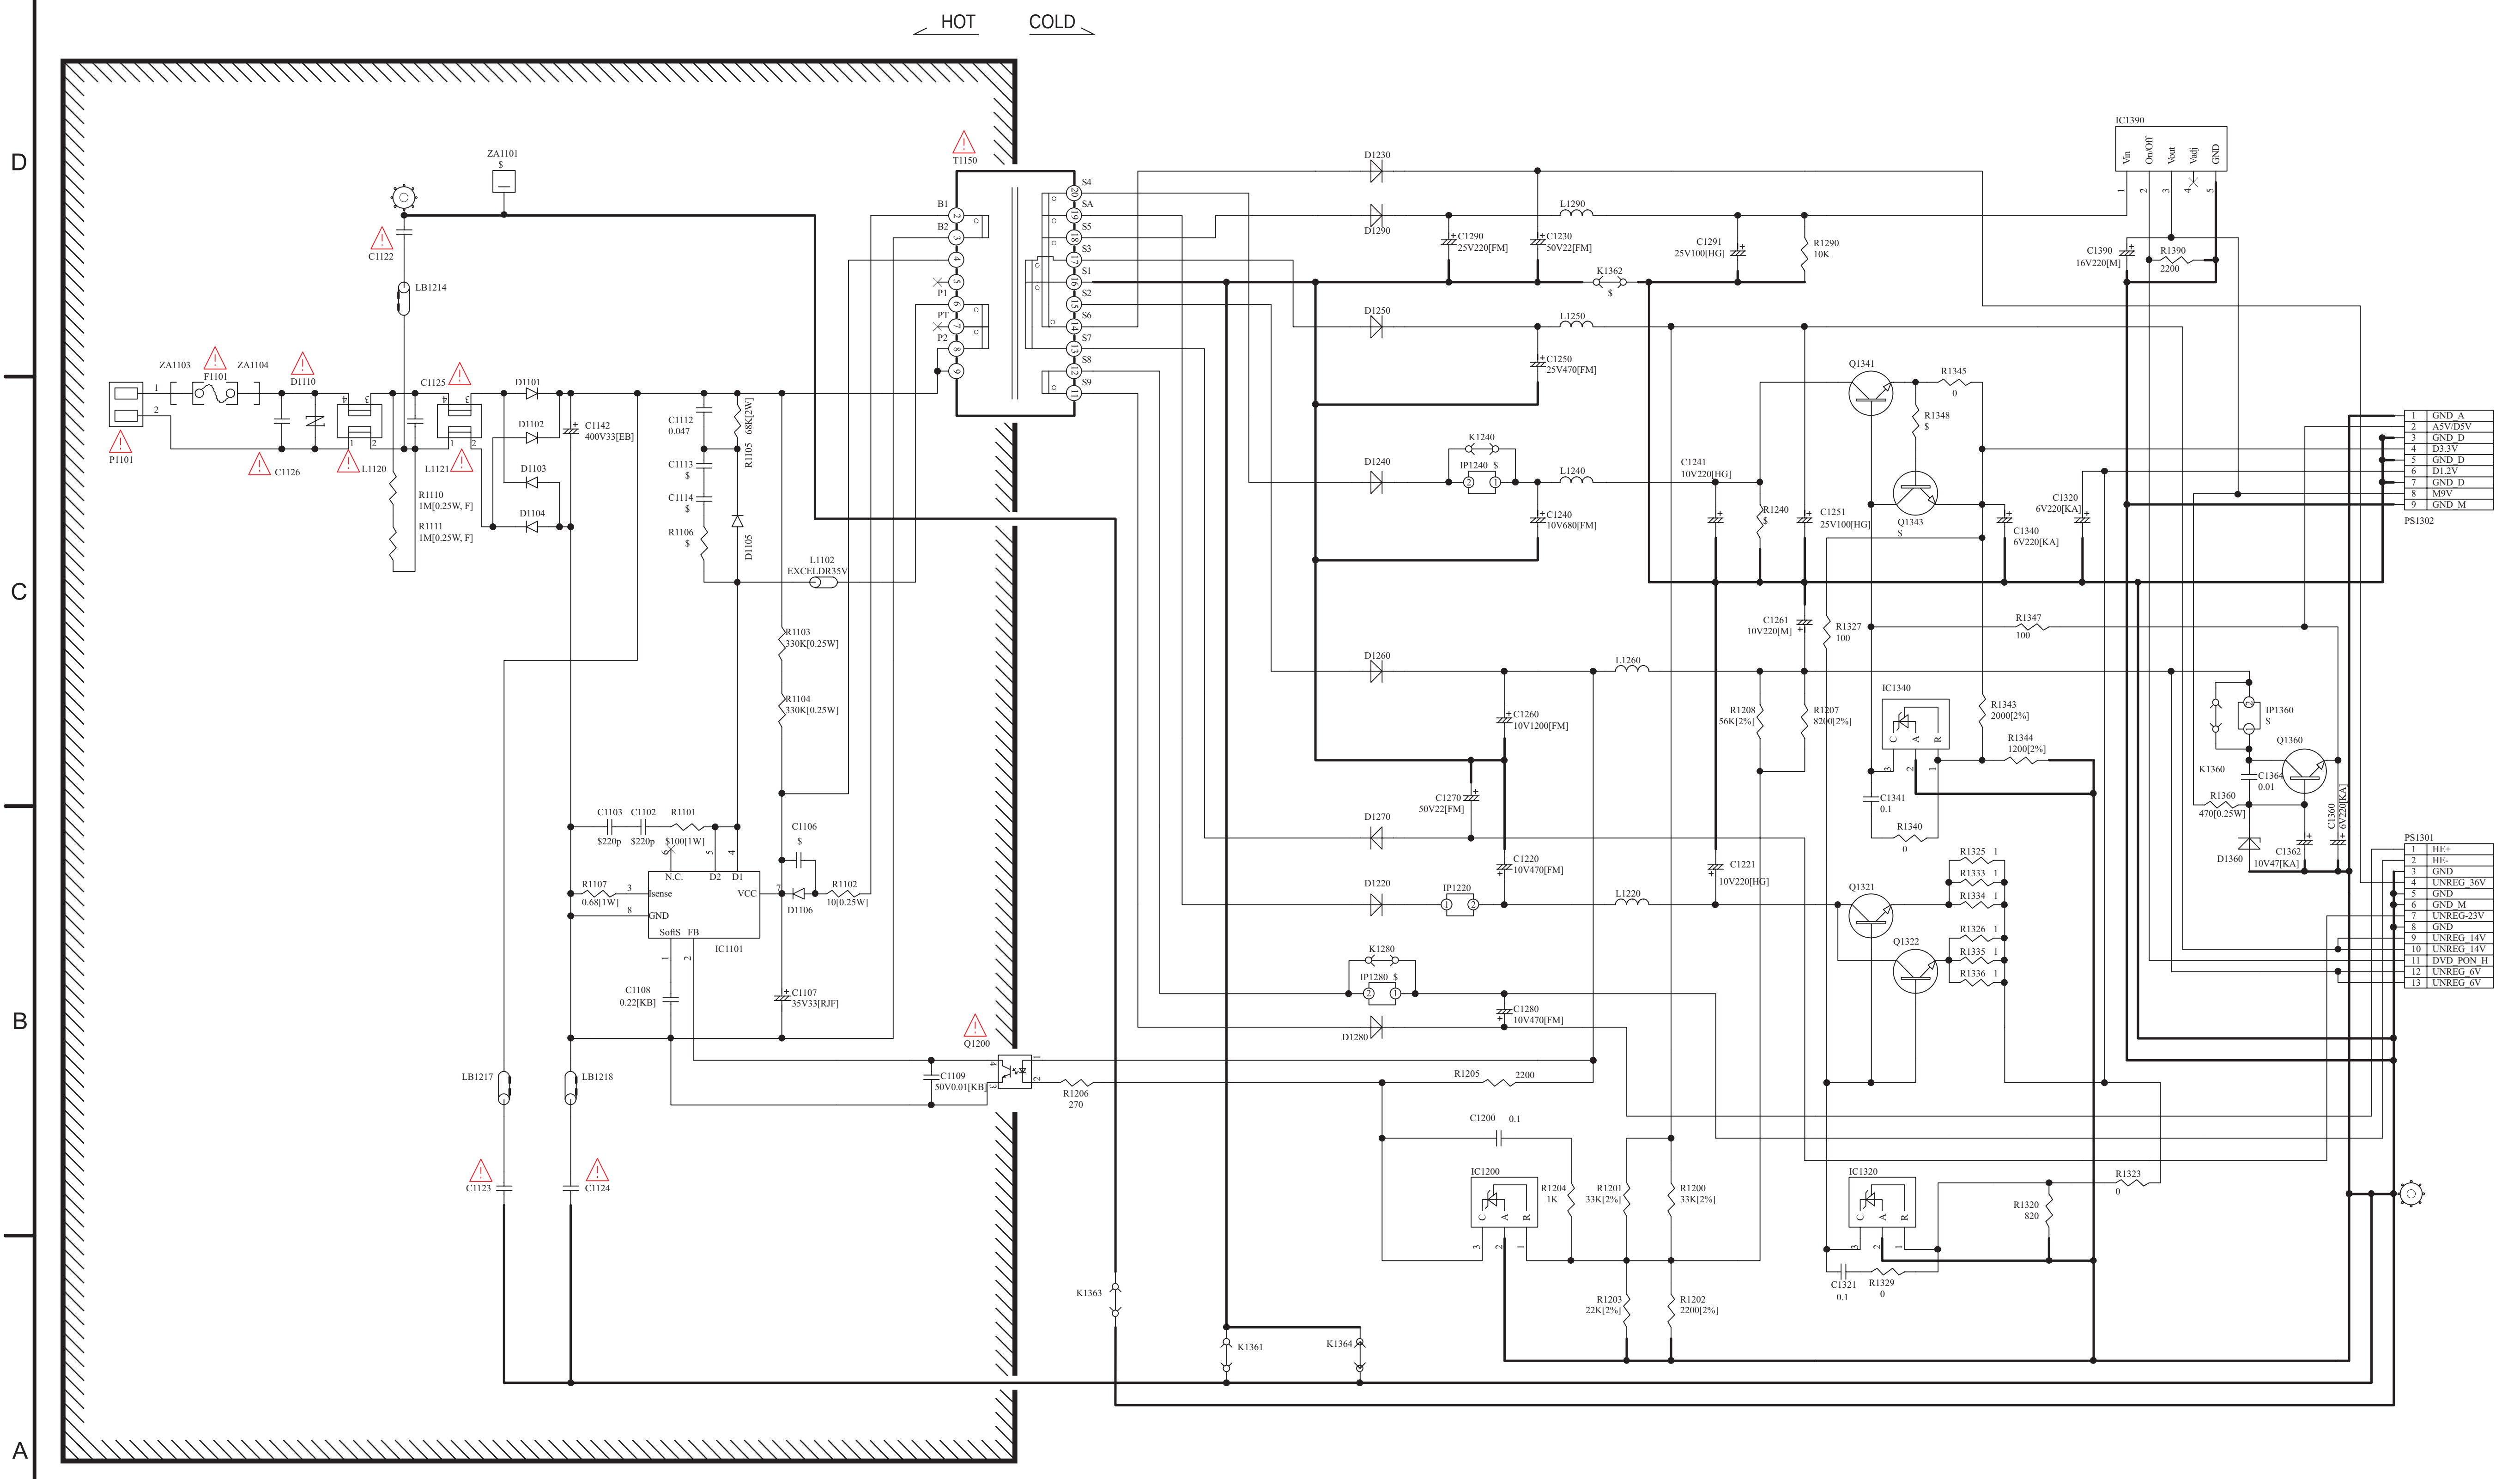
HOT
COLD
D
C
B
A
ZA1101
T1150
C1122
LB1214
ZA1103
ZA1104
F1101
D1110
C1125
D1101
D1102
D1103
D1104
C1142
400V33[EB]
P1101
C1126
L1120
L1121
R1110
1M[0.25W, F]
R1111
1M[0.25W, F]
C1112
0.047
C1113
C1114
R1106
R1105 68K[2W]
D1105
L1102
EXCELDR35V
R1103
330K[0.25W]
R1104
330K[0.25W]
C1103
$220p
C1102
$220p
R1101
$100[1W]
C1106
R1107
0.68[1W]
IC1101
N.C.
D2
D1
Isense
VCC
GND
SoftS
FB
R1102
10[0.25W]
D1106
C1108
0.22[KB]
C1107
35V33[RJF]
Q1200
C1109
50V0.01[KB]
R1206
270
LB1217
LB1218
C1123
C1124
K1363
K1361
K1364
B1
B2
P1
PT
P2
S4
SA
S5
S3
S1
S2
S6
S7
S8
S9
D1230
D1290
C1290
25V220[FM]
C1230
50V22[FM]
L1290
C1291
25V100[HG]
R1290
10K
K1362
D1250
L1250
C1250
25V470[FM]
D1240
K1240
IP1240
L1240
C1240
10V680[FM]
C1241
10V220[HG]
R1240
C1251
25V100[HG]
Q1341
R1345
0
R1348
Q1343
C1340
6V220[KA]
C1320
6V220[KA]
IC1390
Vin
On/Off
Vout
Vadj
GND
C1390
16V220[M]
R1390
2200
PS1302

1	GND_A
2	A5V/D5V
3	GND_D
4	D3.3V
5	GND_D
6	D1.2V
7	GND_D
8	M9V
9	GND_M

C1261
10V220[M]
R1327
100
R1347
100
D1260
L1260
C1260
10V1200[FM]
R1208
56K[2%]
R1207
8200[2%]
IC1340
R1343
2000[2%]
R1344
1200[2%]
C1341
0.1
R1340
0
IP1360
Q1360
K1360
C1364
0.01
R1360
470[0.25W]
D1360
C1362
10V47[KA]
C1360
6V220[KA]
C1270
50V22[FM]
D1270
C1220
10V470[FM]
C1221
10V220[HG]
Q1321
Q1322
R1325
R1333
R1334
R1326
R1335
R1336
D1220
IP1220
L1220
K1280
IP1280
C1280
10V470[FM]
D1280
R1205
2200
C1200
0.1
IC1200
R1204
1K
R1201
33K[2%]
R1200
33K[2%]
R1203
22K[2%]
R1202
2200[2%]
IC1320
R1323
0
R1320
820
C1321
0.1
R1329
0
PS1301

1	HE+
2	HE-
3	GND
4	UNREG_36V
5	GND
6	GND_M
7	UNREG-23V
8	GND
9	UNREG_14V
10	UNREG_14V
11	DVD_PON_H
12	UNREG_6V
13	UNREG_6V

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety.
When replacing any of these components use only the same type.

CAUTION THE STRIPED FRAME INDICATES THE PRIMARY CIRCUIT TO DISTINGUISH THE PRIMARY FROM THE SECONDARY CIRCUIT.
PAY ATTENTION NOT TO RECEIVE AN ELECTRIC SHOCK DURING REPAIR AND SERVICE OF THE PRODUCTS.

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
POWER PCB
SCHEMATIC DIAGRAM

1
2
3
4
5
6
7
8
9
10
11
12

⬅ AUDIO MAIN SIGNAL PATH IN REC MODE
⇦ AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

NAVIGATION
INTERCONNECTION
MAIN PCB - AUDIO / VIDEO
MAIN PCB - I/O

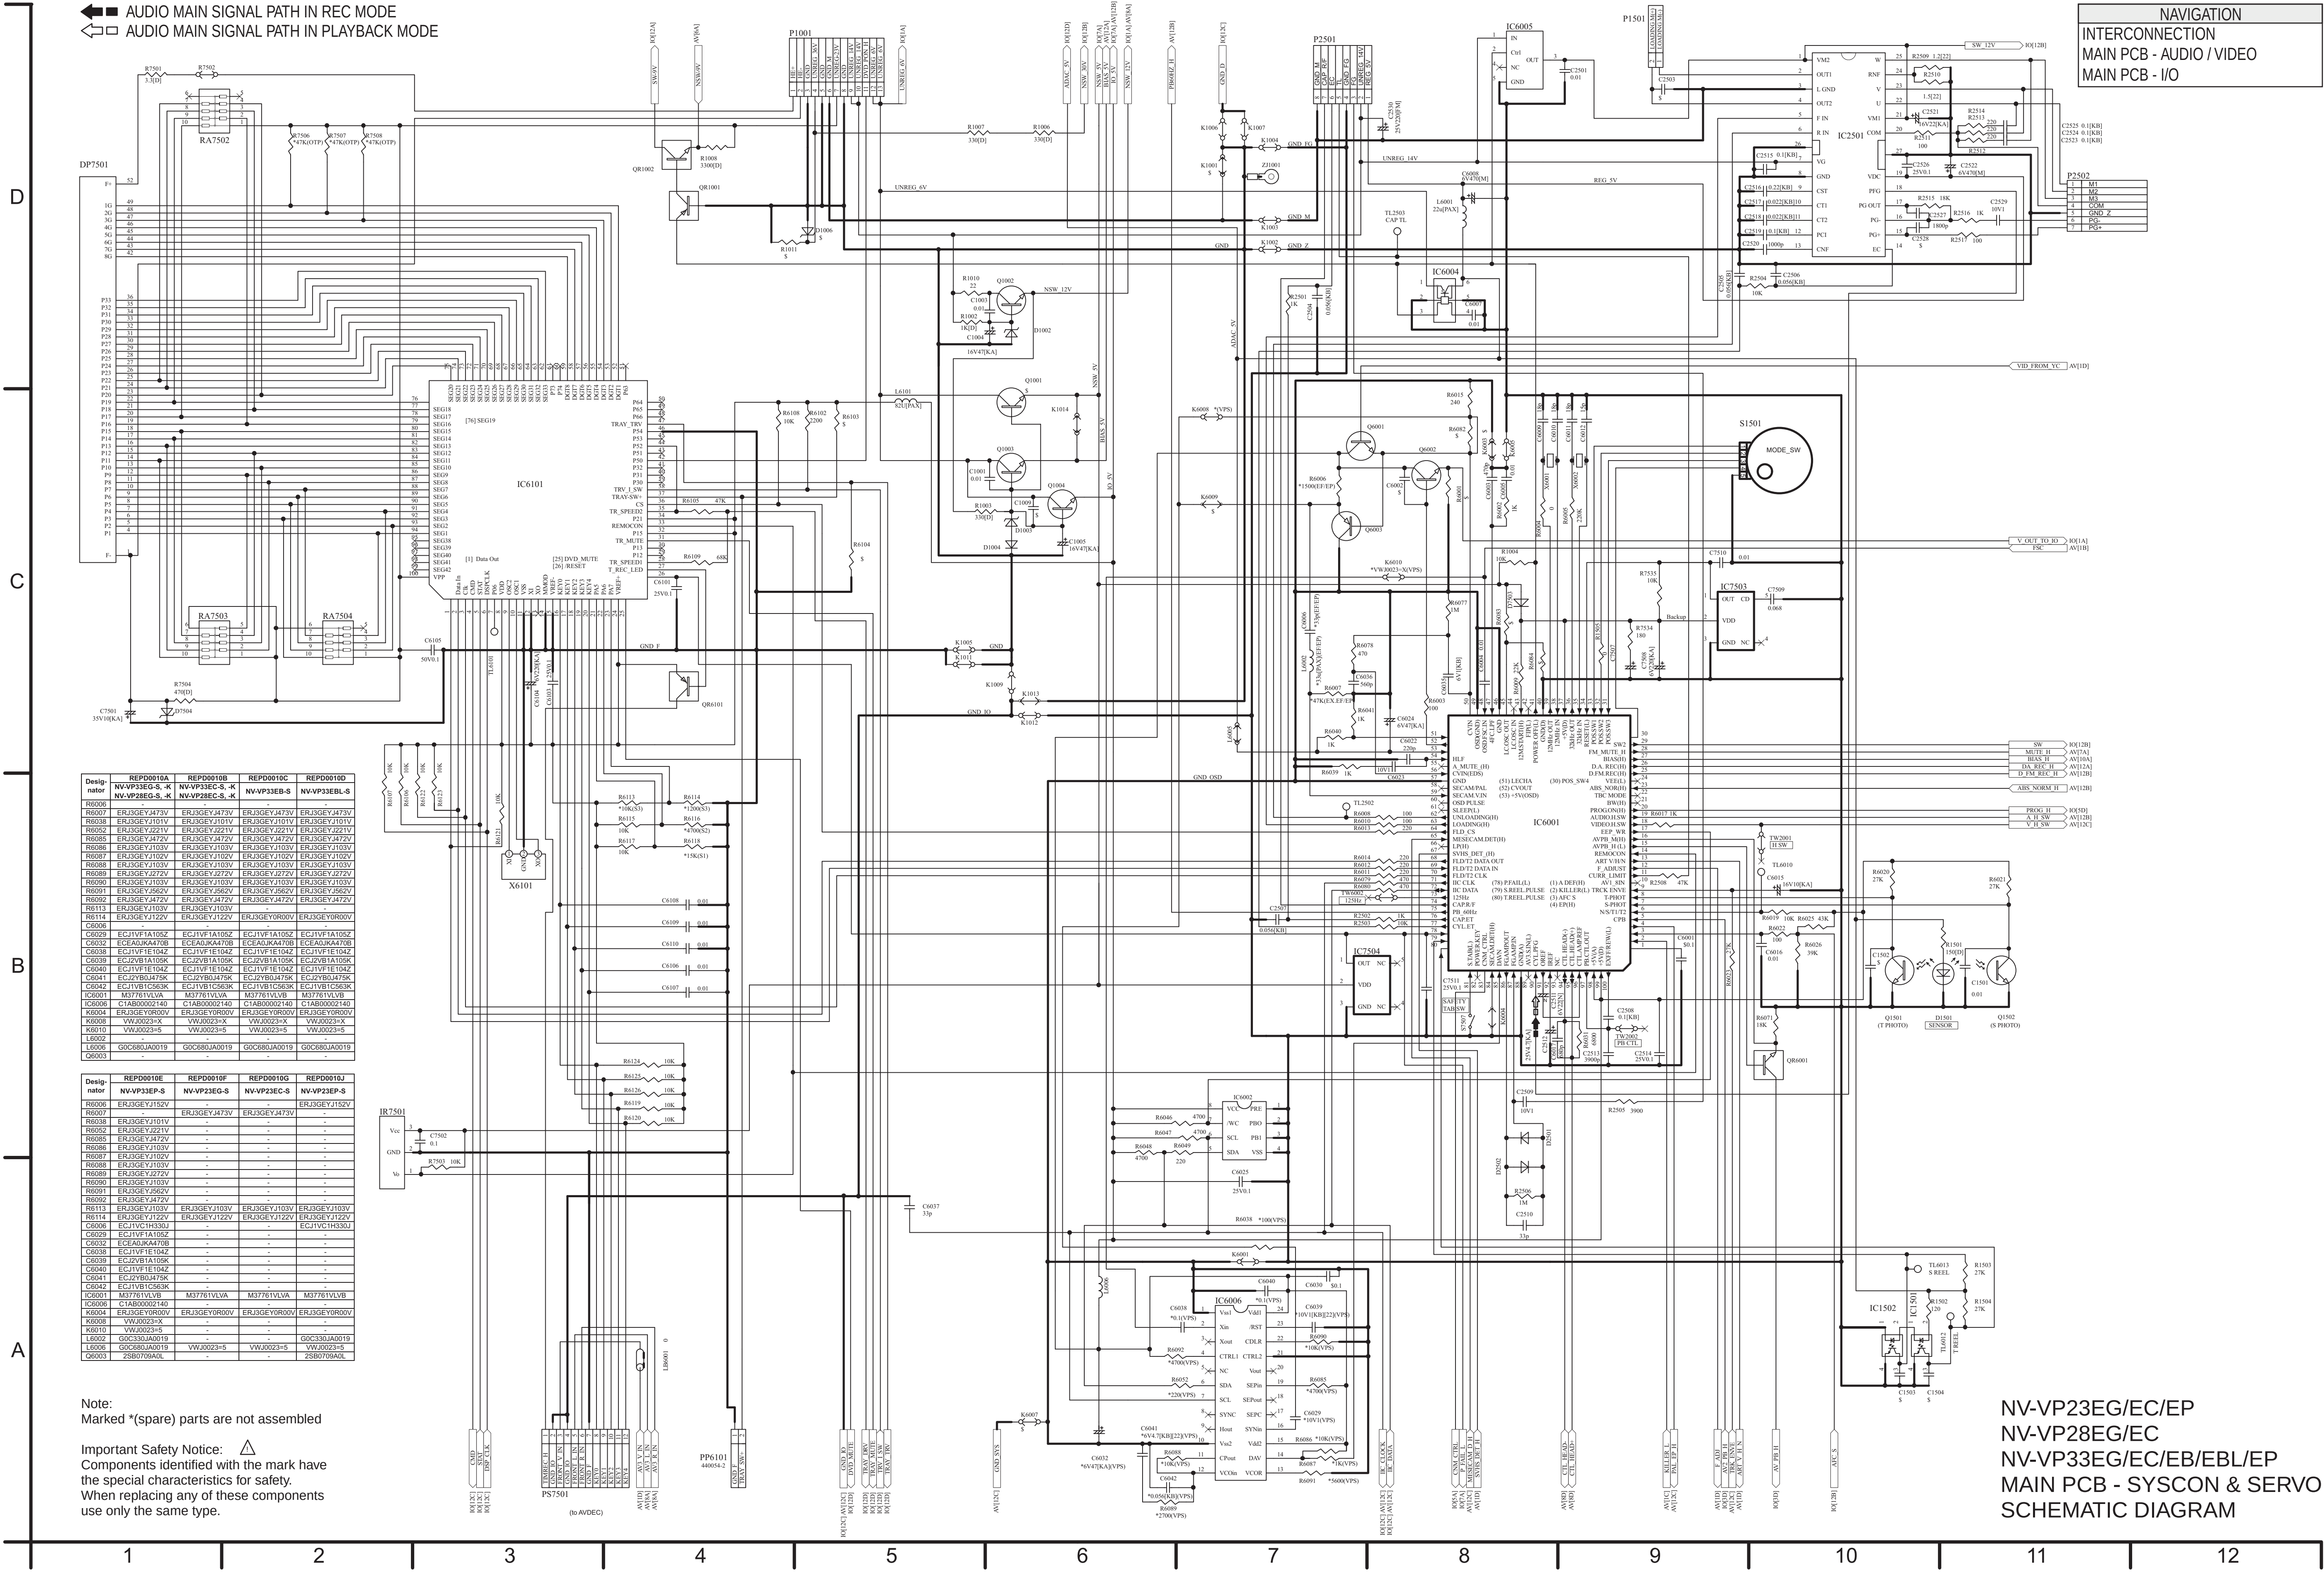

DP7501
RA7502
RA7503
RA7504
IC6101
X6101
IR7501
P1001
QR1002
QR1001
Q1002
Q1001
Q1003
Q1004
ZJ1001
IC6005
P2501
IC6004
P1501
IC2501
P2502
S1501
MODE_SW
IC7503
IC6001
IC7504
IC6002
IC6006
PS7501
(to AVDEC)
PP6101
IC1502
IC1501
Q1501
(T PHOTO)
D1501
SENSOR
Q1502
(S PHOTO)
QR6001
TW2001
H.SW
TL6010
TW2002
PB CTL
SAFETY TAB/SW
UNREG_6V
UNREG_14V
REG_5V
NSW_12V
GND_FG
GND_M
GND_Z
GND_F
GND_IO
GND_OSD
VID_FROM_YC
V_OUT_TO_IO
FSC
D
C
B
A
1
2
3
4
5
6
7
8
9
10
11
12

Desig-nator	REPD0010A NV-VP33EG-S, -K NV-VP28EG-S, -K	REPD0010B NV-VP33EC-S, -K NV-VP28EC-S, -K	REPD0010C NV-VP33EB-S	REPD0010D NV-VP33EBL-S
R6006	-	-	-	-
R6007	ERJ3GEYJ473V	ERJ3GEYJ473V	ERJ3GEYJ473V	ERJ3GEYJ473V
R6038	ERJ3GEYJ101V	ERJ3GEYJ101V	ERJ3GEYJ101V	ERJ3GEYJ101V
R6052	ERJ3GEYJ221V	ERJ3GEYJ221V	ERJ3GEYJ221V	ERJ3GEYJ221V
R6085	ERJ3GEYJ472V	ERJ3GEYJ472V	ERJ3GEYJ472V	ERJ3GEYJ472V
R6086	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V
R6087	ERJ3GEYJ102V	ERJ3GEYJ102V	ERJ3GEYJ102V	ERJ3GEYJ102V
R6088	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V
R6089	ERJ3GEYJ272V	ERJ3GEYJ272V	ERJ3GEYJ272V	ERJ3GEYJ272V
R6090	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V
R6091	ERJ3GEYJ562V	ERJ3GEYJ562V	ERJ3GEYJ562V	ERJ3GEYJ562V
R6092	ERJ3GEYJ472V	ERJ3GEYJ472V	ERJ3GEYJ472V	ERJ3GEYJ472V
R6113	ERJ3GEYJ103V	ERJ3GEYJ103V	-	-
R6114	ERJ3GEYJ122V	ERJ3GEYJ122V	ERJ3GEY0R00V	ERJ3GEY0R00V
C6006	-	-	-	-
C6029	ECJ1VF1A105Z	ECJ1VF1A105Z	ECJ1VF1A105Z	ECJ1VF1A105Z
C6032	ECEA0JKA470B	ECEA0JKA470B	ECEA0JKA470B	ECEA0JKA470B
C6038	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C6039	ECJ2VB1A105K	ECJ2VB1A105K	ECJ2VB1A105K	ECJ2VB1A105K
C6040	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z	ECJ1VF1E104Z
C6041	ECJ2YB0J475K	ECJ2YB0J475K	ECJ2YB0J475K	ECJ2YB0J475K
C6042	ECJ1VB1C563K	ECJ1VB1C563K	ECJ1VB1C563K	ECJ1VB1C563K
IC6001	M37761VLVA	M37761VLVA	M37761VLVB	M37761VLVB
IC6006	C1AB00002140	C1AB00002140	C1AB00002140	C1AB00002140
K6004	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
K6008	VWJ0023=X	VWJ0023=X	VWJ0023=X	VWJ0023=X
K6010	VWJ0023=5	VWJ0023=5	VWJ0023=5	VWJ0023=5
L6002	-	-	-	-
L6006	G0C680JA0019	G0C680JA0019	G0C680JA0019	G0C680JA0019
Q6003	-	-	-	-

Desig-nator	REPD0010E NV-VP33EP-S	REPD0010F NV-VP23EG-S	REPD0010G NV-VP23EC-S	REPD0010J NV-VP23EP-S
R6006	ERJ3GEYJ152V	-	-	ERJ3GEYJ152V
R6007	-	ERJ3GEYJ473V	ERJ3GEYJ473V	-
R6038	ERJ3GEYJ101V	-	-	-
R6052	ERJ3GEYJ221V	-	-	-
R6085	ERJ3GEYJ472V	-	-	-
R6086	ERJ3GEYJ103V	-	-	-
R6087	ERJ3GEYJ102V	-	-	-
R6088	ERJ3GEYJ103V	-	-	-
R6089	ERJ3GEYJ272V	-	-	-
R6090	ERJ3GEYJ103V	-	-	-
R6091	ERJ3GEYJ562V	-	-	-
R6092	ERJ3GEYJ472V	-	-	-
R6113	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V	ERJ3GEYJ103V
R6114	ERJ3GEYJ122V	ERJ3GEYJ122V	ERJ3GEYJ122V	ERJ3GEYJ122V
C6006	ECJ1VC1H330J	-	-	ECJ1VC1H330J
C6029	ECJ1VF1A105Z	-	-	-
C6032	ECEA0JKA470B	-	-	-
C6038	ECJ1VF1E104Z	-	-	-
C6039	ECJ2VB1A105K	-	-	-
C6040	ECJ1VF1E104Z	-	-	-
C6041	ECJ2YB0J475K	-	-	-
C6042	ECJ1VB1C563K	-	-	-
IC6001	M37761VLVB	M37761VLVA	M37761VLVA	M37761VLVB
IC6006	C1AB00002140	-	-	-
K6004	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V	ERJ3GEY0R00V
K6008	VWJ0023=X	-	-	-
K6010	VWJ0023=5	-	-	-
L6002	G0C330JA0019	-	-	G0C330JA0019
L6006	G0C680JA0019	VWJ0023=5	VWJ0023=5	VWJ0023=5
Q6003	2SB0709A0L	-	-	2SB0709A0L

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety.
When replacing any of these components use only the same type.

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB - SYSCON & SERVO
SCHEMATIC DIAGRAM

◀■ AUDIO MAIN SIGNAL PATH IN REC MODE
◁□ AUDIO MAIN SIGNAL PATH IN PLAYBACK MODE

NAVIGATION
INTERCONNECTION
MAIN PCB - AUDIO / VIDEO
MAIN PCB - I/O

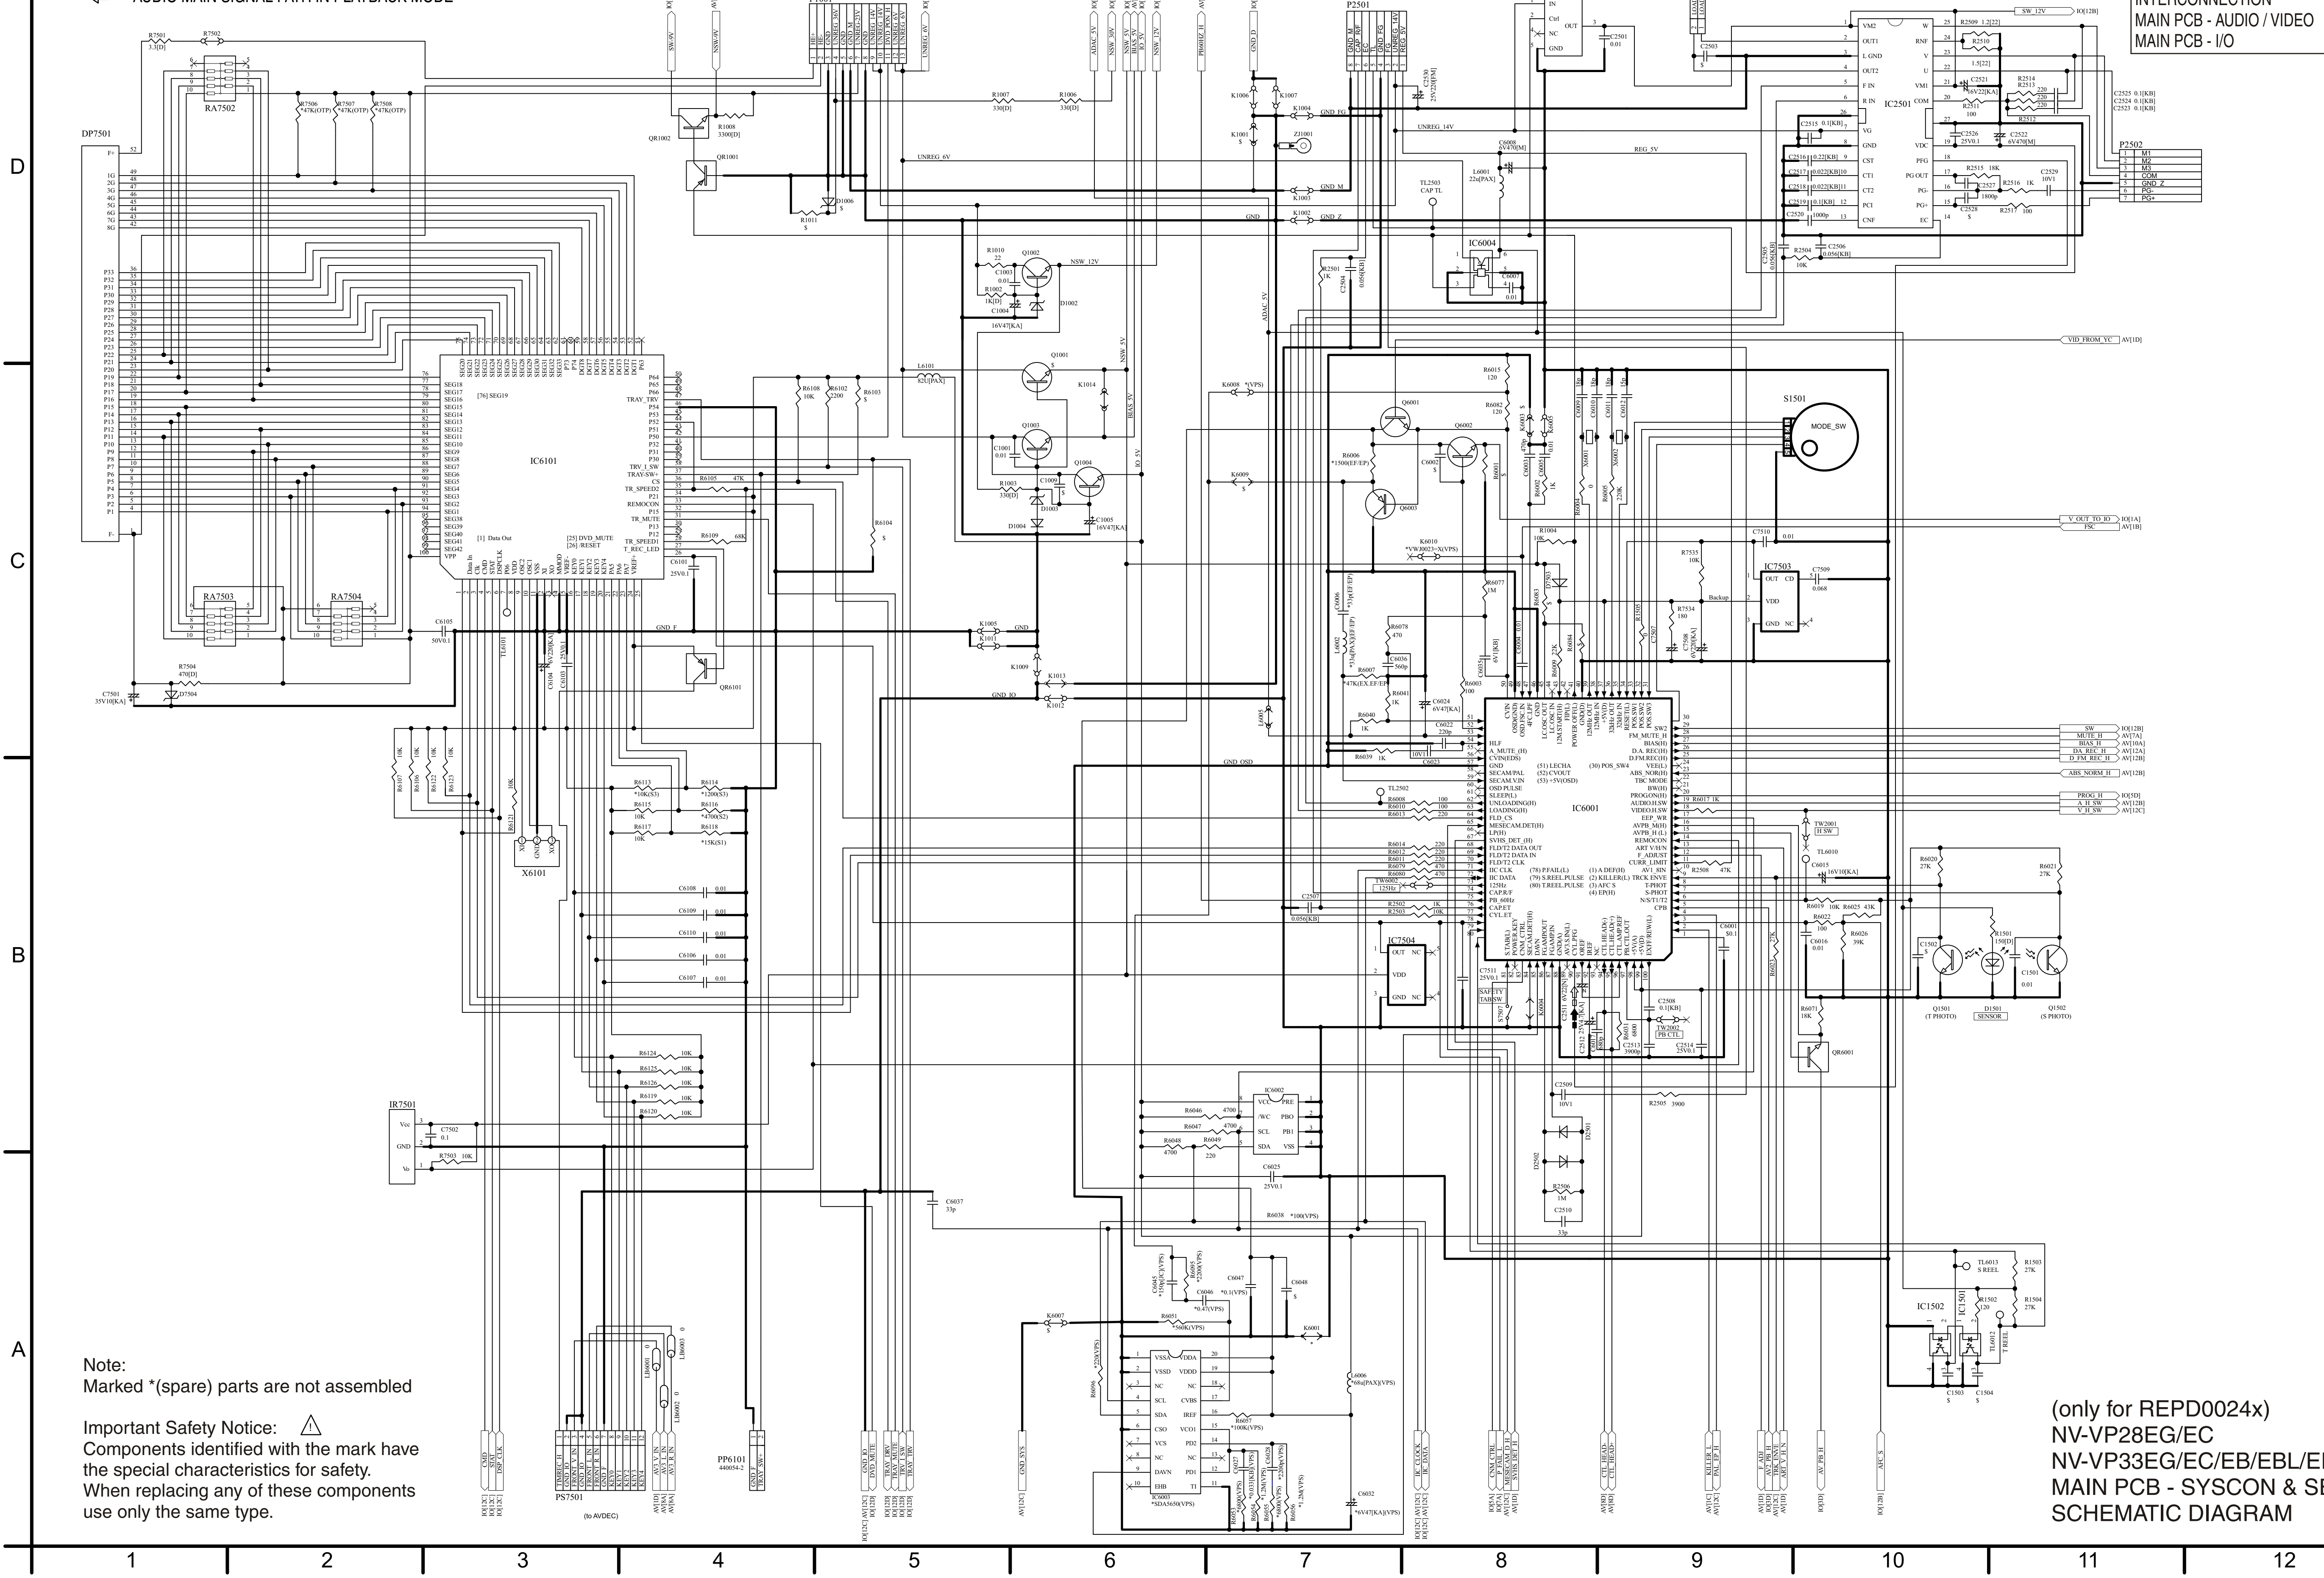
DP7501
RA7502
RA7503
RA7504
IC6101
P1001
P2501
IC6005
P1501
IC2501
P2502
IC6004
Q1001
Q1002
Q1003
Q1004
QR1001
QR1002
QR6101
S1501
MODE_SW
IC7503
IC6001
IC7504
IC6002
IC6003
IC1502
IC1501
Q1501 (T PHOTO)
D1501 SENSOR
Q1502 (S PHOTO)
QR6001
X6101
IR7501
PS7501
(to AVDEC)
PP6101
A
B
C
D
1
2
3
4
5
6
7
8
9
10
11
12

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have the special characteristics for safety.
When replacing any of these components use only the same type.

(only for REPD0024x)
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL/EP
MAIN PCB - SYSCON & SERVO
SCHEMATIC DIAGRAM

NAVIGATION
INTERCONNECTION

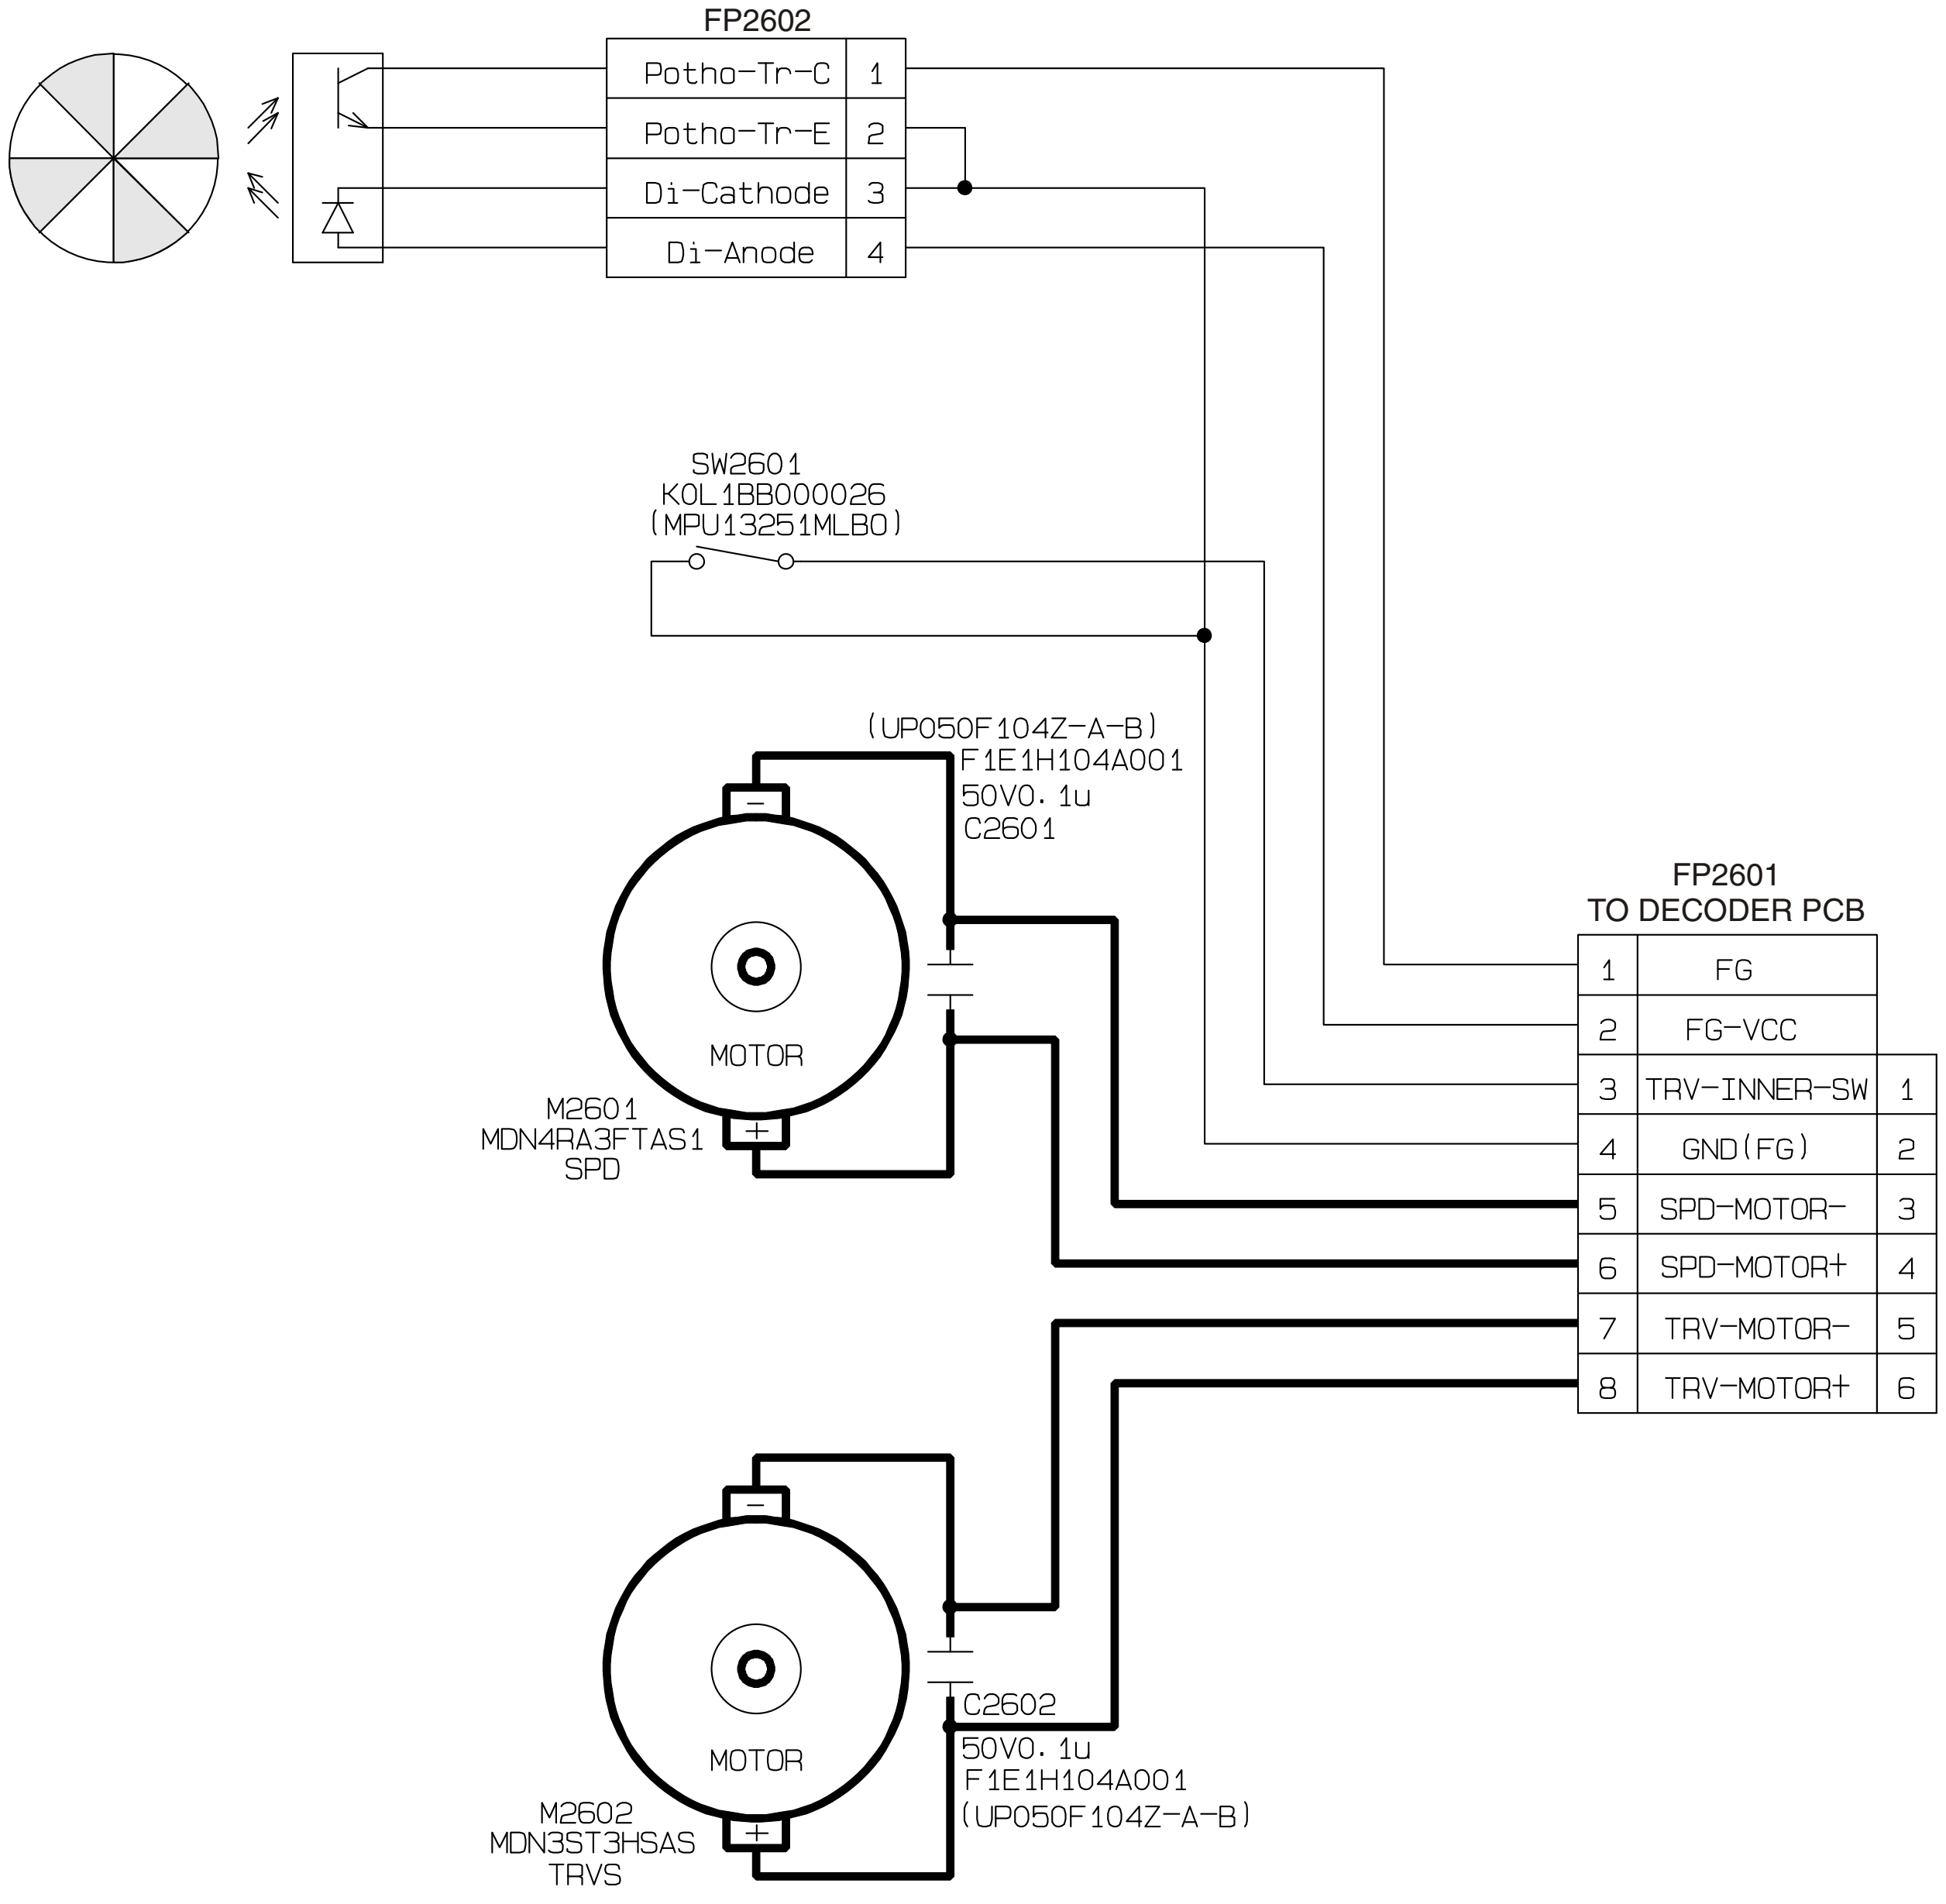
FP2602
Potho-Tr-C 1
Potho-Tr-E 2
Di-Cathode 3
Di-Anode 4
SW2601
K0L1BB000026
(MPU13251MLB0)
(UP050F104Z-A-B)
F1E1H104A001
50V0.1u
C2601
MOTOR
M2601
MDN4RA3FTAS1
SPD
FP2601
TO DECODER PCB
1 FG
2 FG-VCC
3 TRV-INNER-SW 1
4 GND(FG) 2
5 SPD-MOTOR- 3
6 SPD-MOTOR+ 4
7 TRV-MOTOR- 5
8 TRV-MOTOR+ 6
MOTOR
M2602
MDN3ST3HSAS
TRVS
C2602
50V0.1u
F1E1H104A001
(UP050F104Z-A-B)

Note:
Marked *(spare) parts are not assembled

Important Safety Notice: ⚠
Components identified with the mark have
the special characteristics for safety.
When replacing any of these components
use only the same type.

NV-VP23EG/EC/EP
NV-VP28EG/EC
NV-VP33EG/EC/EB/EBL
TERMINAL PCB
SCHEMATIC DIAGRAM

Pin.No.	Signal Name	I/O	Describe	P-OFF	P-SAVE	P-FAIL	Reset
1	A.DEF(H)	O	Output signal for audio defea and decoder IC reset	Low	Low	Low	Low
2	CKILLER DET(L)	I	COLOR KILLER Detection of COLOR KILLER active	In	In	In	In
3	AFC S	I	S curve input from tuner	In	In	In	In
4	SLP(H)	O	Output signal depens on tape spee During N10H or P9H: High Except N10H and P9H: Low	Low	Low	Low	Low
5	CPB	I	PB input from AV2 · 3.21v ~ : High · 1.23v ~ 3.21v : Middle · ~ 1.23v : Low	In	In	In	In
6	N/S/T2	I	Normal/Service/Test2 select · 4.0v~ : NORMAL mode · 2.5v~ 4.0v : SERVICE mode · 1.0v~ 2.5v : TEST2 mode · 0v~ 1.0v : No define (spare)	In	In	In	In
7	S-PHOTO	I	Photo sensor input from supply side more than 2.6V: black / less than 2.4V: white	In	In	In	In
8	T-PHOTO	I	Photo sensor input from take up side more than 2.6V: black / less than 2.4V: white	In	In	In	In
9	TRACKING_ENVE	I	Video envelope input for auto tracking and CVC	In	In	In	In
10	AV1_8IN	I	Not connected	In	In	In	In
11	CURRENT_LIMIT	O	Current limit for capstan driver	In DA=0V	In DA=0V	Low	In DA=0V
12	F ADJUST	O	Analogue voltage output for HEAD frequency response adjustment	In DA=0V	In DA=0V	Low	In DA=0V
13	ART.V/H/N	O	Artificial V synchronization signal	Low	Low	Low	Low
14	IR	I	Interrupt input from IR sensor	In	In	In	In
15	AVPB-H(L)	O	Output signal for AV2-PB	High	High	Low	High
16	AVPB-M(H)	O		Low	Low	Low	Low

setup / pin8	AVPB-H(L)	AVPBM-
High	L	Hi-Z
Middle	H	Hi-Z
Low	H	L

<table>
<tr><th>Pin.No.</th><th>Signal Name</th><th>I/O</th><th>Describe</th><th>P-OFF</th><th>P-SAVE</th><th>P-FAIL</th><th>Reset</th></tr>
<tr><td>17</td><td>EEP_WR</td><td>O</td><td>Write enable for EEPROM
H:READ only L:Write</td><td>High</td><td>High</td><td>Low</td><td>High</td></tr>
<tr><td>18</td><td>VIDEO.H.SW</td><td>O</td><td>Output signal for video HEAD switch
NTSC: 11122μs, PAL: 13333μs</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>19</td><td>A.H.SW</td><td>O</td><td>Output signal for FM audio HEAD switch</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>20</td><td>PROG ON(H)</td><td>O</td><td>H: IIC bus is connected to AV2 L:
IIC bus is not connected to AV2</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>21</td><td>B/W(H)</td><td>O</td><td>Output signal for B/W mode</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>22</td><td>TBC MODE0</td><td>O</td><td>Not connected</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>23</td><td>ABS_NORM(H)</td><td>I</td><td>Input signal for FM audio enverope level detection</td><td>In</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>24</td><td>V EE(L)</td><td>O</td><td>Output signal for switch between EE and VV</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>25</td><td>D.FM.REC(H)</td><td>O</td><td>Control signal for FM audio recording current</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>26</td><td>D.A.REC(H)</td><td>O</td><td>Control signal for normal audio recording current</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>27</td><td>BIAS(H)</td><td>O</td><td>Control signal for FM audio recording current
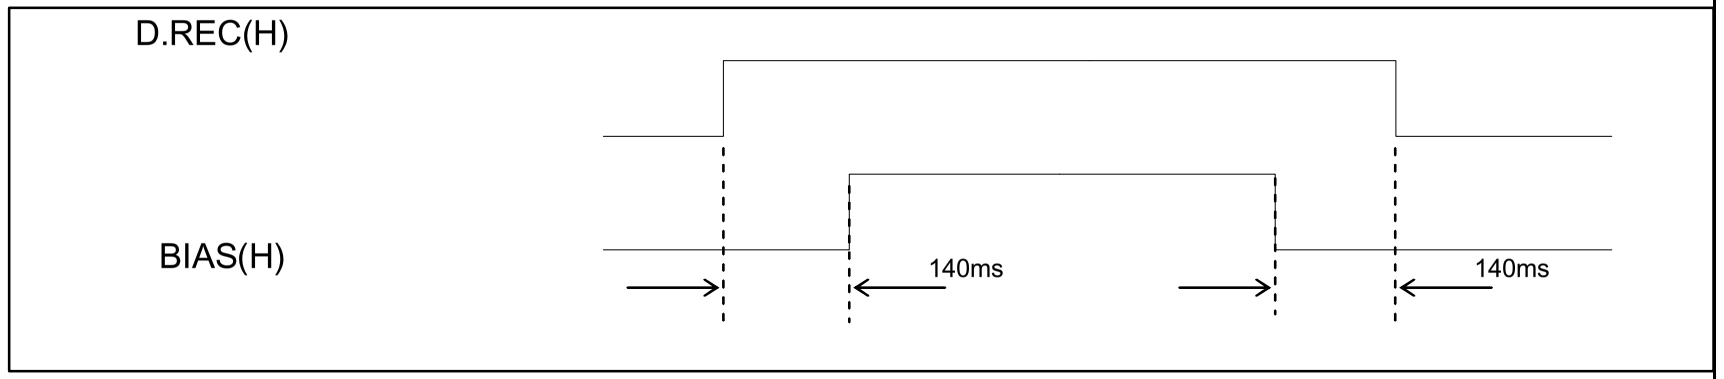 </td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>28</td><td>FM.MUTE(H)</td><td>O</td><td>Output signal for audio mute control</td><td>High</td><td>High</td><td>Low</td><td>High</td></tr>
<tr><td>29</td><td>PAL-I/BG/DK(SYS4)</td><td>O</td><td>Output terminal for broad cast system to control the video circuit</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>30</td><td>POS.SW4</td><td>I/O</td><td rowspan="4">Input signal for mecha position
<table>
<tr><th>POS.SW1</th><th>POS.SW2</th><th>POS.SW3</th><th>POS.SW4</th><th>Position</th></tr>
<tr><td>0</td><td>0</td><td>0</td><td>0</td><td></td></tr>
<tr><td>0</td><td>0</td><td>0</td><td>1</td><td></td></tr>
<tr><td>0</td><td>0</td><td>1</td><td>0</td><td>DOWN</td></tr>
<tr><td>0</td><td>0</td><td>1</td><td>1</td><td>R-REW</td></tr>
<tr><td>0</td><td>1</td><td>0</td><td>0</td><td>LOAD</td></tr>
<tr><td>0</td><td>1</td><td>0</td><td>1</td><td>REV</td></tr>
<tr><td>0</td><td>1</td><td>1</td><td>0</td><td>PLAY</td></tr>
<tr><td>0</td><td>1</td><td>1</td><td>1</td><td>POFF</td></tr>
<tr><td>1</td><td>0</td><td>0</td><td>0</td><td>STOP_R</td></tr>
<tr><td>1</td><td>0</td><td>0</td><td>1</td><td>STOP_F</td></tr>
<tr><td>1</td><td>0</td><td>1</td><td>0</td><td></td></tr>
<tr><td>1</td><td>0</td><td>1</td><td>1</td><td></td></tr>
<tr><td>1</td><td>1</td><td>0</td><td>0</td><td>FF/REW</td></tr>
<tr><td>1</td><td>1</td><td>0</td><td>1</td><td></td></tr>
<tr><td>1</td><td>1</td><td>1</td><td>0</td><td>EJECT</td></tr>
<tr><td>1</td><td>1</td><td>1</td><td>1</td><td></td></tr>
</table></td><td>In</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>31</td><td>POS.SW3</td><td>I/O</td><td>In</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>32</td><td>POS.SW2</td><td>I/O</td><td>In</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>33</td><td>POS.SW1</td><td>I/O</td><td>In</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>34</td><td>RESET(L)</td><td>I</td><td>Input signal for ucon reset</td><td>In</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>35</td><td>32KHz IN</td><td>I</td><td>Sub oscillator input</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>36</td><td>32KHz OUT</td><td>O</td><td>Sub oscillator output</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
</table>

<table>
<tr><th>Pin.No.</th><th>Signal Name</th><th>I/O</th><th>Describe</th><th>P-OFF</th><th>P-SAVE</th><th>P-FAIL</th><th>Reset</th></tr>
<tr><td>37</td><td>+5V(D)</td><td>-</td><td>Vcc(5V)</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>38</td><td>12MHz.IN</td><td>I</td><td>Main oscillator input</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>39</td><td>12MHz.OUT</td><td>O</td><td>Main oscillator output</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>40</td><td>GND(D)</td><td>-</td><td>G N D</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>41</td><td>POWER OFF(L)</td><td>O</td><td>Control signal for power circuit</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>42</td><td>FIP ON(L)</td><td>O</td><td>Not connected</td><td>Low</td><td>High</td><td>Low</td><td>Low</td></tr>
<tr><td>43</td><td>12M.START(H)</td><td>I</td><td>Starting clock select terminal at releasing RESET</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>44</td><td>NC</td><td>I</td><td>Non connect</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>45</td><td>624/628</td><td>O</td><td>Detect PAL OSD scanning line 624 or 628 by Input Voltage. (For Service)
(The permanent countermeasure for the complaint that the problem of V dancing with HongKong TV.)
<table>
<tr><th>ucon PIN</th><th>Option code</th><th>Result</th><th></th></tr>
<tr><td>5V</td><td>628</td><td>628 Odd</td><td><- Initial setting</td></tr>
<tr><td>5V</td><td>624</td><td>624 Even</td><td></td></tr>
<tr><td>0V</td><td>624</td><td>624 Even</td><td></td></tr>
<tr><td>0V</td><td>628</td><td>624 Even</td><td></td></tr>
</table></td><td>In</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>46</td><td>GND</td><td>I</td><td>GND</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>47</td><td>4FC.LPF</td><td>I</td><td>NC</td><td>---</td><td>---</td><td>---</td><td>Low</td></tr>
<tr><td>48</td><td>OSD.FSC IN</td><td>I</td><td>NC</td><td>---</td><td>---</td><td>---</td><td>Low</td></tr>
<tr><td>49</td><td>GND(OSD)</td><td>-</td><td>GND</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>50</td><td>CVIN</td><td>I</td><td>Input signal of composite video</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>51</td><td>LECHA</td><td>I</td><td>Input signal for white level of composite video</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>52</td><td>CVOUT</td><td>O</td><td>Output signal for character generator</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>53</td><td>5V(OSD)</td><td>-</td><td>5V</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>54</td><td>HLF</td><td>I</td><td>For slicer IC</td><td>---</td><td>---</td><td>---</td><td>Low</td></tr>
<tr><td>55</td><td>AMUTE(H)</td><td>O</td><td>Not connected</td><td>High</td><td>High</td><td>Low</td><td>High</td></tr>
<tr><td>56</td><td>CVIN(EDS)</td><td>I</td><td>Input signal of composite video for Slicer IC</td><td>In</td><td>In</td><td>In</td><td>In</td></tr>
<tr><td>57</td><td>GND</td><td>I</td><td>GND</td><td>---</td><td>---</td><td>---</td><td>---</td></tr>
<tr><td>58</td><td>SECAM/PAL(SYS2)</td><td>O</td><td>Output signal for Video system control</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>59</td><td>SECAM.V.IN
AD.V</td><td>I</td><td>AD.V (TBC function is exist. It decide by Option code)
Input Vsync signal from TBC IC

SECAM.V.IN (TBC function is not exist. It decide by Option code)
Input C signal for SECAM superimpose</td><td>Depend on table</td><td>Low</td><td>Low</td><td>In</td></tr>
<tr><td>60</td><td>OSD PULSE</td><td>O</td><td>Not connected</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>61</td><td>SLEEP(L)</td><td>O</td><td>Not connected</td><td>High</td><td>Low</td><td>Low</td><td>High</td></tr>
<tr><td>62</td><td>UNLOADING(H)</td><td>O</td><td>Control signal for Loading motor forward</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>63</td><td>LOADING(H)</td><td>O</td><td>Control signal for Loading motor reverse</td><td>Low</td><td>Low</td><td>Low</td><td>Low</td></tr>
<tr><td>64</td><td>FLD CS</td><td>O</td><td>FLD</td><td>Not fix</td><td>Not fix</td><td>Low</td><td>Low</td></tr>
</table>

Pin.No.	Signal Name	I/O	Describe	P-OFF	P-SAVE	P-FAIL	Reset
65	MESECAM DET(H)	I	MESECAM/NORMAL Detection between MESECAM and NORMAL	In	In	In	In
66	LP(H)	O	Not connected	Low	Low	Low	Low
67	S-VHS DET(H)	O	SVHS/V H S Detection between SVHS and V H S	In	In	In	In
68	FLD DATA OUT	O	FIP Serial data output signal for FIP driver	Not fix	Not fix	Low	Low
69	FLD DATA IN	I	FIP Serial data input signal for FIP driver	Not fix	Not fix	In	In
70	FLD CLK	O	FIP Serial clock signal for FIP driver	Not fix	Not fix	Low	Low
71	IIC CLK	O	IIC clock for all IIC devices	Not fix	Not fix	Low	Low
72	IIC DATA	O	IIC data for all IIC devices	Not fix	Not fix	Low	Low
73	125Hz	O	TEST2 125Hz output for adjustment of clock accuracy	Low	Low	Low	Low
74	CAP.R/F	O	Control signal for capstan motor diriction	Low	Low	Low	Low
75	PB60Hz	O	Switch trap for HiFi audio in case of NTSC PB (60Hz)	Low	Low	Low	Low
76	CAP.ET	I/O	Torque control signal for capstan motor	0V	0V	Low	0V
77	CYL.ET	I/O	Torque control signal for cylinder motor Cylinder OFF : 5.000V	Low PWM=5.000V	Low PWM=5.000V	Low	Low PWM=5.000V
78	P FAIL	I/O	Interrupt input signal for power fail detection	In	In	In	In
79	S.REEL.PULSE	I/O	Input signal from supply reel sensor	In	In	In	In
80	T.REEL.PULSE	I/O	Input signal from take up reel sensor	In	In	In	In
81	S TAB(L)	I	Input signal from frase prevention tab · exist: Low no exist:High PULL UP R use input pull-up resistor.	In	In	In	In
82	POWER_KEY	I/O	Not connected	In	In	In	In
83	CNR OFF(H)	I/O	Not connected	Low	Low	Low	Low
84	SECAM_ID(H)	I/O	SECAM Detection of SECAM mode	In	In	In	In
85	DAVN	I/O	DAVN signal from Slicer	In	In	In	In
86	FG.AMP.OUT	I/O	Output from internal FG Amplifier	---	---	---	---
87	FG.AMP.IN	I	Input for internal FG Amplifier	---	---	---	---
88	GND(A)	I	GND	---	---	---	---
89	AV3_S_IN(L)	I/O	Not connected	In	In	In	In
90	PFG	I	PFG input terminal	---	---	---	---
91	OREF	O	Output from internal reference voltage (2.5V)	---	---	---	---
92	IREF	I	Input for internal reference voltage	---	---	---	---
93	SCAS_IN(L)	I/O	Not connected	In	In	In	In
94	CTL.HEAD(-)	I/O	Input signal from CTL HEAD(+)	---	---	---	---
95	CTL.HEAD(+)	I/O	Input signal from CTL HEAD(-)	---	---	---	---
96	CTL.AMP.REF	I	Input for internal CTL amplifier reference voltage	---	---	---	---
97	PB.CTL.OUT	I/O	Output from internal CLT amplifier	---	---	---	---
98	+5V(A)	I	+5V (A)	---	---	---	---
99	+5V(AD)	I	+5V (AD)	---	---	---	---
100	EX.FF/REW(L)	I/O	FF/REW Filter switch signal for PB-CTL	Low	Low	Low	Low

INPUT CONDITION							Video Output Result LA73021 settings									Audio Output Results AN3656 settings						Mute signal
POWER	EE/ VV	DVD/VCR MODE	OSD ON(H)	DVD RGB	INPUT- / pro-grammed CH	AV2 PB(H)	AV1 OUT	AV2 OUT	AV1 PB(H)	AV2 PB(H)	RGB SW	DVD/AV2 SELECT	Video to YC	YC INPUT	YC-out OUT	AV1 Out	AV2 Out	REC/ PB	Input Select	AV1 output Select	AV2 output Select	Mute (H)
				Function menu		AV2-8 in	V-OUTSEL	V-DECSEL	AV1-8	AV2-8 out	RGB OFF(H)	DVD(L)	V-INSEL	YC-INSEL	YC-out			A-REC/PB	A-INSEL	A-OUTSEL	A-DECSEL	
OFF	---	---	---	---	---	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
						M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
VPS STAND BY or EXT LINK STAND BY	---	VCR	L	---	NO.TU	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
						M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
					AV1	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV2IN	AV1IN	REC	AV1in (001)	BSmon	AV1in	L
						M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	AV1(010)	CH2	AV1	AV2IN	AV1IN	REC	AV1in (001)	BSmon	AV1in	L
					AV2	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	BSmon	AV1in	L
						M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	BSmon	AV1in	L
					AV3	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV2IN	AV1IN	REC	AV3in (011)	BSmon	AV1in	L
						M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	MUTE	CH3	AV3	AV2IN	AV1IN	REC	AV3in (011)	BSmon	AV1in	L
			H	---	NO.TU	L	VCR OUT(1-)	VCR OUT(00)	H	H	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	Mute	Mute	REC	TUN (000)	Hifi,Mix,Nor	AV1in	H
					AV1	L	VCR OUT(1-)	VCR OUT(00)	H	H	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	Mute	Mute	REC	AV1in (001)	Hifi,Mix,Nor	AV1in	H
					AV2	L	VCR OUT(1-)	VCR OUT(00)	H	H	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	Mute	Mute	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	H
					AV3	L	VCR OUT(1-)	VCR OUT(00)	H	H	OFF(1)	H (AV2)	MUTE	CH3	AV3	Mute	Mute	REC	AV3in (011)	Hifi,Mix,Nor	AV1in	H
		DVD	---	OFF	NO.TU	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
						M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
					AV1	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	OFF(1)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
						M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	OFF(1)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
					AV2	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	OFF(1)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
						M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	OFF(1)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
					AV3	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	OFF(1)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
						M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	OFF(1)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
				ON	NO.TU	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
						M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
					AV1	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	ON(0)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
						M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	ON(0)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
					AV2	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	ON(0)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
						M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	ON(0)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
					AV3	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	ON(0)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
						M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	ON(0)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
P.ON	EE	VCR	L	---	NO.TU	---	VCR OUT(1-)	VCR OUT(00)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
					AV1	---	VCR OUT(1-)	VCR OUT(00)	L	L	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV1IN	AV1IN	REC	AV1in (001)	Hifi,Mix,Nor	OUTSEL	L
					AV2	---	VCR OUT(1-)	VCR OUT(00)	L	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV2IN	REC	AV2in (010)	Hifi,Mix,Nor	OUTSEL	L
					AV3	---	VCR OUT(1-)	VCR OUT(00)	L	L	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV3IN	AV3IN	REC	AV3in (011)	Hifi,Mix,Nor	OUTSEL	L
					DVD	---	VCR OUT(1-)	VCR OUT(00)	L	L	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Hifi,Mix,Nor	OUTSEL	L
			H	---	NO.TU	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
					AV1	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV1IN	AV1IN	REC	AV1in (001)	Hifi,Mix,Nor	OUTSEL	L
					AV2	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV2IN	REC	AV2in (010)	Hifi,Mix,Nor	OUTSEL	L
					AV3	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV3IN	AV3IN	REC	AV3in (011)	Hifi,Mix,Nor	OUTSEL	L
					DVD	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Hifi,Mix,Nor	OUTSEL	L
	VV	VCR	L	---	NO.TU	---	VCR OUT(1-)	VCR OUT(00)	*6[M/H]	*3[M/H]	OFF(1)	H (AV2)	MUTE	CH1/CH2	PB	PB VHS	PB VHS	PB VHS	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
					AV1	---	VCR OUT(1-)	VCR OUT(00)	*6[M/H]	*3[M/H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	AV1in (001)	Hifi,Mix,Nor	OUTSEL	L
					AV2	---	VCR OUT(1-)	VCR OUT(00)	*6[M/H]	*3[M/H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	AV2in (010)	Hifi,Mix,Nor	OUTSEL	L
					AV3	---	VCR OUT(1-)	VCR OUT(00)	*6[M/H]	*3[M/H]	OFF(1)	H (AV2)	MUTE	CH3	PB	PB VHS	PB VHS	PB VHS	AV3in (011)	Hifi,Mix,Nor	OUTSEL	L
					DVD	---	VCR OUT(1-)	VCR OUT(00)	*6[M/H]	*3[M/H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	DVD (100)	Hifi,Mix,Nor	OUTSEL	L
			H	---	NO.TU	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH1/CH2	PB	PB VHS	PB VHS	PB VHS	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
					AV1	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	AV1in (001)	Hifi,Mix,Nor	OUTSEL	L
					AV2	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	AV2in (010)	Hifi,Mix,Nor	OUTSEL	L
					AV3	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH3	PB	PB VHS	PB VHS	PB VHS	AV3in (011)	Hifi,Mix,Nor	OUTSEL	L
					DVD	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	DVD (100)	Hifi,Mix,Nor	OUTSEL	L

INPUT CONDITION							**Video Output Result LA73021 settings**									Audio Output Results			AN3656 settings			Mute signal
POWER	EE/ VV	DVD/VCR MODE	OSD ON(H)	DVD RGB	INPUT- / pro-grammed CH	AV2 PB(H)	AV1 OUT	AV2 OUT	AV1 PB(H)	AV2 PB(H)	RGB SW	DVD/AV2 SELECT	Video to YC	YC INPUT	YC-out OUT	AV1 Out	AV2 Out	REC/ PB	Input Select	AV1 output Select	AV2 output Select	Mute (H)
				Function menu		AV2-8 in	V-OUTSEL	V-DECSEL	AV1-8	AV2-8 out	RGB OFF(H)	DVD(L)	V-INSEL	YC-INSEL	YC-out			A-REC/PB	A-INSEL	A-OUTSEL	A-DECSEL	
	EE	DVD	---	OFF	NO.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
					AV1	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
					AV2	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	OFF(1)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
					AV3	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
					DVD	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Nor (10)	DVD(EXT4)	L
				ON	NO.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
					AV1	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
					AV2	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	ON(0)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
					AV3	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
					DVD	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Nor (10)	DVD(EXT4)	L
	VV	DVD	---	OFF	NO.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH1/CH2	PB	DVD	DVD	PB VHS	TUN (000)	Nor (10)	DVD(EXT4)	L
					AV1	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	AV1in (001)	Nor (10)	DVD(EXT4)	L
					AV2	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	AV2in (010)	Nor (10)	DVD(EXT4)	L
					AV3	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH3	PB	DVD	DVD	PB VHS	AV3in (011)	Nor (10)	DVD(EXT4)	L
					DVD	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	DVD (100)	Nor (10)	DVD(EXT4)	L
				ON	NO.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH1/CH2	PB	DVD	DVD	PB VHS	TUN (000)	Nor (10)	DVD(EXT4)	L
					AV1	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	AV1in (001)	Nor (10)	DVD(EXT4)	L
					AV2	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	AV2in (010)	Nor (10)	DVD(EXT4)	L
					AV3	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH3	PB	DVD	DVD	PB VHS	AV3in (011)	Nor (10)	DVD(EXT4)	L
					DVD	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	DVD (100)	Nor (10)	DVD(EXT4)	L

INPUT CONDITION									Video Output Result LA73021 settings										Audio Output Results		AN3656 settings				Mute signal
POWER	AV2 SELECT	TV/ VTR	EE/ VV	DVD/VCR MODE	OSD ON(H)	DVD RGB	INPUT- / pro- grammed CH	AV2 PB(H)	AV1 OUT	AV2 OUT	AV1 PB(H)	AV2 PB(H)	RGB SW	DVD/AV2 SELECT	Video to YC	YC INPUT	YC-out OUT	AV1 Out	AV2 Out	REC/ PB	Input Select	AV1 output Select	AV2 output Select	Mute (H)
	Function menu	AV link				Function menu		AV2-8 in	V-OUTSEL	V-DECSEL	AV1-8	AV2-8 out	RGB OFF(H)	DVD(L)	V-INSEL	YC-INSEL	YC-out			A-REC/PB	A-INSEL	A-OUTSEL	A-DECSEL	
OFF	---	---	---	---	---	---	---	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
VPS STAND BY or EXT LINK STAND BY	EXT or EXT LINK 1 or EXT LINK 2	---	---	VCR	L	---	NO.TU	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
							C+.TU	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
							AV1	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV2IN	AV1IN	REC	AV1in (001)	BSmon	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	AV1(010)	CH2	AV1	AV2IN	AV1IN	REC	AV1in (001)	BSmon	AV1in	L
							AV2	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	BSmon	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	BSmon	AV1in	L
							AV3	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV2IN	AV1IN	REC	AV3in (011)	BSmon	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	MUTE	CH3	AV3	AV2IN	AV1IN	REC	AV3in (011)	BSmon	AV1in	L
					H	---	NO.TU	---	VCR OUT(1-)	VCR OUT(00)	H	H	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	Mute	Mute	REC	TUN (000)	Hifi,Mix,Nor	AV1in	H
							C+.TU	---	VCR OUT(1-)	VCR OUT(00)	H	H	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	Mute	Mute	REC	TUN (000)	Hifi,Mix,Nor	AV1in	H
							AV1	---	VCR OUT(1-)	VCR OUT(00)	H	H	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	Mute	Mute	REC	AV1in (001)	Hifi,Mix,Nor	AV1in	H
							AV2	---	VCR OUT(1-)	VCR OUT(00)	H	H	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	Mute	Mute	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	H
							AV3	---	VCR OUT(1-)	VCR OUT(00)	H	H	OFF(1)	H (AV2)	MUTE	CH3	AV3	Mute	Mute	REC	AV3in (011)	Hifi,Mix,Nor	AV1in	H
				DVD	---	OFF	NO.TU	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
								M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
							C+.TU	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
								M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
							AV1	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	OFF(1)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
								M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	OFF(1)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
							AV2	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	OFF(1)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
								M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	OFF(1)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
							AV3	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	OFF(1)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
								M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	OFF(1)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
						ON	NO.TU	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
								M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
							C+.TU	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
								M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
							AV1	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	ON(0)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
								M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	ON(0)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
							AV2	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	ON(0)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
								M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	ON(0)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
							AV3	L	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	ON(0)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
								M/H	DVD OUT(00)	DVD OUT(11)	*5[M/H]	L	ON(0)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
	DECODER	---	---	VCR	L	---	NO.TU	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
							C+.TU	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
							AV1	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV2IN	AV1IN	REC	AV1in (001)	BSmon	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	BSmon	AV1in	L
							AV2	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	BSmon	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	BSmon	AV1in	L
							AV3	L	AV2 IN(01)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV2IN	AV1IN	REC	AV3in (011)	BSmon	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	MUTE	CH3	AV3	AV2IN	AV1IN	REC	AV3in (011)	BSmon	AV1in	L

INPUT CONDITION									Video Output Result LA73021 settings									Audio Output Results		AN3656 settings				Mute signal
POWER	AV2 SELECT	TV/ VTR	EE/ VV	DVD/VCR MODE	OSD ON(H)	DVD RGB	INPUT- / pro- grammed CH	AV2 PB(H)	AV1 OUT	AV2 OUT	AV1 PB(H)	AV2 PB(H)	RGB SW	DVD/AV2 SELECT	Video to YC	YC INPUT	YC-out OUT	AV1 Out	AV2 Out	REC/ PB	Input Select	AV1 output Select	AV2 output Select	Mute (H)
	Function menu	AV link				Function menu		AV2-8 in	V-OUTSEL	V-DECSEL	AV1-8	AV2-8 out	RGB OFF(H)	DVD(L)	V-INSEL	YC-INSEL	YC-out			A-REC/PB	A-INSEL	A-OUTSEL	A-DECSEL	
					H	---	NO.TU	L	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	Mute	Mute	REC	TUN (000)	Hifi,Mix,Nor	AV1in	H
							C+.TU	L	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	Mute	Mute	REC	TUN (000)	Hifi,Mix,Nor	AV1in	H
							AV1	L	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	Mute	Mute	REC	AV1in (001)	Hifi,Mix,Nor	AV1in	H
								M/H	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	Mute	Mute	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	H
							AV2	L	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	Mute	Mute	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	H
							AV3	L	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	MUTE	CH3	AV3	Mute	Mute	REC	AV3in (011)	Hifi,Mix,Nor	AV1in	H
				DVD	---	OFF	NO.TU	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	AV1IN	REC	TUN (000)	Nor (10)	AV1in	L
							C+.TU	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	AV1IN	REC	TUN (000)	Nor (10)	AV1in	L
							AV1	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	AV1(010)	CH2	AV1	DVD	AV1IN	REC	AV1in (001)	Nor (10)	AV1in	L
								M/H	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	AV2(011)	CH2	AV2	DVD	AV1IN	REC	AV1in (001)	Nor (10)	AV1in	L
							AV2	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	AV2(011)	CH2	AV2	DVD	AV1IN	REC	AV2in (010)	Nor (10)	AV1in	L
							AV3	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	MUTE	CH3	AV3	DVD	AV1IN	REC	AV3in (011)	Nor (10)	AV1in	L
						ON	NO.TU	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	AV1IN	REC	TUN (000)	Nor (10)	AV1in	L
							C+.TU	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	AV1IN	REC	TUN (000)	Nor (10)	AV1in	L
							AV1	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	AV1(010)	CH2	AV1	DVD	AV1IN	REC	AV1in (001)	Nor (10)	AV1in	L
								M/H	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	AV2(011)	CH2	AV2	DVD	AV1IN	REC	AV1in (001)	Nor (10)	AV1in	L
							AV2	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	AV2(011)	CH2	AV2	DVD	AV1IN	REC	AV2in (010)	Nor (10)	AV1in	L
							AV3	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	MUTE	CH3	AV3	DVD	AV1IN	REC	AV3in (011)	Nor (10)	AV1in	L
P.ON	EXT or EXTLINK1 or EXTLINK2	TV	EE	VCR	L	---	NO.TU	---	VCR OUT(1-)	VCR OUT(00)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							C+.TU	---	VCR OUT(1-)	VCR OUT(00)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							AV1	---	VCR OUT(1-)	VCR OUT(00)	L	L	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV1IN	AV1IN	REC	AV1in (001)	Hifi,Mix,Nor	OUTSEL	L
							AV2	---	VCR OUT(1-)	VCR OUT(00)	L	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV2IN	REC	AV2in (010)	Hifi,Mix,Nor	OUTSEL	L
							AV3	---	VCR OUT(1-)	VCR OUT(00)	L	L	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV3IN	AV3IN	REC	AV3in (011)	Hifi,Mix,Nor	OUTSEL	L
							DVD	---	VCR OUT(1-)	VCR OUT(00)	L	L	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Hifi,Mix,Nor	OUTSEL	L
					H	---	NO.TU	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							C+.TU	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							AV1	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV1IN	AV1IN	REC	AV1in (001)	Hifi,Mix,Nor	OUTSEL	L
							AV2	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV2IN	REC	AV2in (010)	Hifi,Mix,Nor	OUTSEL	L
							AV3	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV3IN	AV3IN	REC	AV3in (011)	Hifi,Mix,Nor	OUTSEL	L
							DVD	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Hifi,Mix,Nor	OUTSEL	L
		VTR	EE	VCR	L	---	NO.TU	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							C+.TU	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							AV1	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV1IN	AV1IN	REC	AV1in (001)	Hifi,Mix,Nor	OUTSEL	L
							AV2	L	VCR OUT(1-)	VCR OUT(00)	H	H	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV2IN	REC	AV2in (010)	Hifi,Mix,Nor	OUTSEL	L
								M/H	VCR OUT(1-)	VCR OUT(00)	*7[M/H]	L	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV2IN	REC	AV2in (010)	Hifi,Mix,Nor	OUTSEL	L
							AV3	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV3IN	AV3IN	REC	AV3in (011)	Hifi,Mix,Nor	OUTSEL	L
						OFF	DVD	---	VCR OUT(1-)	VCR OUT(00)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Hifi,Mix,Nor	OUTSEL	L
					NO	ON	DVD	---	VCR OUT(1-)	VCR OUT(00)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Hifi,Mix,Nor	OUTSEL	L
					ANY		DVD	---	VCR OUT(1-)	VCR OUT(00)	H(1)	*2[H]	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Hifi,Mix,Nor	OUTSEL	L
					H	---	NO.TU	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							C+.TU	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							AV1	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV1IN	AV1IN	REC	AV1in (001)	Hifi,Mix,Nor	OUTSEL	L
							AV2	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV2IN	REC	AV2in (010)	Hifi,Mix,Nor	OUTSEL	L
							AV3	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV3IN	AV3IN	REC	AV3in (011)	Hifi,Mix,Nor	OUTSEL	L
							DVD	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Hifi,Mix,Nor	OUTSEL	L
			VV	VCR	L	---	NO.TU	---	VCR OUT(1-)	VCR OUT(00)	*6[M/H]	*3[M/H]	OFF(1)	H (AV2)	MUTE	CH1/CH2	PB	PB VHS	PB VHS	PB VHS	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							C+.TU	---	VCR OUT(1-)	VCR OUT(00)	*6[M/H]	*3[M/H]	OFF(1)	H (AV2)	MUTE	CH1/CH2	PB	PB VHS	PB VHS	PB VHS	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							AV1	---	VCR OUT(1-)	VCR OUT(00)	*6[M/H]	*3[M/H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	AV1in (001)	Hifi,Mix,Nor	OUTSEL	L
							AV2	---	VCR OUT(1-)	VCR OUT(00)	*6[M/H]	*3[M/H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	AV2in (010)	Hifi,Mix,Nor	OUTSEL	L
							AV3	---	VCR OUT(1-)	VCR OUT(00)	*6[M/H]	*3[M/H]	OFF(1)	H (AV2)	MUTE	CH3	PB	PB VHS	PB VHS	PB VHS	AV3in (011)	Hifi,Mix,Nor	OUTSEL	L
							DVD	---	VCR OUT(1-)	VCR OUT(00)	*6[M/H]	*3[M/H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	DVD (100)	Hifi,Mix,Nor	OUTSEL	L

INPUT CONDITION									Video Output Result LA73021 settings									Audio Output Results		AN3656 settings				Mute signal
POWER	AV2 SELECT	TV/ VTR	EE/ VV	DVD/VCR MODE	OSD ON(H)	DVD RGB	INPUT- / pro- grammed CH	AV2 PB(H)	AV1 OUT	AV2 OUT	AV1 PB(H)	AV2 PB(H)	RGB SW	DVD/AV2 SELECT	Video to YC	YC INPUT	YC-out OUT	AV1 Out	AV2 Out	REC/ PB	Input Select	AV1 output Select	AV2 output Select	Mute (H)
	Function menu	AV link				Function menu		AV2-8 in	V-OUTSEL	V-DECSEL	AV1-8	AV2-8 out	RGB OFF(H)	DVD(L)	V-INSEL	YC-INSEL	YC-out			A-REC/PB	A-INSEL	A-OUTSEL	A-DECSEL	
					H	---	NO.TU	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH1/CH2	PB	PB VHS	PB VHS	PB VHS	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							C+.TU	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH1/CH2	PB	PB VHS	PB VHS	PB VHS	TUN (000)	Hifi,Mix,Nor	OUTSEL	L
							AV1	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	AV1in (001)	Hifi,Mix,Nor	OUTSEL	L
							AV2	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	AV2in (010)	Hifi,Mix,Nor	OUTSEL	L
							AV3	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH3	PB	PB VHS	PB VHS	PB VHS	AV3in (011)	Hifi,Mix,Nor	OUTSEL	L
							DVD	---	VCR OUT(1-)	VCR OUT(00)	H	*2[H]	OFF(1)	H (AV2)	MUTE	CH2	PB	PB VHS	PB VHS	PB VHS	DVD (100)	Hifi,Mix,Nor	OUTSEL	L
		---	EE	DVD	---	OFF	NO.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
							C+.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
							AV1	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
							AV2	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	OFF(1)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
							AV3	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
							DVD	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Nor (10)	DVD(EXT4)	L
						ON	NO.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
							C+.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	DVD	REC	TUN (000)	Nor (10)	DVD(EXT4)	L
							AV1	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	AV1(010)	CH2	AV1	DVD	DVD	REC	AV1in (001)	Nor (10)	DVD(EXT4)	L
							AV2	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*4	ON(0)	L (DVD)	AV2(011)	CH2	AV2	DVD	DVD	REC	AV2in (010)	Nor (10)	DVD(EXT4)	L
							AV3	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH3	AV3	DVD	DVD	REC	AV3in (011)	Nor (10)	DVD(EXT4)	L
							DVD	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	DVD(000)	CH2	DVD	DVD	DVD	REC	DVD (100)	Nor (10)	DVD(EXT4)	L
		---	VV	DVD	---	OFF	NO.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH1/CH2	PB	DVD	DVD	PB VHS	TUN (000)	Nor (10)	DVD(EXT4)	L
							C+.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH1/CH2	PB	DVD	DVD	PB VHS	TUN (000)	Nor (10)	DVD(EXT4)	L
							AV1	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	AV1in (001)	Nor (10)	DVD(EXT4)	L
							AV2	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	AV2in (010)	Nor (10)	DVD(EXT4)	L
							AV3	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH3	PB	DVD	DVD	PB VHS	AV3in (011)	Nor (10)	DVD(EXT4)	L
							DVD	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	OFF(1)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	DVD (100)	Nor (10)	DVD(EXT4)	L
						ON	NO.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH1/CH2	PB	DVD	DVD	PB VHS	TUN (000)	Nor (10)	DVD(EXT4)	L
							C+.TU	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH1/CH2	PB	DVD	DVD	PB VHS	TUN (000)	Nor (10)	DVD(EXT4)	L
							AV1	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	AV1in (001)	Nor (10)	DVD(EXT4)	L
							AV2	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	AV2in (010)	Nor (10)	DVD(EXT4)	L
							AV3	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH3	PB	DVD	DVD	PB VHS	AV3in (011)	Nor (10)	DVD(EXT4)	L
							DVD	---	DVD OUT(00)	DVD OUT(11)	*5[M/H]	*5[M/H]	ON(0)	L (DVD)	MUTE	CH2	PB	DVD	DVD	PB VHS	DVD (100)	Nor (10)	DVD(EXT4)	L
P.ON	DECODER	TV	EE	VCR	L	---	NO.TU	L	VCR OUT(1-)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	AV1IN	REC	TUN (000)	Hifi,Mix,Nor	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	TUN(001)	CH1/CH2	TUN	AV2IN	AV1IN	REC	TUN (000)	BSmon	AV1in	L
							C+.TU	L	VCR OUT(1-)	TUN IN(10)	L	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	TUN	L
								M/H	VCR OUT(1-)	TUN IN(10)	L	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	TUN	REC	AV2in (010)	Hifi,Mix,Nor	TUN	L
							AV1	L	VCR OUT(1-)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV1IN	AV1IN	REC	AV1in (001)	Hifi,Mix,Nor	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	BSmon	AV1in	L
							AV2	L	VCR OUT(1-)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	BSmon	AV1in	L
							AV3	L	VCR OUT(1-)	AV1 IN(01)	L	L	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV3IN	AV1IN	REC	AV3in (011)	Hifi,Mix,Nor	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	MUTE	CH3	AV3	AV2IN	AV1IN	REC	AV3in (011)	BSmon	AV1in	L
							DVD	L	VCR OUT(1-)	AV1 IN(01)	L	L	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	AV1IN	REC	DVD (100)	Hifi,Mix,Nor	AV1in	L
								M/H	AV2 IN(01)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	DVD(000)	CH2	DVD	AV2IN	AV1IN	REC	DVD (100)	BSmon	AV1in	L
					H	---	NO.TU	---	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	AV1IN	REC	TUN (000)	Hifi,Mix,Nor	AV1in	L
							C+.TU	L	VCR OUT(1-)	TUN IN(10)	H	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	TUN	L
								M/H	VCR OUT(1-)	TUN IN(10)	H	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	TUN	REC	AV2in (010)	Hifi,Mix,Nor	TUN	L
							AV1	L	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV1IN	AV1IN	REC	AV1in (001)	Hifi,Mix,Nor	AV1in	L
								M/H	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	L
							AV2	---	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	L
							AV3	---	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV3IN	AV1IN	REC	AV3in (011)	Hifi,Mix,Nor	AV1in	L
							DVD	---	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	AV1IN	REC	DVD (100)	Hifi,Mix,Nor	AV1in	L

INPUT CONDITION									Video Output Result LA73021 settings									Audio Output Results		AN3656 settings				Mute signal
POWER	AV2 SELECT	TV/ VTR	EE/ VV	DVD/VCR MODE	OSD ON(H)	DVD RGB	INPUT- / pro- grammed CH	AV2 PB(H)	AV1 OUT	AV2 OUT	AV1 PB(H)	AV2 PB(H)	RGB SW	DVD/AV2 SELECT	Video to YC	YC INPUT	YC-out OUT	AV1 Out	AV2 Out	REC/ PB	Input Select	AV1 output Select	AV2 output Select	Mute (H)
	Function menu	AV link				Function menu		AV2-8 in	V-OUTSEL	V-DECSEL	AV1-8	AV2-8 out	RGB OFF(H)	DVD(L)	V-INSEL	YC-INSEL	YC-out			A-REC/PB	A-INSEL	A-OUTSEL	A-DECSEL	
		VTR	EE	VCR	L	---	NO.TU	---	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	AV1IN	REC	TUN (000)	Hifi,Mix,Nor	AV1in	L
							C+.TU	L	VCR OUT(1-)	TUN IN(10)	H	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	TUN	L
								M/H	VCR OUT(1-)	TUN IN(10)	*7[M/H]	L	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	TUN	REC	AV2in (010)	Hifi,Mix,Nor	TUN	L
							AV1	L	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV1IN	AV1IN	REC	AV1in (001)	Hifi,Mix,Nor	AV1in	L
								M/H	VCR OUT(1-)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	L
							AV2	L	VCR OUT(1-)	AV1 IN(01)	H	L	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	L
								M/H	VCR OUT(1-)	AV1 IN(01)	*7[M/H]	L	ON(0)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	L
							AV3	L	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV3IN	AV1IN	REC	AV3in (011)	Hifi,Mix,Nor	AV1in	L
								M/H	VCR OUT(1-)	AV1 IN(01)	*7[M/H]	L	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV3IN	AV1IN	REC	AV3in (011)	Hifi,Mix,Nor	AV1in	L
						OFF	DVD	---	VCR OUT(1-)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	AV1IN	REC	DVD (100)	Hifi,Mix,Nor	AV1in	L
					NO	ON		---	VCR OUT(1-)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	DVD(000)	CH2	DVD	DVD	AV1IN	REC	DVD (100)	Hifi,Mix,Nor	AV1in	L
					ANY			---	VCR OUT(1-)	AV1 IN(01)	H(1)	L	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	AV1IN	REC	DVD (100)	Hifi,Mix,Nor	AV1in	L
					H	---	NO.TU	---	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	AV1IN	REC	TUN (000)	Hifi,Mix,Nor	AV1in	L
							C+.TU	L	VCR OUT(1-)	TUN IN(10)	H	L	OFF(1)	H (AV2)	TUN(001)	CH1/CH2	TUN	TUN	TUN	REC	TUN (000)	Hifi,Mix,Nor	TUN	L
								M/H	VCR OUT(1-)	TUN IN(10)	H	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	TUN	REC	AV2in (010)	Hifi,Mix,Nor	TUN	L
							AV1	L	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	AV1(010)	CH2	AV1	AV1IN	AV1IN	REC	AV1in (001)	Hifi,Mix,Nor	AV1in	L
								M/H	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	L
							AV2	---	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	AV2(011)	CH2	AV2	AV2IN	AV1IN	REC	AV2in (010)	Hifi,Mix,Nor	AV1in	L
							AV3	---	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	H (AV2)	MUTE	CH3	AV3	AV3IN	AV1IN	REC	AV3in (011)	Hifi,Mix,Nor	AV1in	L
							DVD	---	VCR OUT(1-)	AV1 IN(01)	H	L	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	AV1IN	REC	DVD (100)	Hifi,Mix,Nor	AV1in	L
			VV	VCR	---	---	NO.TU	---	VCR OUT(1-)	AV1 IN(01)	*6[M/H]	L	OFF(1)	H (AV2)	MUTE	CH1/CH2	PB	PB	AV1IN	PB VHS	TUN (000)	Hifi,Mix,Nor	AV1in	L
							C+.TU	---	VCR OUT(1-)	TUN IN(10)	*6[M/H]	L	OFF(1)	H (AV2)	MUTE	CH1/CH2	PB	PB	TUN	PB VHS	TUN (000)	Hifi,Mix,Nor	TUN	L
							AV1	---	VCR OUT(1-)	AV1 IN(01)	*6[M/H]	L	OFF(1)	H (AV2)	MUTE	CH2	PB	PB	AV1IN	PB VHS	AV1in (001)	Hifi,Mix,Nor	AV1in	L
							AV2	---	VCR OUT(1-)	AV1 IN(01)	*6[M/H]	L	OFF(1)	H (AV2)	MUTE	CH2	PB	PB	AV1IN	PB VHS	AV2in (010)	Hifi,Mix,Nor	AV1in	L
							AV3	---	VCR OUT(1-)	AV1 IN(01)	*6[M/H]	L	OFF(1)	H (AV2)	MUTE	CH3	PB	PB	AV1IN	PB VHS	AV3in (011)	Hifi,Mix,Nor	AV1in	L
							DVD	---	VCR OUT(1-)	AV1 IN(01)	*6[M/H]	L	OFF(1)	H (AV2)	MUTE	CH2	PB	PB	AV1IN	PB VHS	DVD (100)	Hifi,Mix,Nor	AV1in	L
		---	EE	DVD	---	OFF	NO.TU	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	AV1IN	REC	TUN (000)	Nor (10)	AV1in	L
							C+.TU	L	DVD OUT(00)	TUN IN(10)	*5[M/H]	L	OFF(1)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	TUN	REC	TUN (000)	Nor (10)	TUN	L
								M/H	DVD OUT(00)	TUN IN(10)	*5[M/H]	L	OFF(1)	L (DVD)	AV2(011)	CH2	AV2	DVD	TUN	REC	AV2in (010)	Nor (10)	TUN	L
							AV1	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	AV1(010)	CH2	AV1	DVD	AV1IN	REC	AV1in (001)	Nor (10)	AV1in	L
								M/H	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	AV2(011)	CH2	AV2	DVD	AV1IN	REC	AV2in (010)	Nor (10)	AV1in	L
							AV2	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	AV2(011)	CH2	AV2	DVD	AV1IN	REC	AV2in (010)	Nor (10)	AV1in	L
							AV3	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	MUTE	CH3	AV3	DVD	AV1IN	REC	AV3in (011)	Nor (10)	AV1in	L
							DVD	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	DVD(000)	CH2	DVD	DVD	AV1IN	REC	DVD (100)	Nor (10)	AV1in	L
						ON	NO.TU	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	AV1IN	REC	TUN (000)	Nor (10)	AV1in	L
							C+.TU	L	DVD OUT(00)	TUN IN(10)	*5[M/H]	L	ON(0)	L (DVD)	TUN(001)	CH1/CH2	TUN	DVD	TUN	REC	TUN (000)	Nor (10)	TUN	L
								M/H	DVD OUT(00)	TUN IN(10)	*5[M/H]	L	ON(0)	L (DVD)	AV2(011)	CH2	AV2	DVD	TUN	REC	AV2in (010)	Nor (10)	TUN	L
							AV1	L	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	AV1(010)	CH2	AV1	DVD	AV1IN	REC	AV1in (001)	Nor (10)	AV1in	L
								M/H	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	AV2(011)	CH2	AV2	DVD	AV1IN	REC	AV2in (010)	Nor (10)	AV1in	L
							AV2	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	AV2(011)	CH2	AV2	DVD	AV1IN	REC	AV2in (010)	Nor (10)	AV1in	L
							AV3	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	MUTE	CH3	AV3	DVD	AV1IN	REC	AV3in (011)	Nor (10)	AV1in	L
							DVD	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	DVD(000)	CH2	DVD	DVD	AV1IN	REC	DVD (100)	Nor (10)	AV1in	L
		---	VV	DVD	---	OFF	NO.TU	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	MUTE	CH1/CH2	PB	DVD	AV1IN	PB VHS	TUN (000)	Nor (10)	AV1in	L
							C+.TU	---	DVD OUT(00)	TUN IN(10)	*5[M/H]	L	OFF(1)	L (DVD)	MUTE	CH1/CH2	PB	DVD	TUN	PB VHS	TUN (000)	Nor (10)	TUN	L
							AV1	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	MUTE	CH2	PB	DVD	AV1IN	PB VHS	AV1in (001)	Nor (10)	AV1in	L
							AV2	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	MUTE	CH2	PB	DVD	AV1IN	PB VHS	AV2in (010)	Nor (10)	AV1in	L
							AV3	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	MUTE	CH3	PB	DVD	AV1IN	PB VHS	AV3in (011)	Nor (10)	AV1in	L
							DVD	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	OFF(1)	L (DVD)	MUTE	CH2	PB	DVD	AV1IN	PB VHS	DVD (100)	Nor (10)	AV1in	L

INPUT CONDITION									Video Output Result LA73021 settings									Audio Output Results		AN3656 settings				Mute signal
POWER	AV2 SELECT	TV/ VTR	EE/ VV	DVD/VCR MODE	OSD ON(H)	DVD RGB	INPUT- / pro- grammed CH	AV2 PB(H)	AV1 OUT	AV2 OUT	AV1 PB(H)	AV2 PB(H)	RGB SW	DVD/AV2 SELECT	Video to YC	YC INPUT	YC-out OUT	AV1 Out	AV2 Out	REC/ PB	Input Select	AV1 output Select	AV2 output Select	Mute (H)
	Function menu	AV link				Function menu		AV2-8 in	V-OUTSEL	V-DECSEL	AV1-8	AV2-8 out	RGB OFF(H)	DVD(L)	V-INSEL	YC-INSEL	YC-out			A-REC/PB	A-INSEL	A-OUTSEL	A-DECSEL	
						ON	NO.TU	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	MUTE	CH1/CH2	PB	DVD	AV1IN	PB VHS	TUN (000)	Nor (10)	AV1in	L
							C+.TU	---	DVD OUT(00)	TUN IN(10)	*5[M/H]	L	ON(0)	L (DVD)	MUTE	CH1/CH2	PB	DVD	TUN	PB VHS	TUN (000)	Nor (10)	TUN	L
							AV1	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	MUTE	CH2	PB	DVD	AV1IN	PB VHS	AV1in (001)	Nor (10)	AV1in	L
							AV2	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	MUTE	CH2	PB	DVD	AV1IN	PB VHS	AV2in (010)	Nor (10)	AV1in	L
							AV3	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	MUTE	CH3	PB	DVD	AV1IN	PB VHS	AV3in (011)	Nor (10)	AV1in	L
							DVD	---	DVD OUT(00)	AV1 IN(01)	*5[M/H]	L	ON(0)	L (DVD)	MUTE	CH2	PB	DVD	AV1IN	PB VHS	DVD (100)	Nor (10)	AV1in	L

For your safety please read the following text carefully

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5 amp fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5 amps and that it is approved by ASTA or BSI to BS 1362.

Check for the ASTA mark or the BSI mark on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local Panasonic Dealer.

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13 AMP SOCKET.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstance should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol ⏚.

How to replace the Fuse

- There are two types of the AC Mains Lead assembly: **A** and **B** as shown below.

1 Open the fuse compartment with a screwdriver.

2 Replace the fuse and fuse cover.

TYPE A

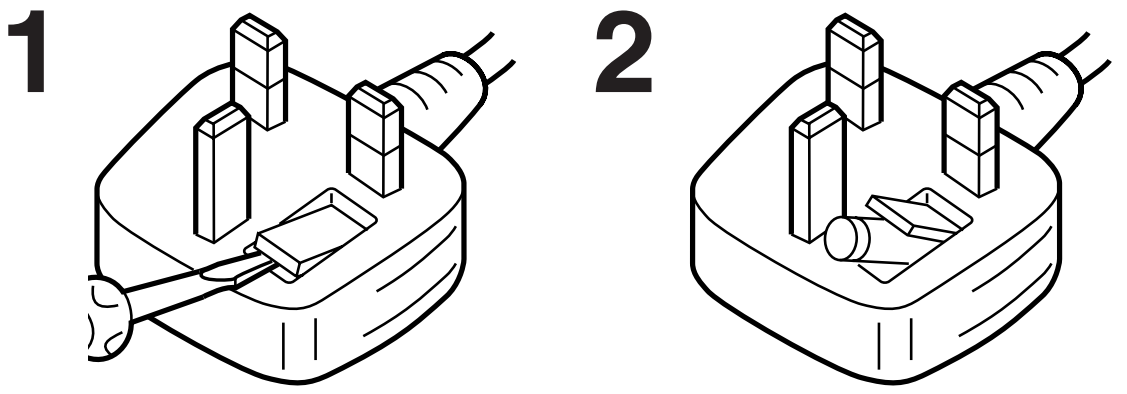

TYPE B

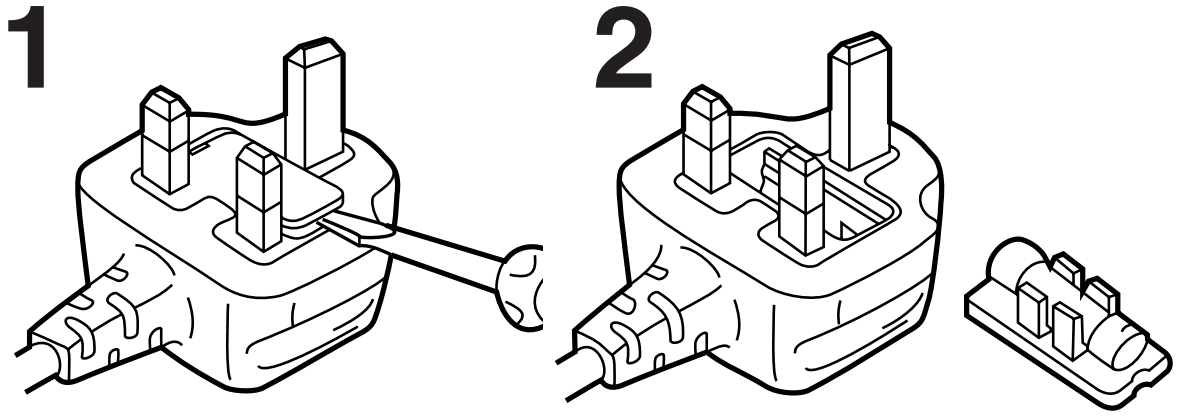

Item	Player mode and button combination	Function	Display	Cancellation method
Jitter check	In STOP (no disc) mode, press PLAY (DVD) and OPEN buttons on the player, and "5" button on the remote control unit.	Jitter check Jitter rate is measured and displayed. Measurement is repeatedly done in the cycle of one second. Read error counter starts from zero upon mode setting. When target block data failed to be read out, the counter advances by one increment. When the failure is caused by minor error, it may be corrected when retried to enable successful reading. In this case, the counter advances by one. When the error persists even after retry, the counter may jump by two or more.	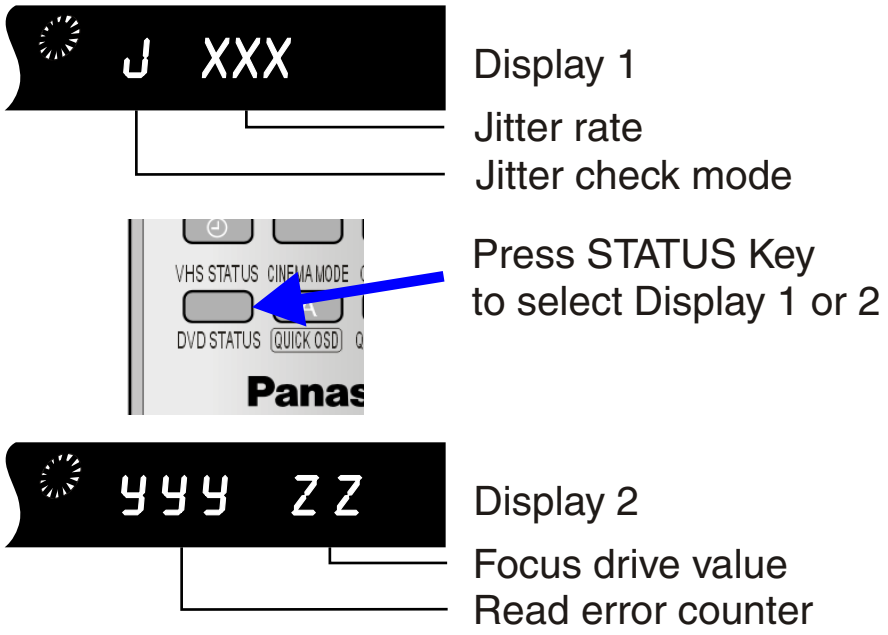 J XXX Display 1 Jitter rate Jitter check mode VHS STATUS CINEMA MODE DVD STATUS QUICK OSD Panas Press STATUS Key to select Display 1 or 2 yyy ZZ Display 2 Focus drive value Read error counter Jitter rate is shown in decimal notation to one place of decimal. Focus drive value is shown in hexadecimal notation.	Press STOP or OPEN button.
Error code check	In STOP (no disc) mode, press PLAY (DVD) and OPEN buttons on the player, and "0" button on the remote control unit.* With pointing of cursor up and down on display, the panel controller switches serial number of history and sends out the command accordingly.	Error code check The latest error code stored in EEPROM is displayed.	Error code (play_err) is expressed in the following convention. Error code = 0 x DAXX is expressed: → nn UXX Error code = 0 x DBXX is expressed: → nn HXX Error code = 0 x DXXX is expressed: → nn FXXX Error code = 0 x 0000 is expressed: → nn F--- * "nn" denotes the serial number of history.	Cancelled automatically 5 seconds later.
Initialsetting of laser drive current	In STOP (no disc) mode, press PLAY (DVD) and OPEN buttons on the player, and PAUSE button on the remote control unit.	Initial setting of laser drive current Initial current value for each of DVD laser and CD laser is separately saved in EEPROM.	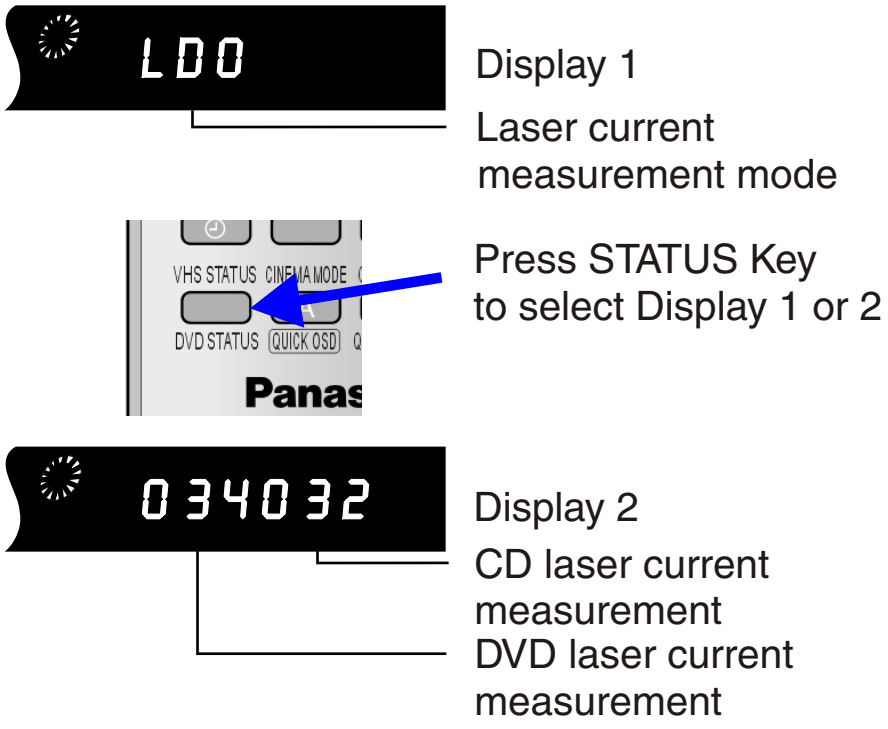 LD0 Display 1 Laser current measurement mode VHS STATUS CINEMA MODE DVD STATUS QUICK OSD Panas Press STATUS Key to select Display 1 or 2 034032 Display 2 CD laser current measurement DVD laser current measurement The value denotes the current in decimal notation. The above example shows the initial current is 34mA and 28mA for DVD laser and CD laser respectively when the laser is switched on.	Cancelled automatically 5 seconds later.

Item	Player mode and button combination	Function	Display	Cancellation method
Dealer´s lock	In STOP (no disc) mode, press STOP button on the player and POWER button on the remote control unit.	Dealer´s lock The lock is switched ON or OFF. When dealer´s lock is ON, it prohibits switching off of the secondary power and tray opening. When the lock is switched, ist ON/OFF status is stored in EEPROM.	"LOCK" sign appears when dealer´s lock is switched on, or when secondary power key or tray opening key is pressed while the lock is on. "UNLOCK" sign appears when dealer´s lock is switched off.	Repeat the same operation.
Initialization	In STOP (no disc) mode, press PLAY (DVD), REW and OPEN buttons on the player for 3 seconds or longer.	Initialization User settings are cancelled and player is initialized to factory setting.	"INIT"	
Region display	In STOP (no disc) mode, press PLAY (DVD), and OPEN buttons on the player, and "6" button on the remote control unit.	Region display	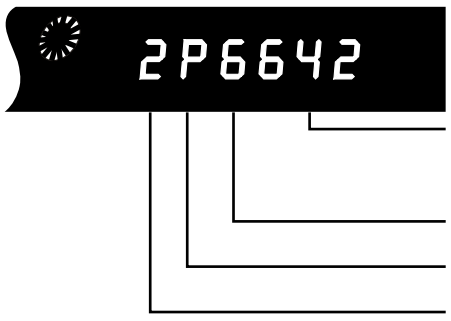 Display 1 Panel controller jumper information N: NTSC / 6: PAL60 N: noPAL / P: PAL Region No.	Cancelled automatically 5 seconds later.
Timer 1 check	In STOP (no disc) mode, press PLAY (DVD), and FF buttons on the player, and "5" button on the remote control unit.	Timer 1 check Laser operation timer Operation time is measured separately for DVD laser and CD laser.	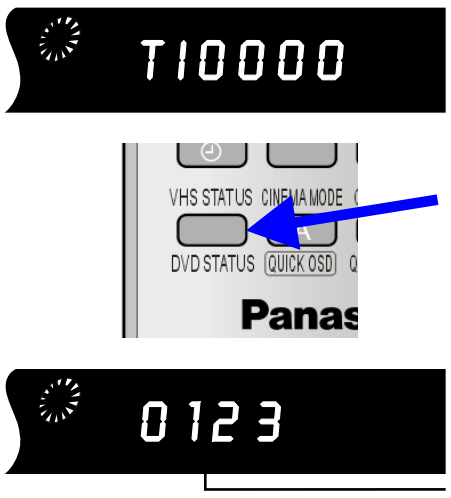 T10000 VHS STATUS CINEMA MODE DVD STATUS QUICK OSD Panas 0123 Display 1 Press STATUS Key to select Display 1 or 2 Display 2 for example 0123=1230h Shown to the left is DVD laser time, and to the right CD laser time. Time is shown in 4 digits of decimal notation in a unit of 10 hours. "0000" will follow "9999".	Cancelled automatically 5 seconds later.
Timer 1 reset	While displaying Timer 1 data, press STOP (DVD) and FF buttons on the player, and "5" button on the remote control unit.	Timer 1 reset Laser operation timer Operation time of both DVD laser and CD laser is reset all at once.	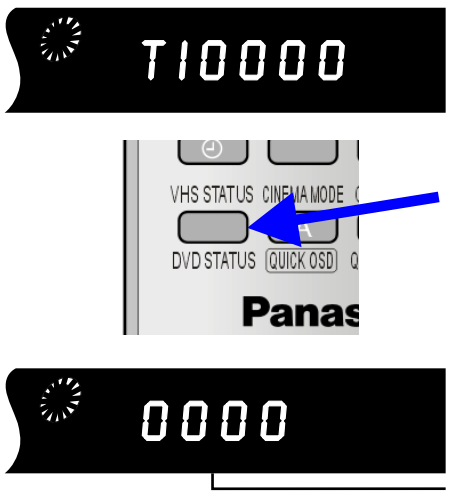 T10000 VHS STATUS CINEMA MODE DVD STATUS QUICK OSD Panas 0000 Display 1 Press STATUS Key to select Display 1 or 2 Display 2 after reset	Cancelled automatically 5 seconds later.
Timer 2 check	In STOP (no disc) mode, press PLAY (DVD) and FF buttons on the player, and "6" button on the remote control unit.	Timer 2 check Spindle motor operation timer	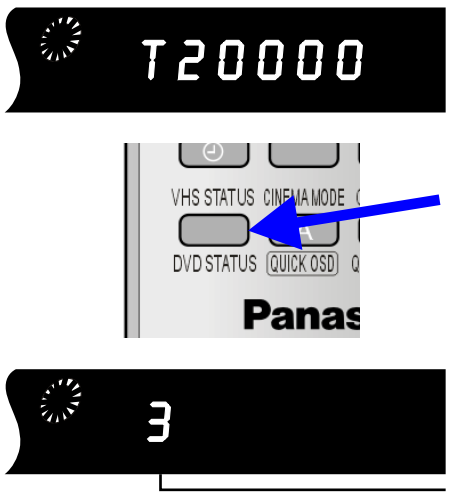 T20000 VHS STATUS CINEMA MODE DVD STATUS QUICK OSD Panas 3 Display 1 Press STATUS Key to select Display 1 or 2 Display 2 for example 3=3h Time is shown in 4 digits of decimal notation in a unit of 10 hours. "0000" will follow "9999".	Cancelled automatically 5 seconds later.
Timer 2 reset	While displaying Timer 2 data, press STOP (DVD) and FF buttons on the player, and "6" button on the remote control unit.	Timer 2 reset Spindle motor operation timer	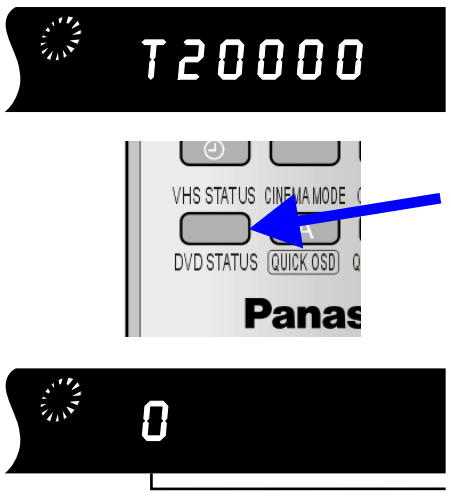 T20000 VHS STATUS CINEMA MODE DVD STATUS QUICK OSD Panas 0 Display 1 Press STATUS Key to select Display 1 or 2 Display 2 after reset	Cancelled automatically 5 seconds later.

Front Panel Device control

⏻/I	**Standby/on switch ⏻/I**
⏏ EJECT	To eject a video cassette.
OPEN / CLOSE ⏏	Opens and closes the disc tray.

DVD-RAM DUBBING	To copy DVD to VHS-tape.
AV ENHANCER	Automatically optimises and adapts the audio and video settings to the disc used.

Description of some function buttons on the front panel is to be found under Remote control functions.

Front Panel Display

▶	Active picture signal. Use the VCR/DVD OUTPUT button to switch over the picture signal. To directly change the VCR or DVD output use the VHS, DVD toggle switches in combination with a function button (e.g. PLAY ▶).		
▭	A video cassette is in.	◎	A disc is in.

▶	Playback	‖	Still Playback	‖▶	Slow Playback
◀◀ ▶▶	Forward and backward search				
◀◀ ▶▶	VCR: Fast winding				

Remote Control TV-Operations

TV ⏻	To switch on and out the TV.
AV	Selects the TV set's AV port.

CH	To select the respective TV programme memory location.
+ VOLUME −	To control TV set volume.

General Operations

VHS/DVD ⏻	Standby/on switch. Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
AUDIO	Press the button a couple of times to select Sound mode.
VHS DVD	Remote control toggle switch for changing between VCR and DVD functions.
TRACKING/V-LOCK + − CH	VOLUME CH AUDIO and tracking control of disturbed images during playback
ShowView	Show View or Video Plus+ menu.
① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⓪ -/--	Direct input via numeric buttons (way of input = example: 18= -/-- ① ⑧)
CANCEL/RESET	Press the CANCEL/RESET button on the remote control unit to manually reset the tape counter to [0:00:00].
▲ ◀ ENTER ▶ ▼	OSD menu selection buttons. ENTER: Selects or saves a setting.
DIRECT NAVIGATOR TOP MENU	Plays back programmed recordings. Displays the main menu.
FUNCTIONS	To display the DVD FUNCTION menu.
MENU PLAY LIST	Displays the VCR menu. Displays a Playlist or DVD menu.
EXIT RETURN	Quits a menu.
INPUT REPEAT	AV input actuator button, pressing the INPUT button a couple of times will select A1, A2, A3 (front) or dc (DVD internal). DVD: REPEAT a title while playback.

INDEX/SKIP ⏮ ⏭	Finding the start of a title.
SLOW/ REW SEARCH FF ◀◀ ▶▶	Goes from Stop into Fast Forward or Fast Rewind mode. Forward and backward search during playback.
STOP ■	To eject the cassette / disc Press STOP ■ for more than 3 seconds.
PAUSE ‖/‖▶ SLOW	Pause a recording session. Still or slow motion playback.
PLAY ▶	Press PLAY to start playback.
PROG/CHECK	To display the VCR Timer recording menu.
I-TIMER	Switches the unit into stand-by mode after the set time. Defines programmes transmitted to the same program memory location at the same time.
PLAY MODE PROG PLAY	DVD: Random playback / Program playback VCR: Playback of programmed recording.
SETUP ◀◀ JET REW	Displays the DVD SETUP menu. VCR: For fast rewinding to the beginning of the tape.
TIMER ◴	Activates VCR Timer Recording.
DVD-RAM DUBBING	To copy from DVD to VCR.
REC MODE	Sets the VCR tape speed.
REC ●	Activates Video Recording.
VHS STATUS DVD STATUS	VCR: Press the button repeatedly to display the timer, tape counter or remaining tape time. DVD: To display the DVD Informations.
CINEMA MODE A QUICK OSD	VCR: To change impression of picture. DVD: Display the DVD Status.
OFF TIMER B QUICK REPLAY	VCR: Switches to Standby after the selected off time. DVD: To replay some seconds of the film.
EXT LINK MANUAL SKIP	VCR: To record using the external recording level control. DVD: To skip 30sec. forward while playback.

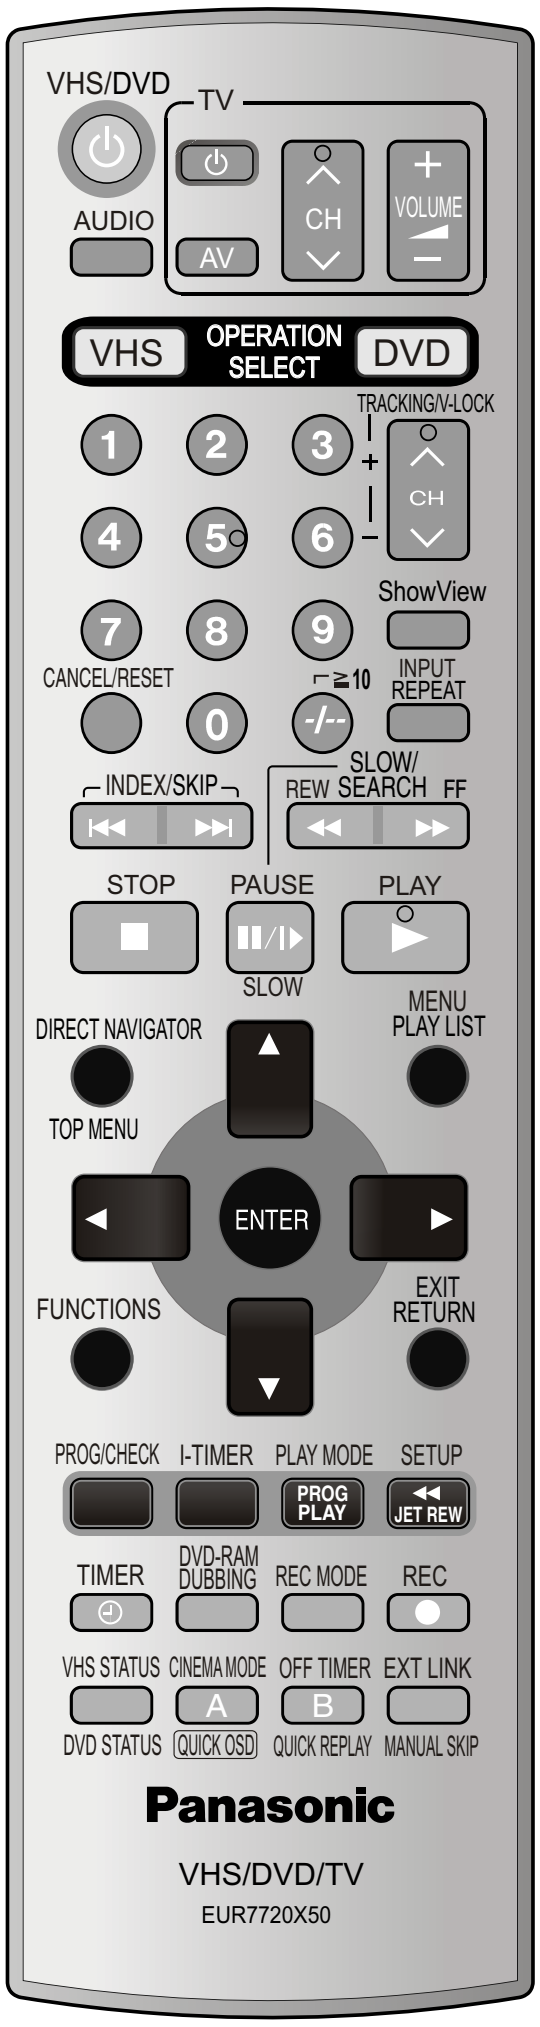
VHS/DVD
TV
AUDIO
AV
CH
VOLUME
VHS
OPERATION SELECT
DVD
TRACKING/V-LOCK
1
2
3
4
5
6
7
8
9
0
ShowView
CANCEL/RESET
≥10
-/--
INPUT REPEAT
INDEX/SKIP
SLOW/
REW SEARCH FF
STOP
PAUSE
PLAY
SLOW
DIRECT NAVIGATOR
MENU PLAY LIST
TOP MENU
ENTER
FUNCTIONS
EXIT RETURN
PROG/CHECK
I-TIMER
PLAY MODE
SETUP
PROG PLAY
JET REW
TIMER
DVD-RAM DUBBING
REC MODE
REC
VHS STATUS
CINEMA MODE
OFF TIMER
EXT LINK
A
B
DVD STATUS
QUICK OSD
QUICK REPLAY
MANUAL SKIP
Panasonic
VHS/DVD/TV
EUR7720X50

SPECIFICATIONS

Power supply:	AC220-240 V, 50/60 Hz
Power consumption:	22 W +/-1,3W standby mode: 6W+/-0,4W
Dimensions:	430 (W)×270 (D)×89 (H) mm (excluding protrusions)
Mass:	3.9kg
Operating temperature range:	+5 to +35°C
Operating humidity range:	35 to 80% RH (no condensation)
Pickup:	
Wave length:	662 nm/785 nm
Laser power:	CLASS 1/CLASS 3A
Video Recording signal:	PAL
DVD Signal system:	PAL625/50, PAL525/60
NV-VP33	NTSC (playback on PAL TV)
DVD Region number:	Region No.2

Playable disctype:

(1) DVD-Video, DVD-RAM, DVD-Audio, DVD-R (R4.7)
(2) CD-Audio (CD-DA), CD-Audio (TEXT)
(3) Video CD (VCD, S-VCD)
(4) CD-R/CD-RW (CD-DA, Video CD formatted discs)
(5) MP3 (audio), WMA (audio), JPG (picture)
Maximum number of tracks and groups recognizable:
Compatible compression rate: between 32 kbps and 320 kbps
4000 tracks and 400 groups

TV tuner system:	
NV-VP23EG/EC/EP	UHF: CH21-CH68
NV-VP28EG/EC	VHF: CHE2-CHE12
NV-VP33EG/EC/EP	UHF: CH21-CH69
NV-VP33EB/EBL	VHF (OIRT): CHR1-CHR12 VHF (CCIR): CHE2-CHE12 UHF: CH21-CH69 CATV (OIRT): 44MHz-470MHz (CCIR):S1-S5 (CCIR):M1-U10 (CCIR):S21-S41 (8MHz Raster)
RF out system:	
NV-VP33EB	UHF: CH21-CH68 UHF: 71 +/-3dBμ, 75 close
NV-VP33EBL	UHF: CH21-CH69 UHF: 71 +/-3dBμ, 75 close
NV-VP23,28,33EG/EC/EP	without RF converter
Video Recording system:	4 rotary heads helical scanning system
Video heads:	4 rotary heads 1 pair for recording and playback (L-R heads) 1 pair for trick play (L'-R' heads)
Video input:	
EURO AV (AV1 / AV2)	21 pin connector: 1.0 Vp-p, 75 terminated
VIDEO IN (AV3 front input)	cinch connector: 1.0 Vp-p, 75 terminated
Video output:	
EURO AV (AV1 / AV2)	21 pin connector: 1.0 Vp-p, 75 terminated VHS / DVD cinch connector: 1.0 Vp-p, 75 terminated DVD (only) cinch connector: 1.0 Vp-p, 75 terminated
S-VIDEO Y	1.0 Vp-p, 75 terminated
S-VIDEO C (PAL)	0.3 Vp-p, 75 terminated
S-VIDEO C (NTSC)	0.286 Vp-p, 75 terminated
DVD RGB video output:	
R output level:	0.7 Vp-p (75O) +/-10%
G output lebel:	0.7 Vp-p (75O) +/-10%
B output level:	0.7 Vp-p (75) +/-10%
Output terminal:	AV (21pin)
Number of terminals:	1 system

Audio heads:	
1 stationary head	Mono
2 channels	Hi-Fi Sound-Stereo
Audio input:	
EURO AV (AV1 / AV2)	21 pin connector: -6dBV (500mV), more than 10k
AUDIO IN (AV3 front input)	cinch connector: -6dBV (500mV), more than 10k
Audio output:	
VHS / DVD, DVD only	cinch connector: -6dBV (500mV), less than 1k
EURO AV (AV1 / AV2)	21 pin connector: -6dBV (500mV), less than 1k
DVD coaxial output	digital audio output
Audio characteristics:	
S/N ratio	Normal: more than 43dB (SP) Hi-Fi: 65dB, DVD: 115dB
Frequence responce	Normal: 80Hz - 8kHz, Hi-Fi: 20Hz - 20kHz DVD: 4Hz - 22kHz (linear audio) 48kHz sampling DVD: 4Hz - 44kHz (linear audio) 96kHz sampling CD Audio: 4Hz - 20kHz
Total harmonic distortion:	CD Audio: 0.0025%
Dynamic range:	
VCR:	more than 90dB
DVD (linear audio):	more than 98dB
CD audio:	more than 96dB
Videotape speed:	
SP:	23.39mm/s
LP:	11.695mm/s
EP:	7.796mm/s
Record / Playback time:	SP: 4hours (240min. tape)
LP:	8hours (240min. tape)
EP:	12hours (240min. tape)
FF / REW time:	60sec. (180min. tape)

Note:
Specifications are subject to change without notice.
Mass and dimensions are approximate.

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.
WMA is a compression format developed by Microsoft Corporation. It achieves the same sound quality as MP3 with a file size that is smaller than that of MP3.

Designed for Windows Media™

■ Built-in decoders

You can play discs with these symbols.

DOLBY DIGITAL

DIGITAL dts SURROUND